



MOTOPLASTIC, S.A.

Molí de la sal, 1 - 08403 Granollers (Barcelona) SPAIN

Tel. 34 93 849 06 33 - Fax 34 93 849 09 88




info@puig.tv

www.puig.tv

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS

CARENABRÍS ADAPTABLE A - WINDSHIELD ADAPTABLE TO
KTM 990 SUPERMOTO 08'-13'/R 09'-12'

Ref.: 5173

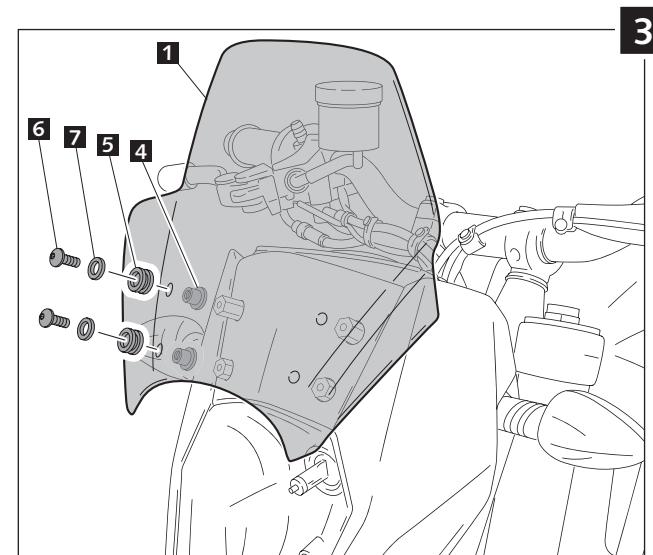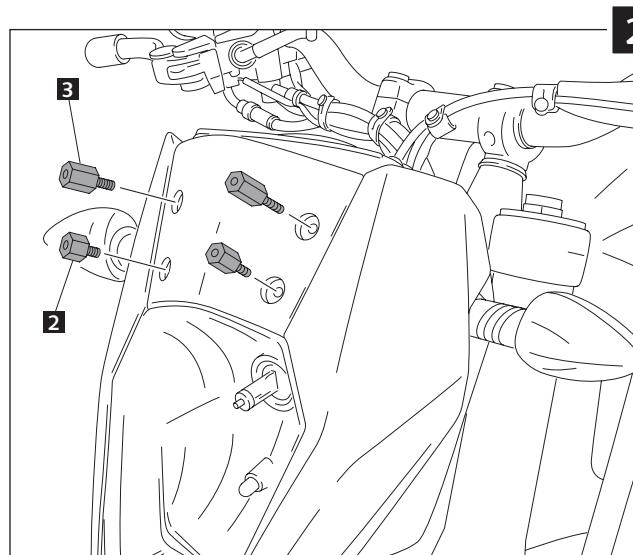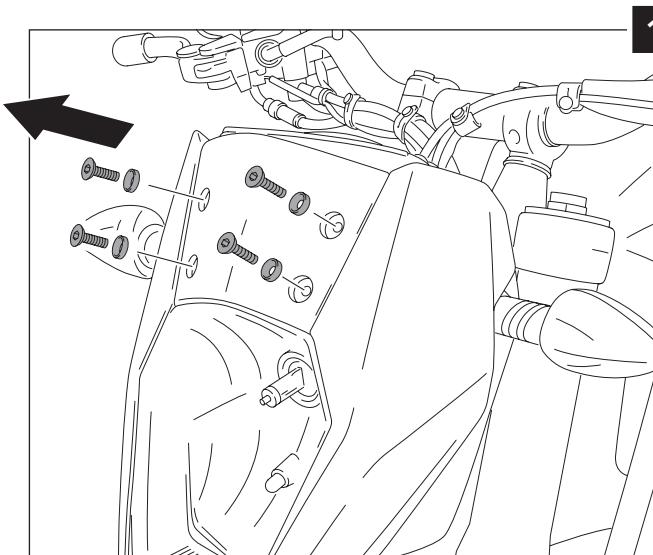

ID.		DESCRIPCIÓN	DESCRIPTION	QTY.
1		Pantalla	Screen	1
2		Tornillo especial M5x13 + rosca interior M5x8	Special screw M5x13 + interior thread M5x8	2
3		Tornillo especial M5x15 + rosca interior M5x10	Special screw M5x15 + interior thread M5x10	2
4		Casquillo con valona (se suministra montado en la pieza nº1)	Bush with flange (supplied fitted to Part No.1)	1
5		Silemblock (se suministra montado en la pieza nº1)	Well nut (supplied fitted to Part No.1)	4
6		Tornillo allen M5x16 ISO 7380	M5x16 ISO 7380 allen screw	4
7		Arandela metálica Ø int. 5,25xØ ext. 15x1,5	Ø inner 5,25xØ outer 15x1,5 metal washer	4