




Montageanleitung


Der Bausatz umfaßt die folgenden Teile:

Stück	Bestellnr.	Bezeichnung
1	704.516HB	Lampenschutzgitter
2	151.182	Inbusschrauben M5 x45
2	150.770	Inbusschrauben M6 x 55
2	150.881	Distanzen $\varnothing 13 \times \varnothing 7 \times 14$

Befestigung oben links und rechts:
 an den zwei mittleren Befestigungspunkten
 der Scheibe mit Inbusschrauben M5 x 45.
 Originalschrauben entfallen.



Befestigung unten links und rechts:
 an der unteren Verschraubung der Scheinwerfermaske. Originalschrauben entfallen.
 Die original abgesetzten Distanzen einsetzen,
 darüber die Alu-Distanzen $\varnothing 13 \times \varnothing 7 \times 14$
 legen und mit dem Lampenschutzgitter mit
 Inbusschrauben M6 x 55 befestigen.
 Gitter ausrichten und festziehen.

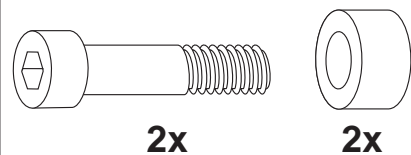

Das Lampenschutzgitter ist für den Offroad-Einsatz entwickelt worden und hat keine TÜV-Zulassung.

Anzugsmomente des Motorradherstellers beachten!
 Nach der Montage alle Verschraubungen auf festen Sitz kontrollieren!
 Bitte beachten Sie unsere beigegefügt Serviceinformationen.

Als weiteres Zubehör lieferbar:

Gepäckbrücke Alu-Rack	650.4526 01 01
Hauptständer	505.4526 00 01
Kofferträger Lock it System	650.4526 00 01 (abnehmbar)
Motorschutzbügel	502.405 00 01
Zusatzscheinwerfer	Micro Flooter



Hepco & Becker GmbH
 An der Steinmauer 6
 D-66955 Pirmasens

Tel.: 06331 - 1453 - 100
Fax: 06331 - 1453 - 120
eMail: vertrieb@hepco-becker.de
www.hepco-becker.de

- Side cases
- Top cases
- luggage frames
- Lock it system
- Softbags
- Aluminium luggage
- Leather luggage
- Protection bars
- Center stands
- Chopper parts
- Quad parts
- Accessories




**HEPCO &
BECKER**

Assembling instructions

The kit includes the following parts:


Quant	item no.	description
1	704.516HB	Headlight grille
2	151.182	Allen screws M5 x45
2	150.770	Allen screws M6 x 55
2	150.881	Spacer $\varnothing 13 \times \varnothing 7 \times 14$

Fastening top left and right:
at the two original fixing points of the wind shield with allen screws M5 x 45.
Original screws are obsolete.



Fastening bottom left and right:

at the two original fixing points of the headlight screen.
Original screws are obsolete.
Use the original spacers first, then the alu spacer $\varnothing 13 \times \varnothing 7 \times 14$ and fix it together with the headlight grill with allen screws M6 x 55.

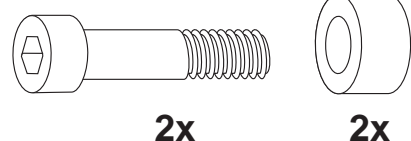

Control all screw connections after the assembling for tightness!
Please notice our enclosed service information.

Also available:

Rear rack aluminium	650.4526 01 01
Centre stand	505.4526 00 01
Side carrier Lock it System	650.4526 00 01 (removable)
Engine guard	502.405 00 01



Hepco & Becker GmbH
An der Steinmauer 6
D-66955 Pirmasens
Germany

Tel.: +49 6331 - 1453 - 100
Fax: +49 6331 - 1453 - 120
eMail: vertrieb@hepco-becker.de
www.hepco-becker.de