
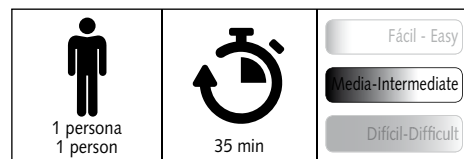


## PARAMANOS PARA - HANDPROTECTORS FOR - HANDSCHUTZ FÜR BMW G310GS / G310R





Ref.: 9881

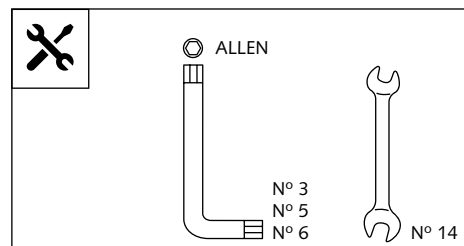

ID	PIEZA / PART	DESCRIPCIÓN	DESCRIPTION	QTY	REF.
1		Paramanos derecho	Right handguard	1	9881JM3
2		Pieza derecha anclaje manillar Ø15,5 (se suministra montada)	Ø15.5 right handlebar anchoring part (supplied mounted with handguard)	1	9881JM3
3		Paramanos izquierdo	Left handguard	1	9881JM3
4		Pieza izquierda anclaje manillar Ø15.5 (se suministra montada)	Ø15.5 left handlebar anchoring part (supplied mounted with handguard)	1	9881JM3
5		Soporte metálico derecho (R)	Right metal support (R)	1	SOPOR-2P-1-9881
6		Soporte metálico izquierdo (L)	Left metal support (L)	1	SOPOR-2P-1-9881
7		Tornillo Allen M8x55 DIN912	M8x55 DIN912 Allen screw	2	TORNI-D912--631
8		Casquillo decoletaje Ø8,25x Ø13,2 x10mm	Ø8,25x Ø13,2 x10mm customized spacer	2	CASQUI-AL--9881
9		Tornillo Allen M5x11 ISO 7380	M5x11 ISO 7380 Allen screw	6	TORNI-AI----520
10		Arandela de Nylon M5x1	M5x1 Nylon washer	6	ARNV00000000245
11		Arandela de goma Ø4,5xØ11x2mm	Ø4,5xØ11x2mm Rubber washer	6	ARAND-EPDM--722
12		Tuerca grafilada M5 (se suministra montada con las piezas 1-2-3-4)	M5 Special nut (supplied already mounted on items 1-2-3-4)	4	TUERC-D6923-255
13		Tapón tornillo M5 ISO 7380	M5 ISO 7380 Allen screw cap	6	TAPON-----85
14		Kit adhesivos	Stickers set	1	ADHESI-----234





## PARAMANOS PARA - HANDPROTECTORS FOR - HANDSCHUTZ FÜR BMW G310GS / G310R

### INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

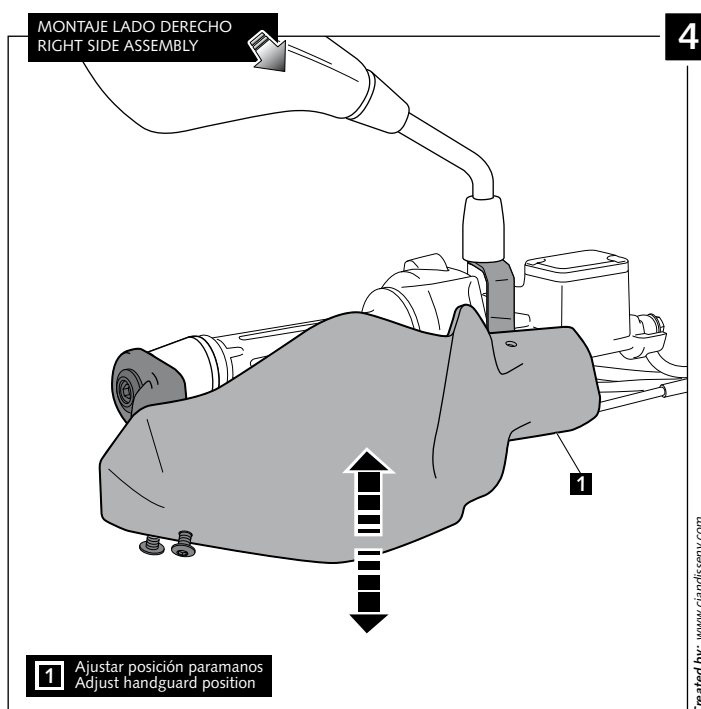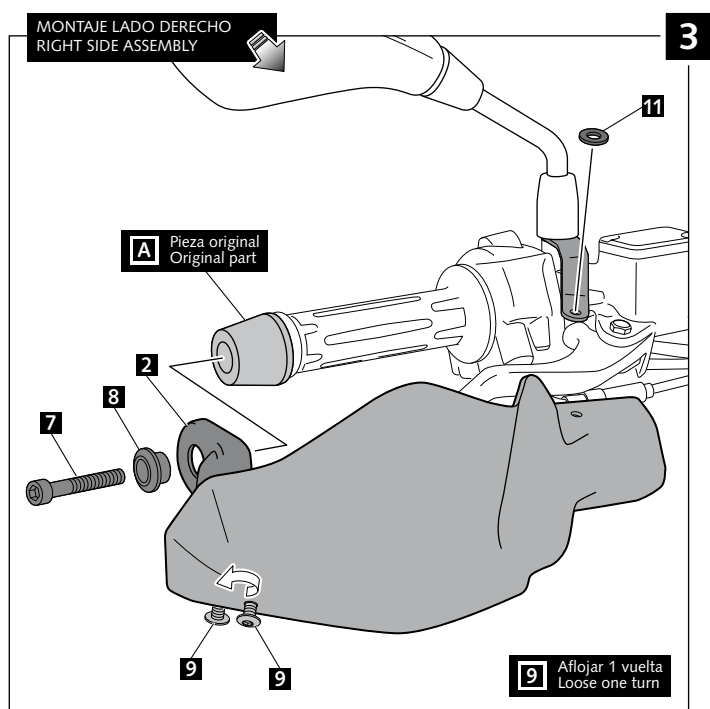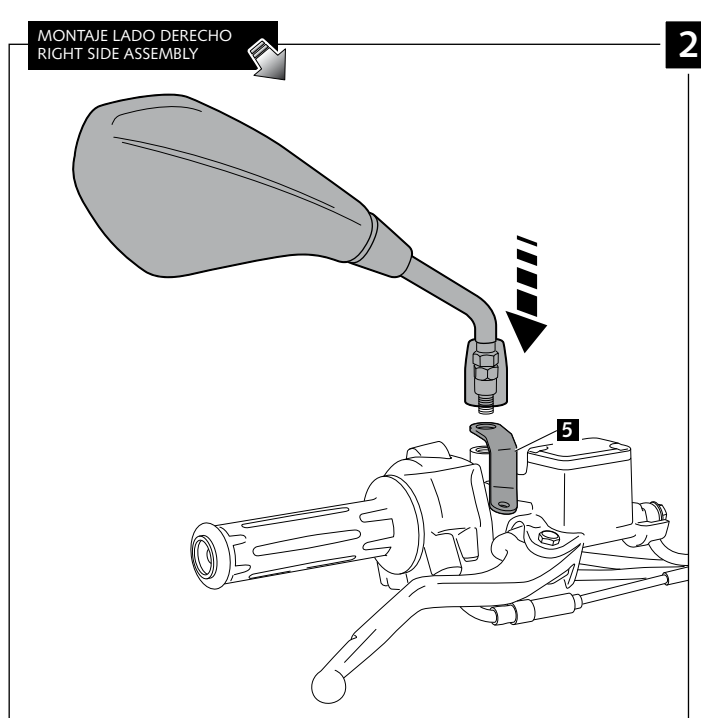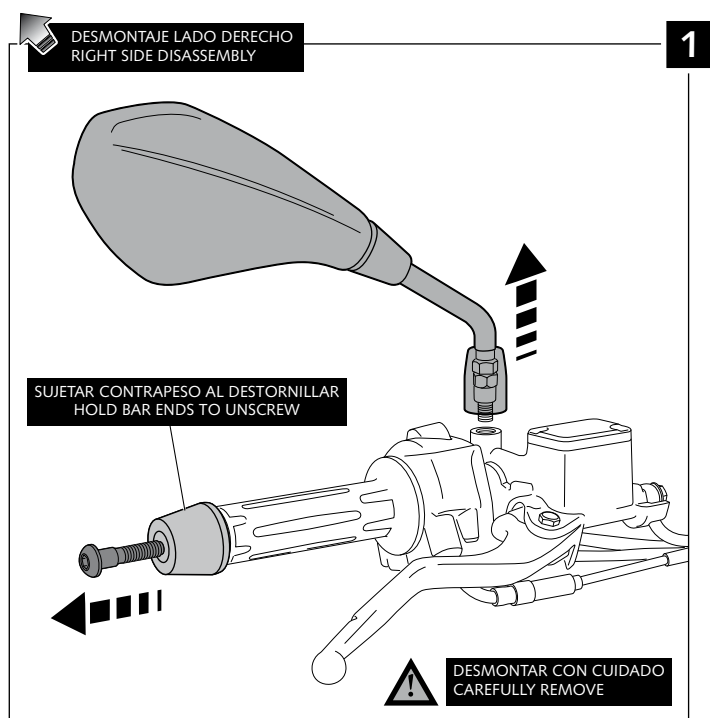

PARAMANOS PARA - HANDPROTECTORS FOR - HANDSCHUTZ FÜR  
**BMW G310GS / G310R**

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

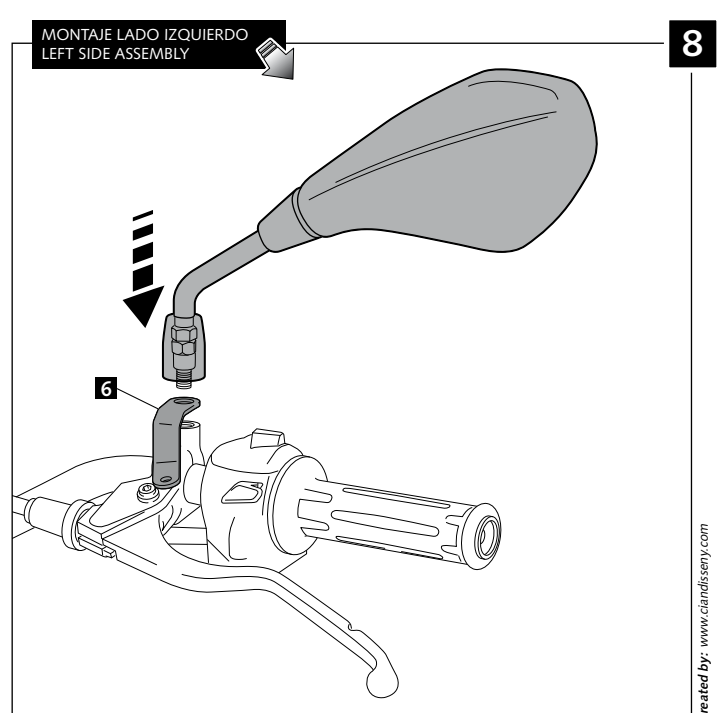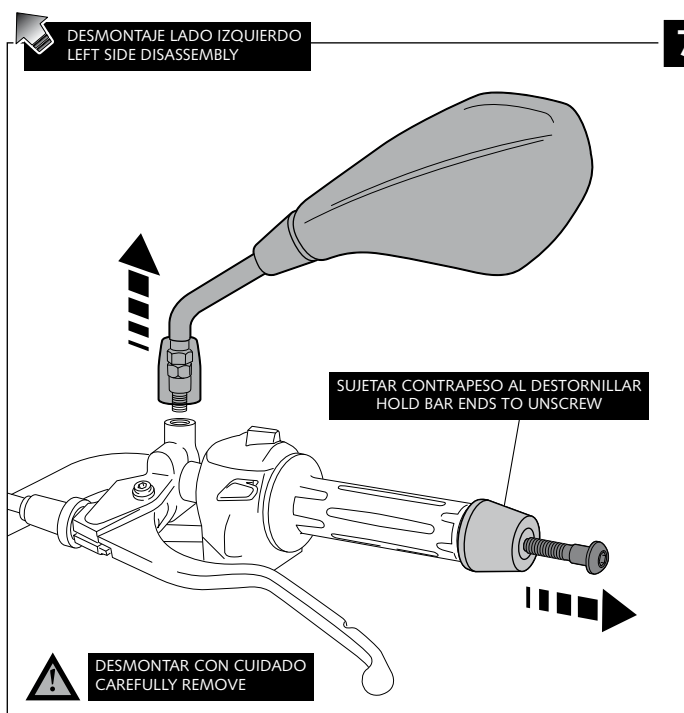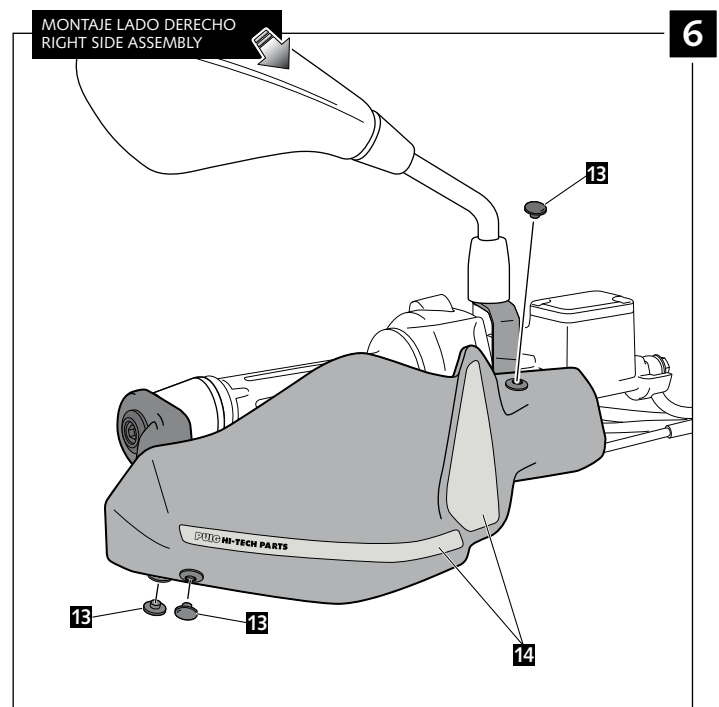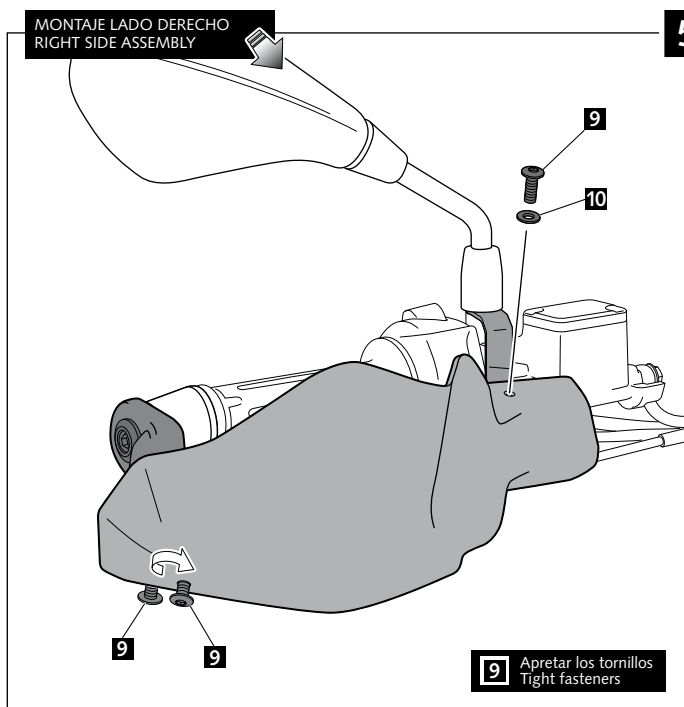

PARAMANOS PARA - HANDPROTECTORS FOR - HANDSCHUTZ FÜR  
**BMW G310GS / G310R**

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

