




Husqvarna Vitpilen 701
Front Spindle Bobbins


Installation Instructions




Kit Contents PRN014063

- (A) 1 x Spindle Shaft
- (B) 1 x Spindle Nut
- (C) 1 x Bobbin Spacer
- (D) 2 x M8 Nuts
- (E) 2 x M8 Washers
- (F) 2 x Main Tail Tidy
- (G) 2 x Bobbin Heads

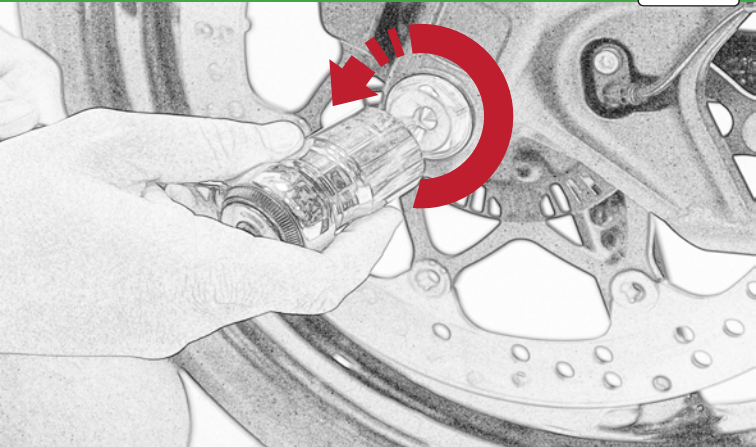


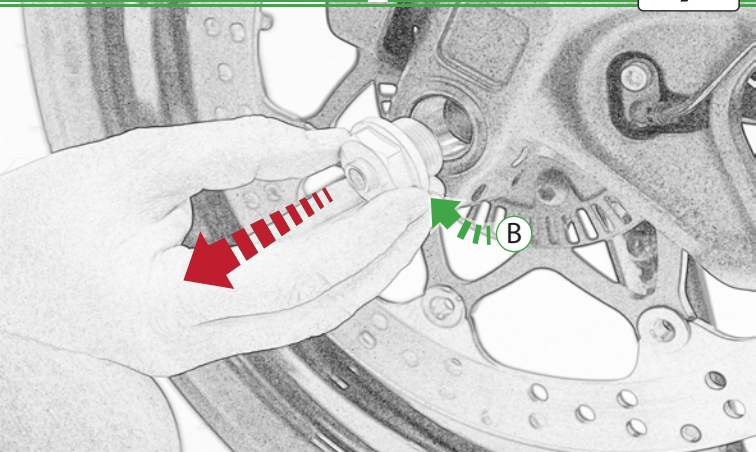


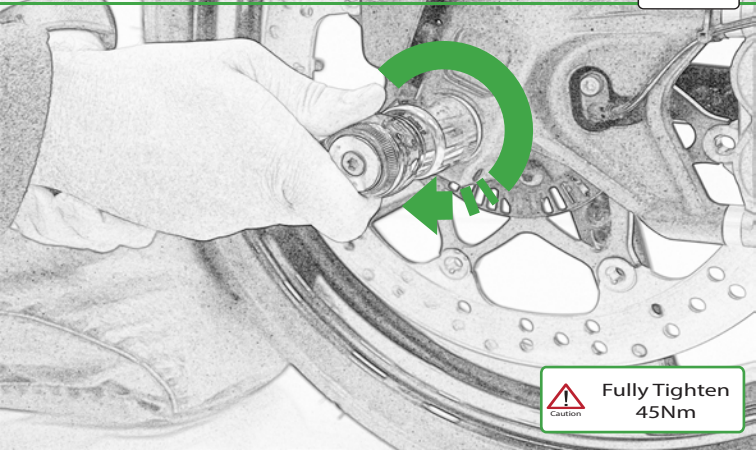


Caution


Fully Tighten
45Nm

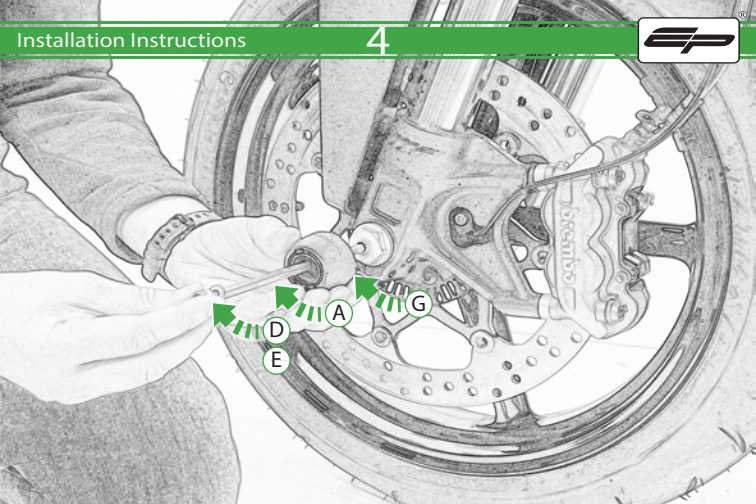


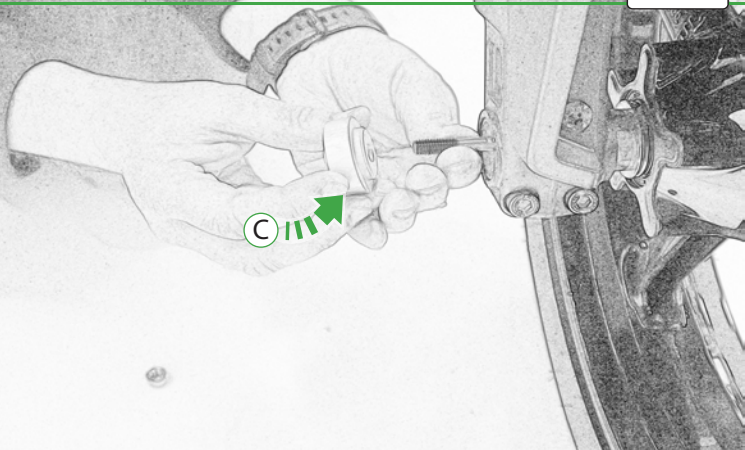

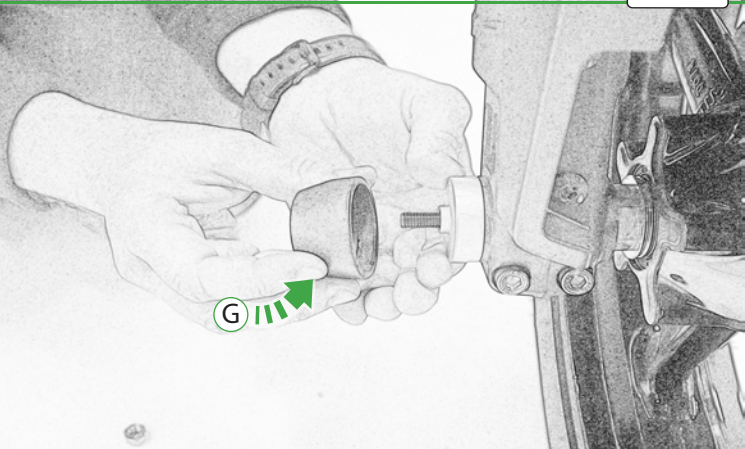



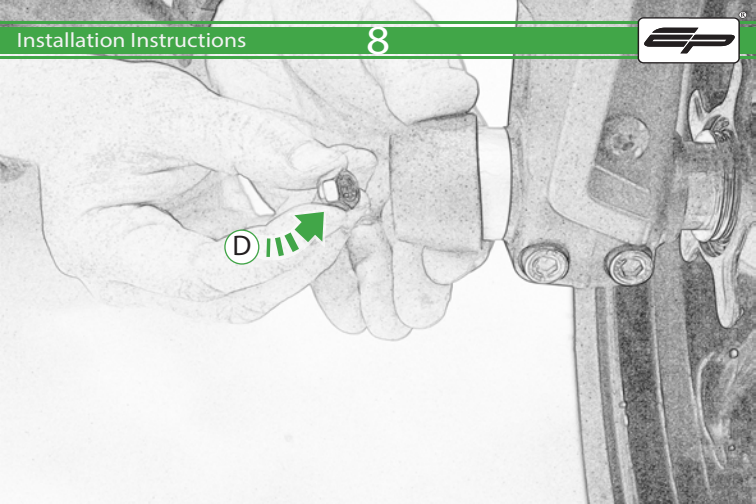

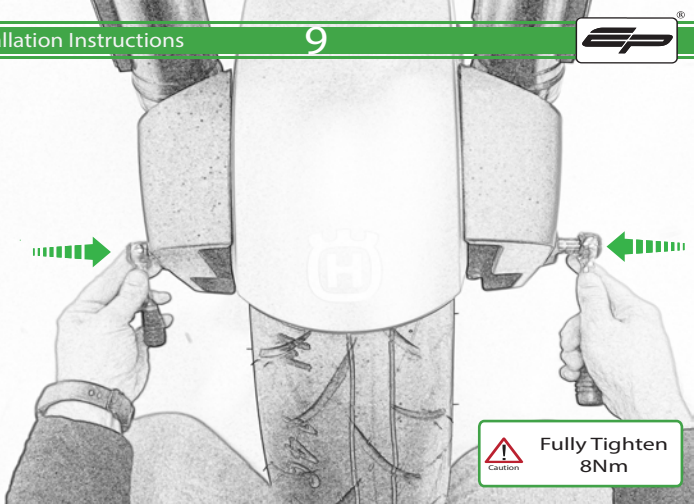

Caution

Fully Tighten
8Nm



ESSENTIAL CHECKS

It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com