



**EVOTECH**®  
P E R F O R M A N C E


**Installation Instructions**


**BMW R1200  
REAR SPINDLE BOBBINS**

**Product Reference - 13149 and 13153**

**Kit Contents**


- A** 1 x LH Spindle Bobbin
- B** 1 x RH Hub Stop
- C** 1 x Spindle
- D** 2 x M10 - 35 Bolts
- E** 2 x M10 Washers

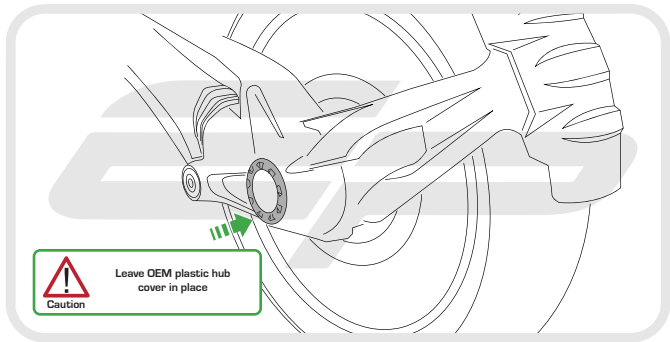

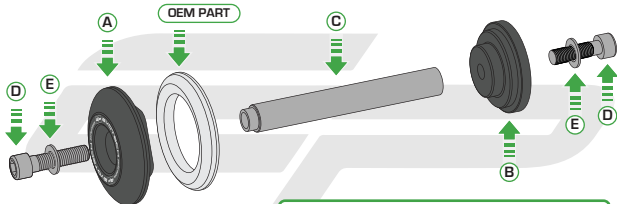

Caution

It is essential that a strong thread lock is applied to both bolts before installation to ensure these do not vibrate loose during riding

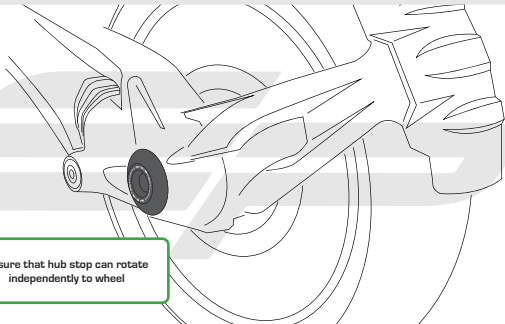

Caution

Ensure that hub stop can rotate independently to wheel



**EVOTECH**®  
P E R F O R M A N C E

[www.evotech-performance.com](http://www.evotech-performance.com)