




Husqvarna Vitpilen 701
Rear Spindle Bobbins


Installation Instructions





Kit Contents PRN014066

- (A) 1 x Spindle Shaft
- (B) 1 x Spindle Nut
- (C) 1 x Bobbin Spacer
- (D) 2 x M8 Nuts
- (E) 2 x M8 Washers
- (F) 2 x Main Tail Tidy
- (G) 2 x Bobbin Heads

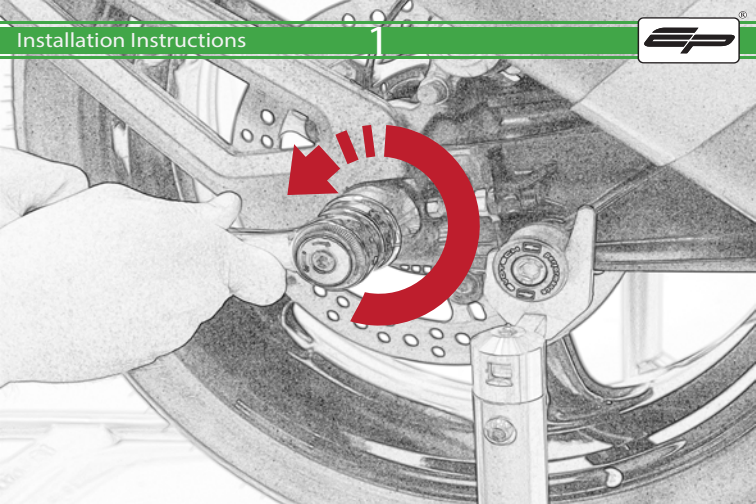


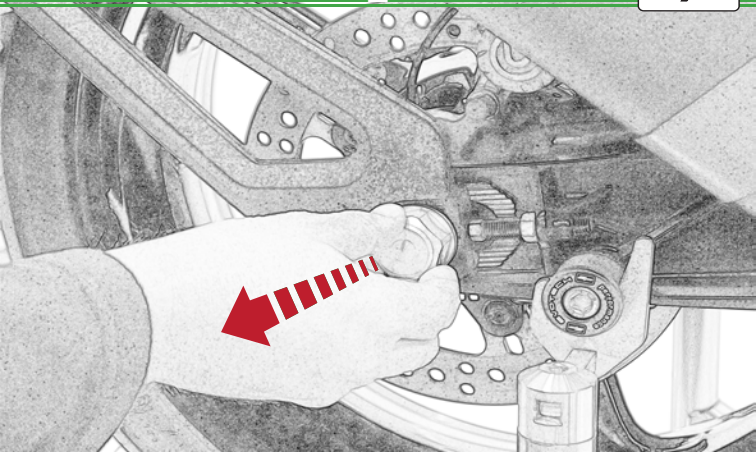


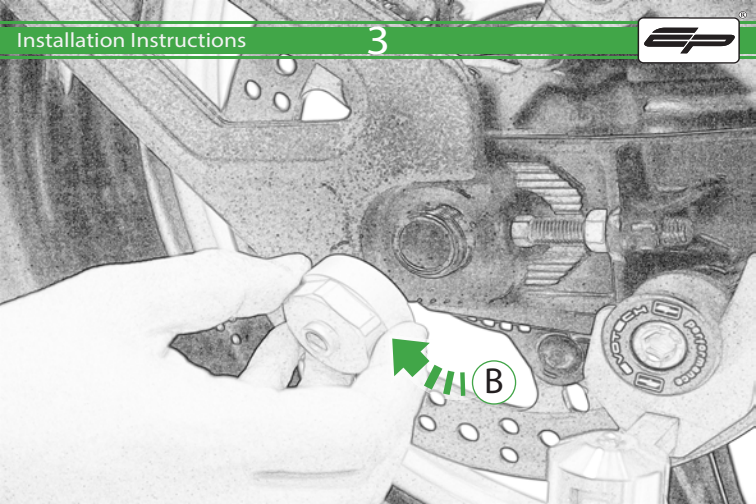


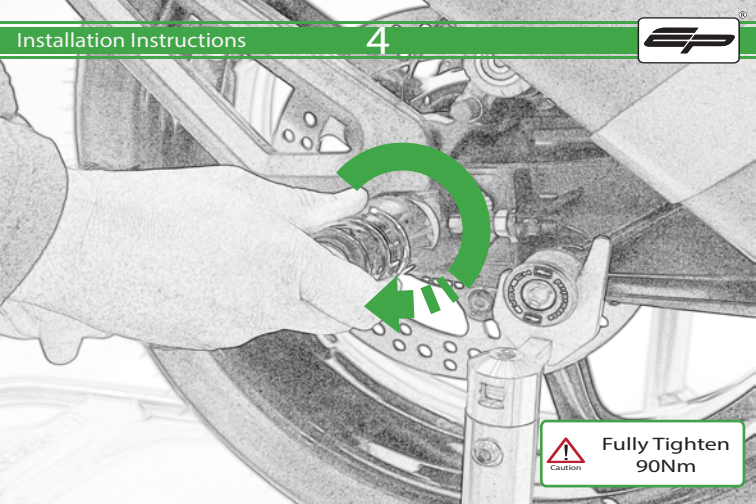



Fully Tighten
90Nm

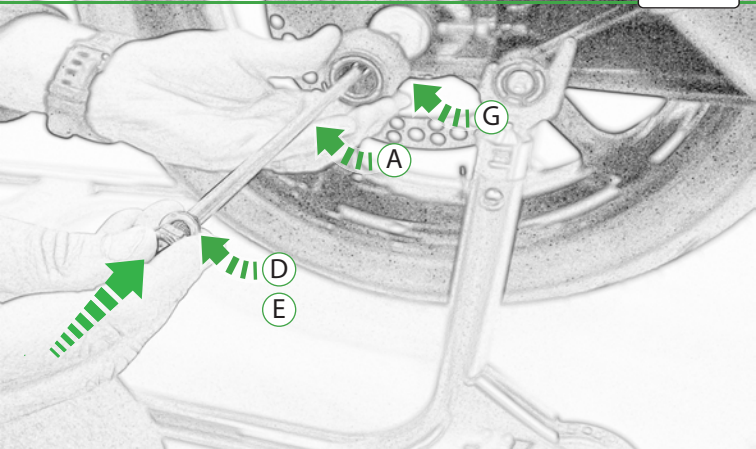


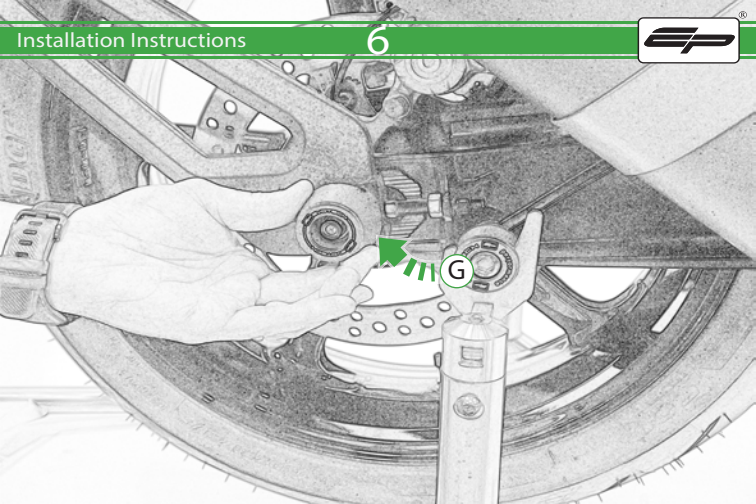


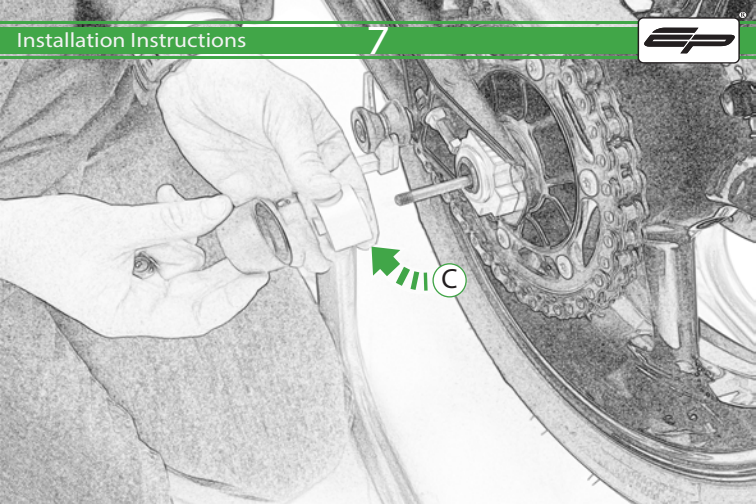

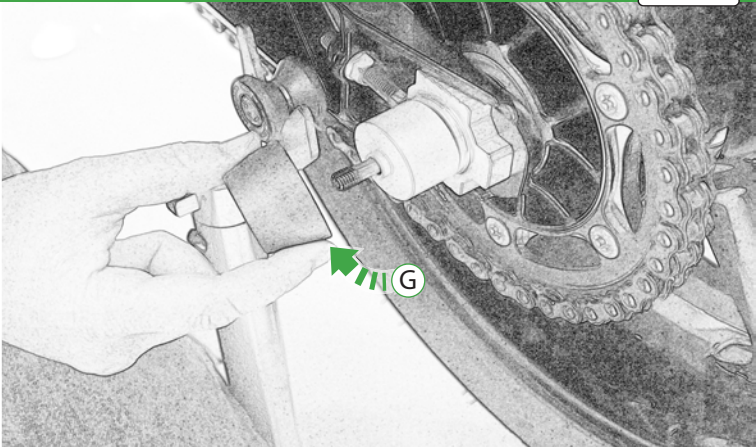

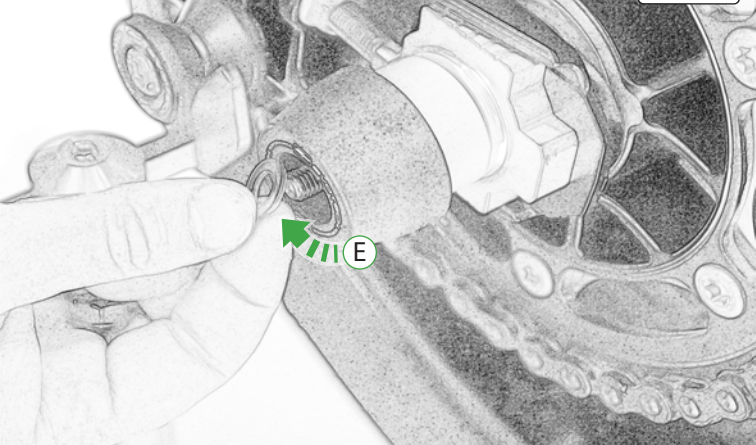

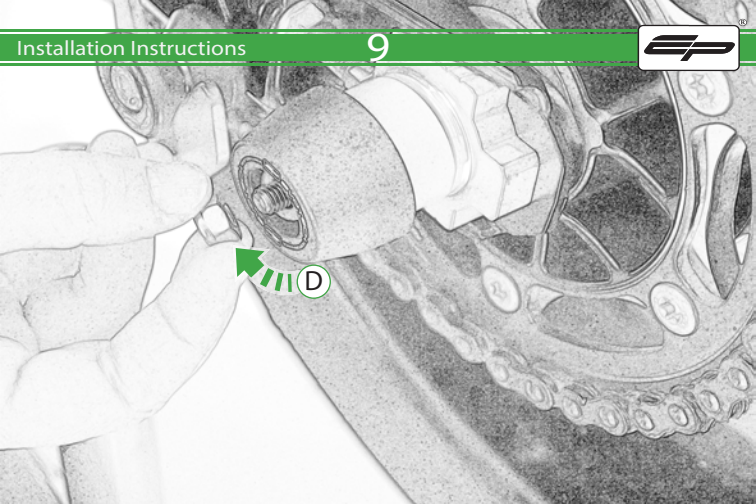

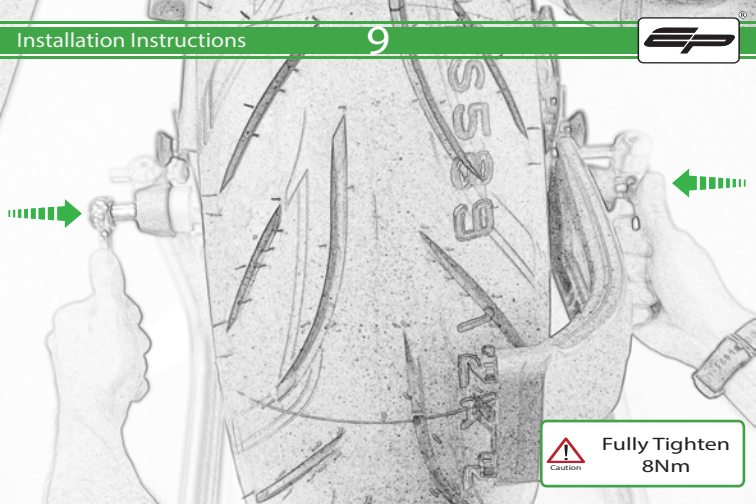

Fully Tighten
8Nm



ESSENTIAL CHECKS

It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com