




Ducati Multistrada 1260
Tom Tom Sat Nav Mount


Installation Instructions





Kit Contents PRN014359-014567


- (A) 1 x Main Plate
- (B) 1 x Pivot Plate
- (C) 1 x Sub Mounting Bracket
- (D) 1 x Rubber Pad
- (E) 1 x Screen Mounting Bracket
- (F) 2 x P-clips (No.1)
- (G) 2 x P-clips (No.2)
- (H) 2 x P-clips (No.3)
- (I) 2 x P-clips (No.4)
- (J) 2 x M5 Black Washer
- (K) 2 x M5 x 8mm Black Button head Bolts
- (L) 2 x Lobe Screw
- (M) 2 x Locking Washer
- (N) 2 x M4 x 5mm Black Button Head Bolts
- (O) 6 x M5 x 12mm Black Button head Bolts

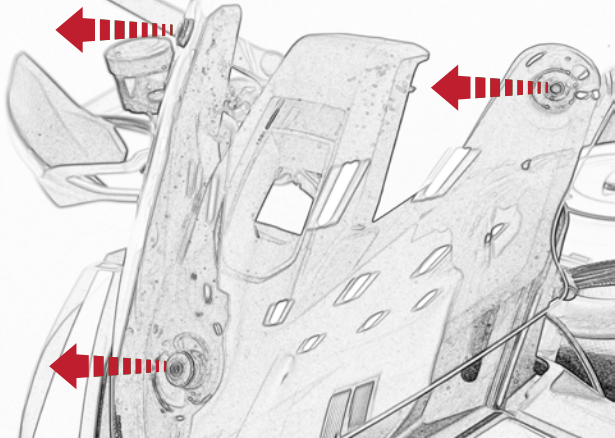


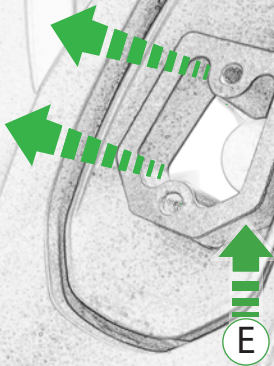


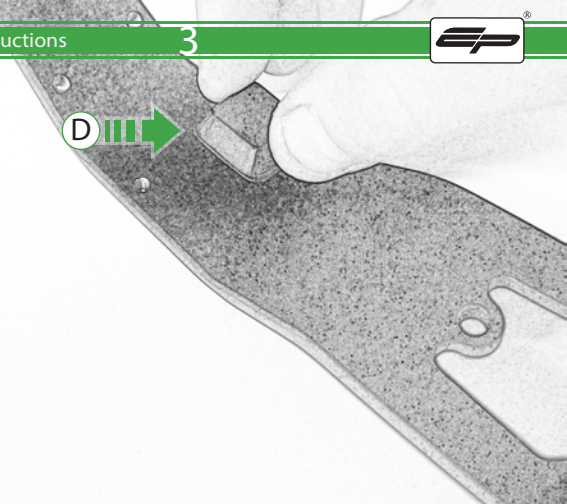


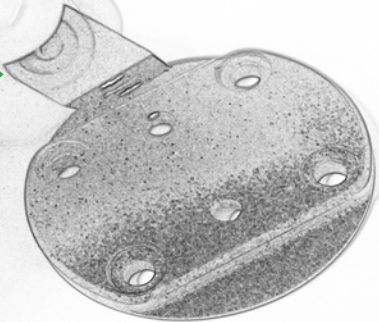


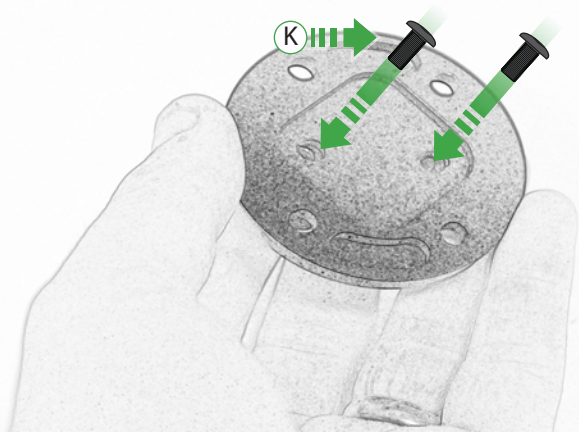


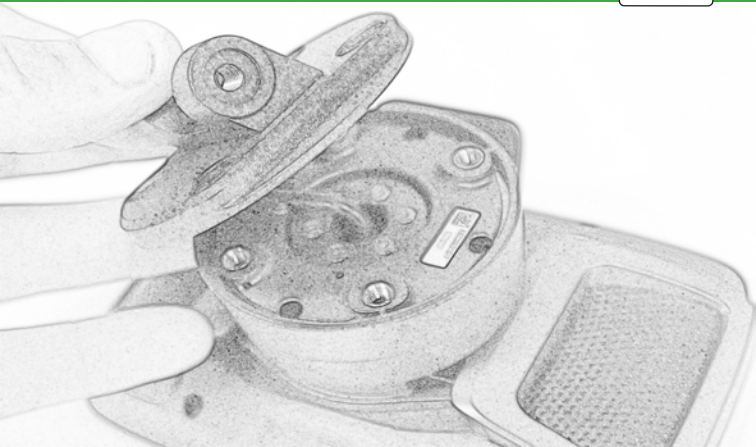


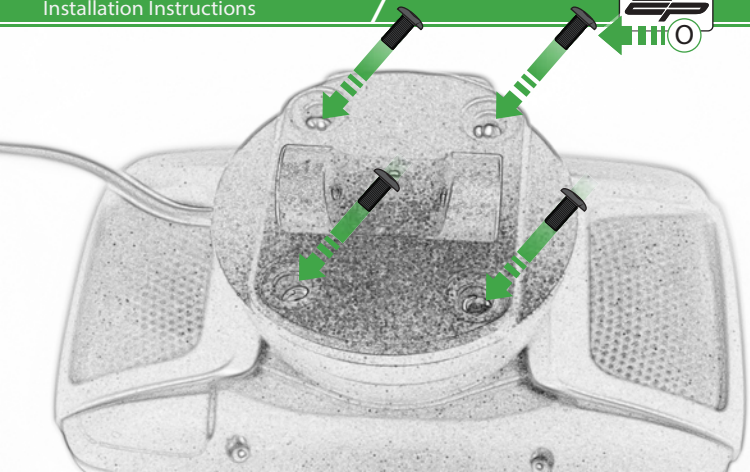


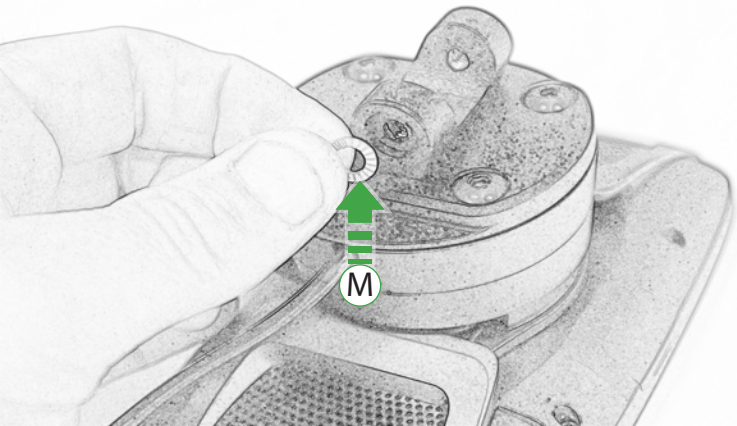


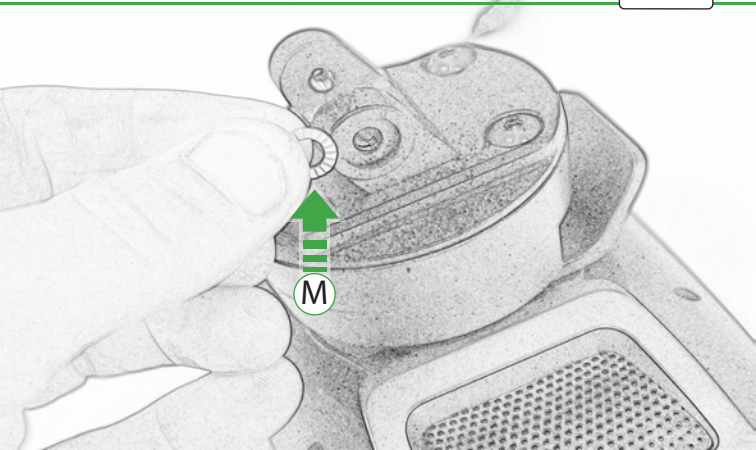

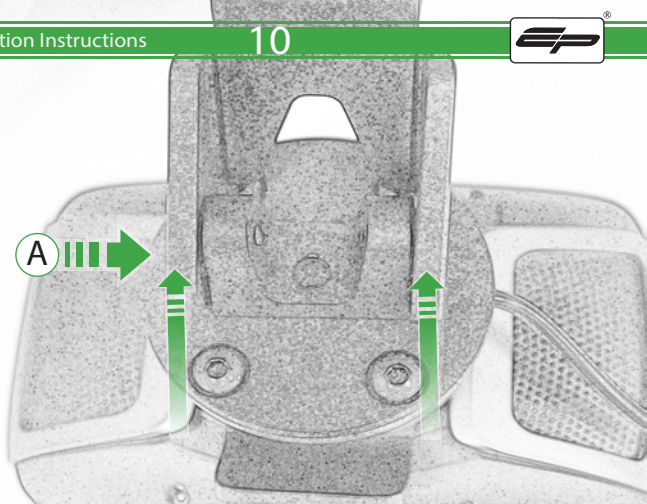


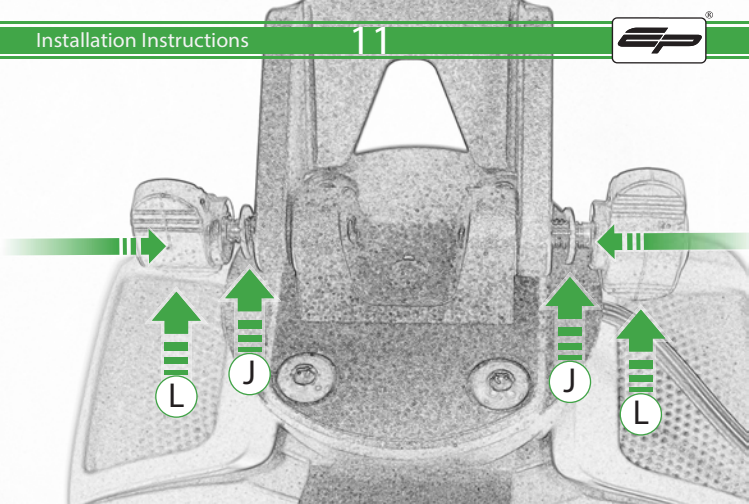


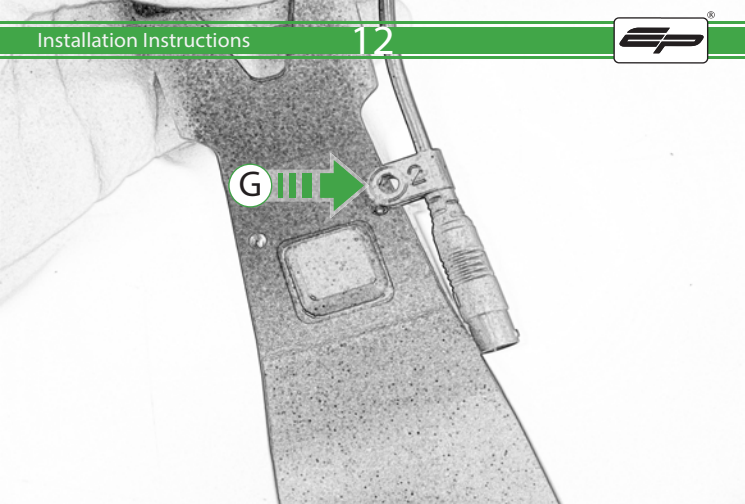


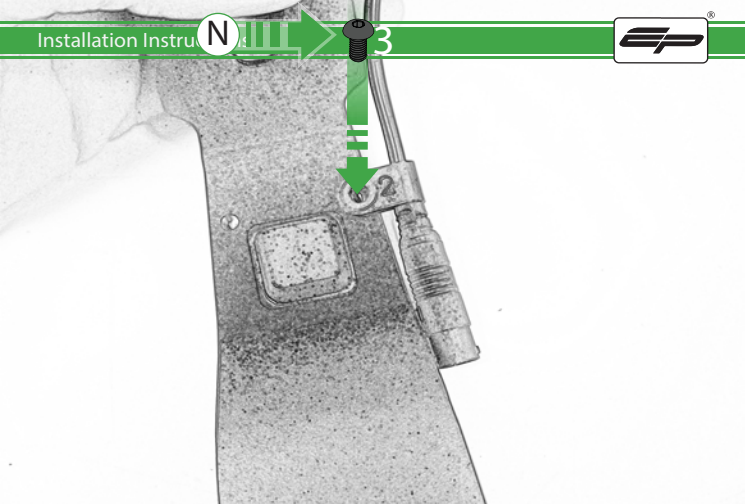



0

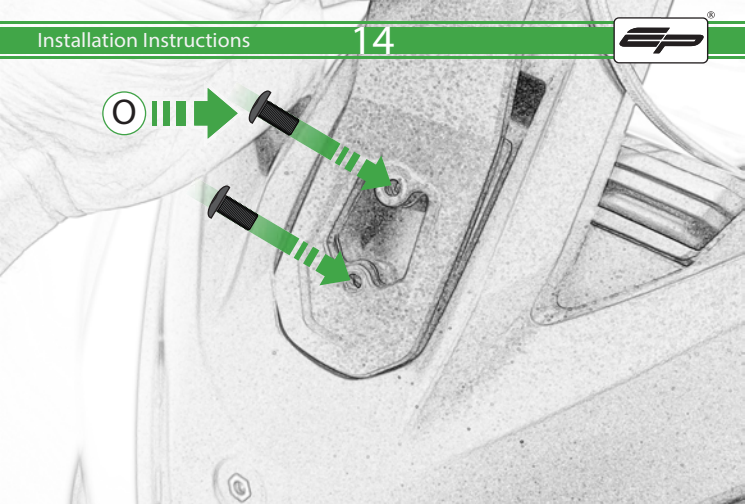

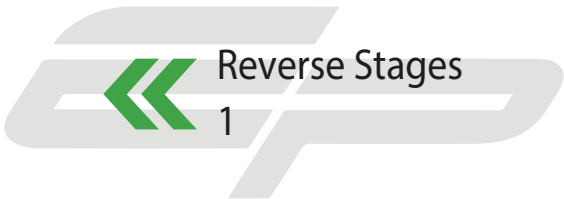



ESSENTIAL CHECKS

It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com