



EVOTECH®
P E R F O R M A N C E

BMW R NineT / Urban G/S / Pure
/ Scrambler Handguard

Installation Instructions





Kit Contents PRN014585


- (A) 1 x R/H Handguard
- (B) 1 x L/H Handguard
- (C) 1 x R/H Bar Surround
- (D) 1 x L/H Bar Surround
- (E) 1 x R/H Support Bracket
- (F) 1 x L/H Support Bracket
- (G) 2 x Spacer
- (H) 2 x M10 Washer
- (I) 2 x Bar End Outer
- (J) 2 x Bar End Middle Spacer
- (K) 2 x Bar End Inner
- (L) 2 x M12 x 90 SS Caphead
- (M) 2 x M5 Washer
- (N) 2 x M5 x 20 Black Button Head






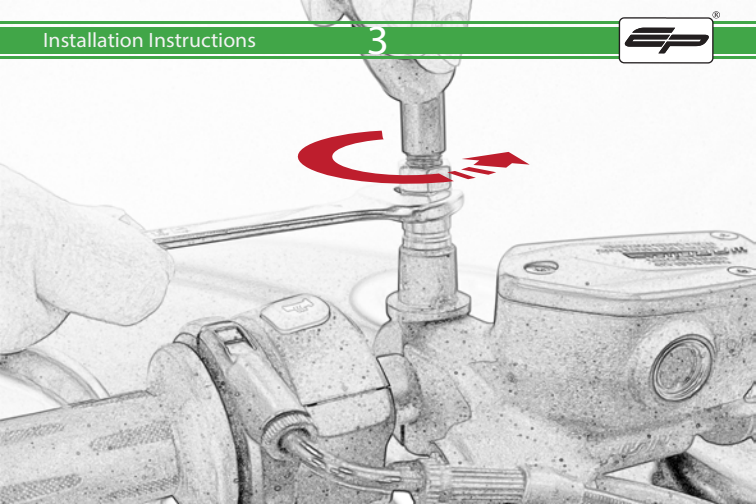


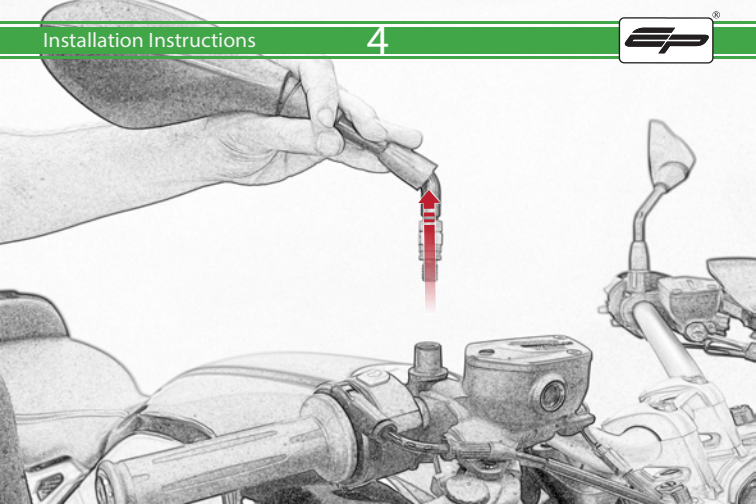


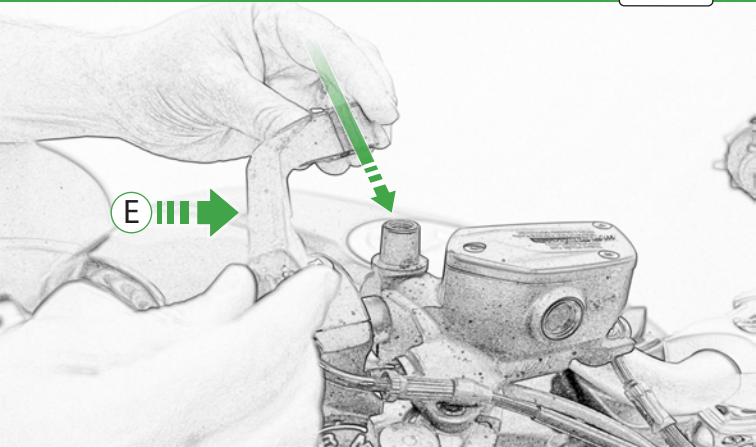


E

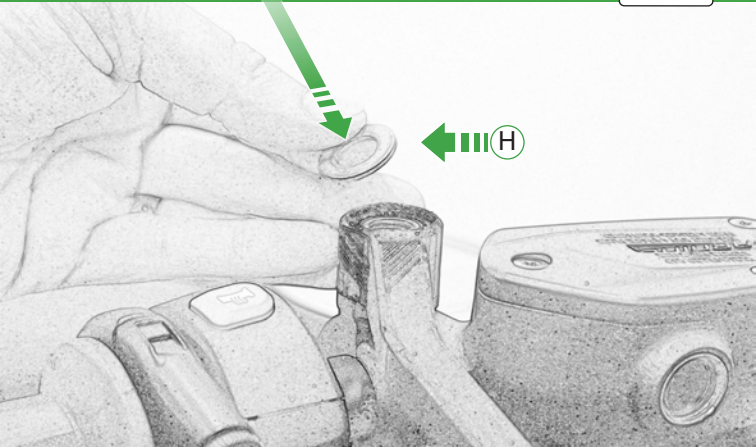


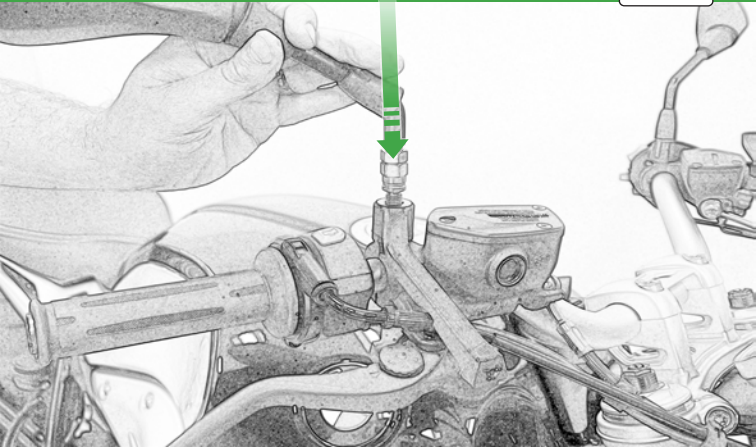


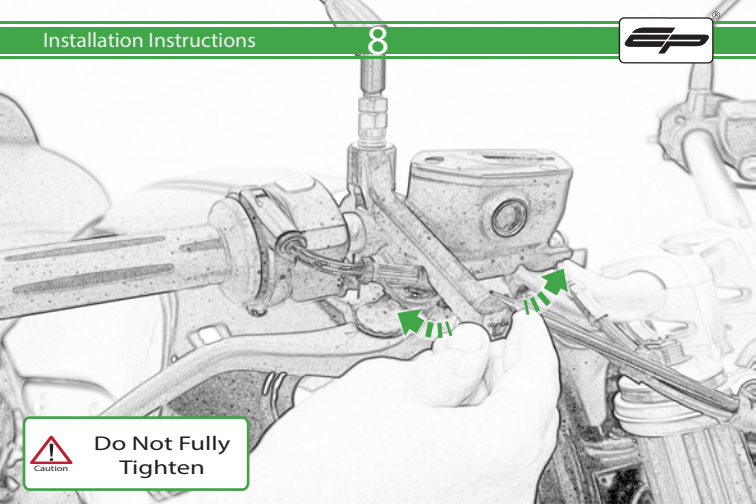



**Do Not Fully
Tighten**

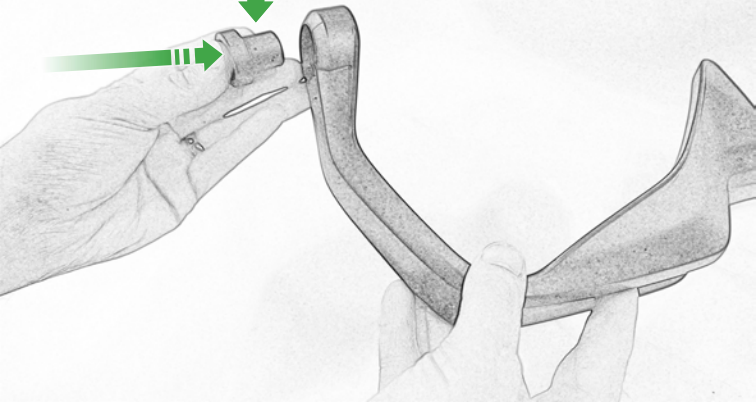

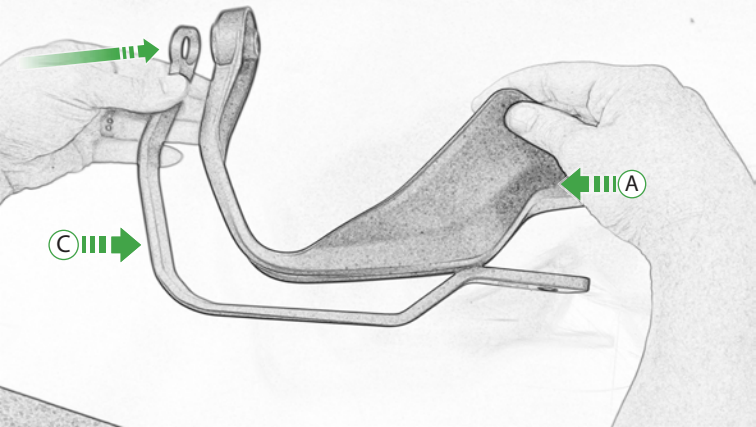


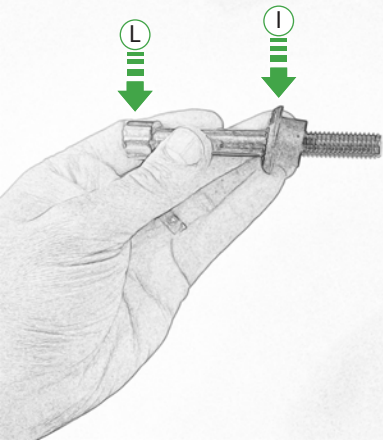


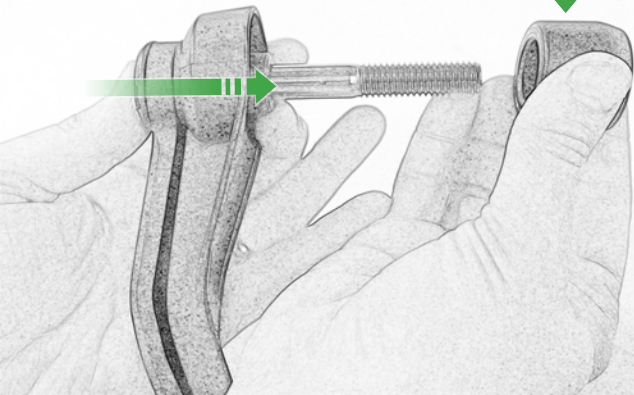

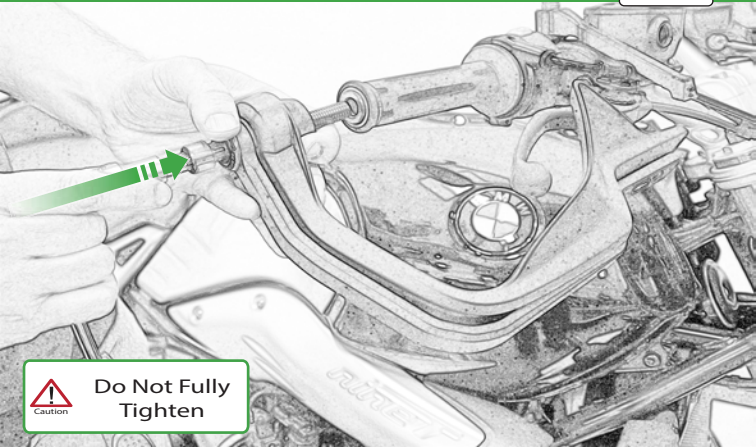

**Do Not Fully
Tighten**

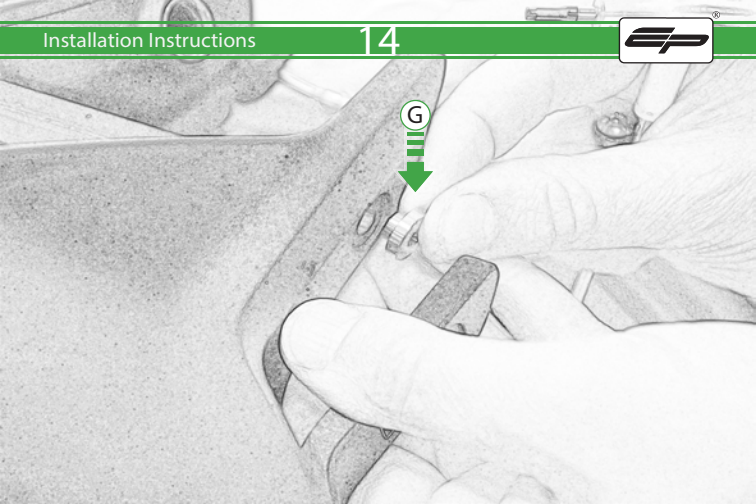


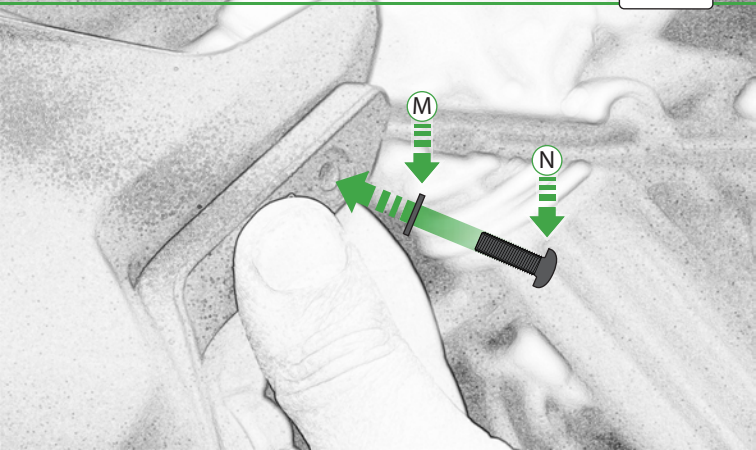




Fully Tighten


Caution

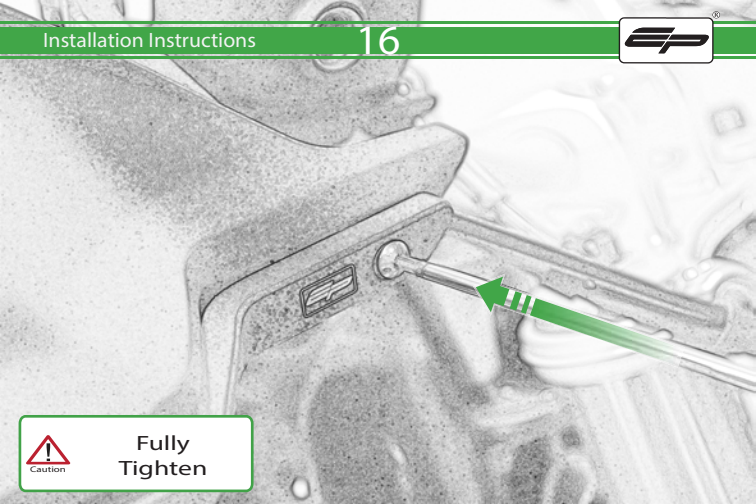
A green-bordered box in the bottom left corner contains a red triangle with a white exclamation mark inside, labeled 'Caution'. To the right of the icon, the text 'Fully Tighten' is written in a bold, black, sans-serif font.

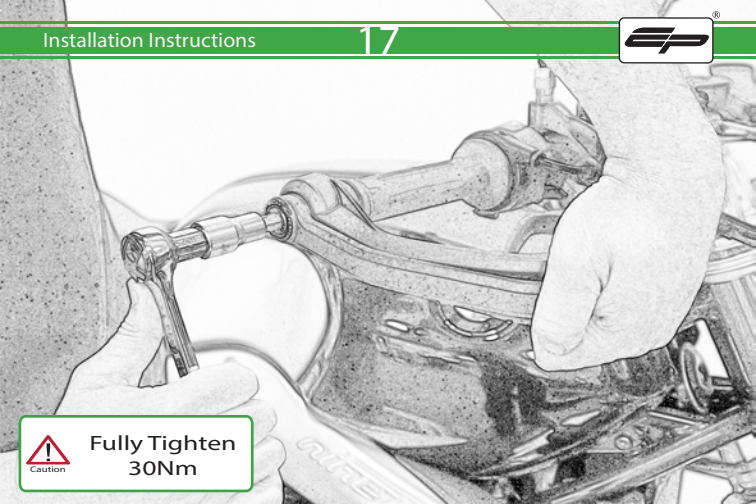

Caution

**Fully Tighten
30Nm**

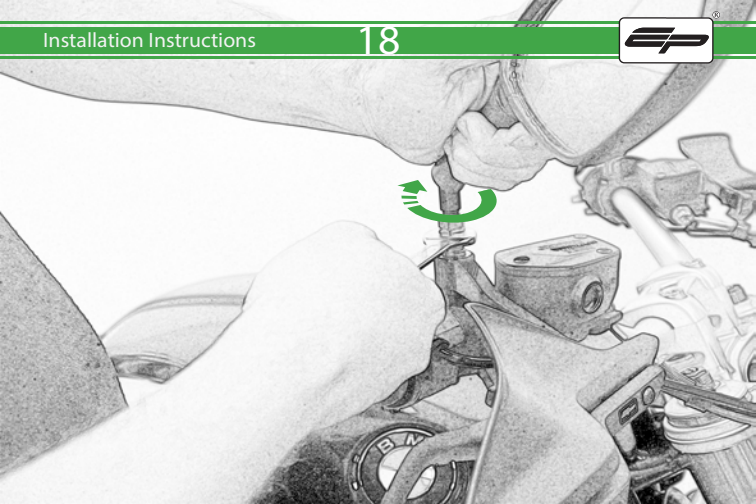

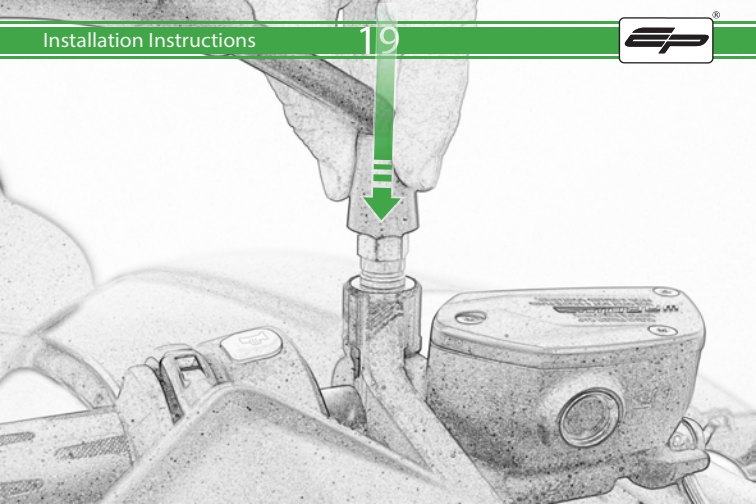



Repeat Stages

1 - 19

For Left Hand Side



 **ESSENTIAL CHECKS** 

It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com