



**EVOTECH**®  
P E R F O R M A N C E

[www.evotech-performance.com](http://www.evotech-performance.com)



BMW SP Connect Sat Nav Mount


Installation Instructions





## Kit Contents PRN014377-015031


- |                                   |   |
|-----------------------------------|---|
| (A) 1 x M6 x 16 Countersunk Screw | (L) 2 x M5 Black Washer                   |
| (B) 1 x Pivot Plate               | (M) 2 x M4 x 5mm Button Head Bolts        |
| (C) 1 x SP Connect Plate          |   |
| (D) 1 x Spanner                   |   |
| (E) 2 x M5 x 10mm Caphead Bolts   | Sub Kit                                   |
| (F) 2 x P-clips (No.1)            | (N) 1 x Right Hand Arm                    |
| (G) 2 x P-clips (No.2)            | (O) 1 x Left Hand Arm                     |
| (H) 2 x P-clips (No.3)            | (P) 1 x Spacer                            |
| (I) 2 x P-clips (No.4)            | (Q) 2 x M8 x 45mm Flange Bolt             |
| (J) 2 x Lobe Screw                | (R) 2 x M5 x 12mm Black Button Head Bolts |
| (K) 2 x Locking Washer            |   |

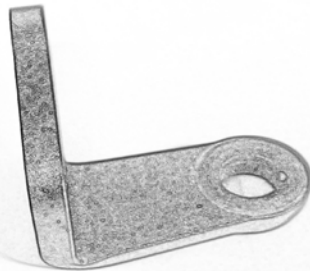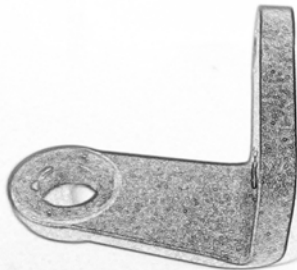


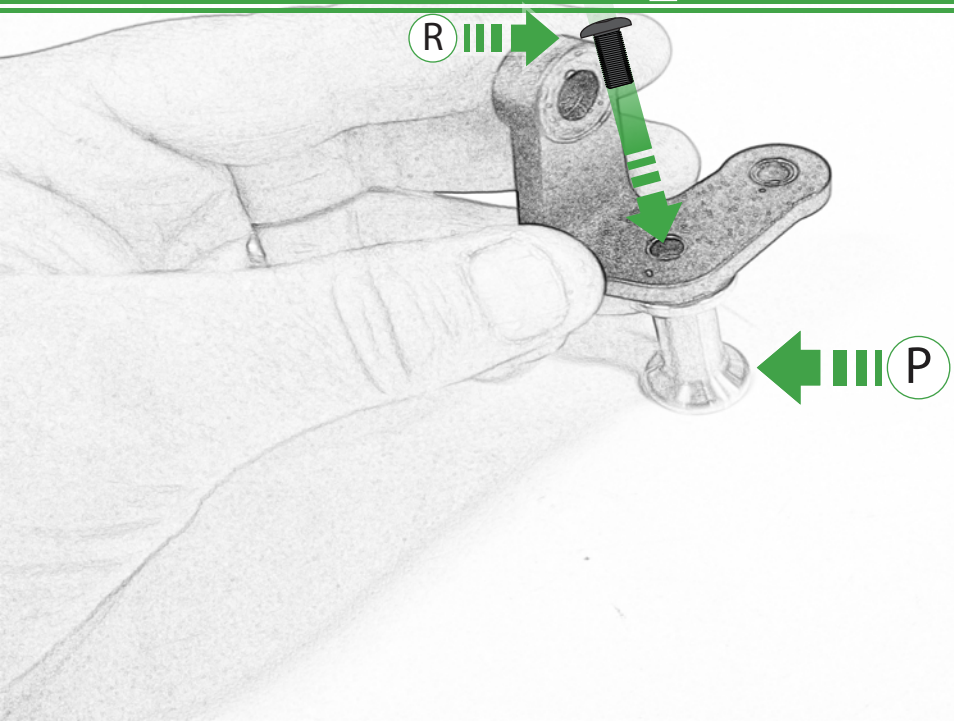

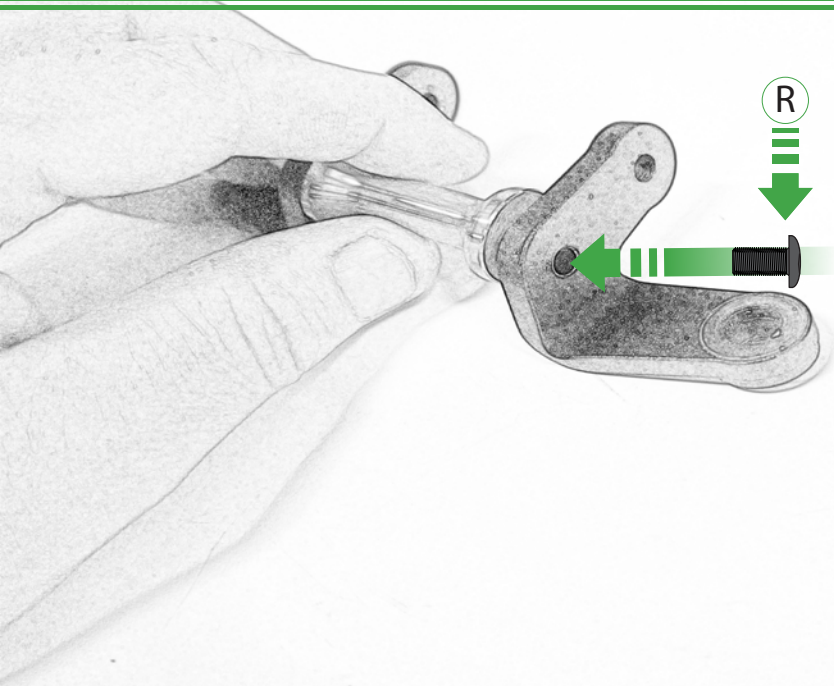



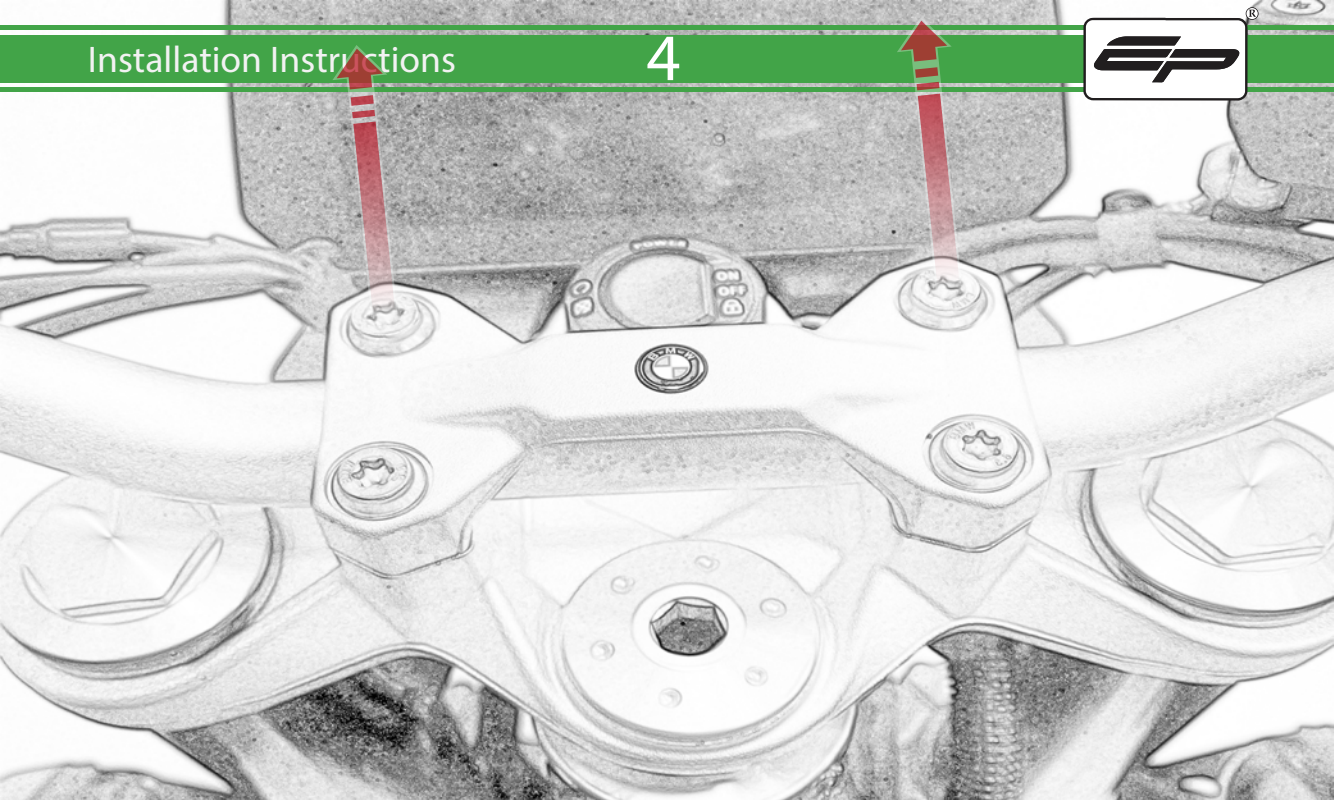


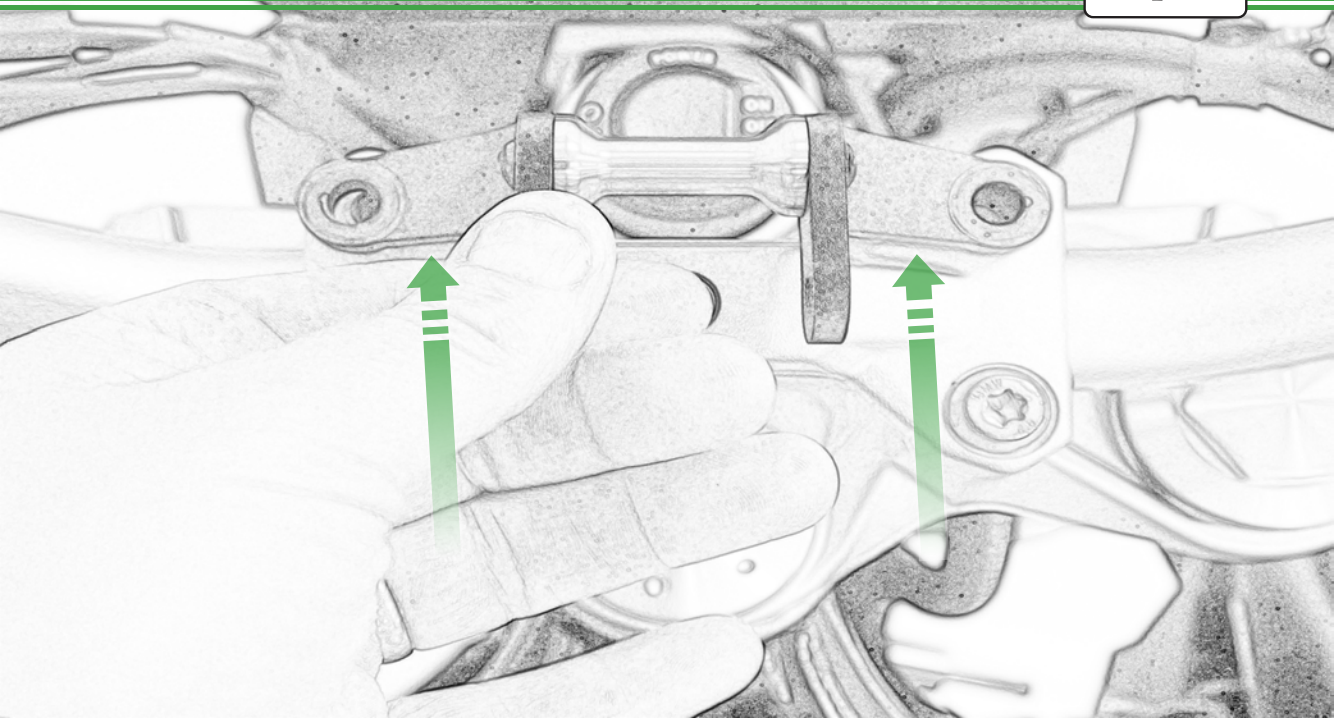


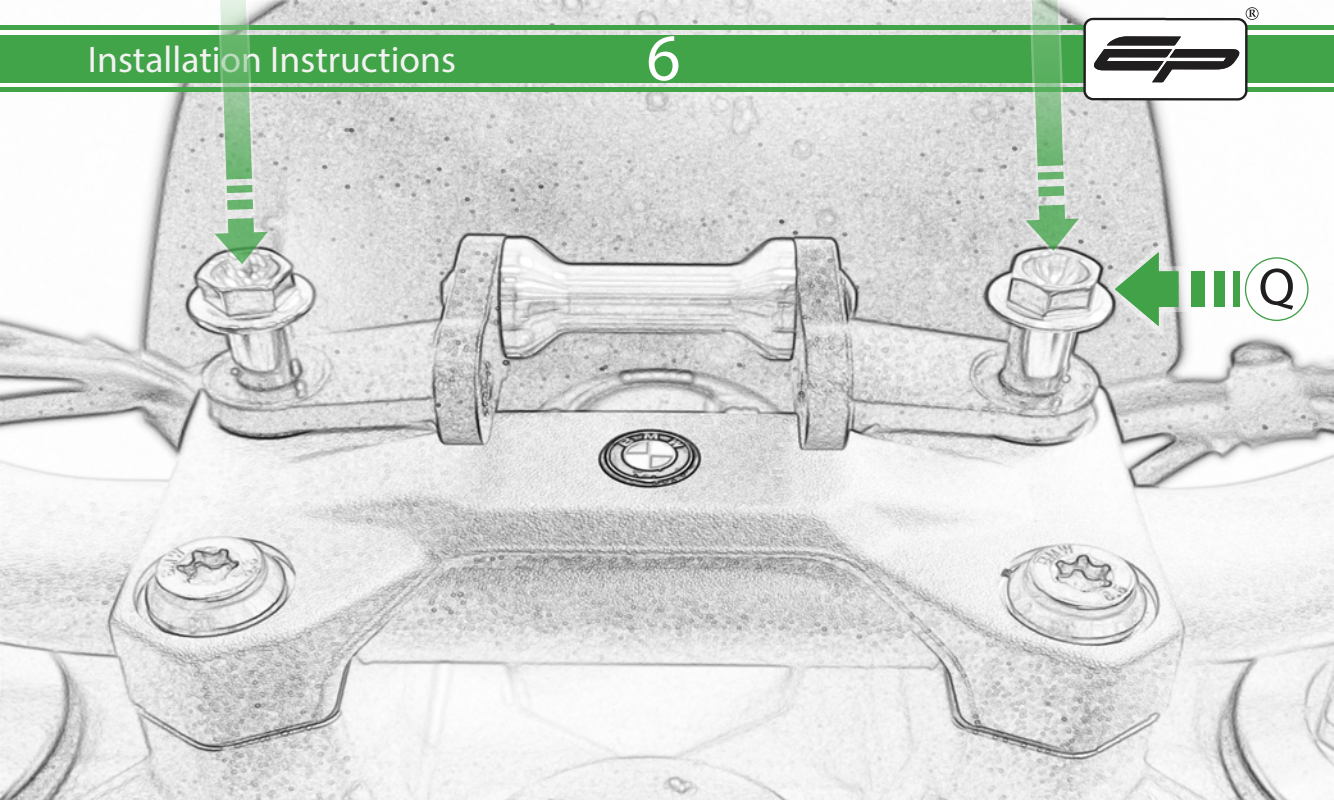




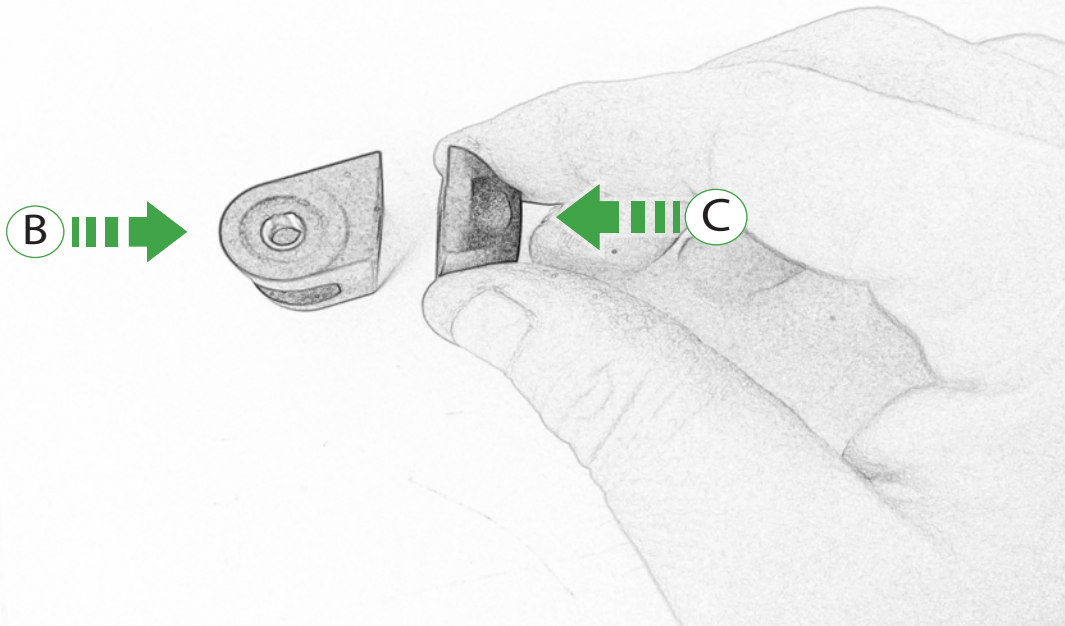


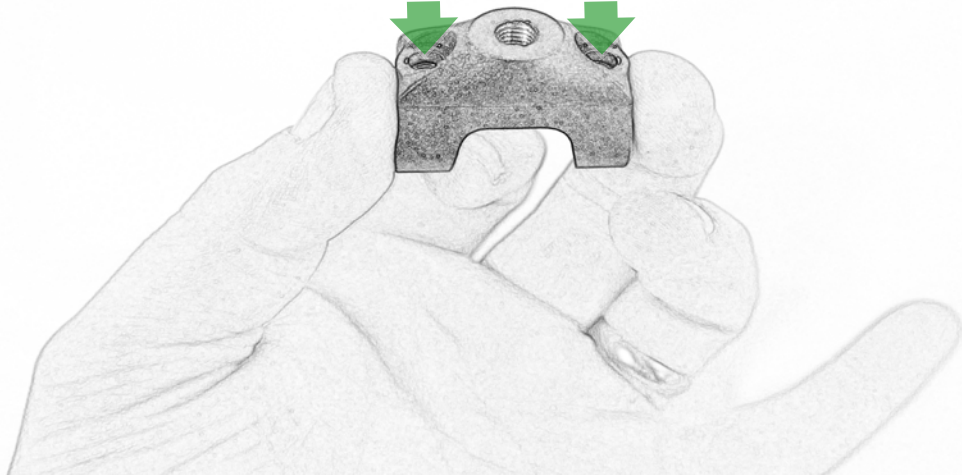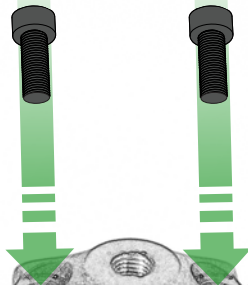


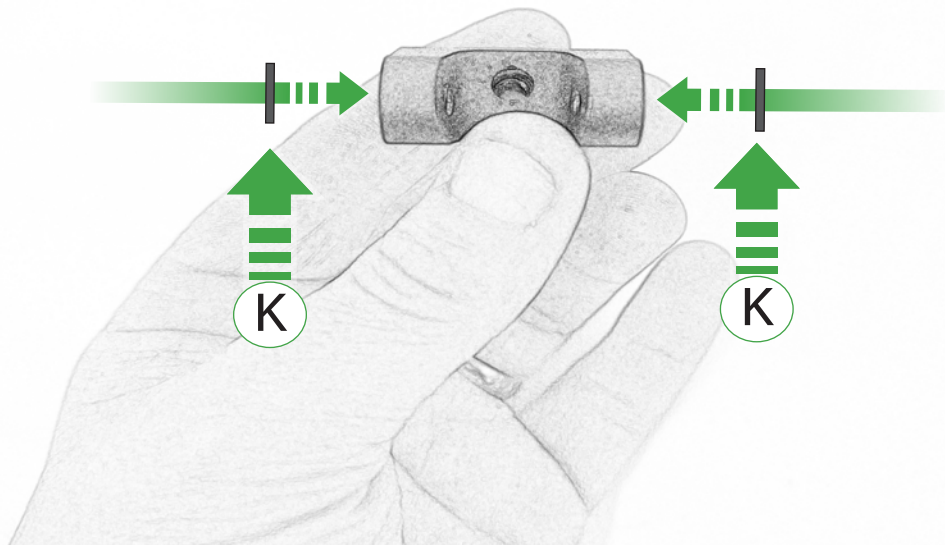


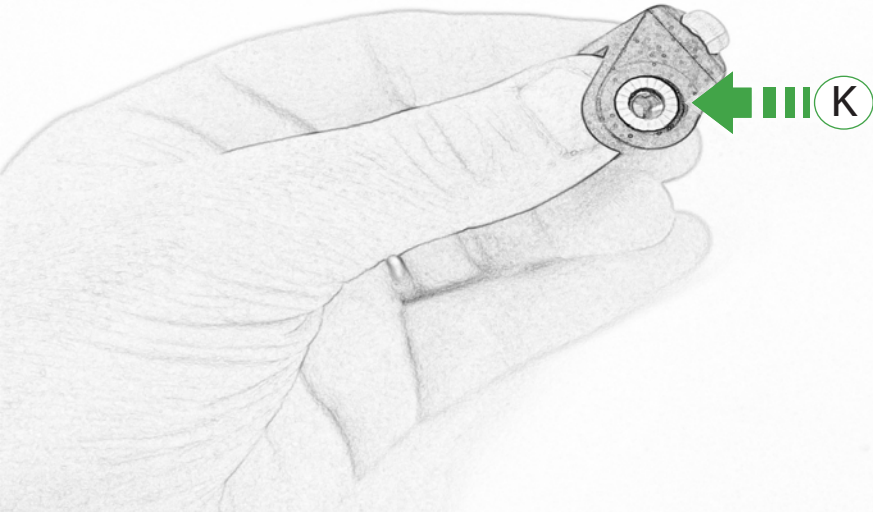




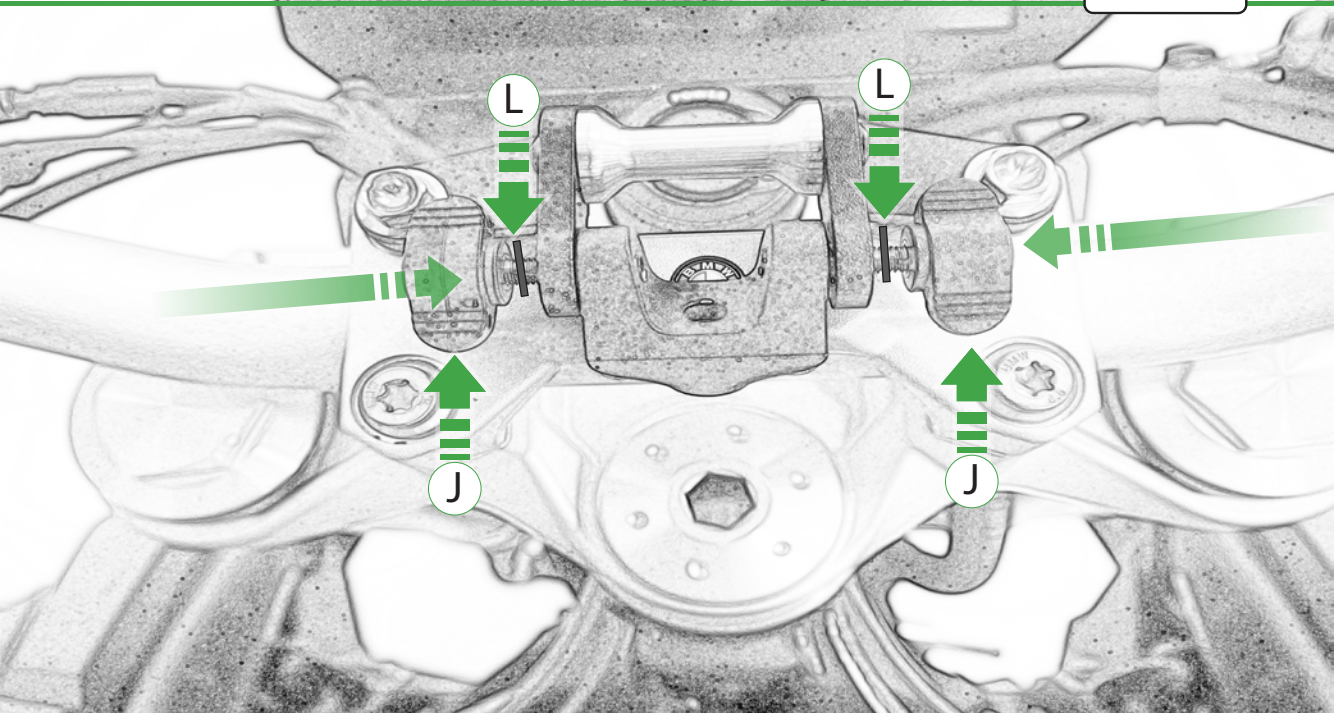


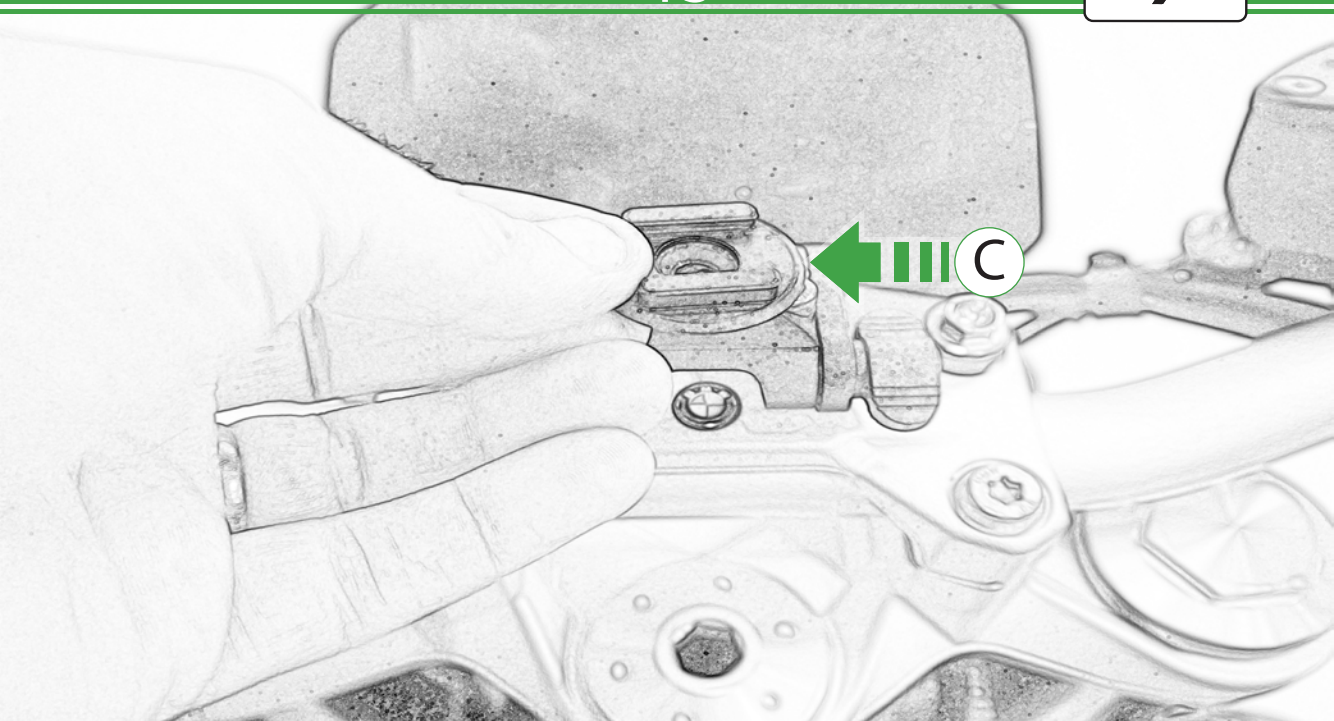

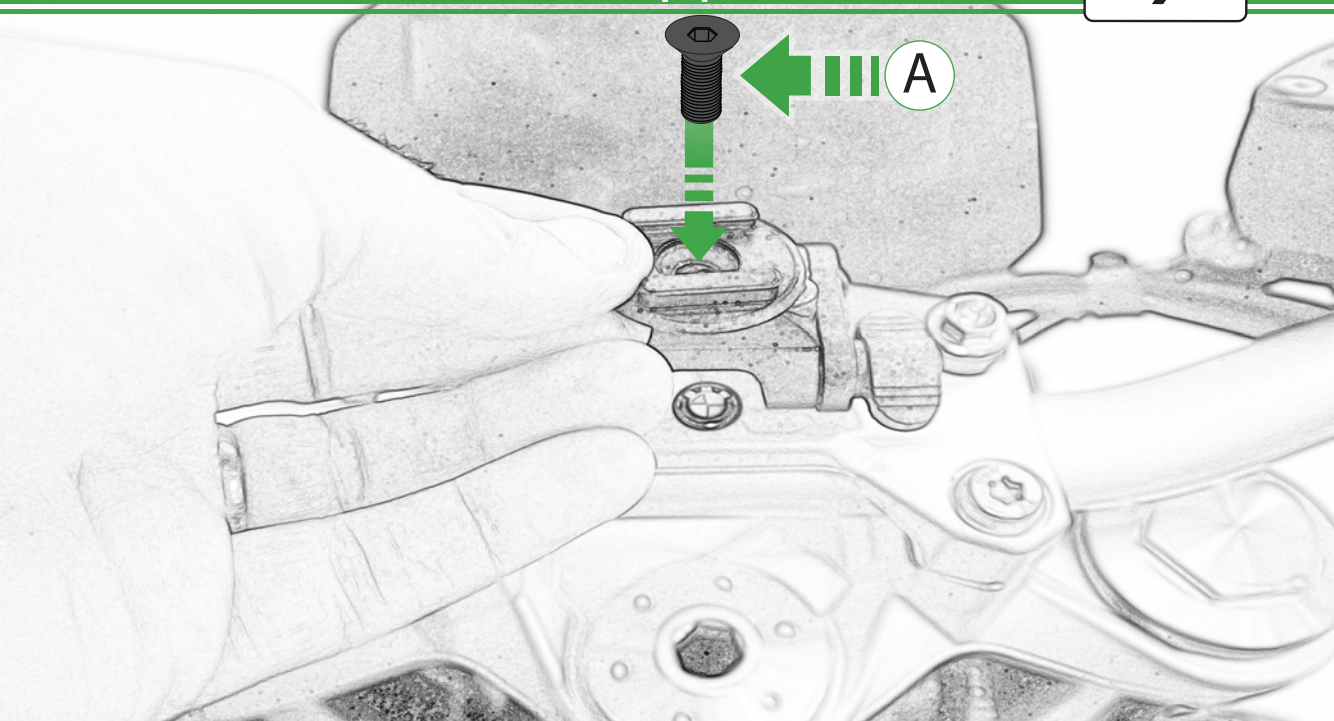



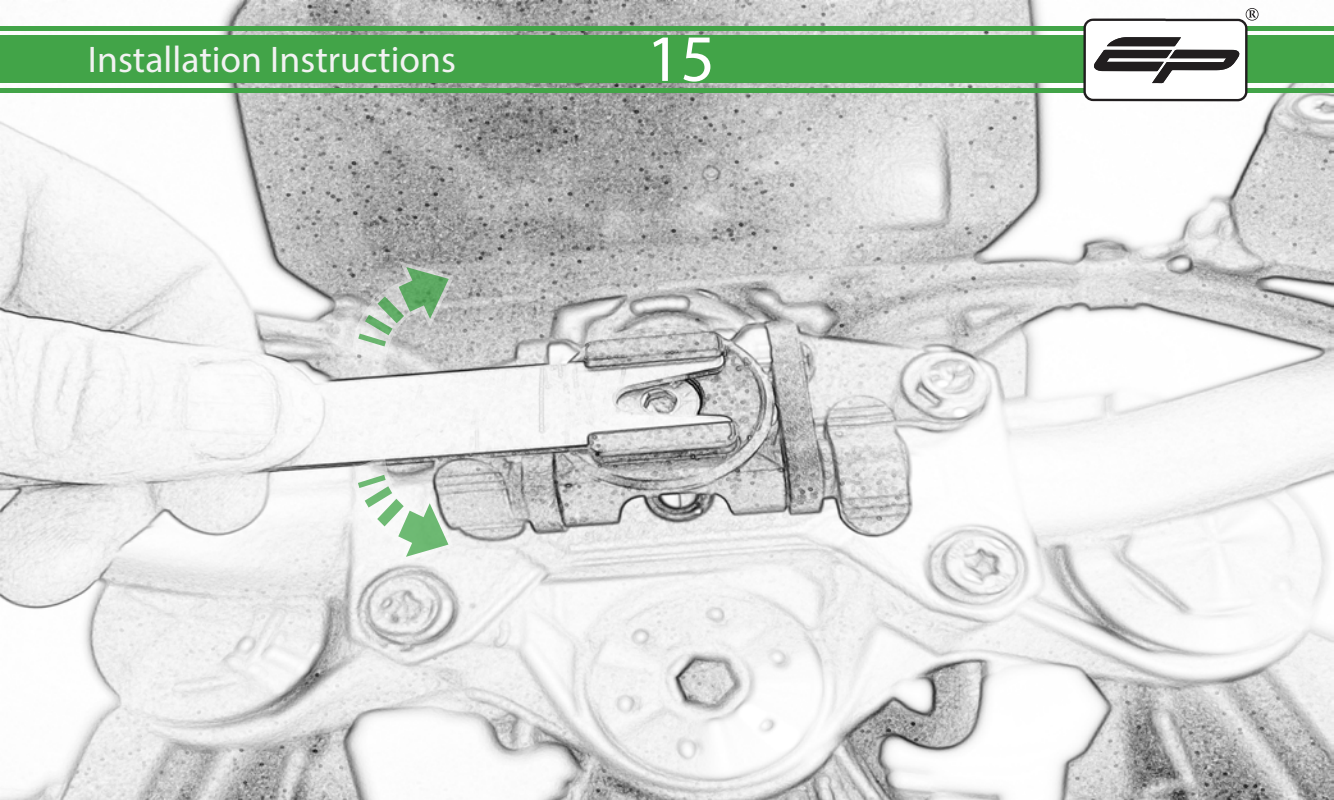

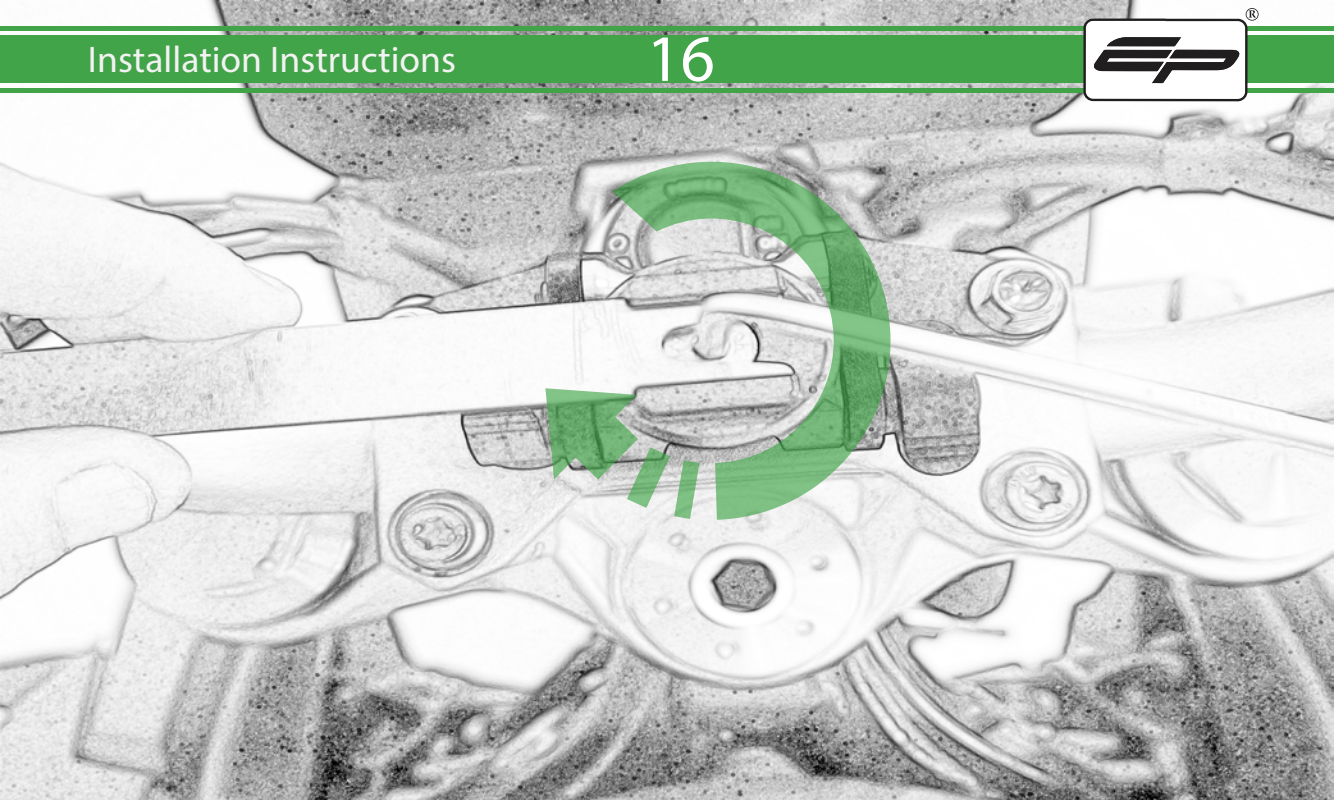



**EVOTECH**®  
P E R F O R M A N C E

[www.evotech-performance.com](http://www.evotech-performance.com)