

EVOTECH®
P E R F O R M A N C E


www.evotech-performance.com


Ducati Bar End Weights
Installation Instructions




Kit Contents PRN014397-014809


- Ⓐ 2 x Bar End
- Ⓑ 2 x Bar End Inner
- Ⓒ 2 x M6 x 25mm Caphead

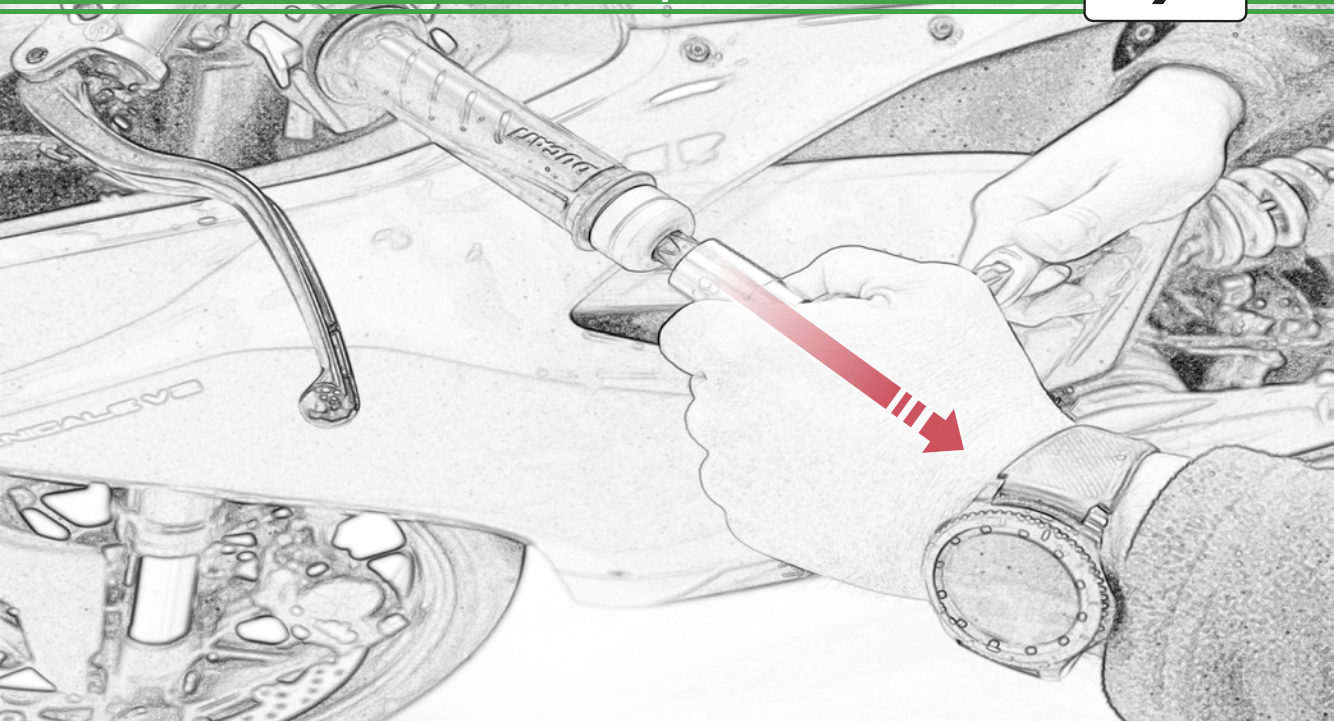


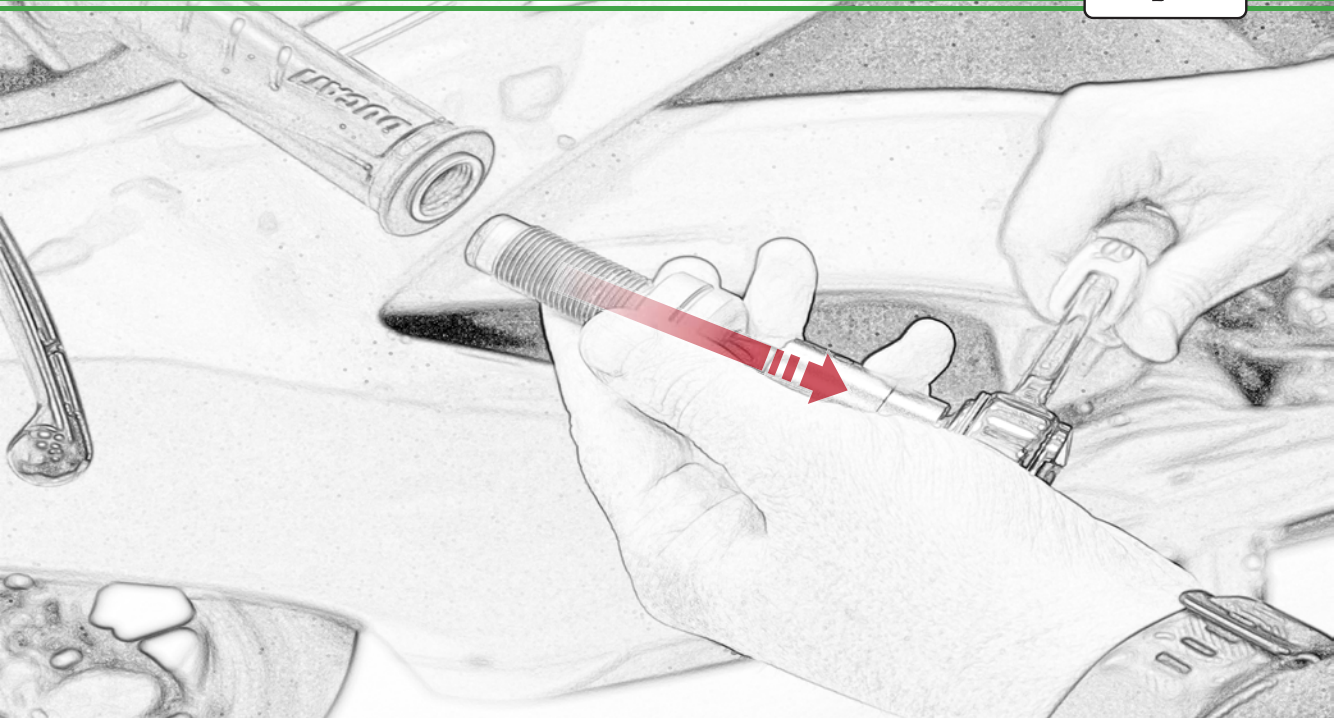


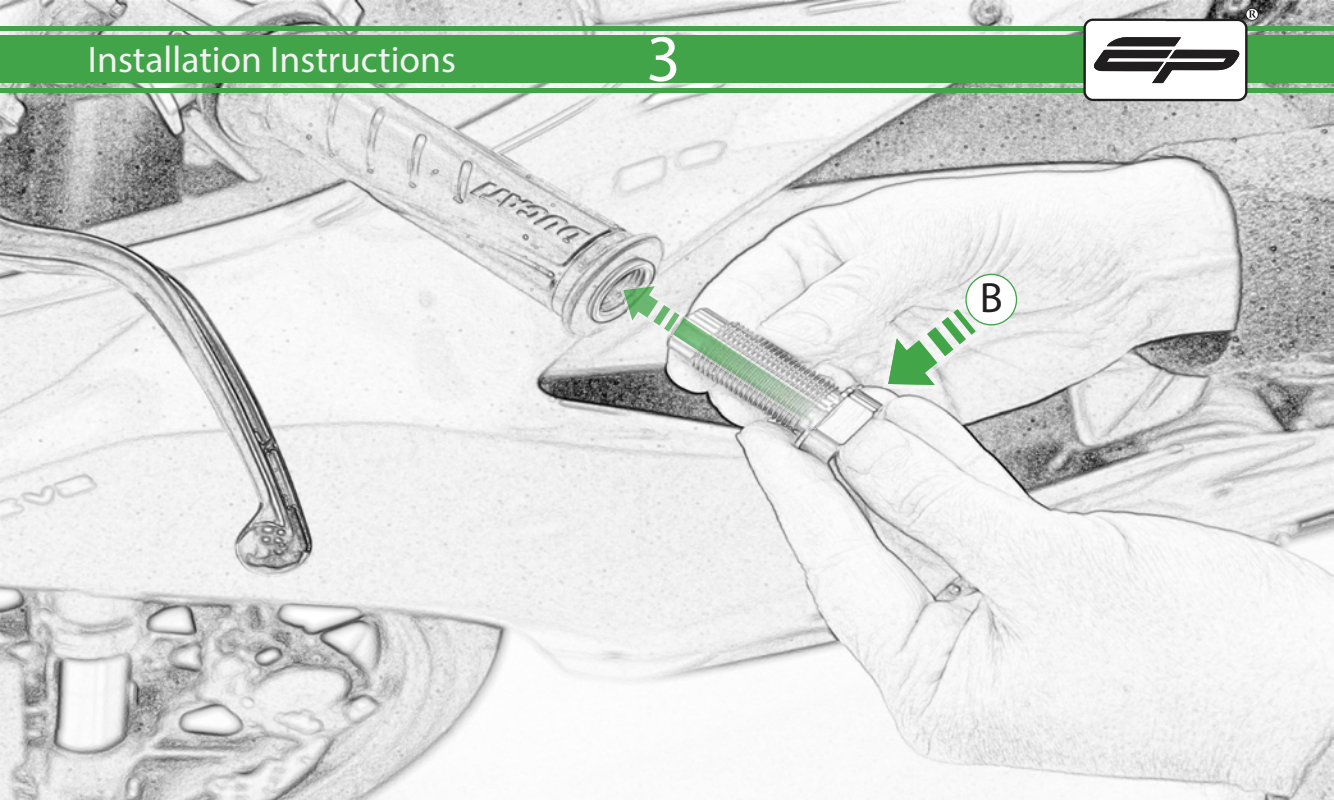





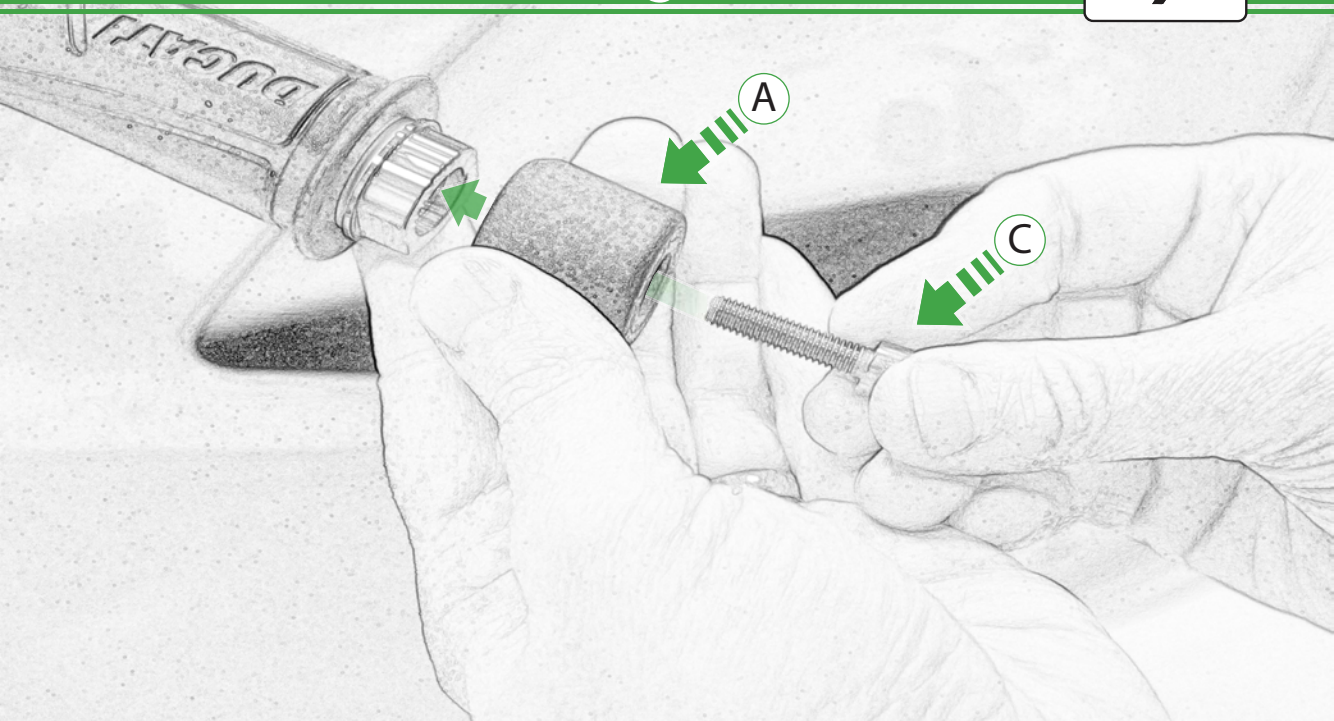


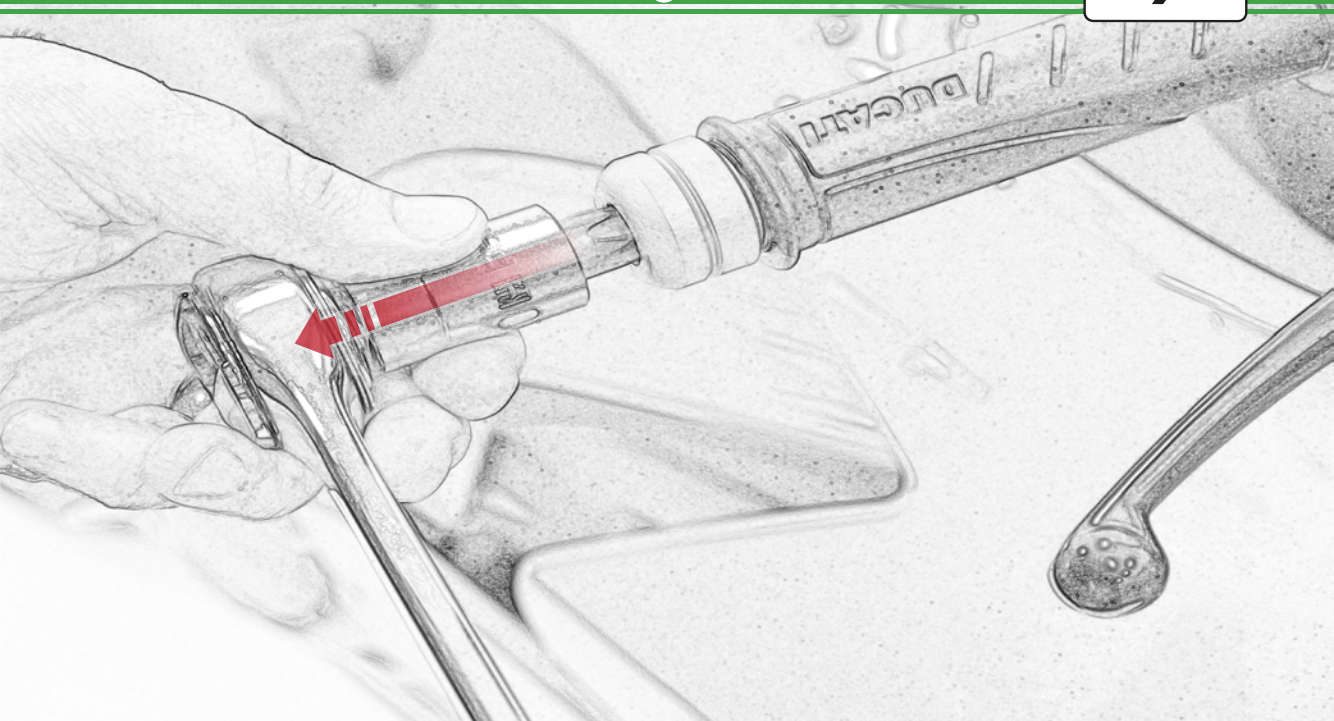


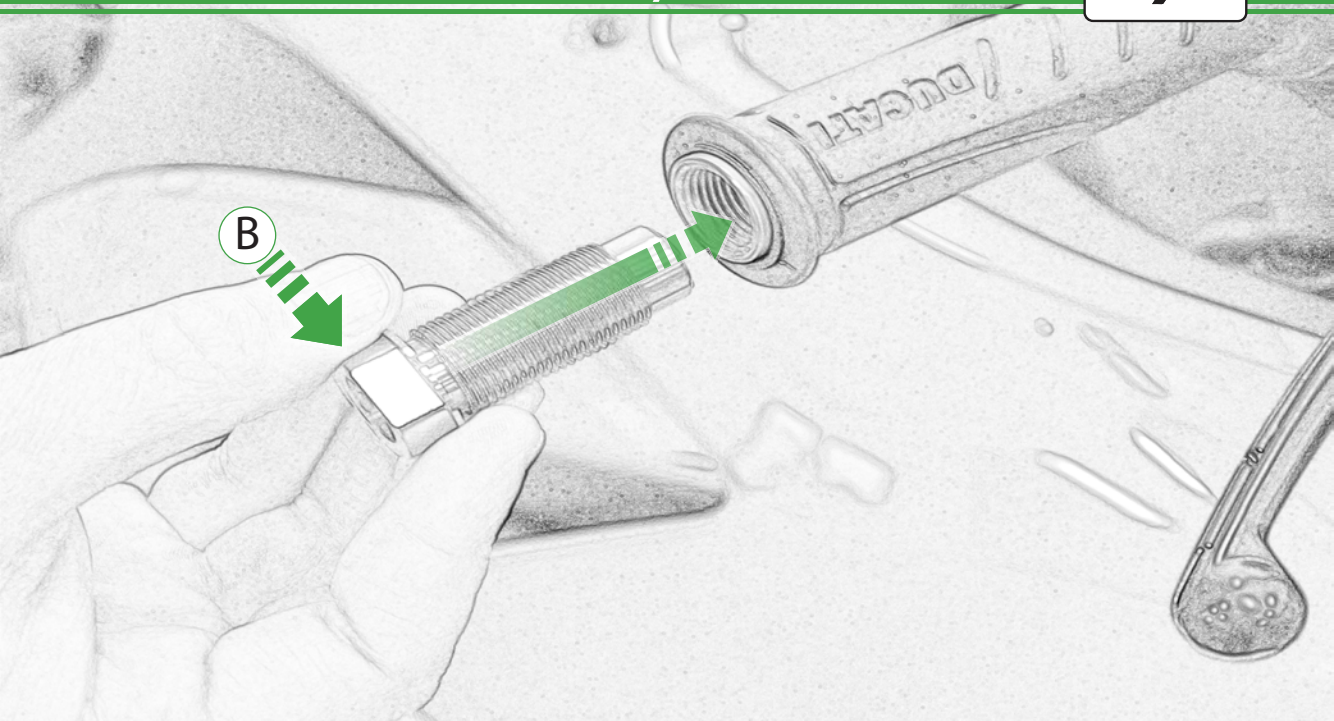


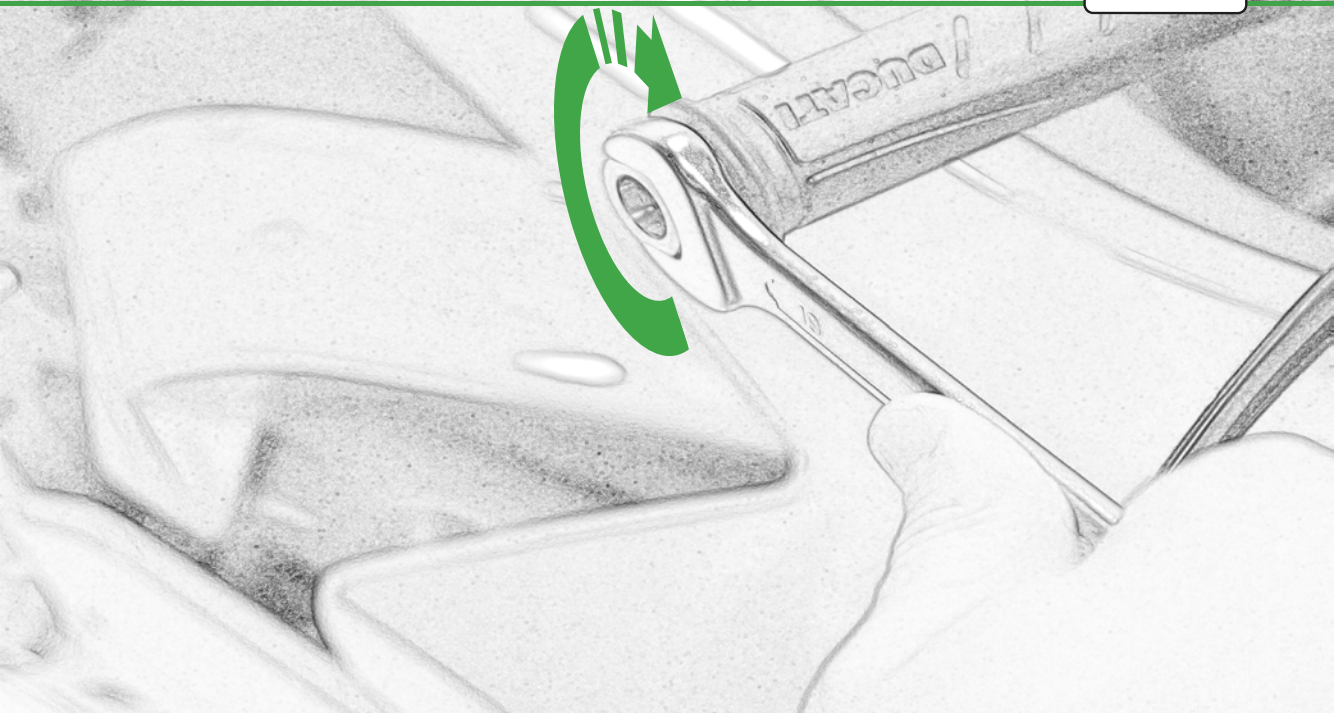

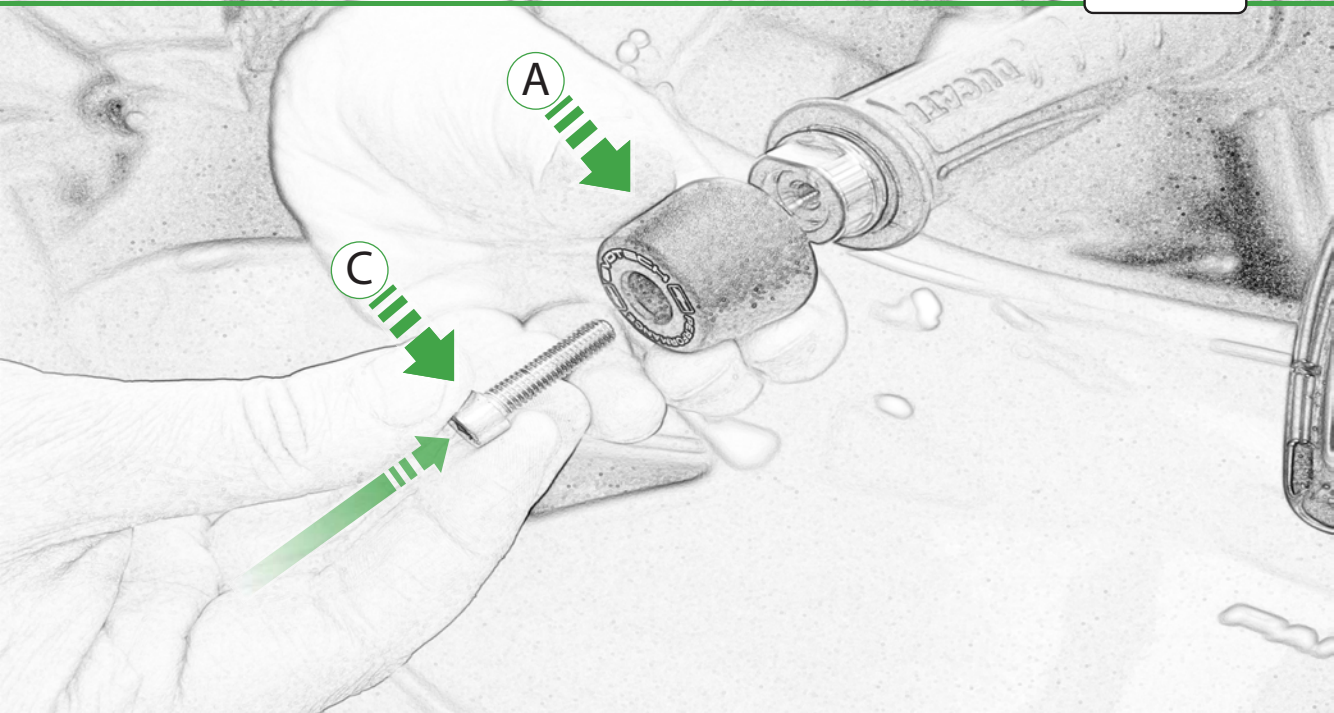

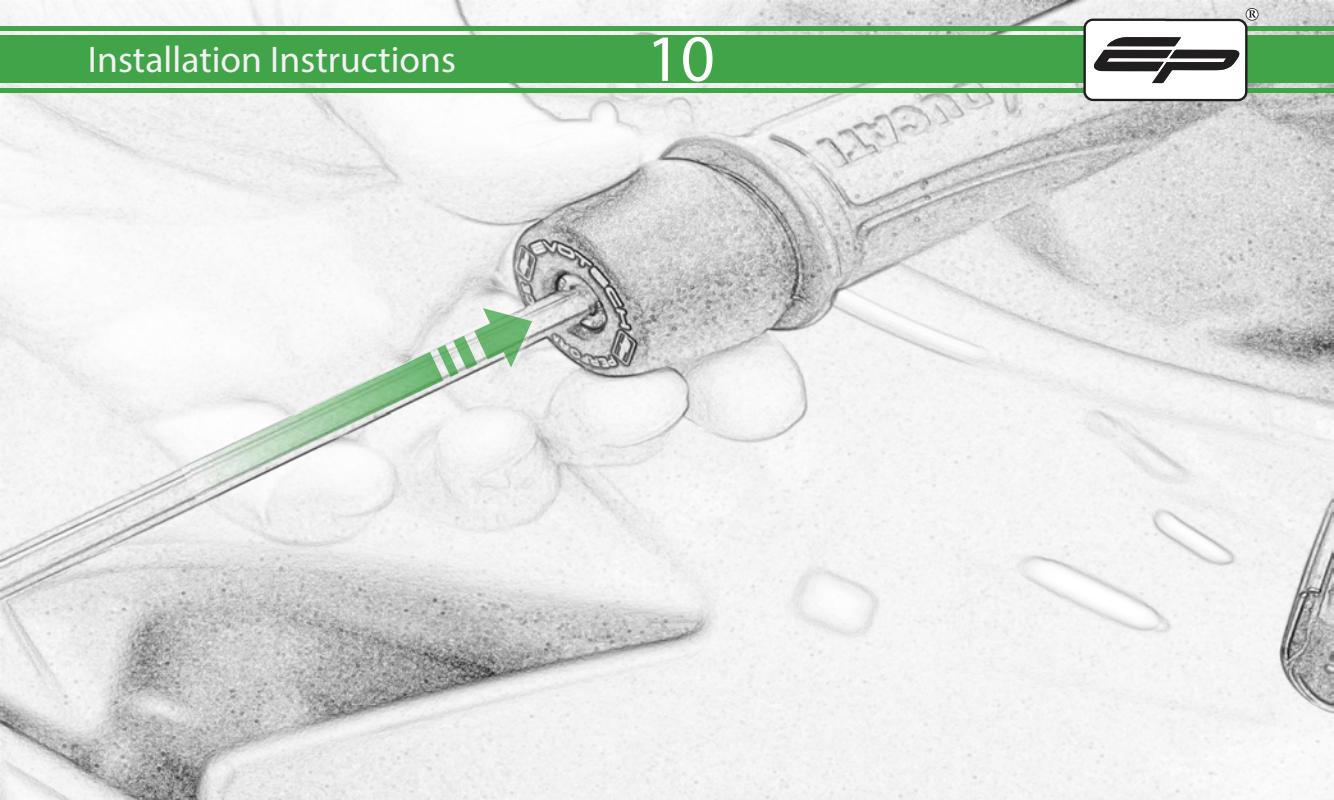

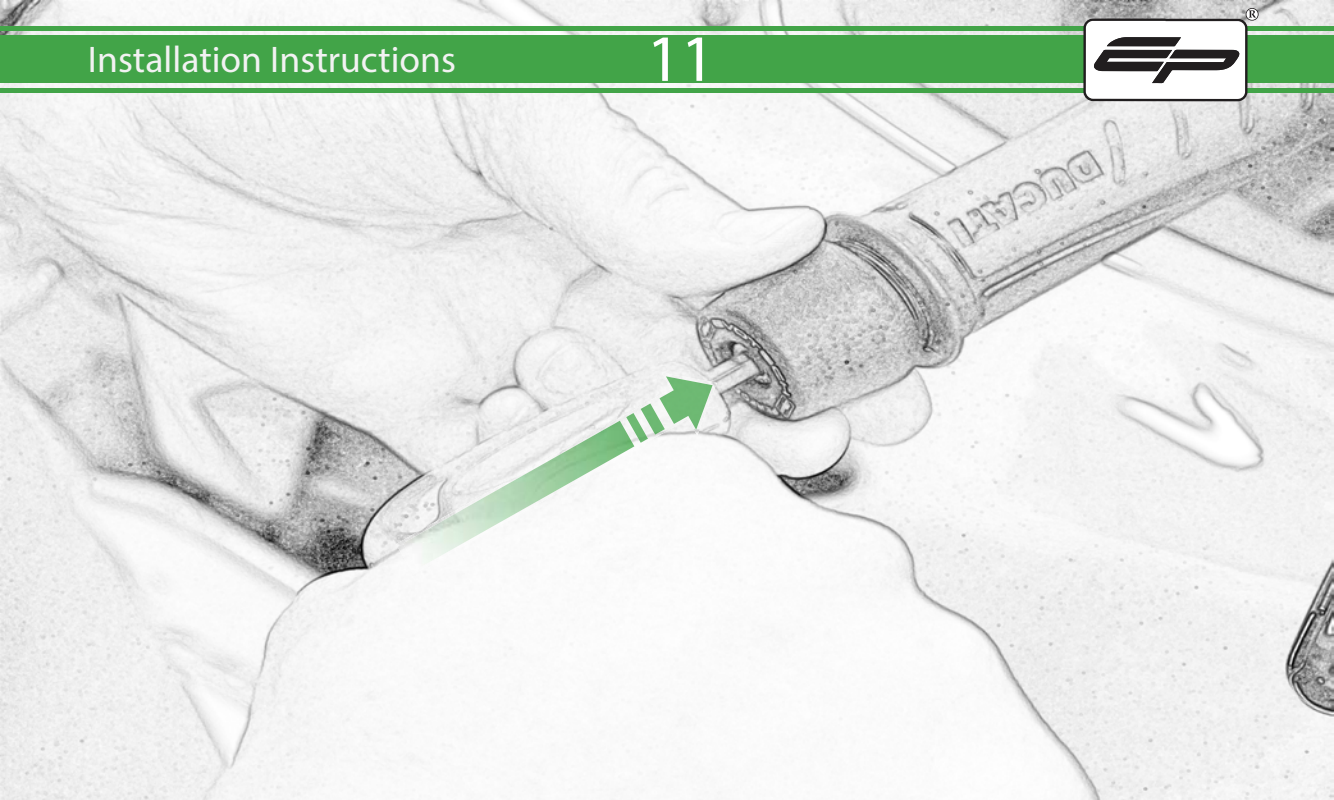

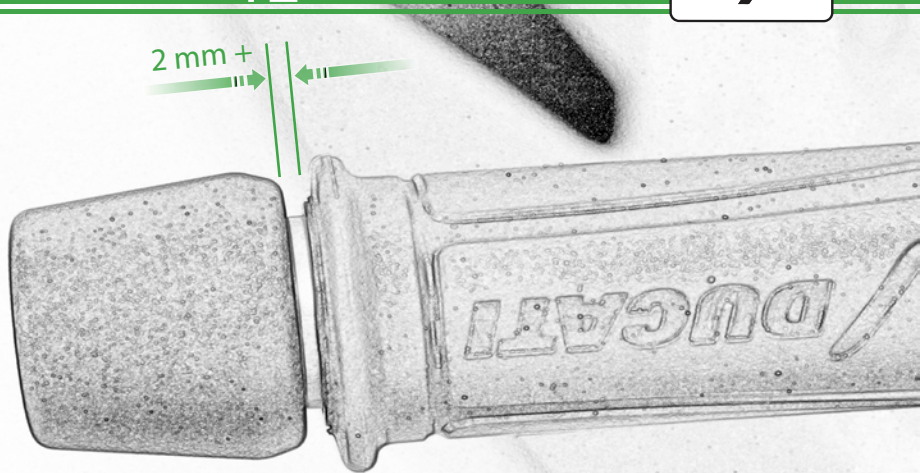

Caution

Check For Free Play
2 mm Minimum Gap



Caution

Check For Throttle
Free Play on Rotation



ESSENTIAL CHECKS

It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com