

**EVOTECH**®  
P E R F O R M A N C E

[www.evotech-performance.com](http://www.evotech-performance.com)


RSV4 Bar Ends

Installation Instructions




Kit Contents PRN014397-015104


- (A) 2 x Bar End Inner
- (B) 2 x Bar End Outer
- (C) 2 x M6 x 25 Caphead

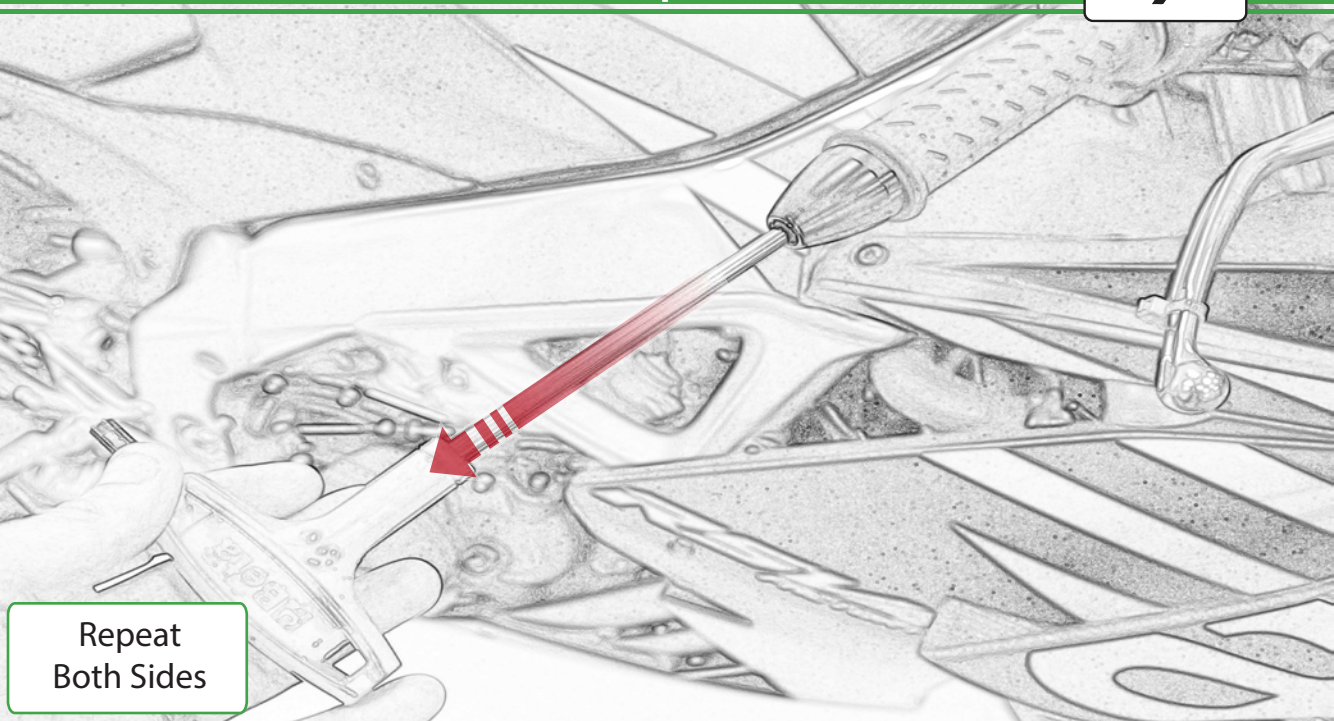

Repeat  
Both Sides

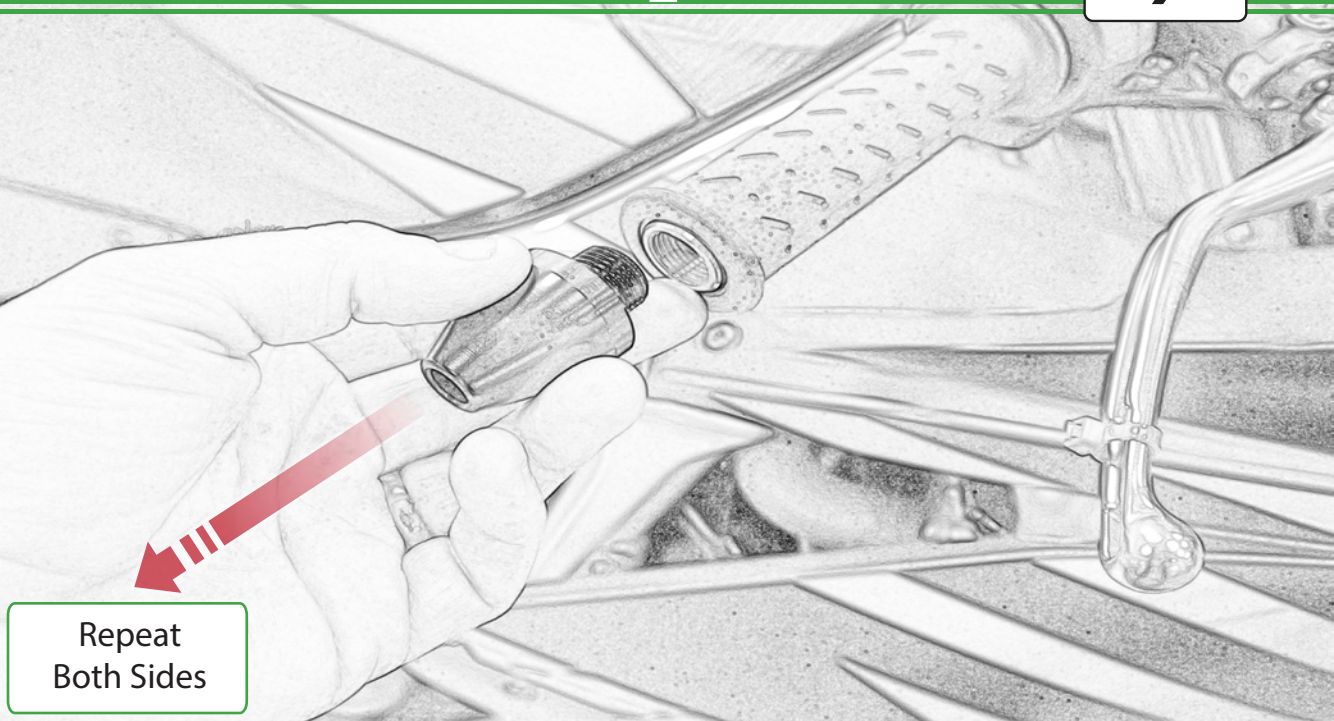


Repeat  
Both Sides

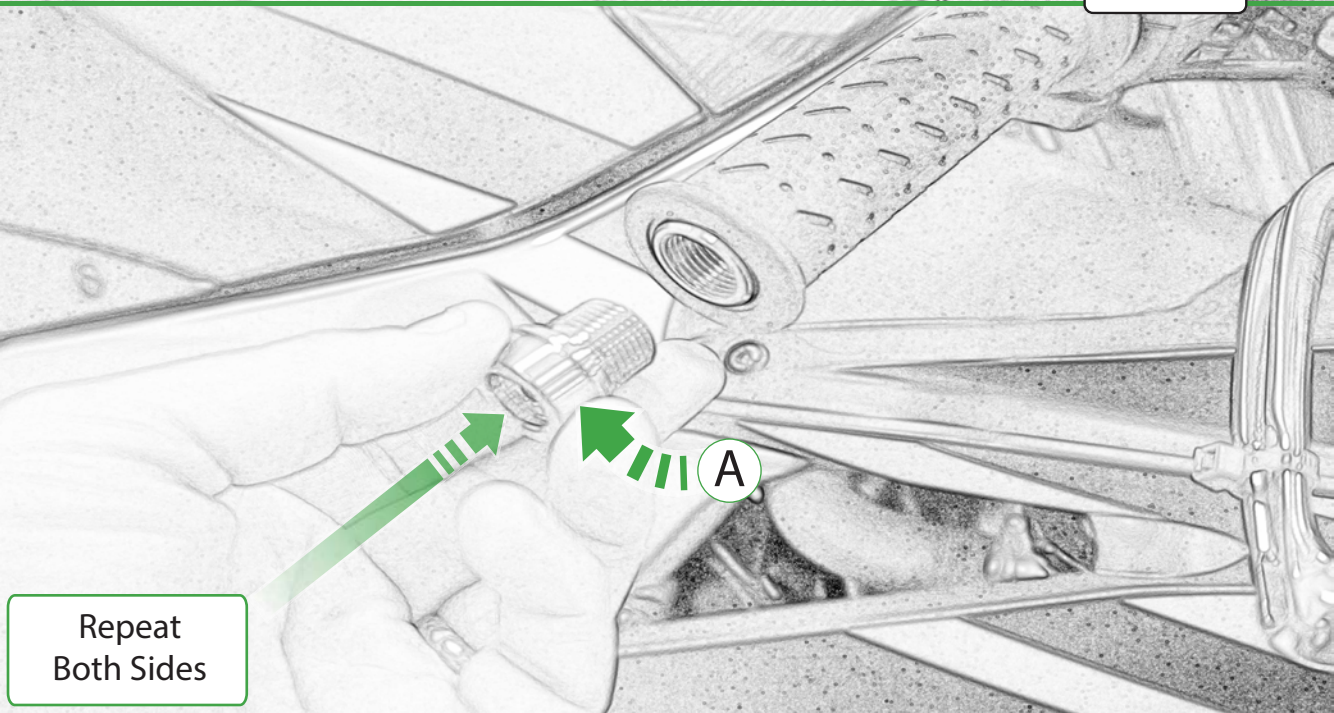


A

Repeat  
Both Sides

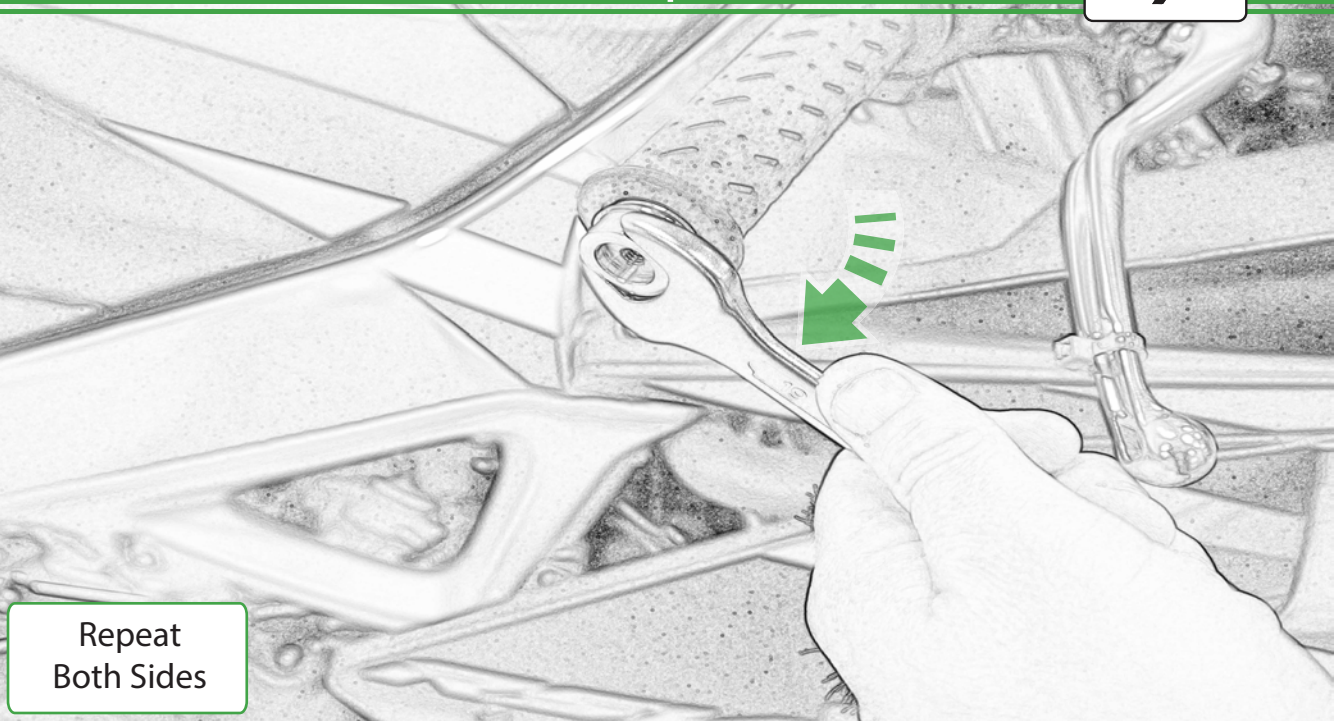


Repeat  
Both Sides

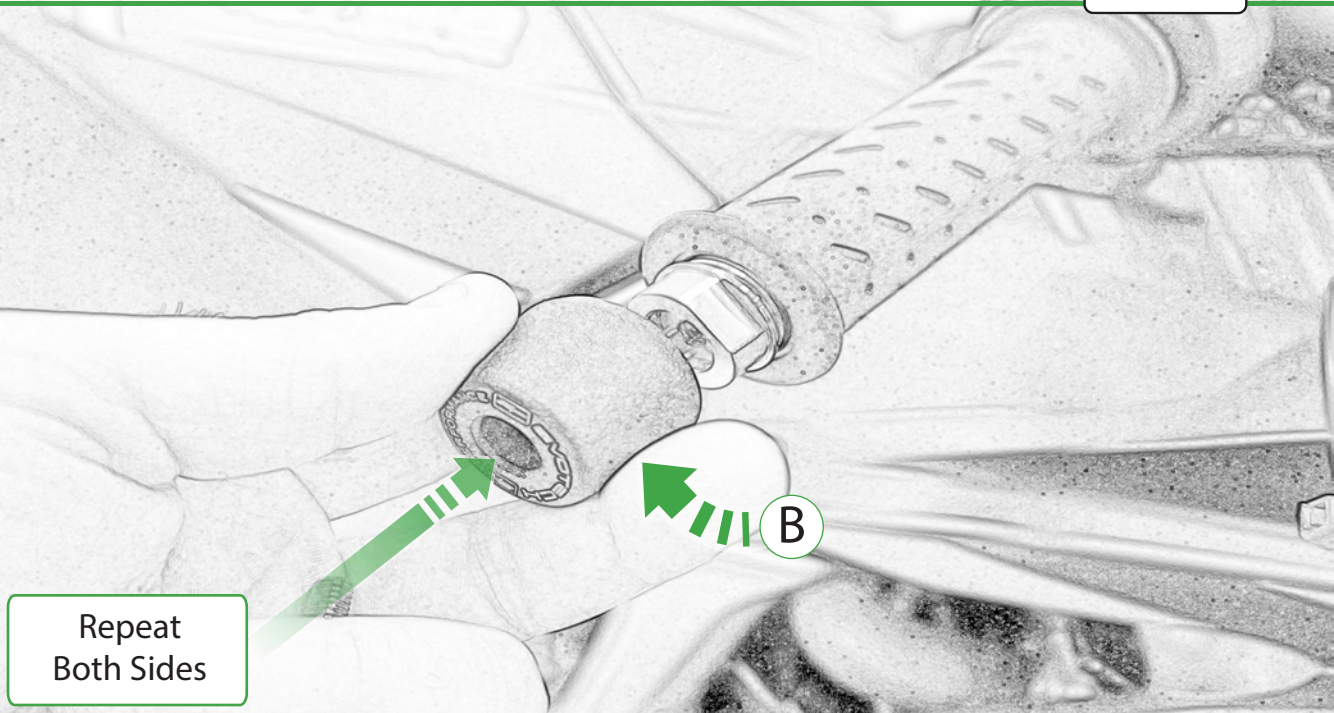


Repeat  
Both Sides

B

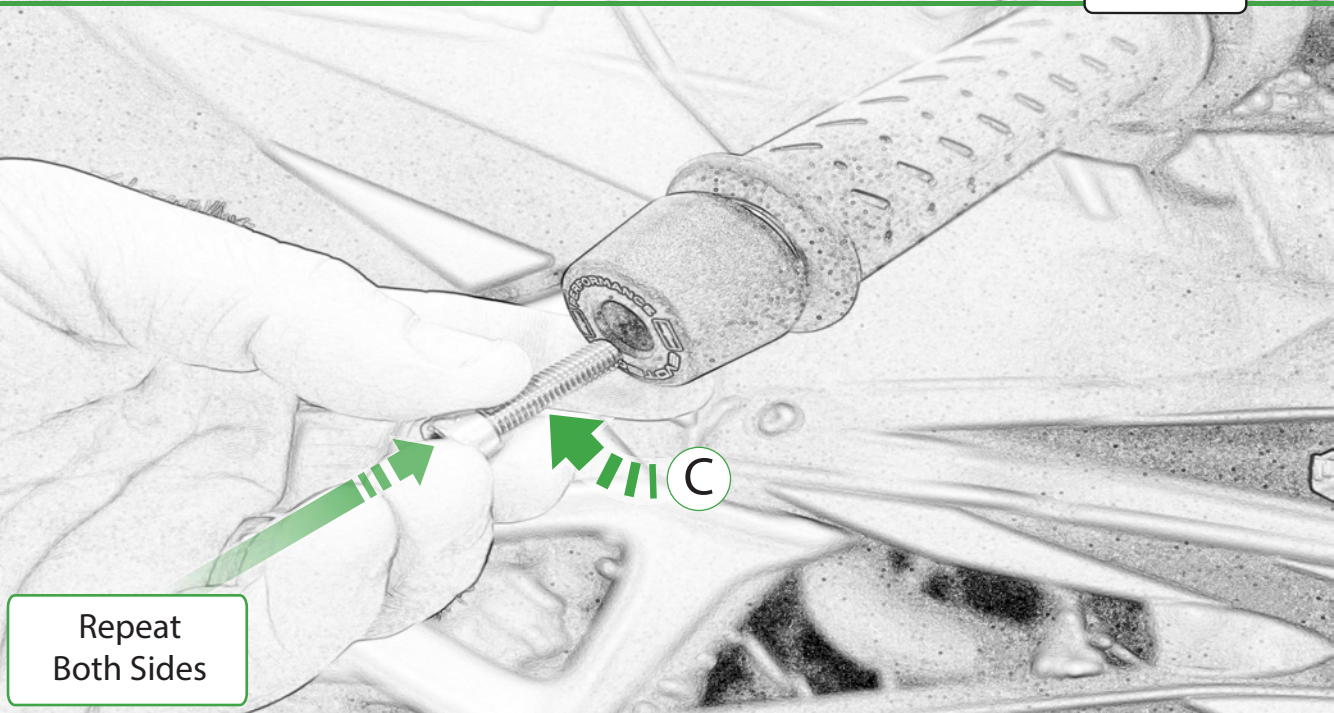

Repeat  
Both Sides



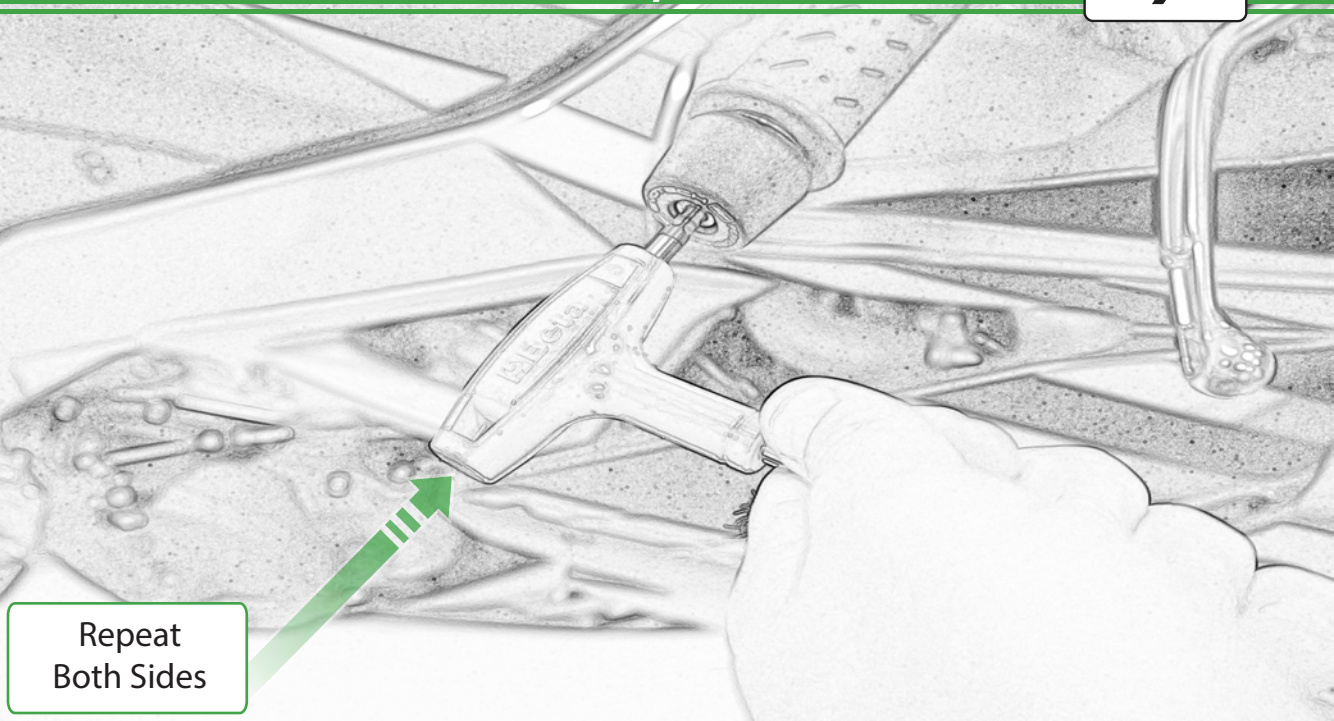

Repeat  
Both Sides



## ESSENTIAL CHECKS

It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



**EVOTECH**®  
P E R F O R M A N C E

[www.evotech-performance.com](http://www.evotech-performance.com)