



**EVOTECH**®  
P E R F O R M A N C E

[www.evotech-performance.com](http://www.evotech-performance.com)


Yamaha MT-09 Crash Protection


Installation Instructions




## Kit Contents PRN015418


- Ⓐ 1 x L/H Bobbin Spacer (Long Spacer)
- Ⓑ 1 x M10 x 130 x 1.25
- Ⓒ 1 x R/H Bobbin Spacer (Small Spacer)
- Ⓓ 1 x M10 x 95 x 1.25
- Ⓔ 2 x M10 Washers
- Ⓕ 2 x Polywasher
- Ⓖ 2 x Bobbin Head

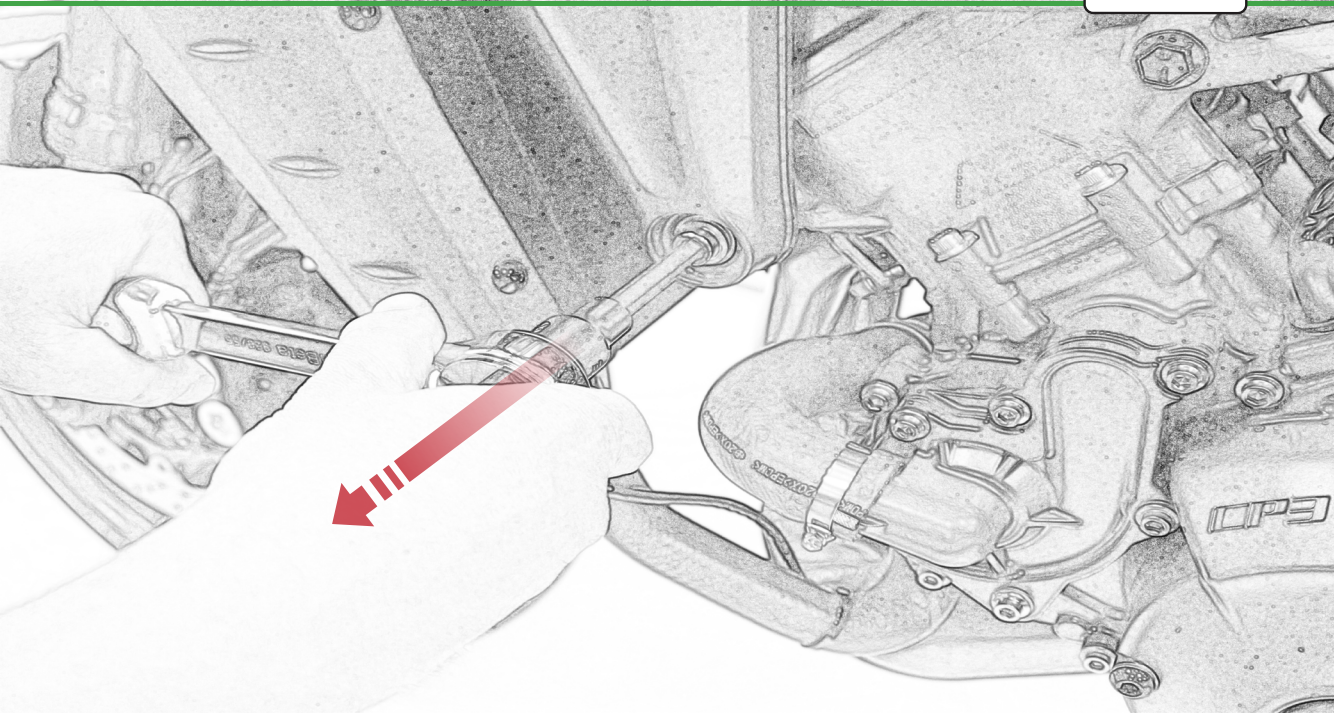


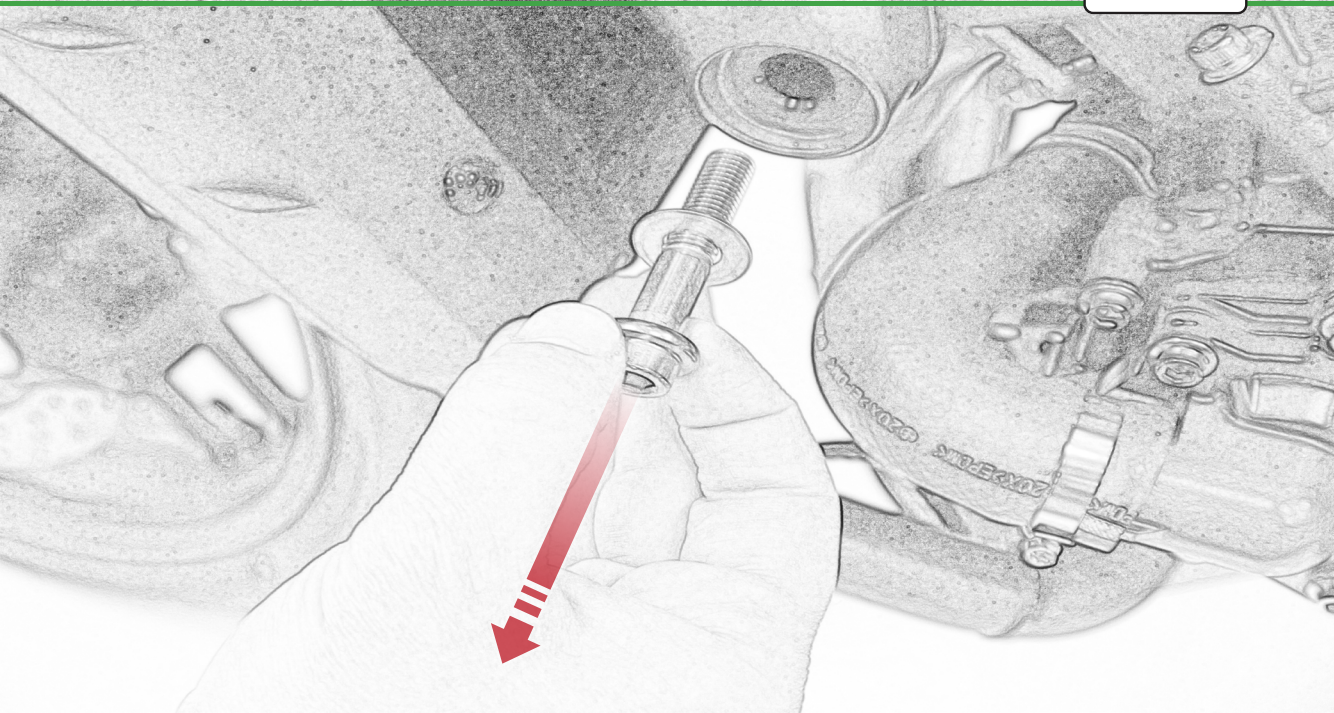




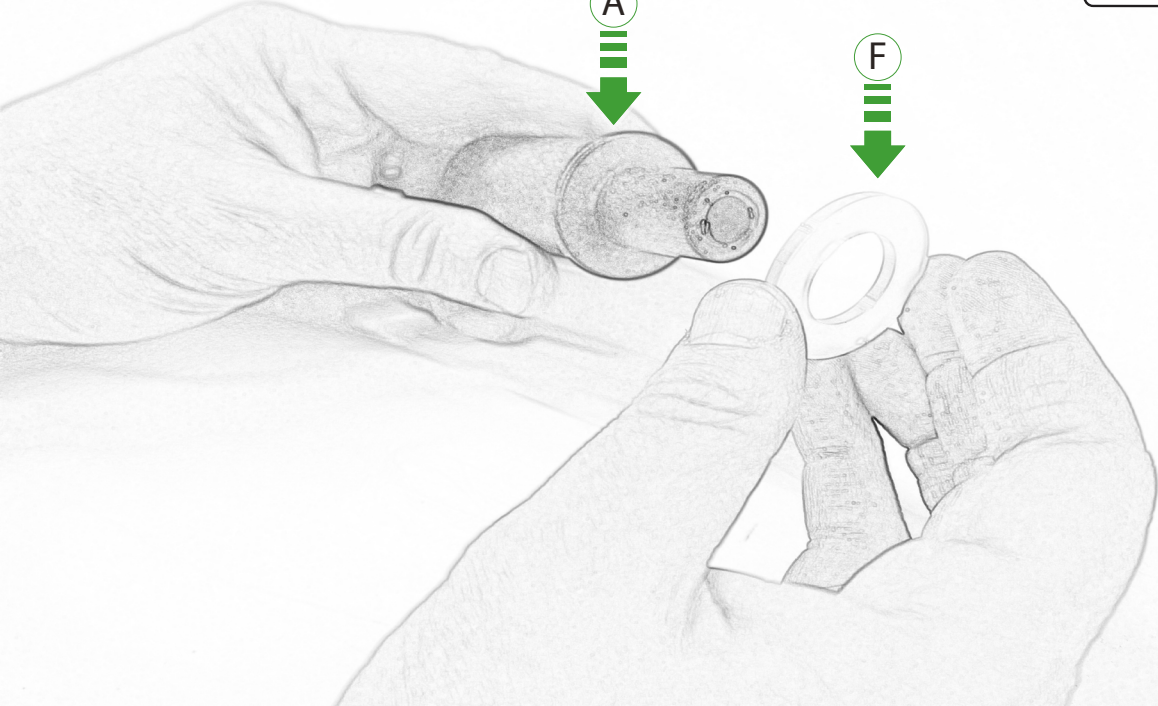


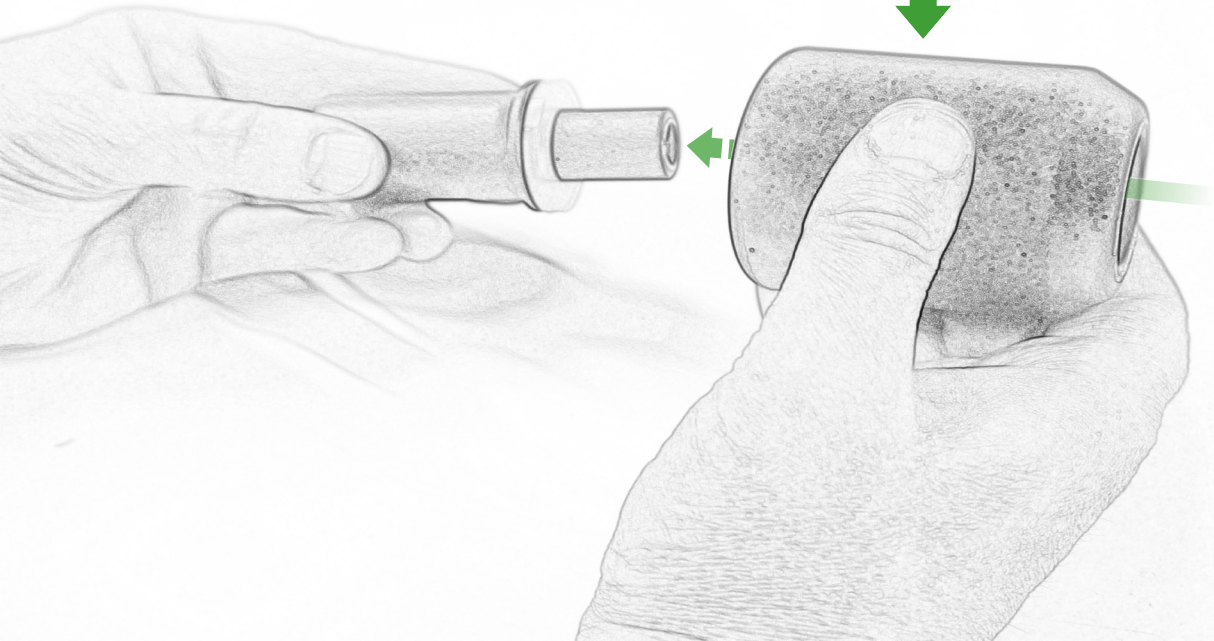

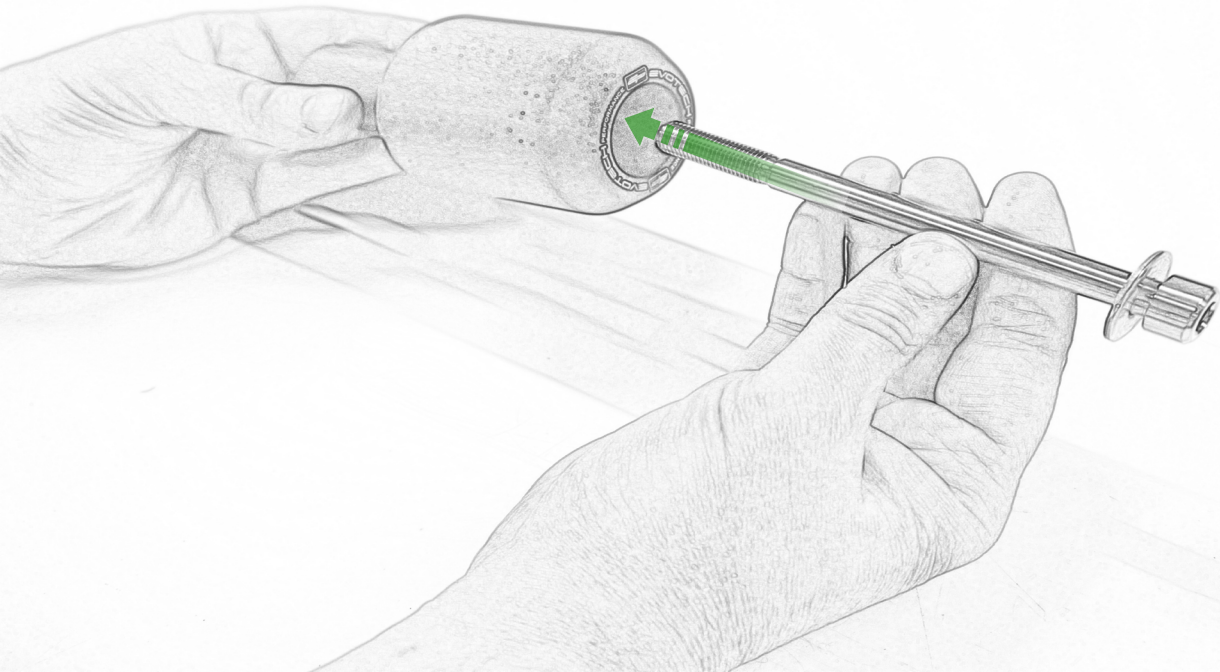





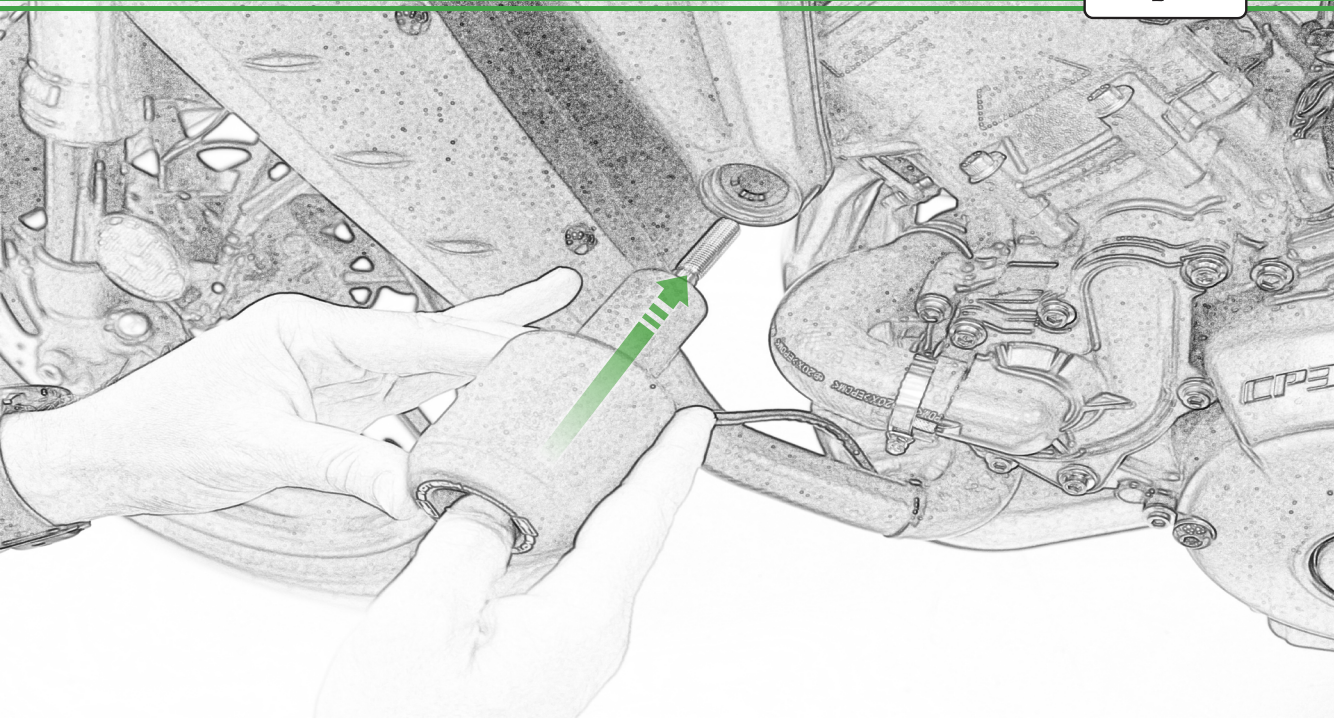


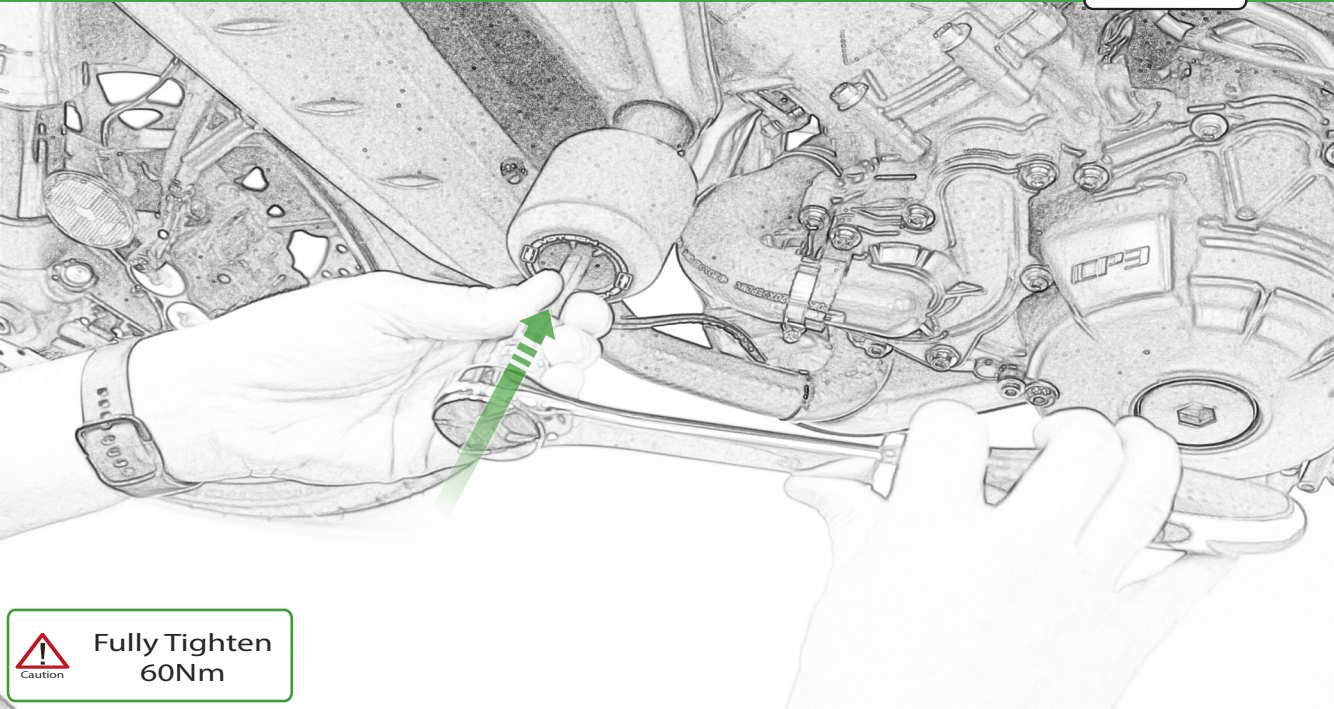



Fully Tighten  
60Nm

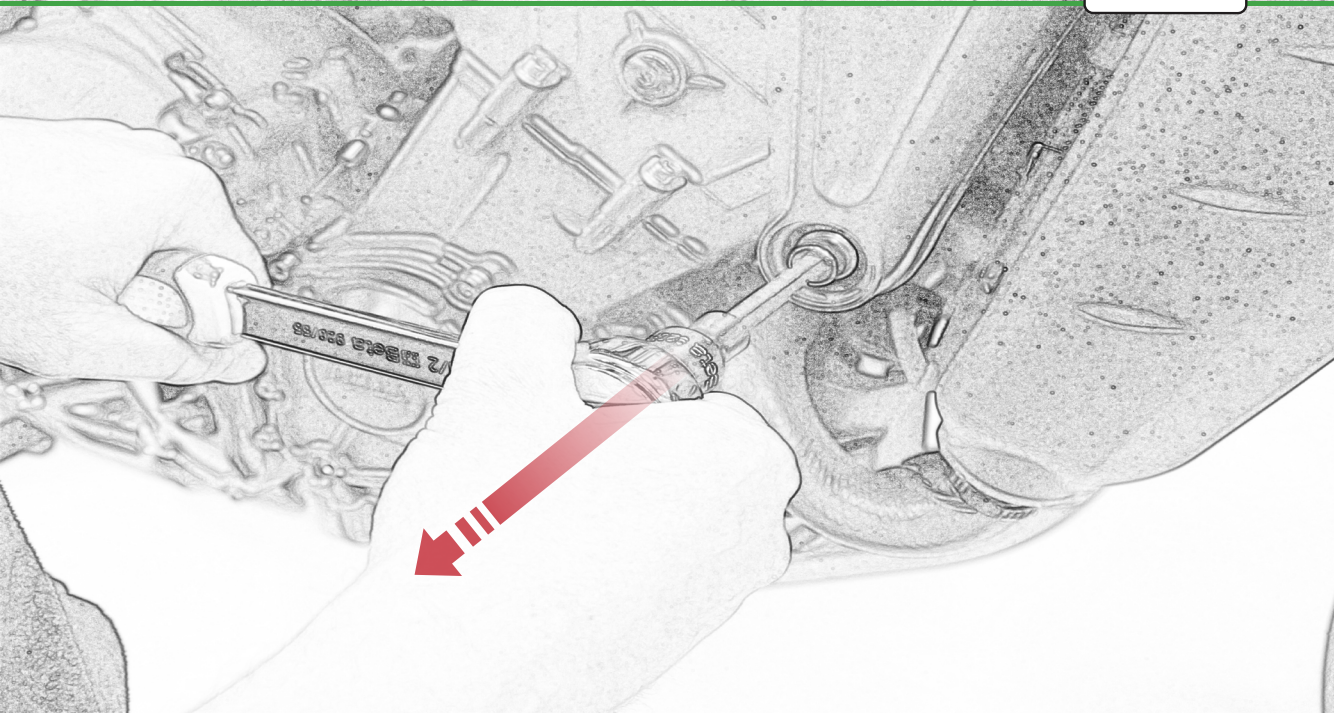


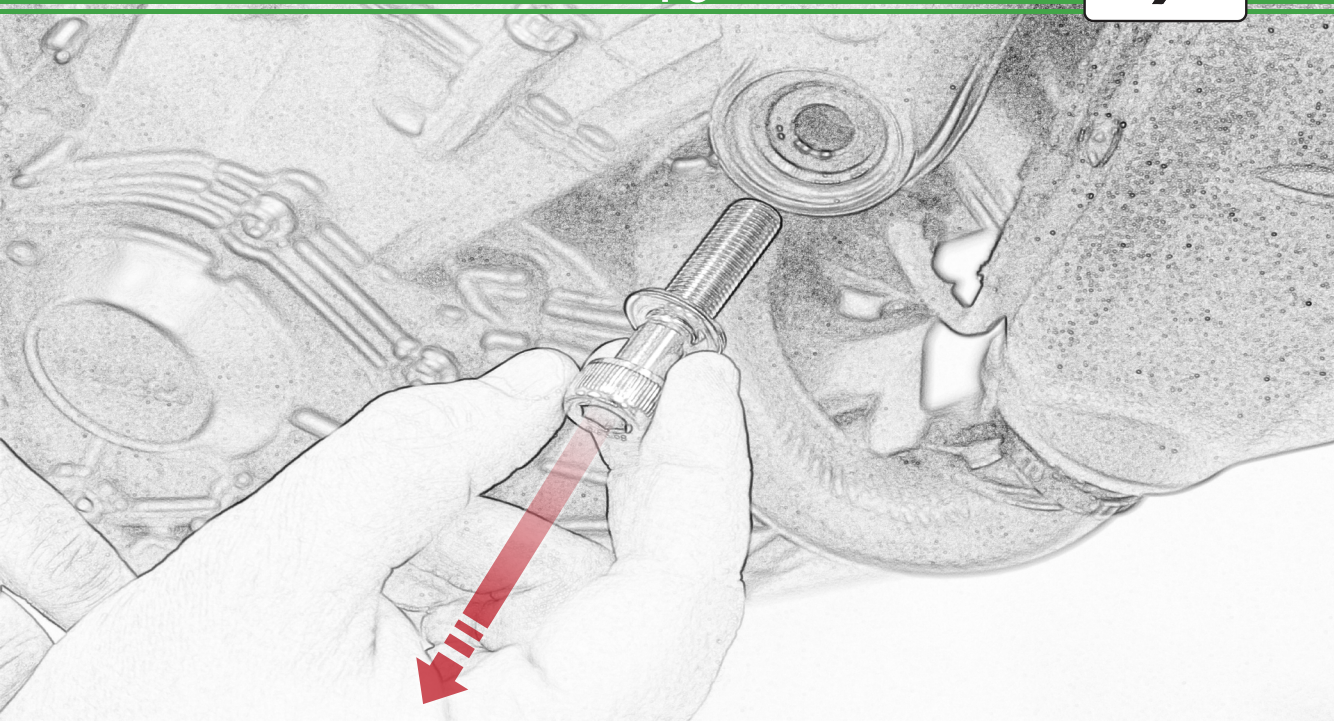

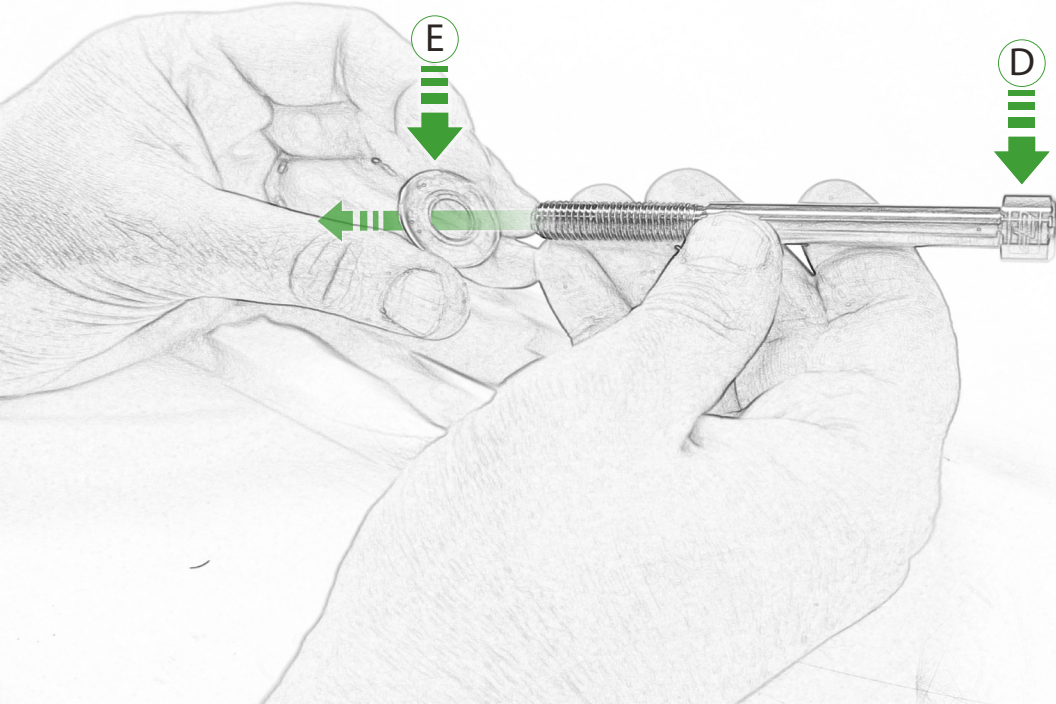


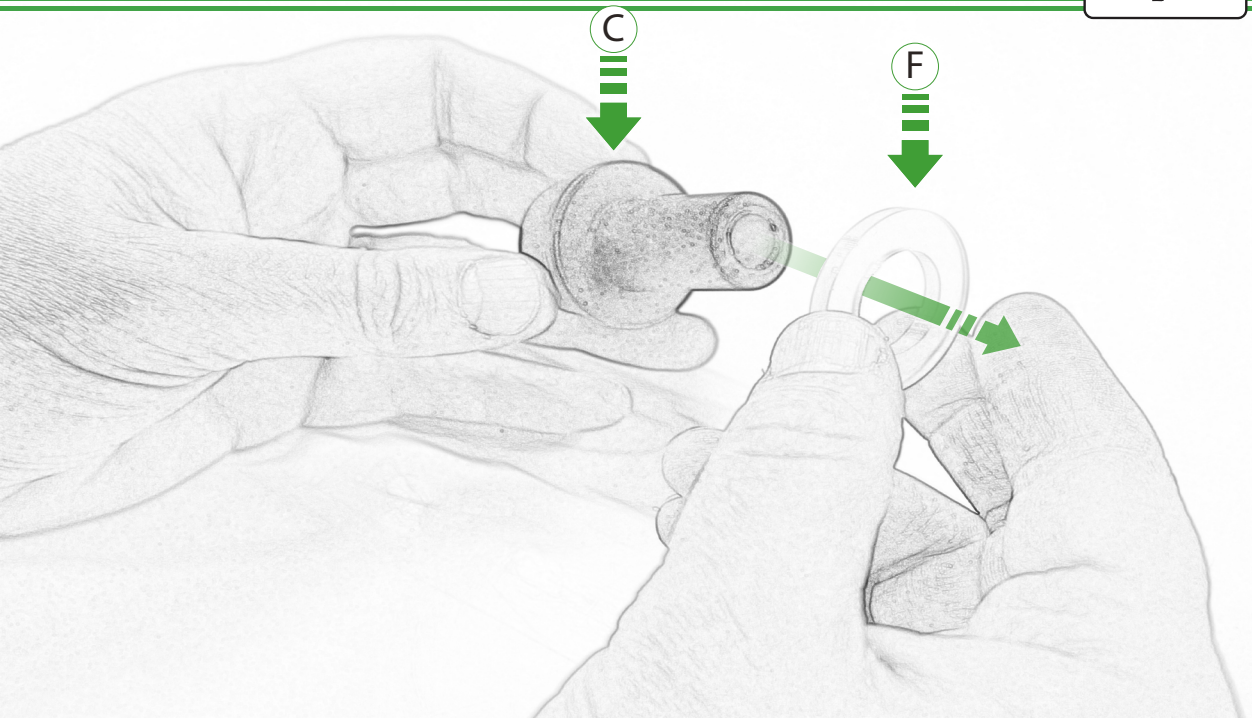


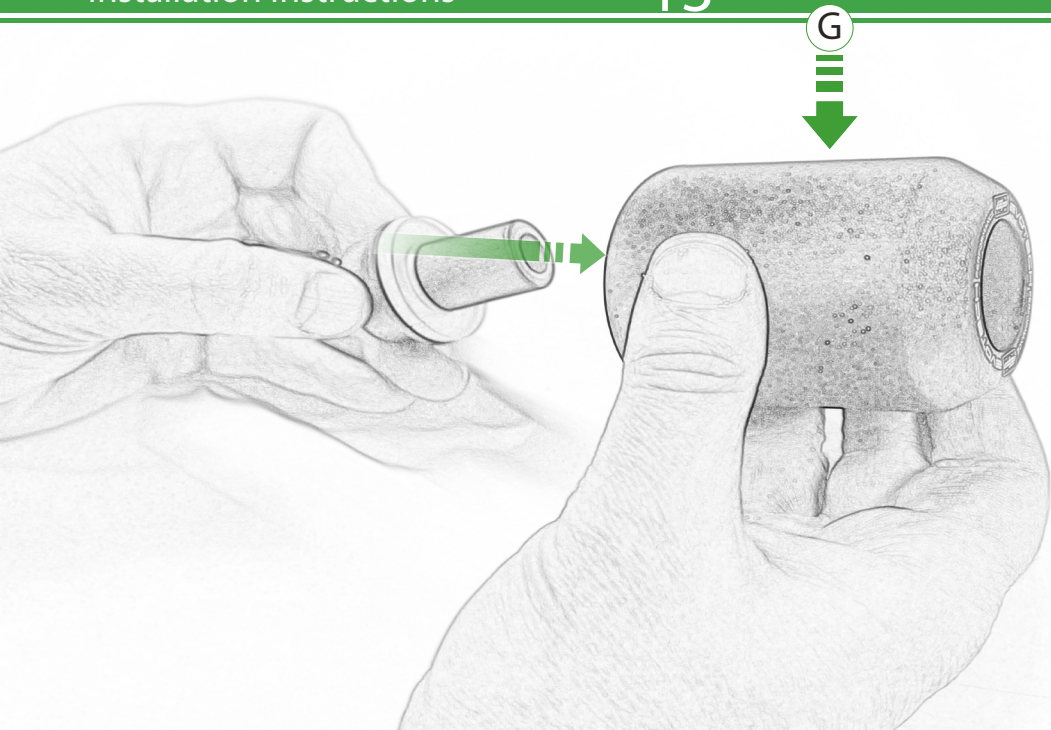

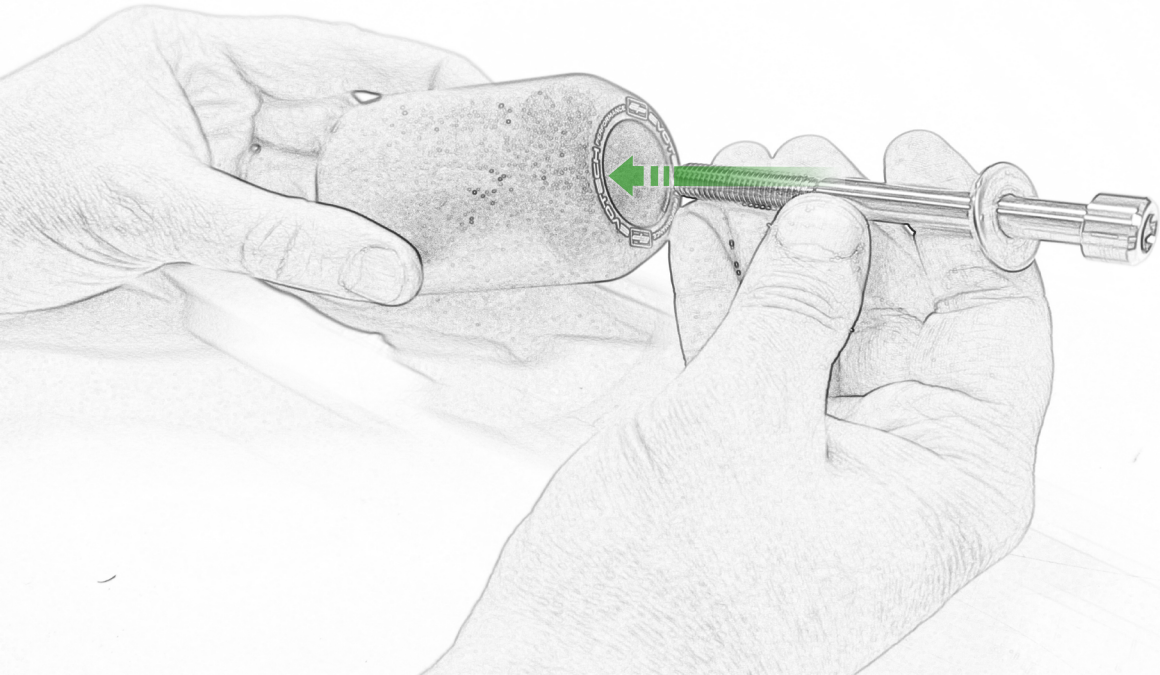



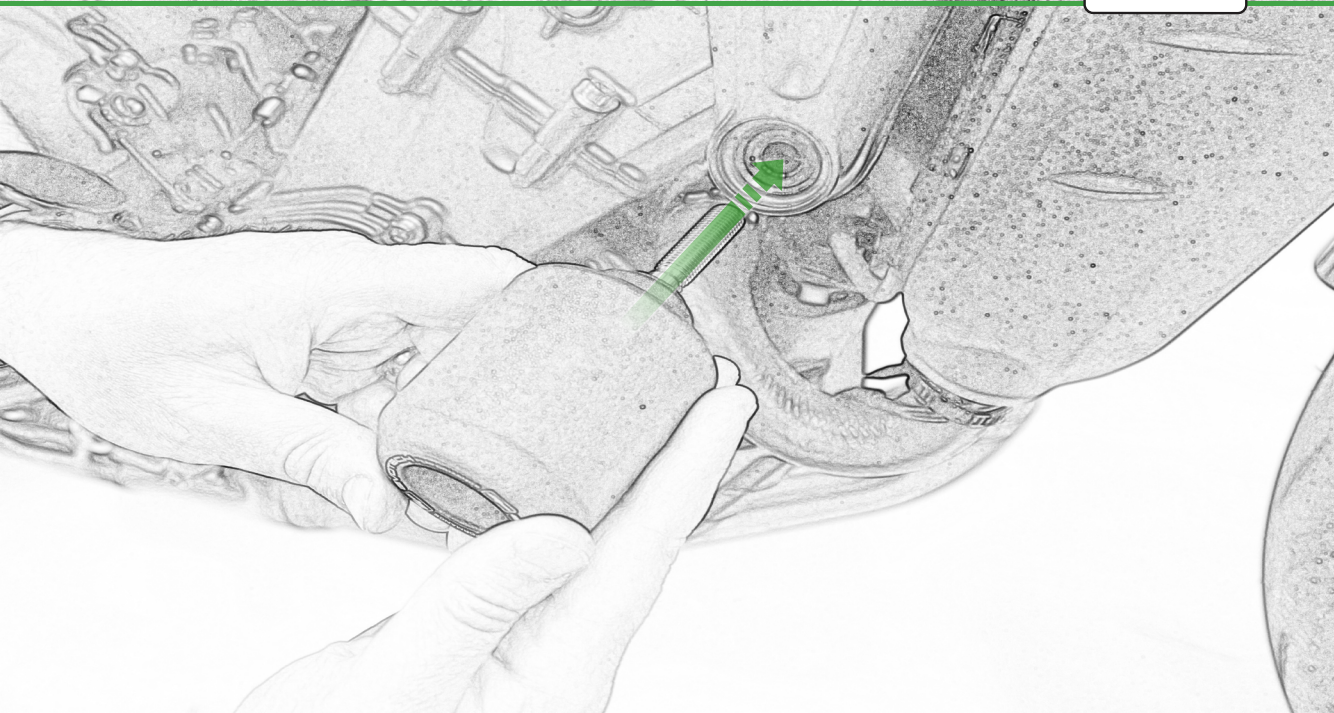

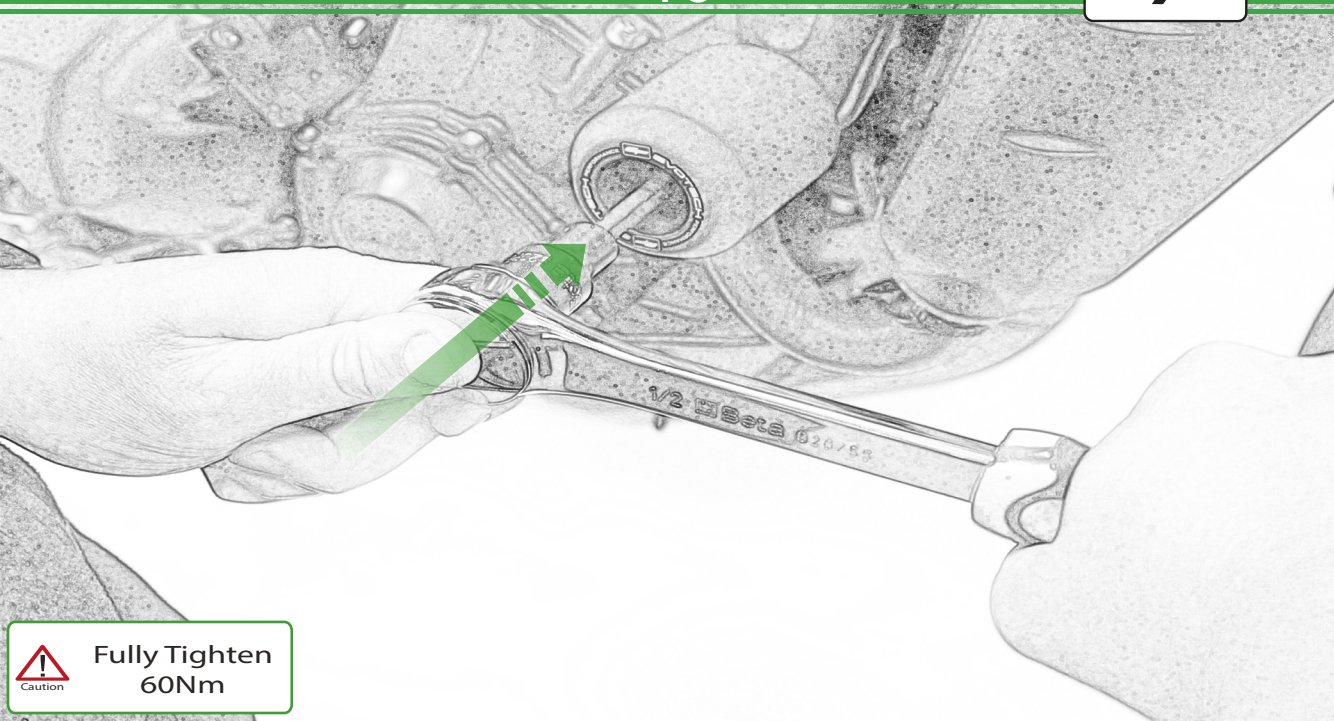

Fully Tighten  
60Nm



## ESSENTIAL CHECKS



It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



**EVOTECH**®  
P E R F O R M A N C E

[www.evotech-performance.com](http://www.evotech-performance.com)