



EVOTECH[®]
P E R F O R M A N C E


Honda CB1000R Sports Neo Cafe
Tail Tidy


Installation Instructions





Kit Contents PRN014602


- | | |
|-------------------------------|-----------------------------------|
| (A) 1 x Left Hand Arm | (M) 2 x M8 x 12 Button Head Bolts |
| (B) 1 x Right Hand Arm | (N) 2 x M4 Flange |
| (C) 1 x Main Plate | (O) 2 x M4 x 6 Button Head Bolts |
| (D) 1 x Light Mount | (P) 3 x M4 x 12 Countersink Screw |
| (E) 1 x Reflector Kit | (Q) 6 x M4 x 10 Button Head Bolts |
| (F) 1 x Cover Plate | |
| (G) 1 x Wire Seal | |
| (H) 1 x Retro Light | |
| (I) 1 x Light Connector No.21 | |
| (J) 1 x Light Connector No.22 | |
| (K) 2 x P-Clip 3 | |
| (L) 2 x M8 Washers | |

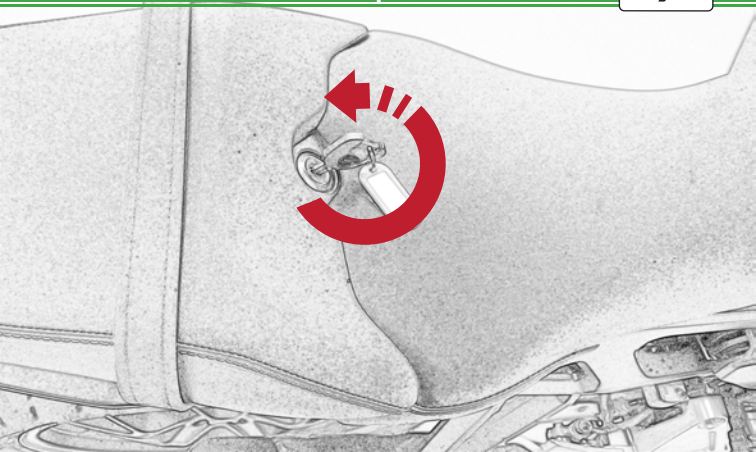

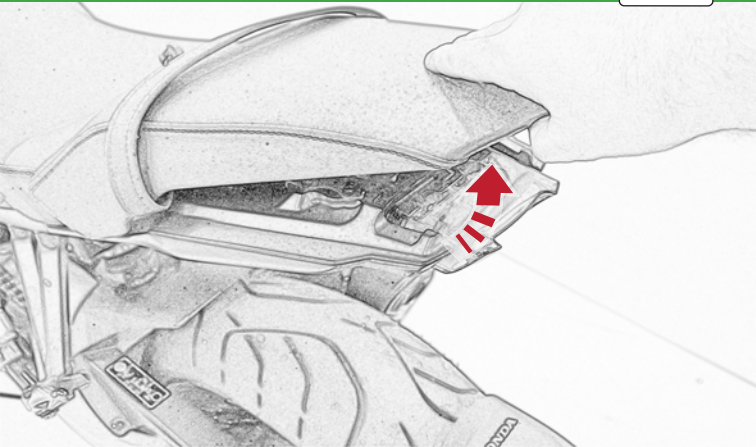

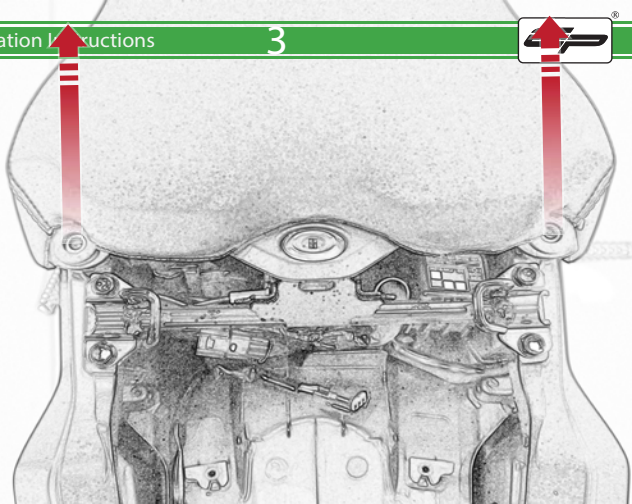

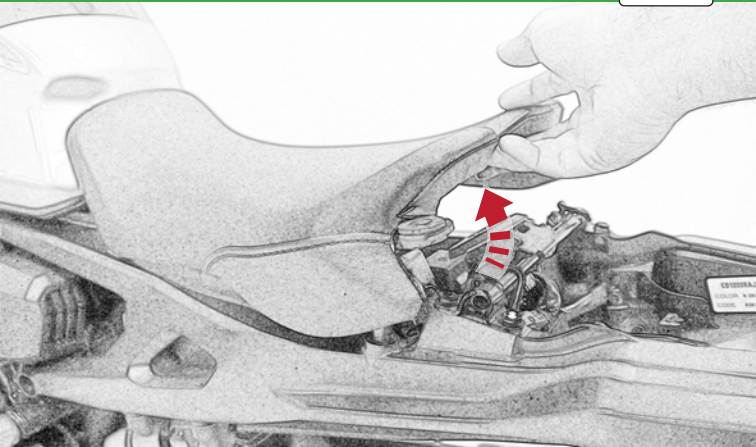

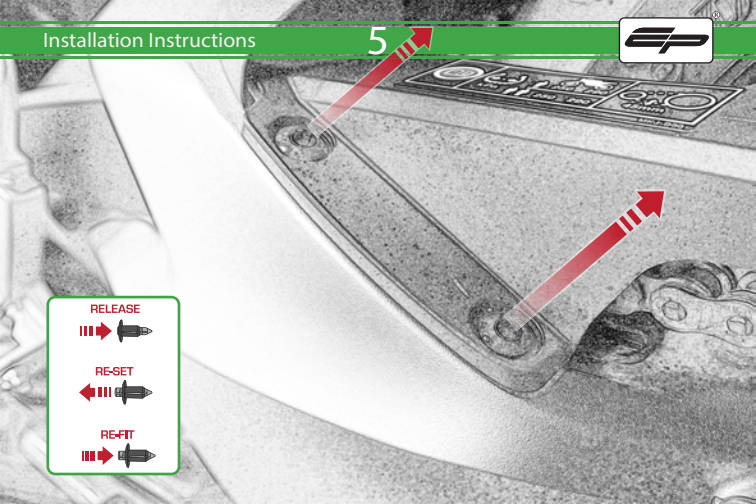

RELEASE






RE-SET





RE-FIT




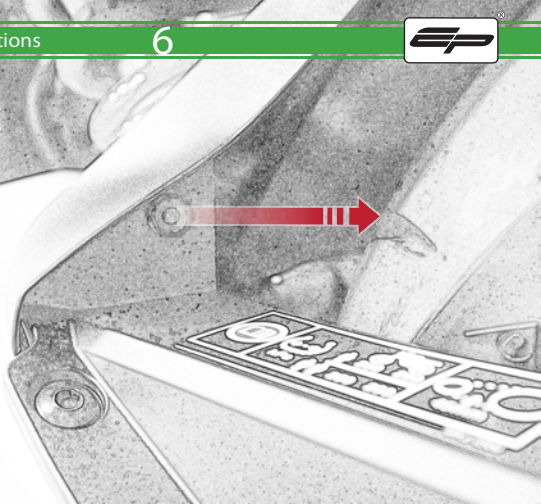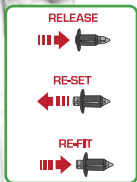


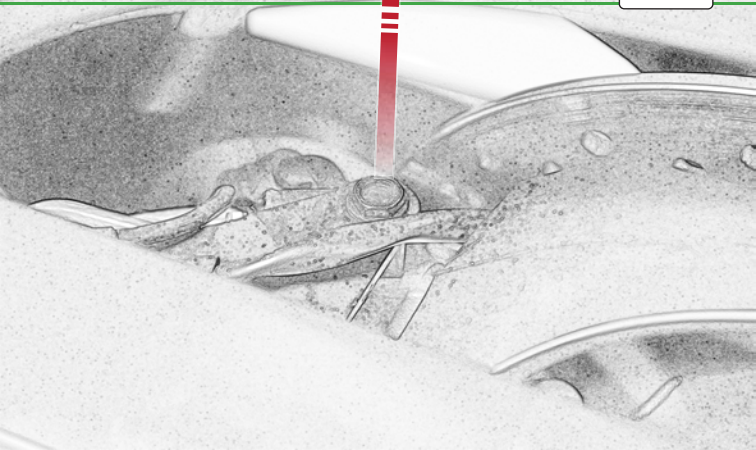


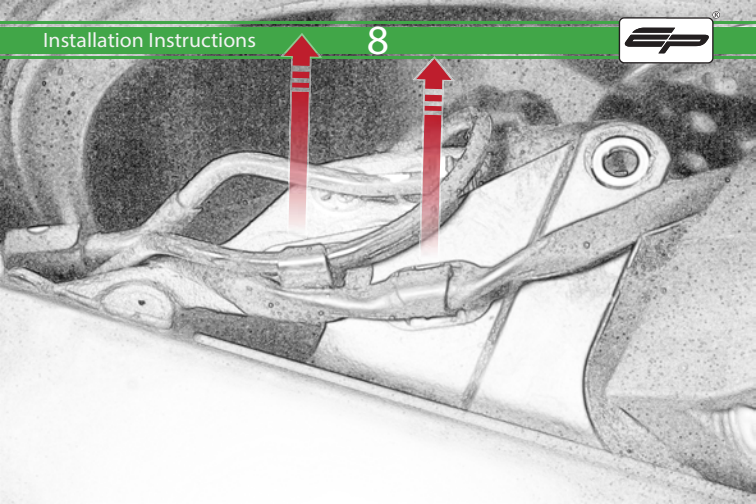


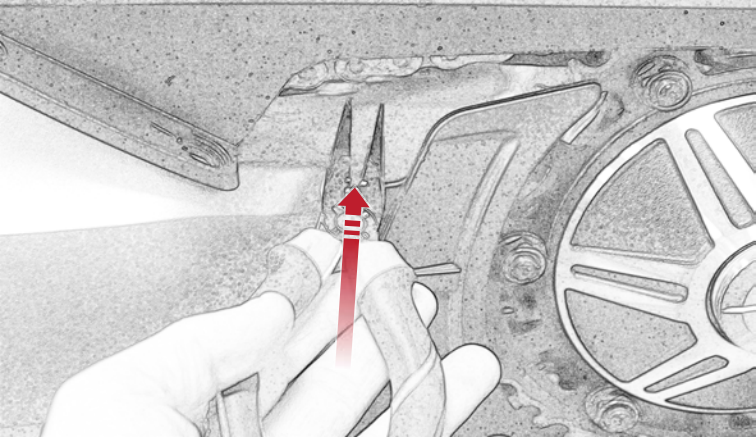


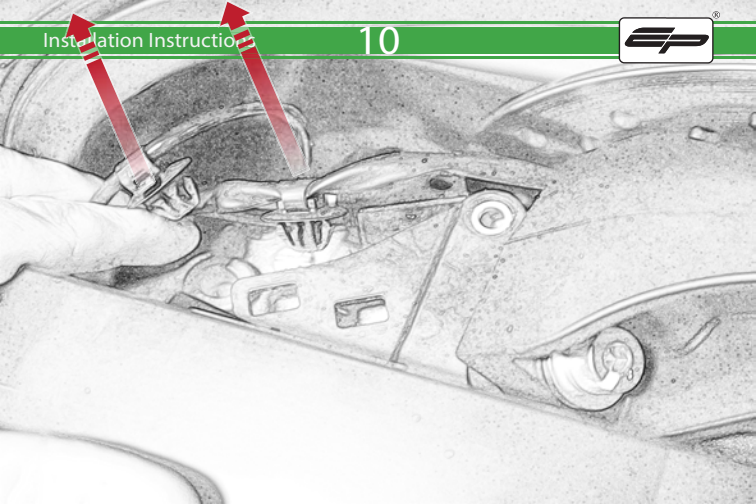


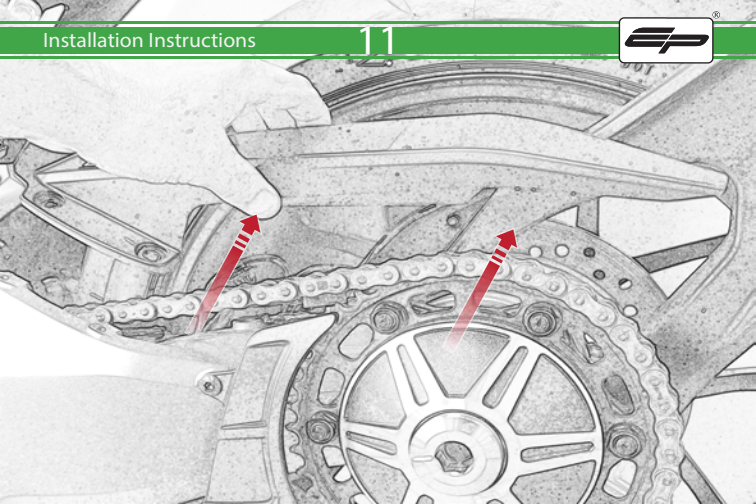


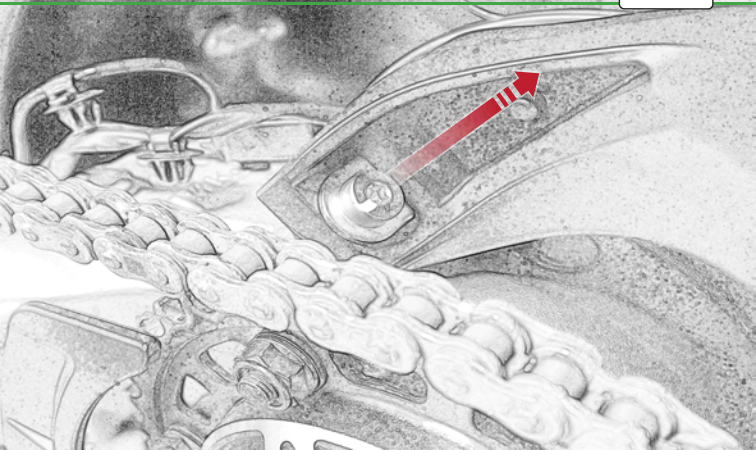

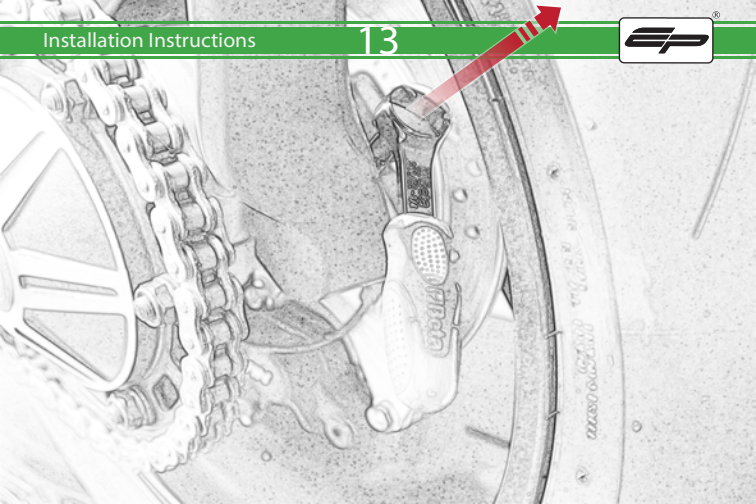

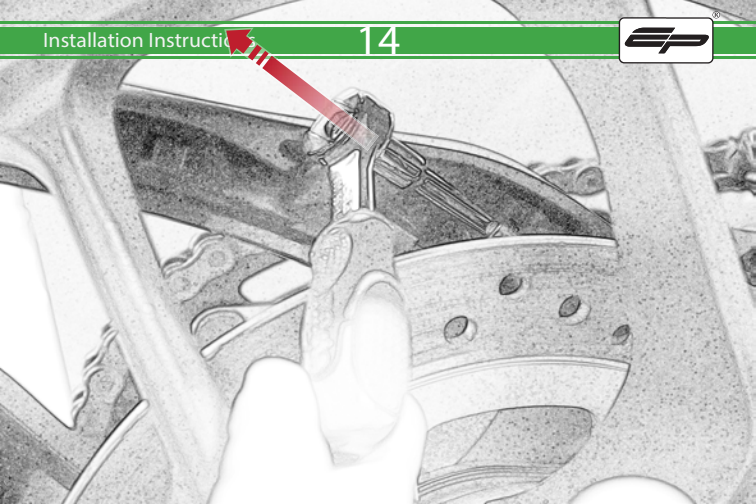


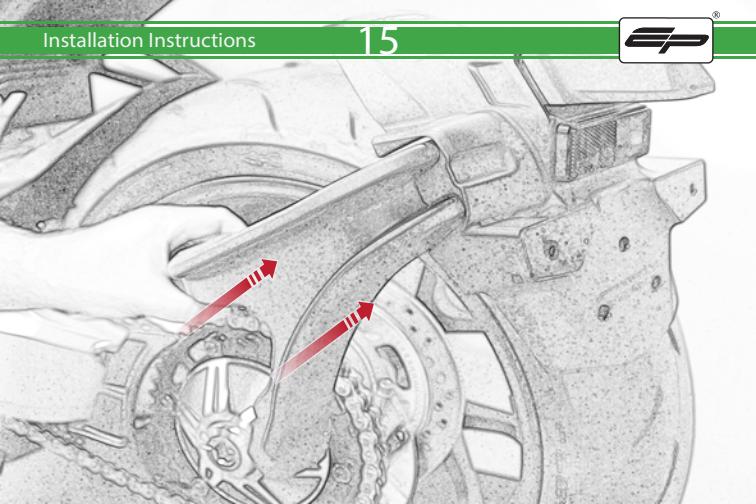

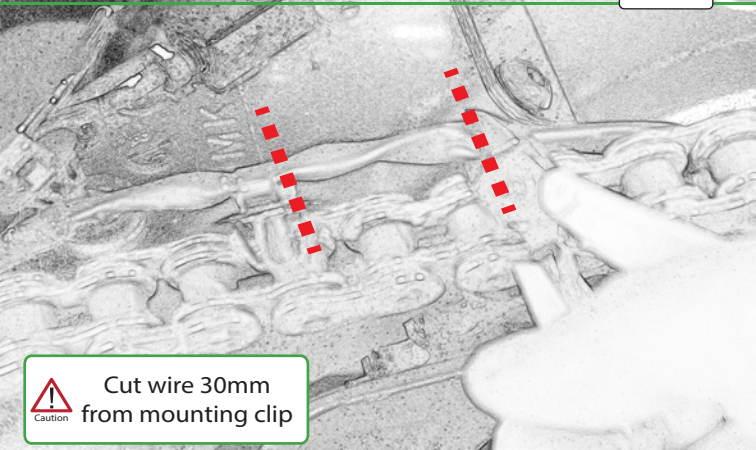


Caution


Cut wire 30mm
from mounting clip

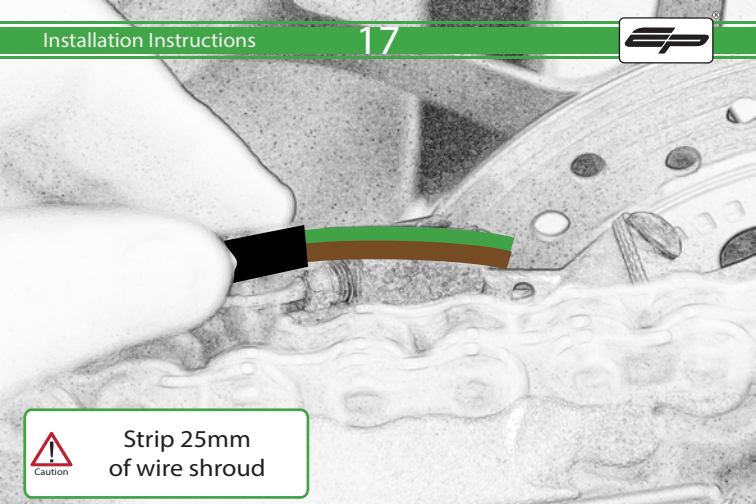



Caution


Strip 25mm
of wire shroud

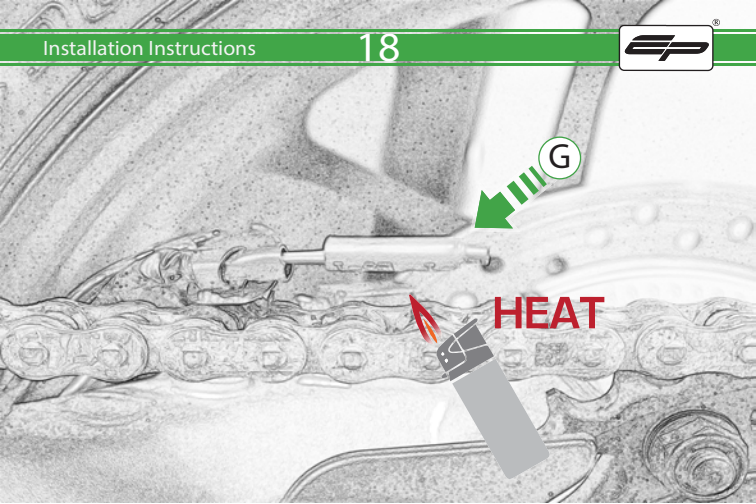


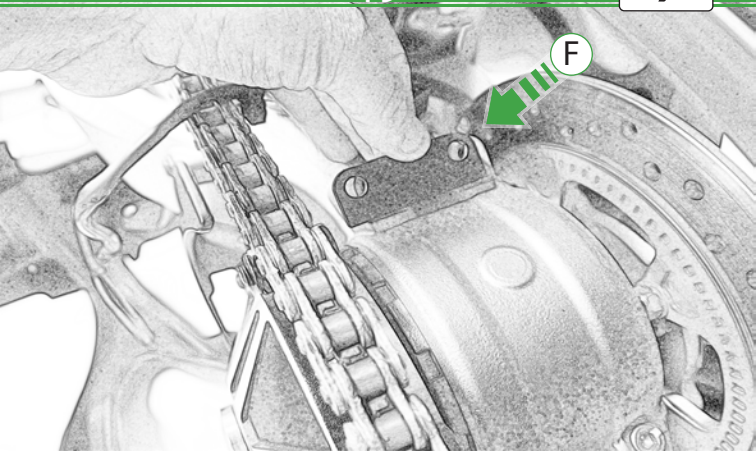


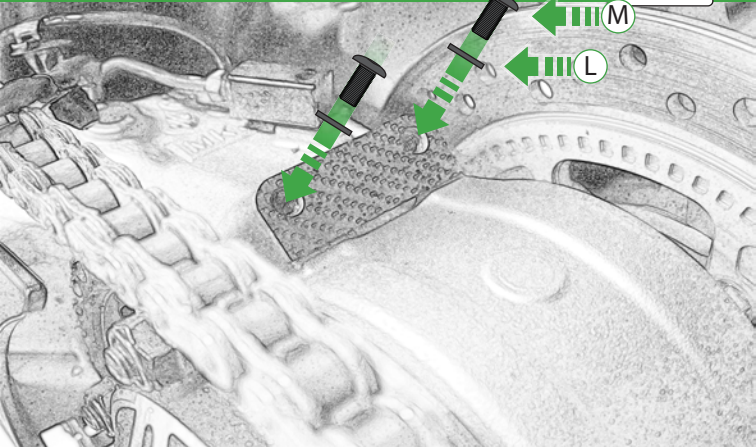


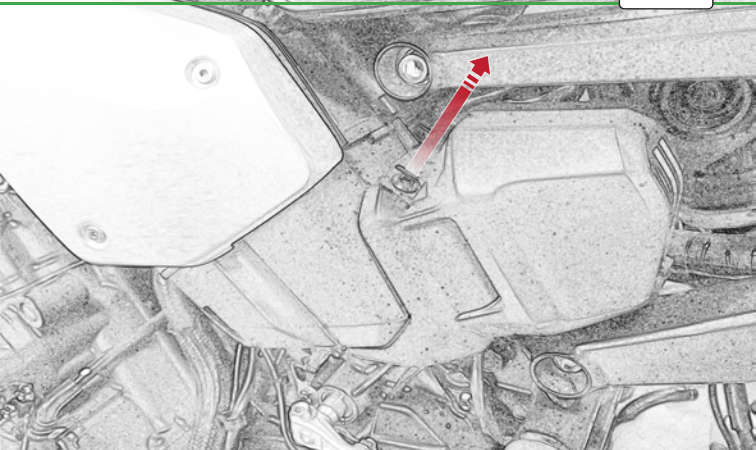



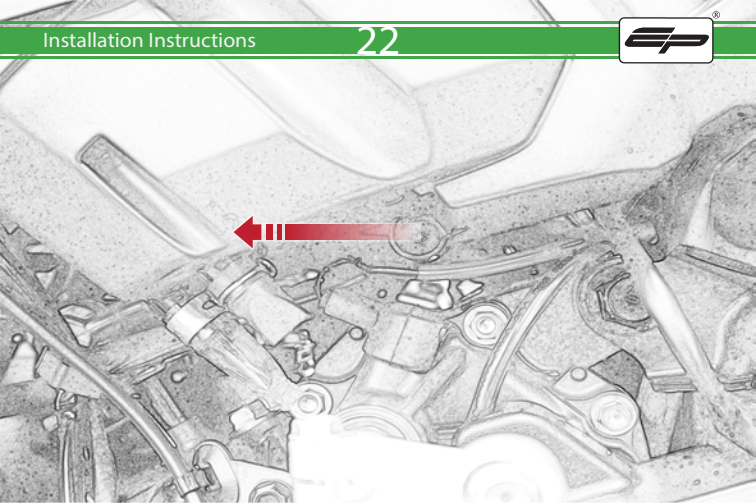



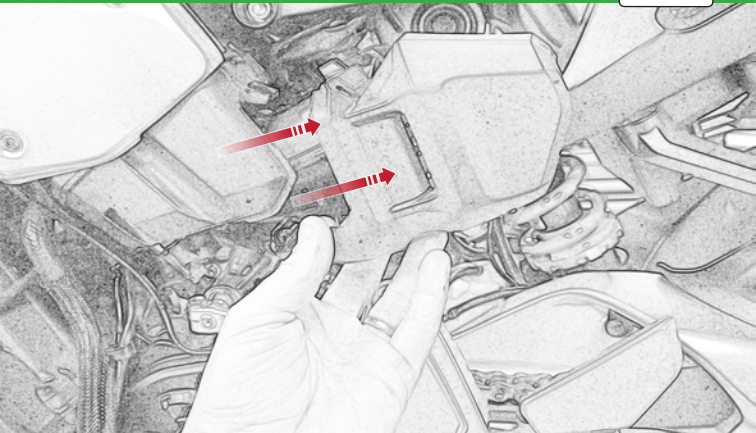


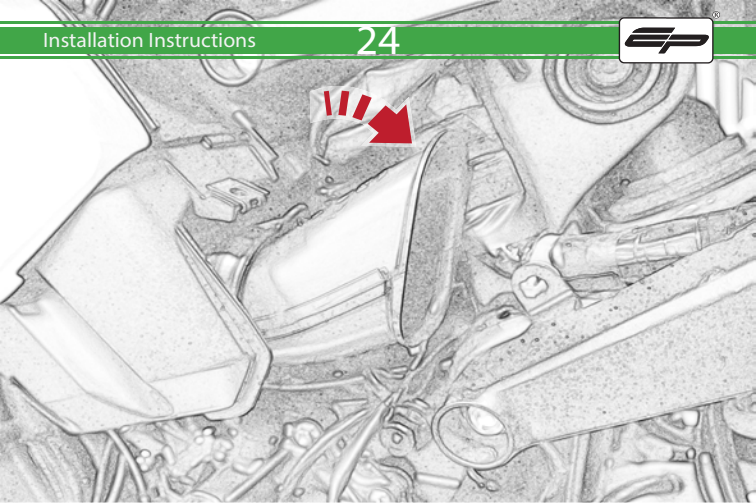


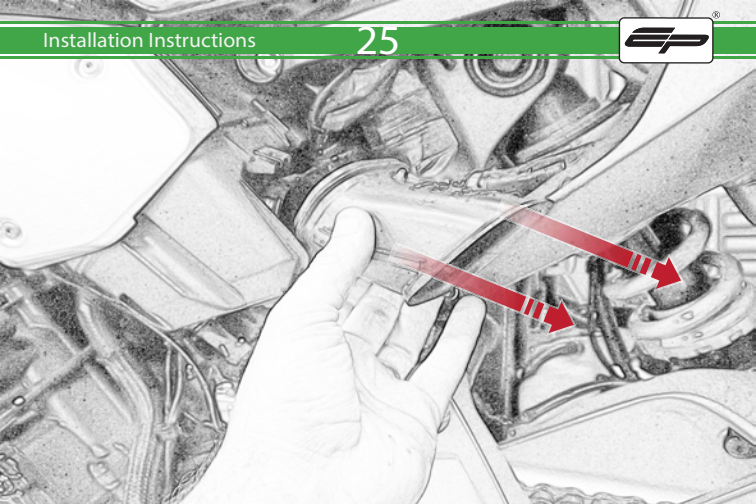


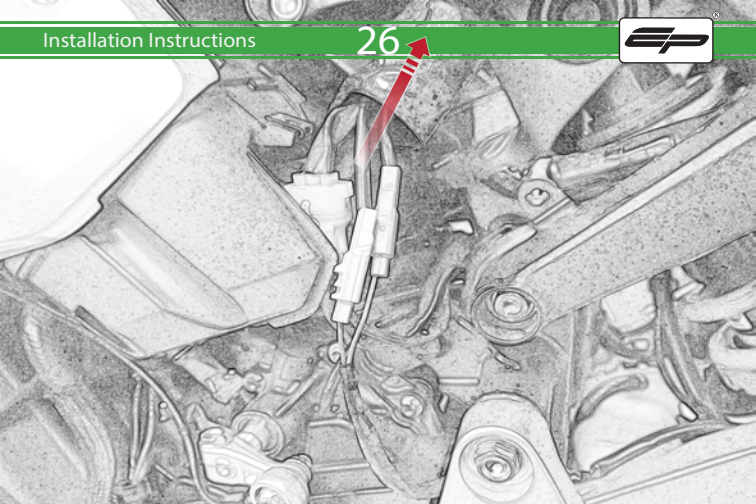

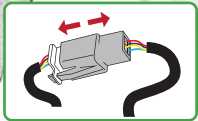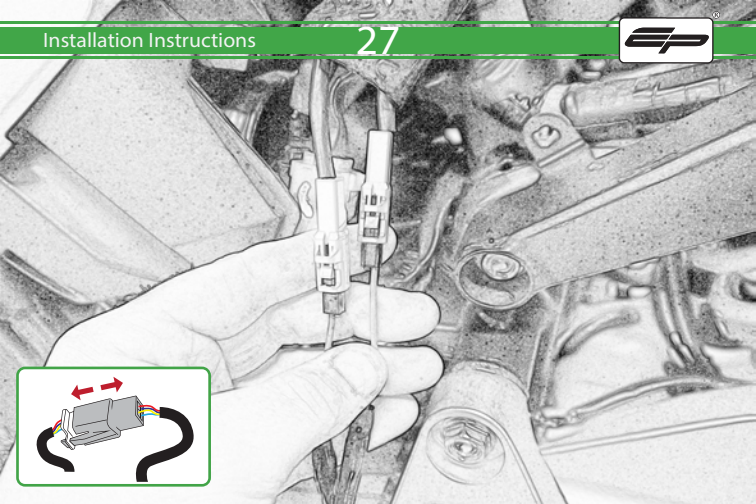


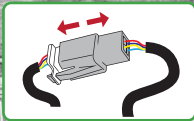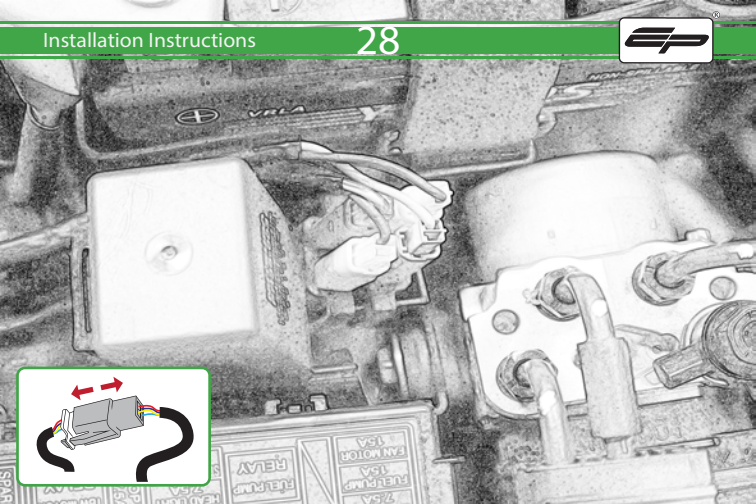


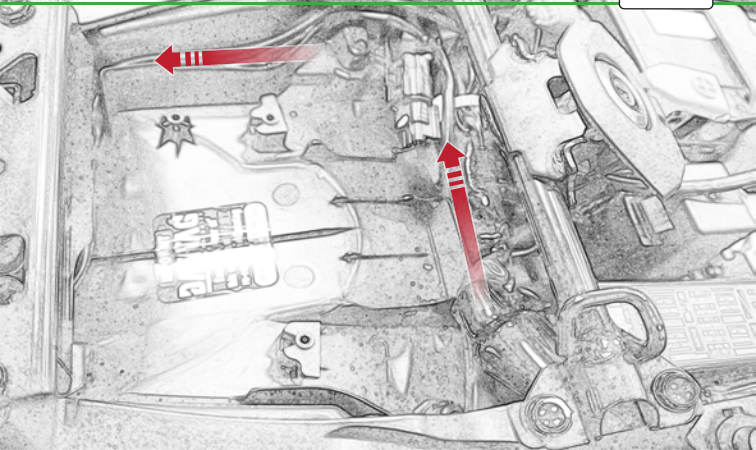


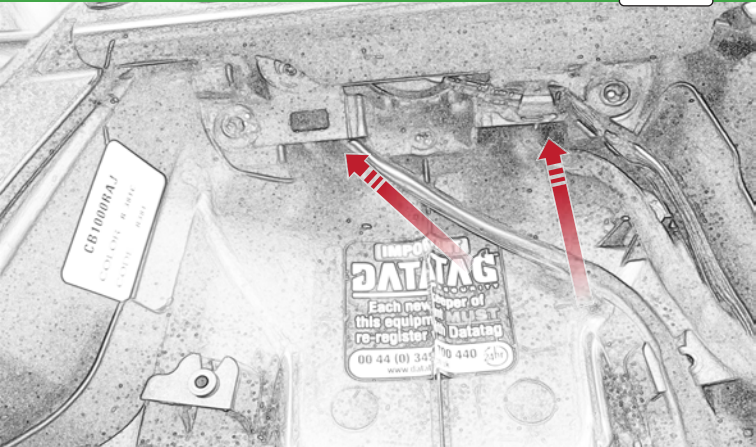





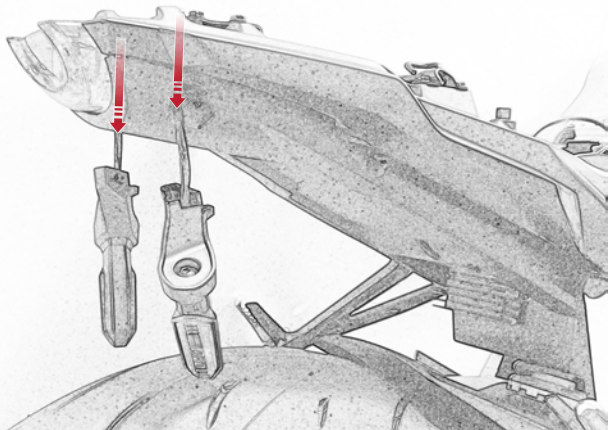


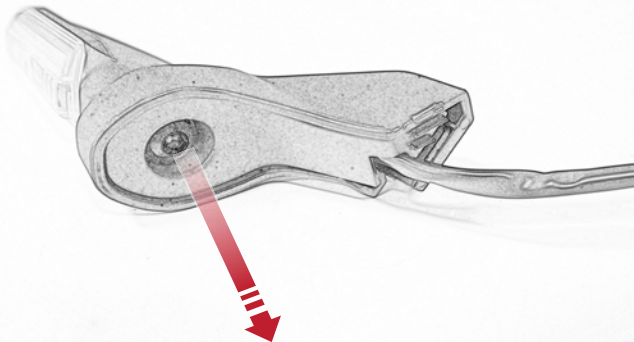

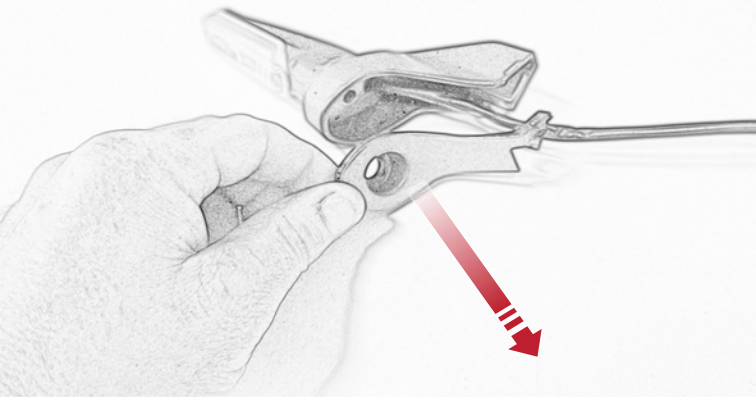


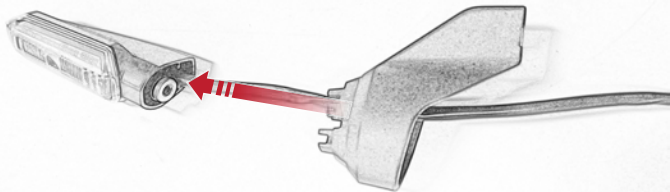


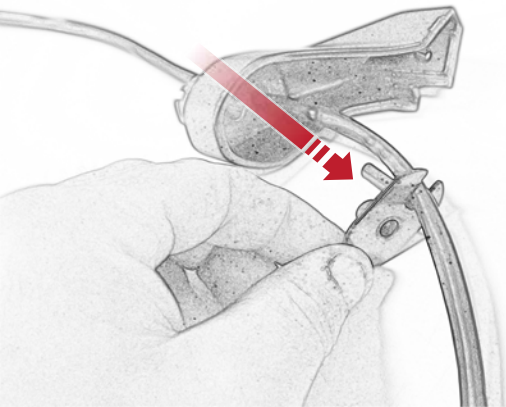


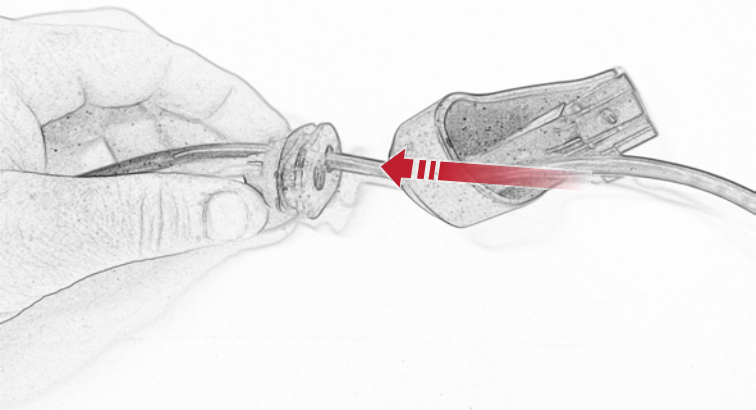




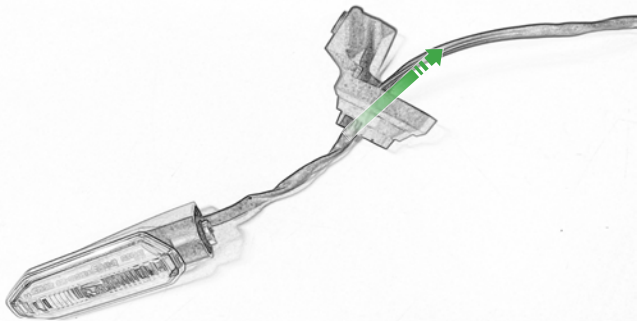


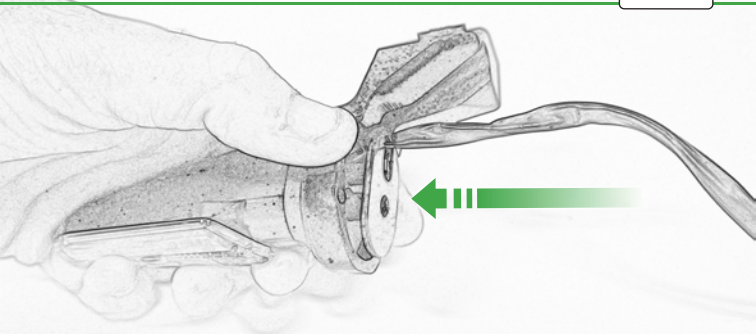


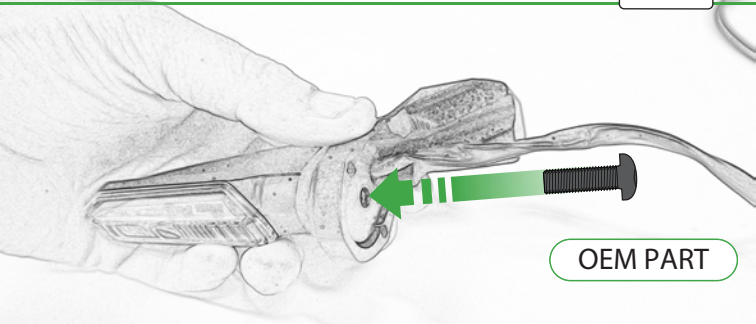



OEM PART

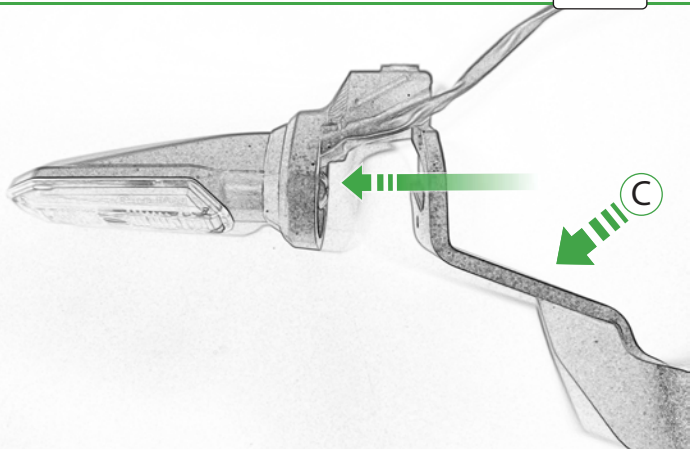


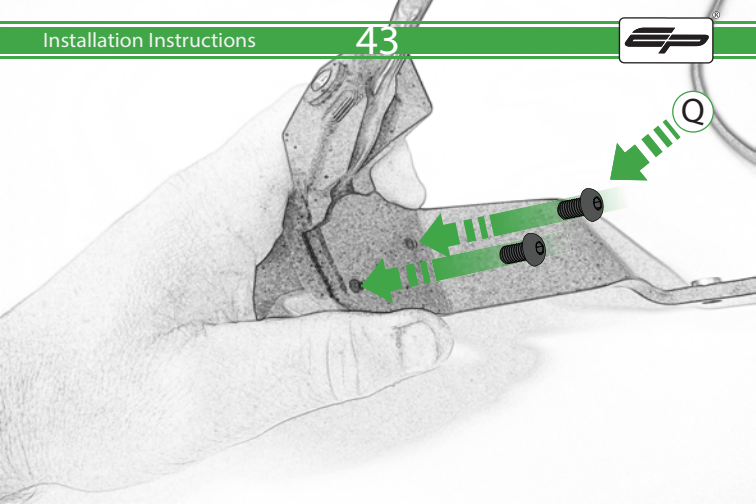


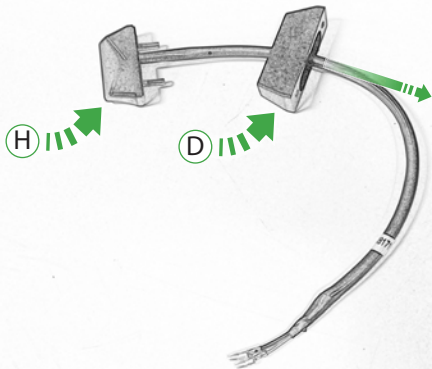


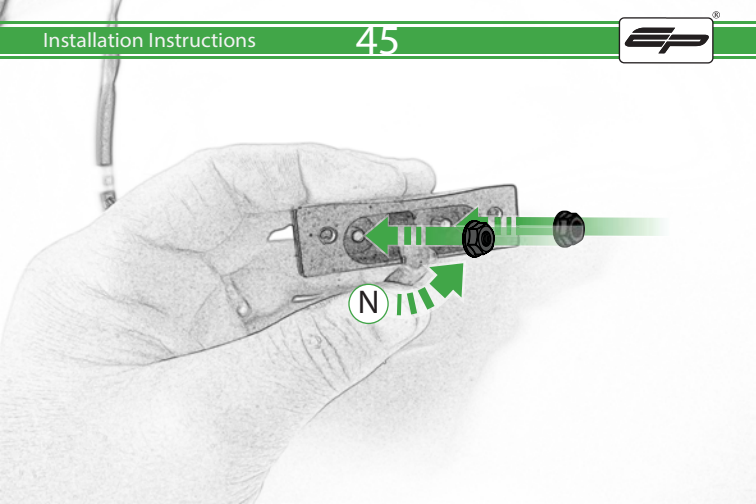


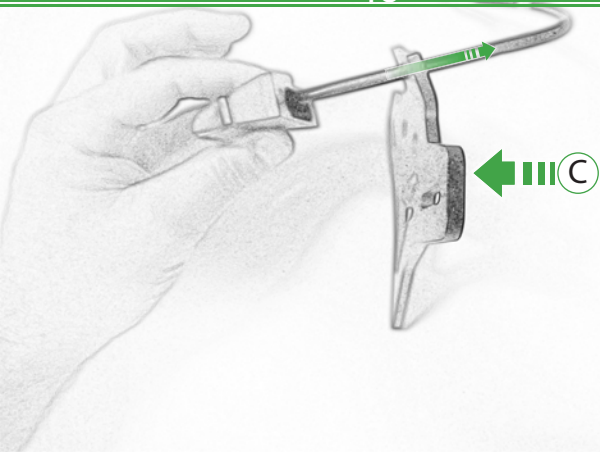


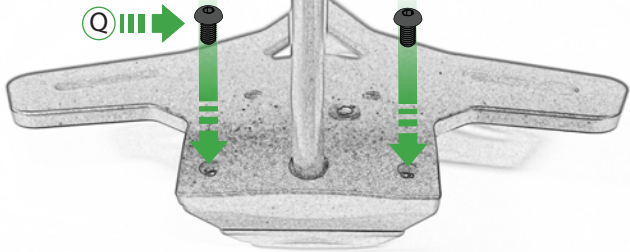

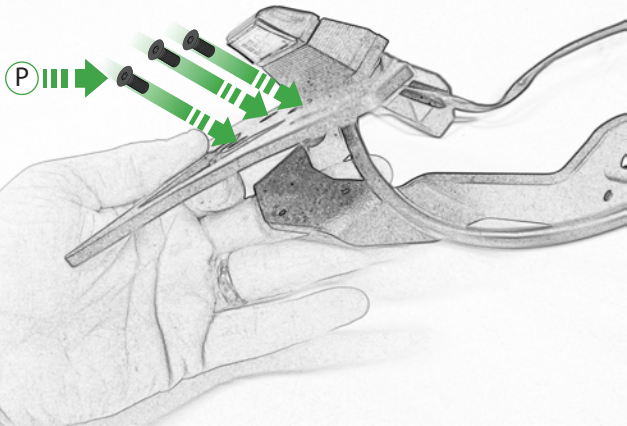


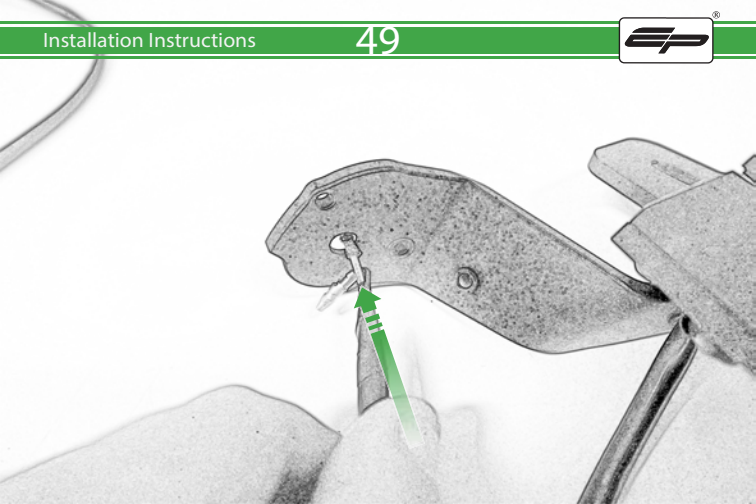


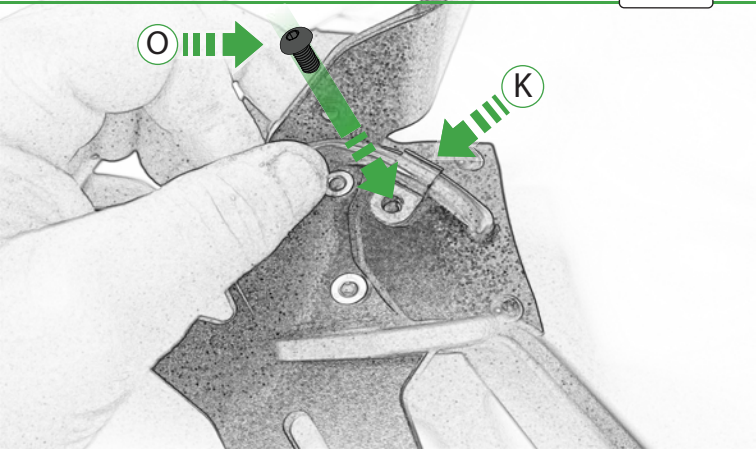


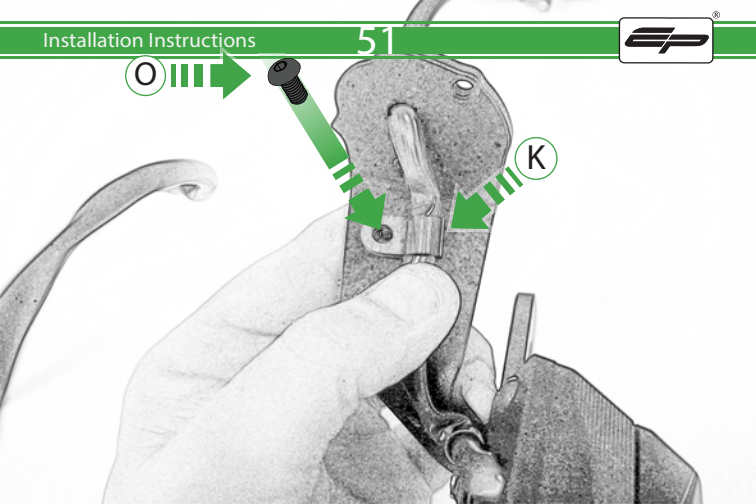



52
0 IIII →

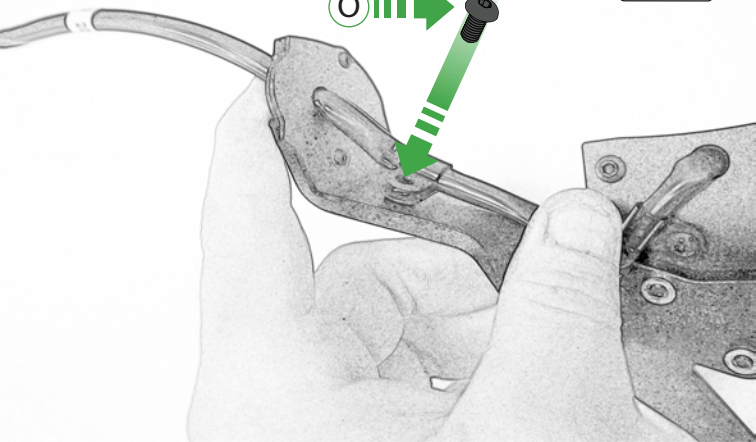


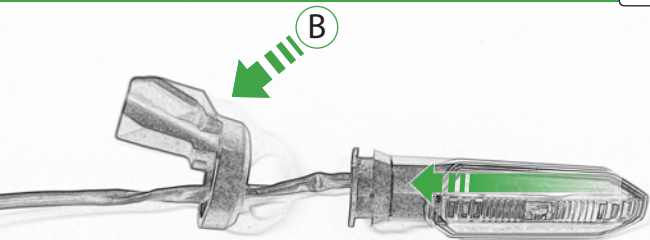

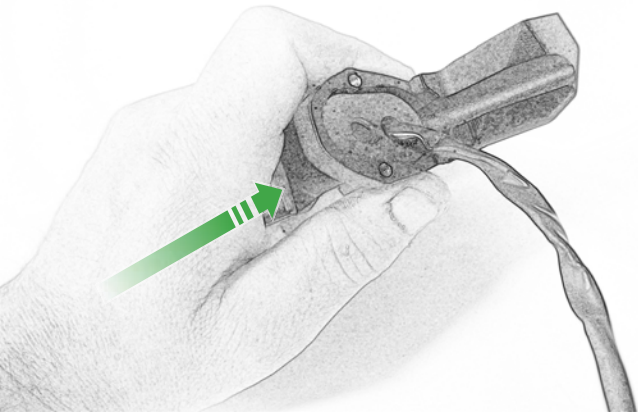

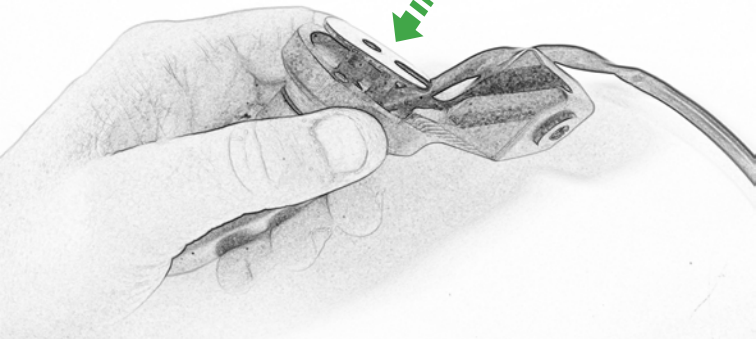

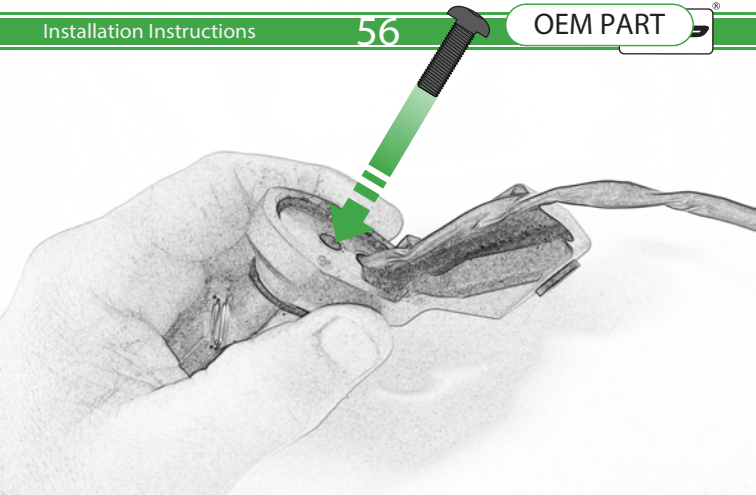

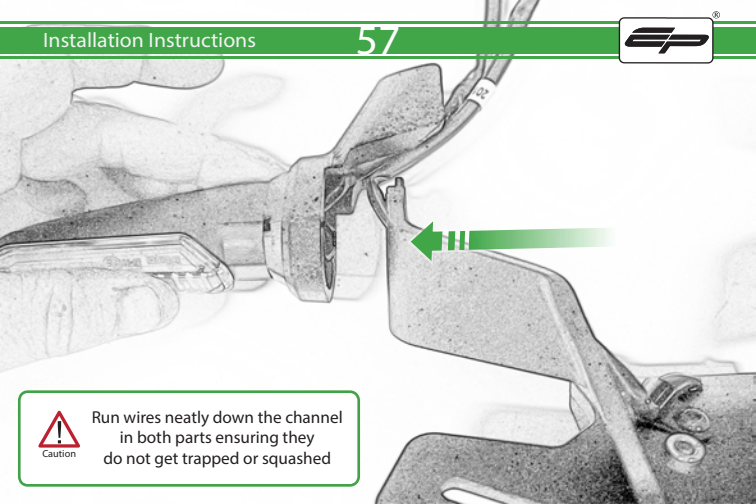



Caution

Run wires neatly down the channel
in both parts ensuring they
do not get trapped or squashed





Q

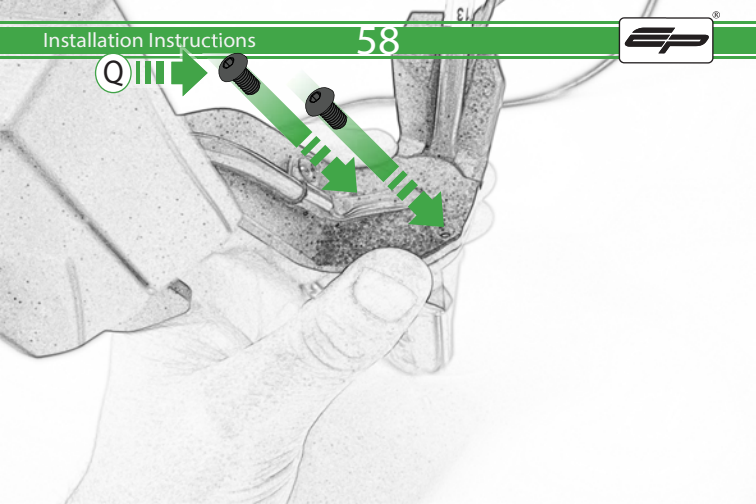


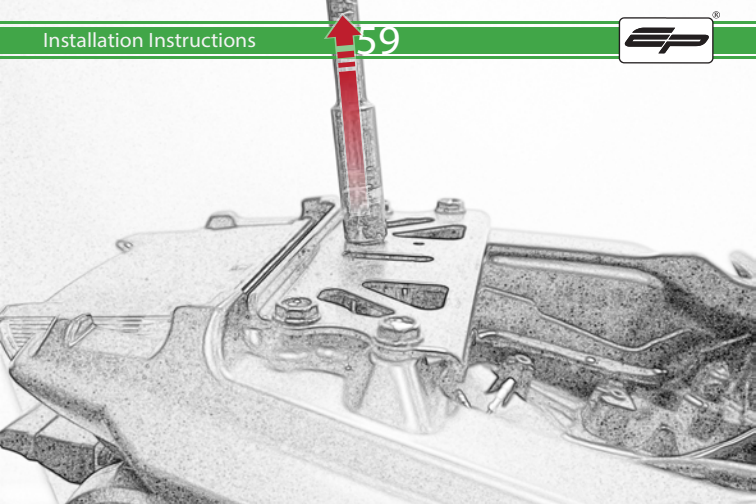



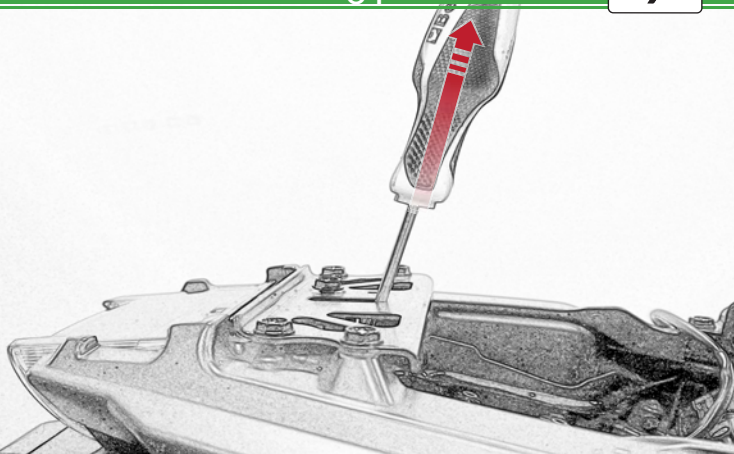

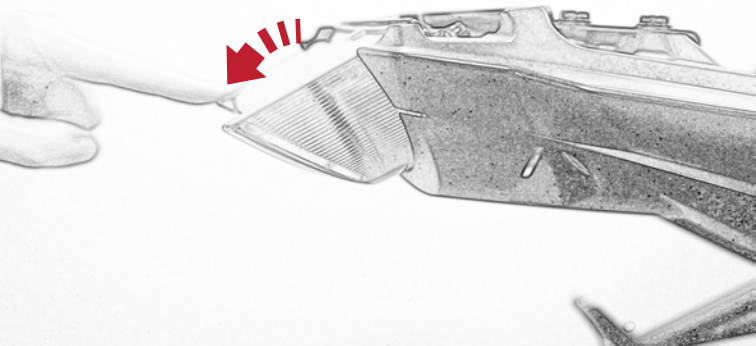


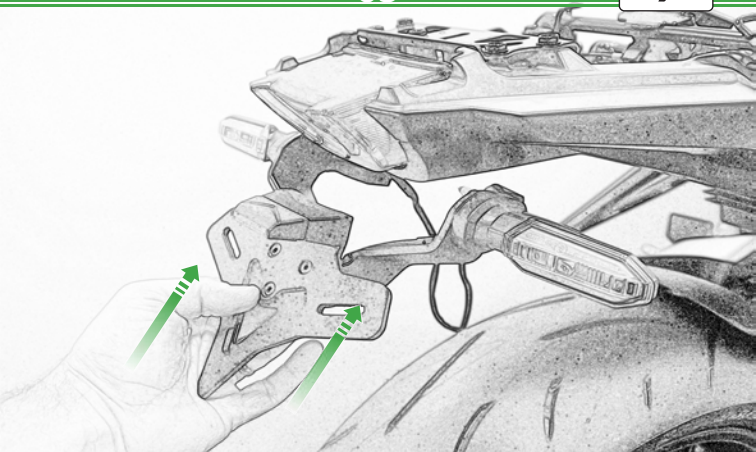







OEM PART

OEM PART





IMPORTANT
DATA
Each new
this equilm
of
JUST
step

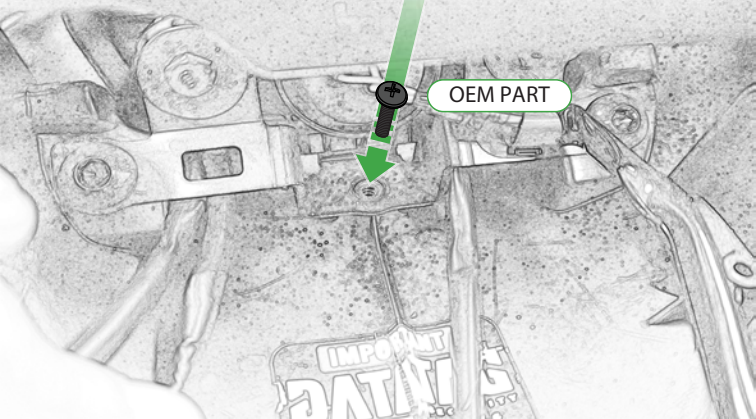


OEM PART



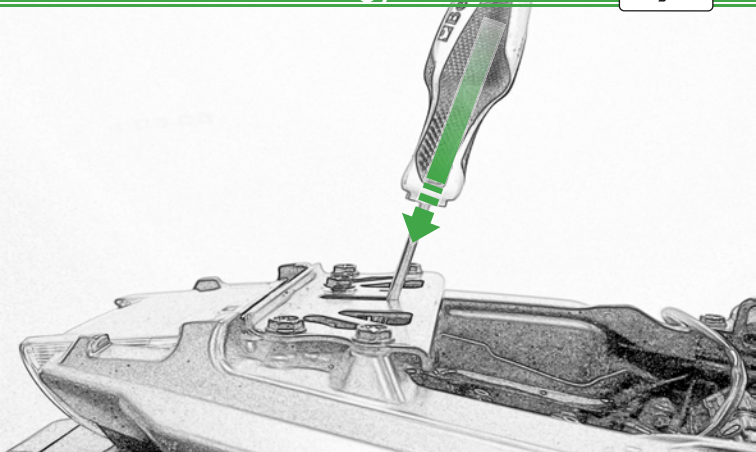



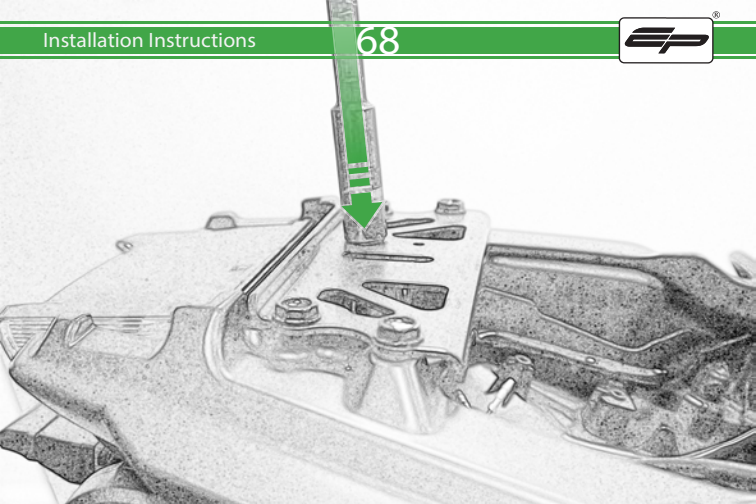


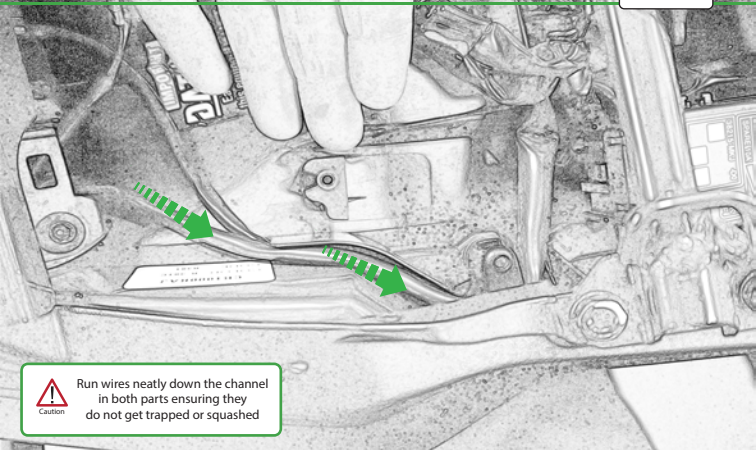


Caution

Run wires neatly down the channel
in both parts ensuring they
do not get trapped or squashed

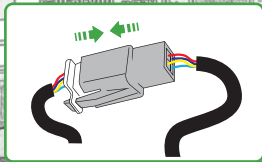


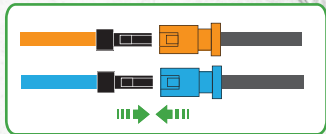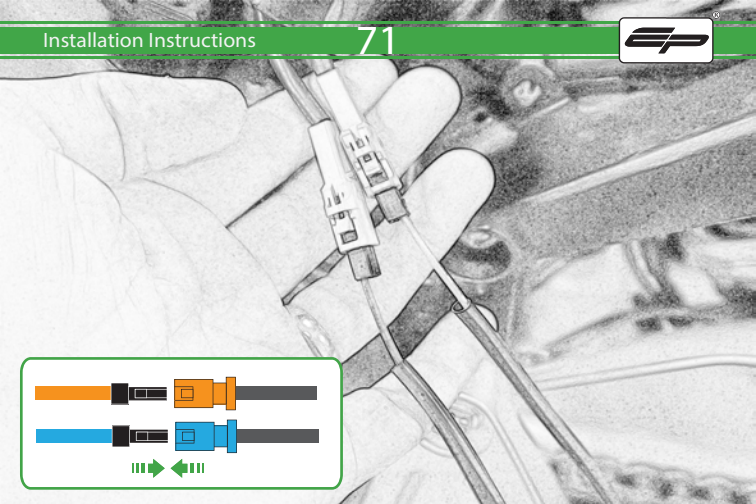


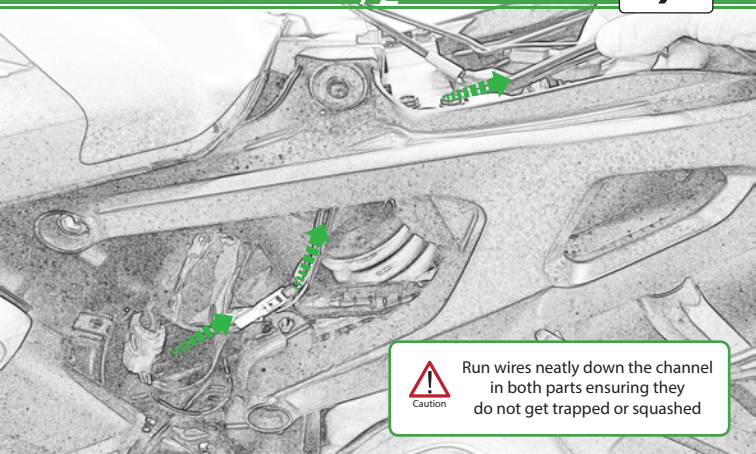




Caution


Run wires neatly down the channel in both parts ensuring they do not get trapped or squashed

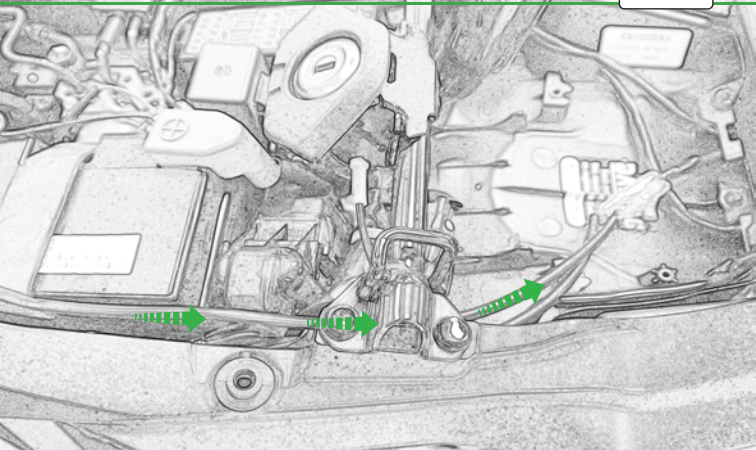





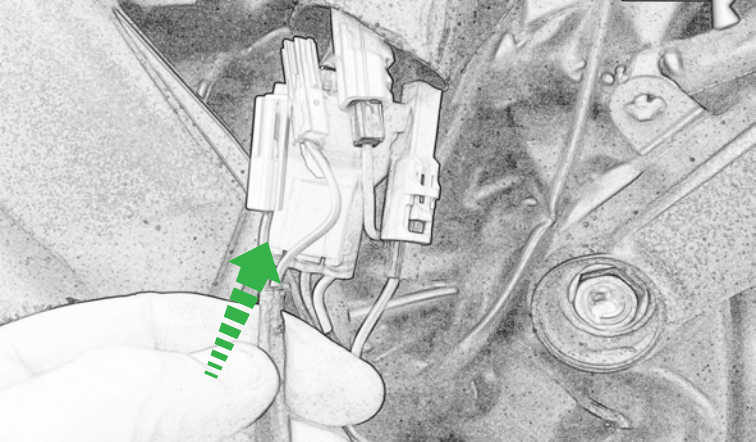

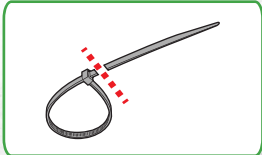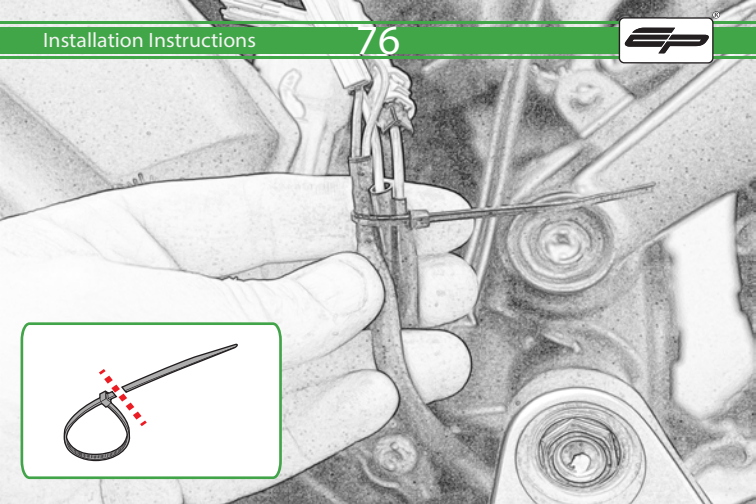

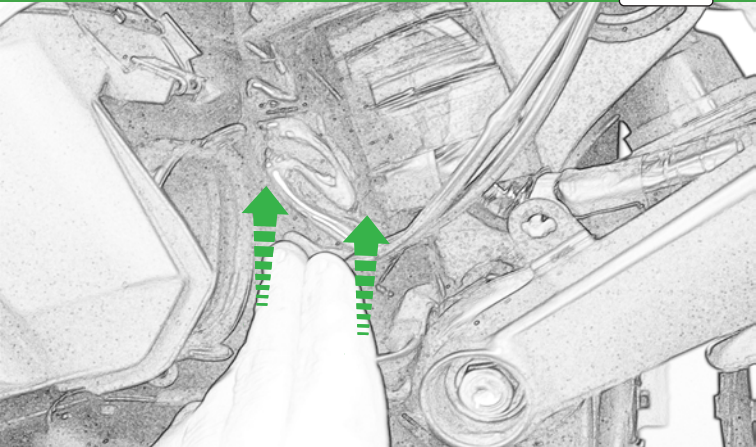

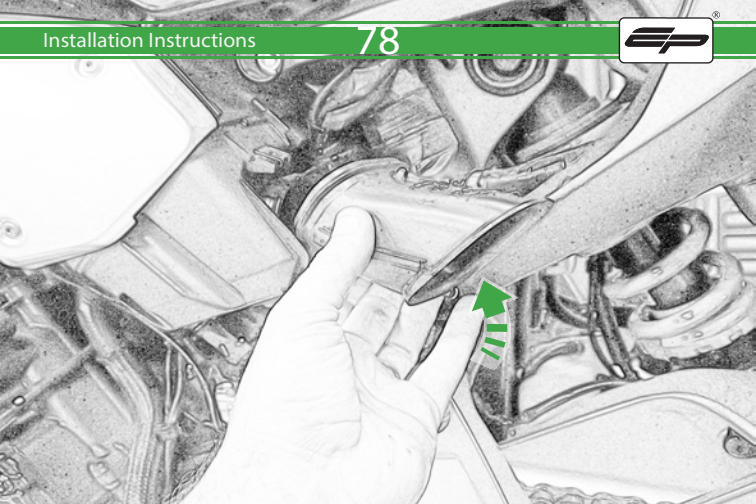

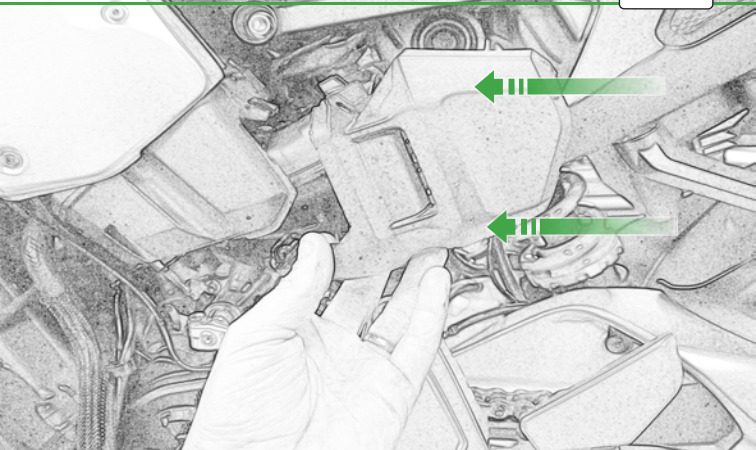




OEM PART




OEM PART

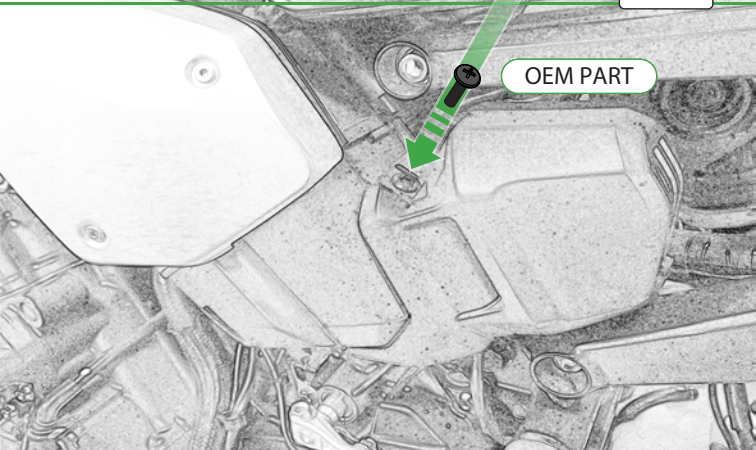




Reverse Stages

9 - 1

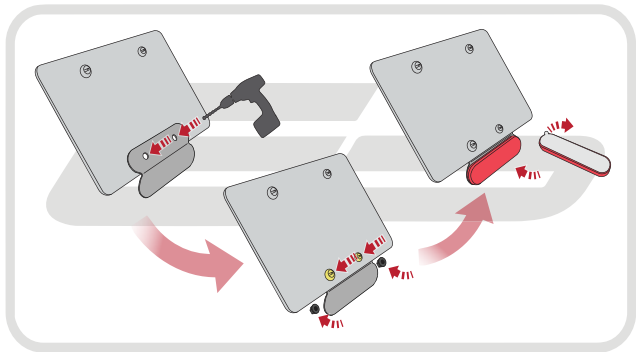

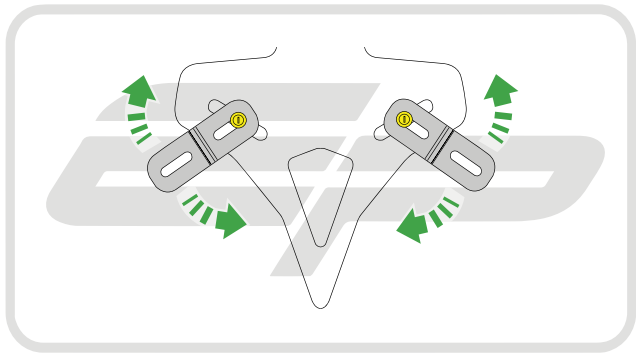



 **ESSENTIAL CHECKS** 

After installation of your tail tidy ensure that the licence plate does not contact the rear tyre when suspension is fully compressed.

Ensure all electrics including indicators, tail light, brake light and licence plate light lights are working correctly before riding the motorcycle.

It is recommended that periodic inspections are made to ensure that all fixings are fully tightend.



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com