




Product No: PRN013661


Kit Contents


- A 1 x Main Bracket
- B 1 x Indicator Bracket
- © 1 x Light Bracket
- D 1 x Reflector Kit
- I x Retro Light
- F 1 x Light Connector
- © 2 x M6 x 20 Button Head Bolt
- (H) 2 x M6 Special Washer
- 1) 2 x Thread Caps
- J 4 x M4 x 8 Button Head Bolts
- 🖲 4 x M6 Flange Nuts





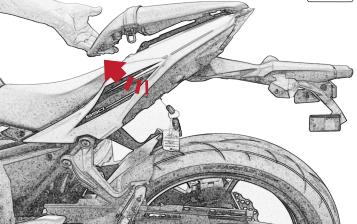

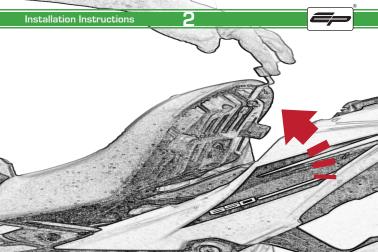


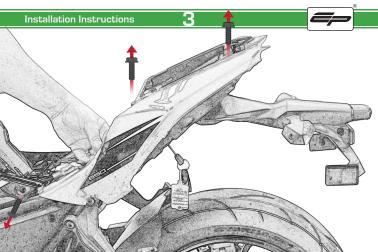










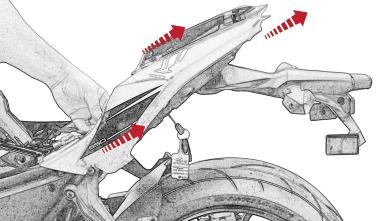

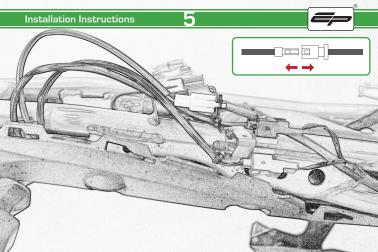

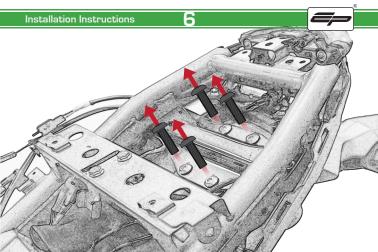




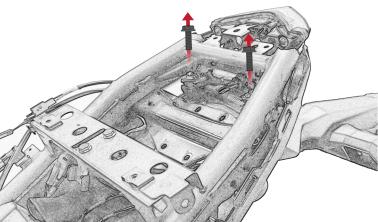






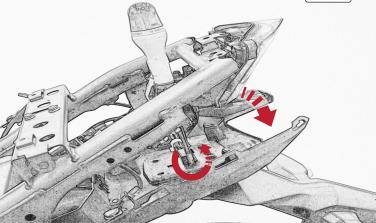






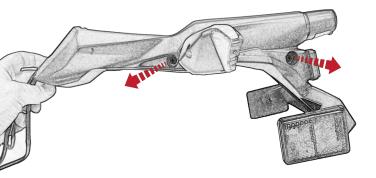






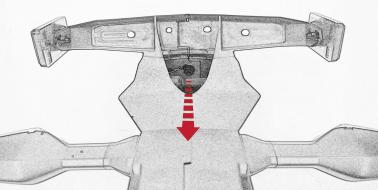




Repeat Both Sides







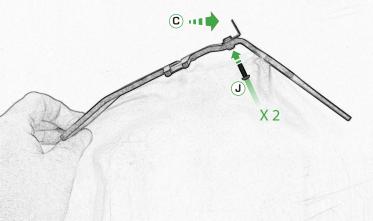




111.0




















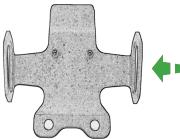





Ensure indicators are installed on the correct sides - drain holes should face down .08





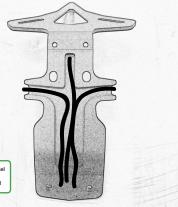



Run wires neatly down the channel in both parts ensuring they do not get trapped or squashed

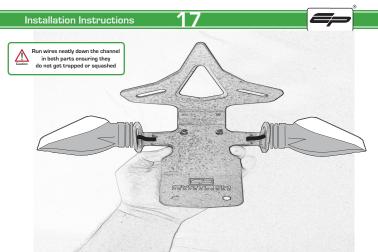






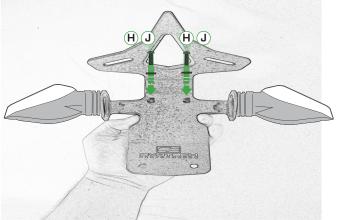


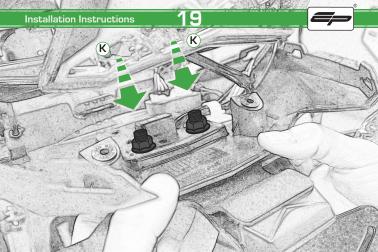

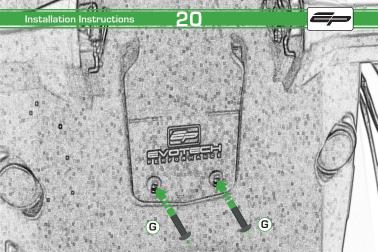






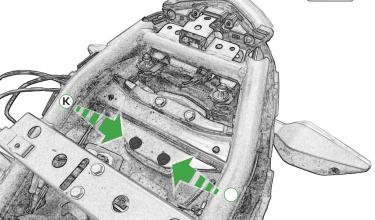







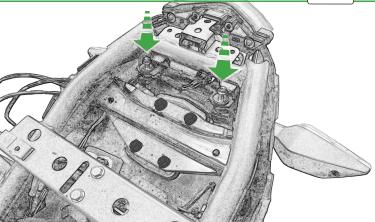





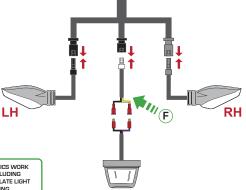









Number Plate Adaptor Installation Instructions

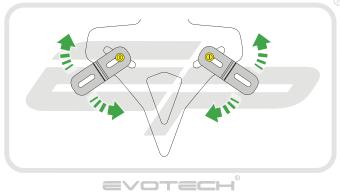

PERFORMANCE

Reflector Bracket Installation



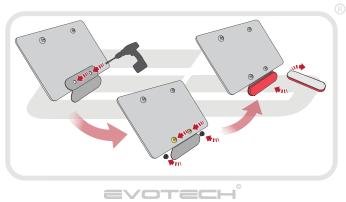

PERFORMANCE





After installation of your tail tidy ensure that the licence plate does not contact the rear tyre when suspension is fully compressed. Ensure all electrics including indicators, tail light, brake light and licence plate light lights are working correctly before riding the motorcycle. It is recommended that periodic inspections are made to ensure that all fixings are fully tightend.





www.evotech-performance.com