



EVOTECH®
P E R F O R M A N C E


www.evotech-performance.com


Triumph Speed Triple 1200 RS
Rear Spindle Bobbins Instructions





Kit Contents PRN015485


- (A) 1 x Hub Stop (Red)
- (B) 1 x Hub Stop (Silver)
- (C) 1 x Shaft
- (D) 1 x Bobbin Head
- (E) 1 x Washer
- (F) 2 x M8 Nylock

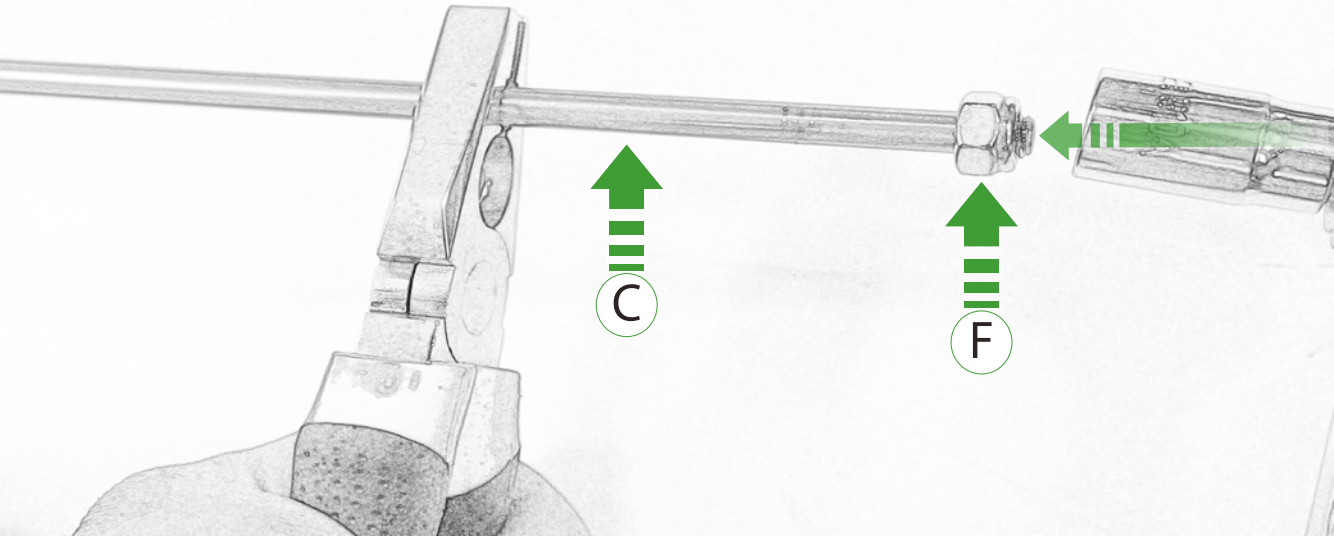


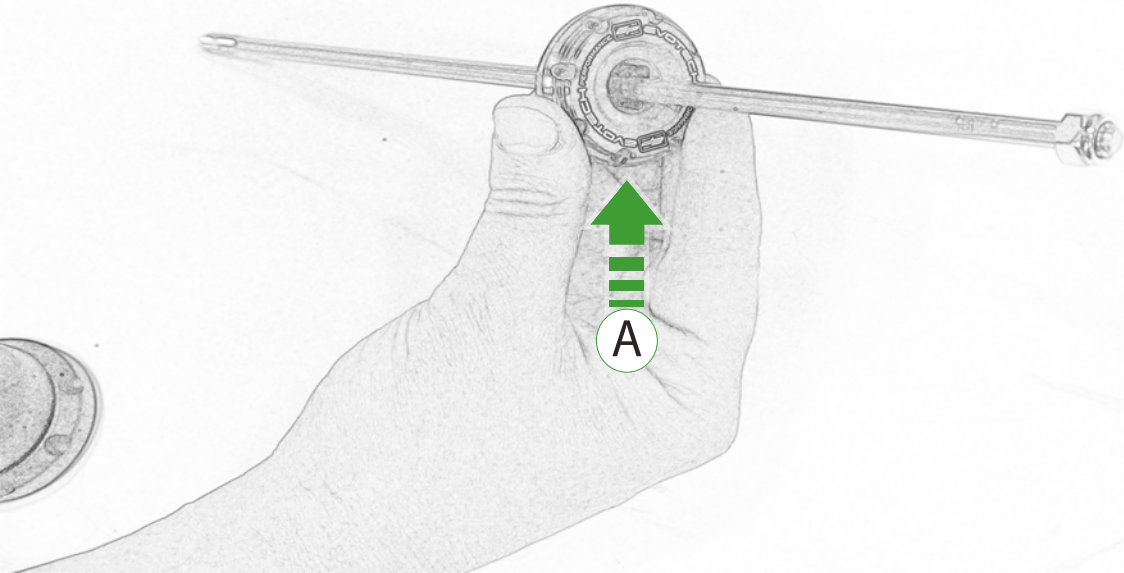


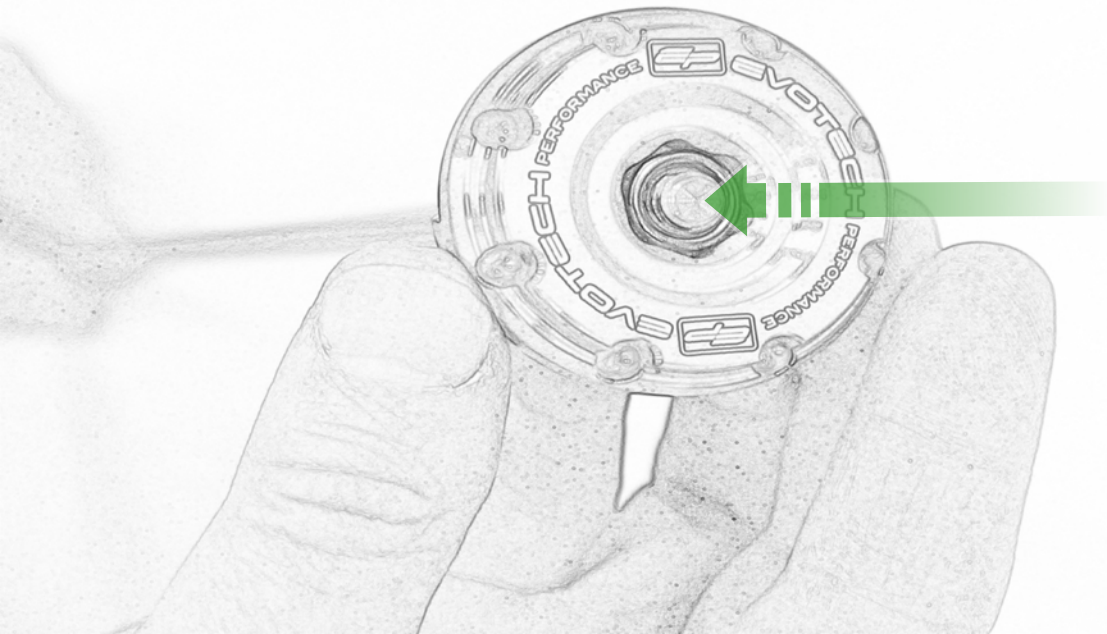


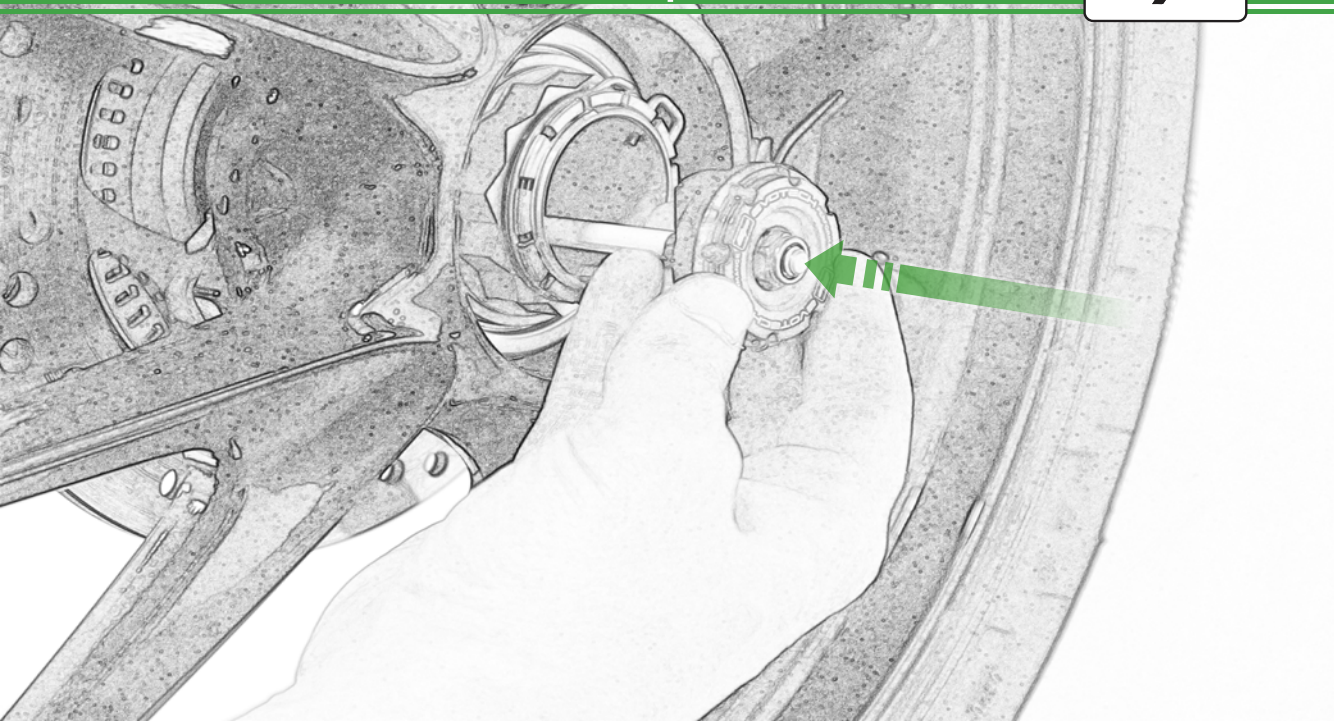


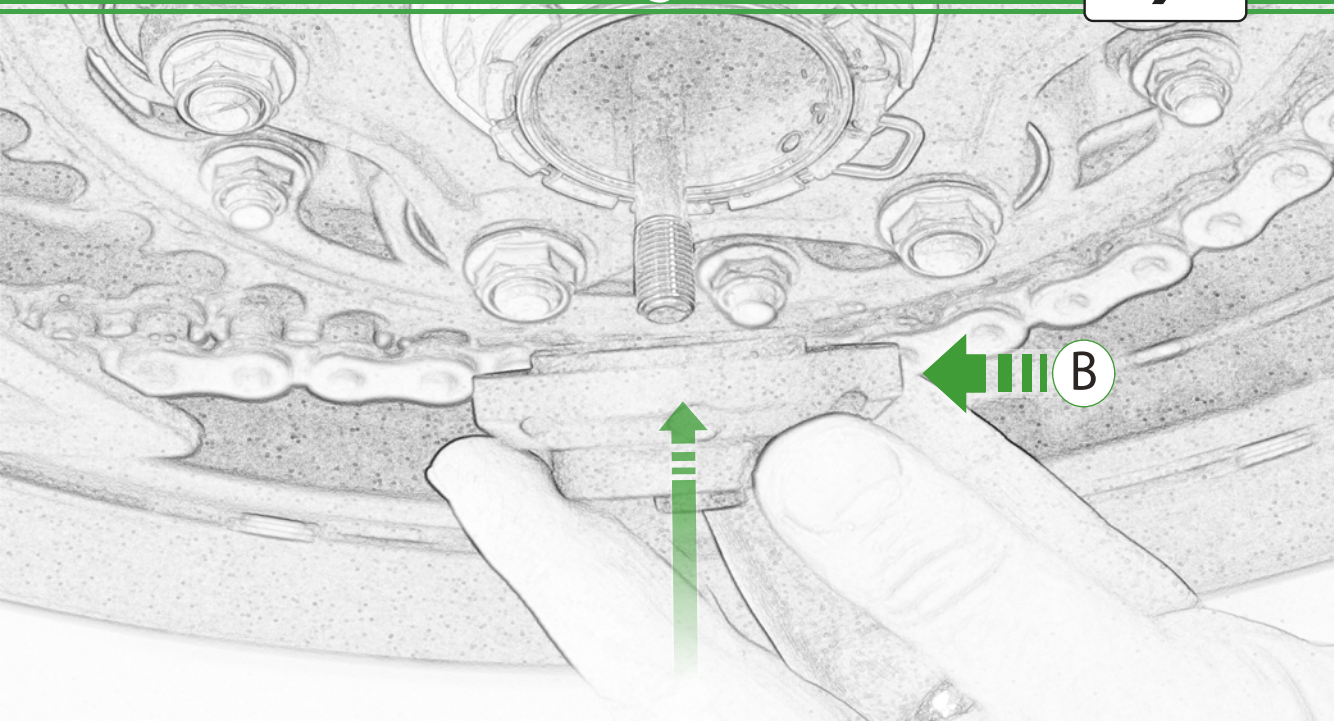


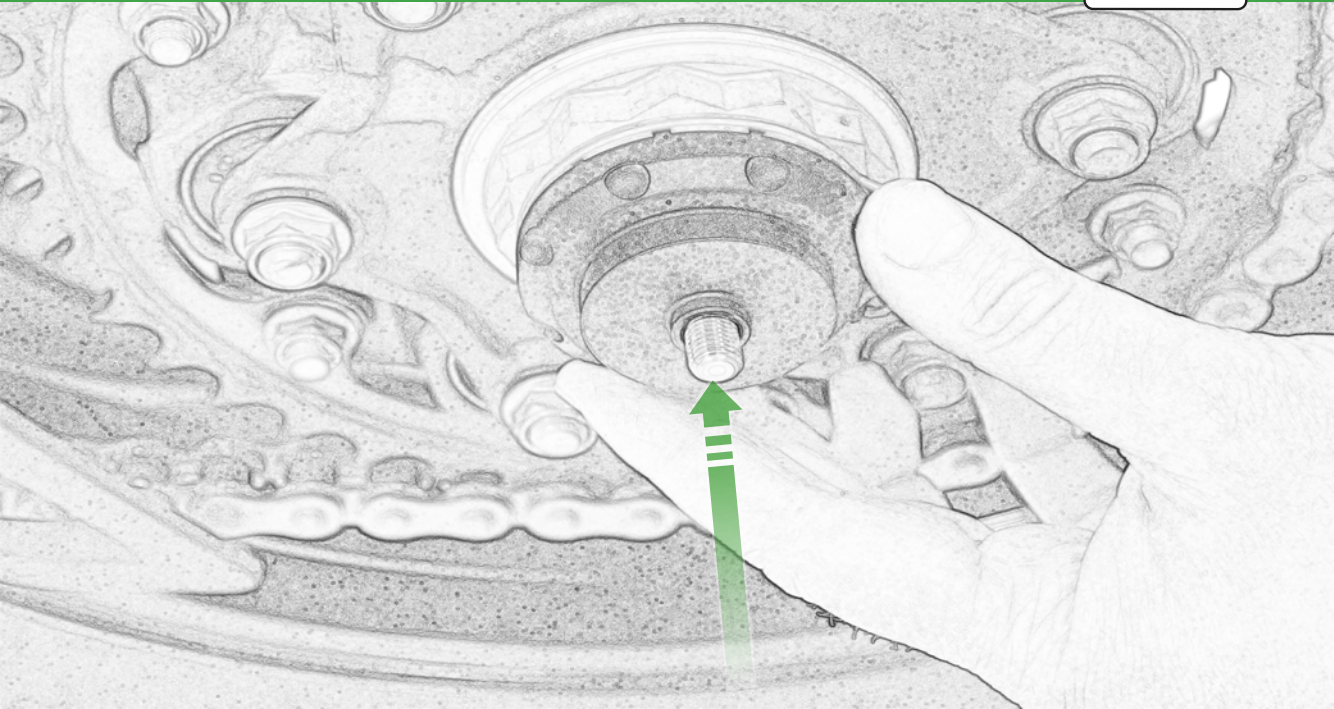

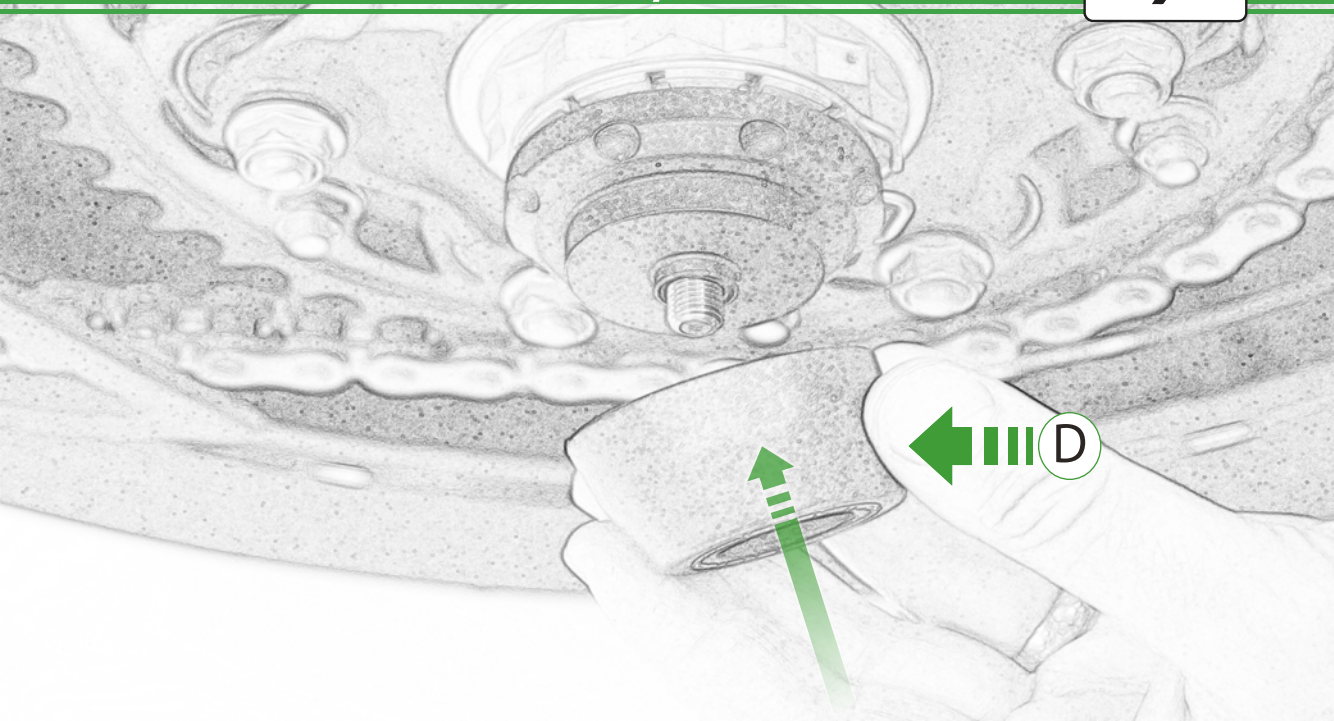

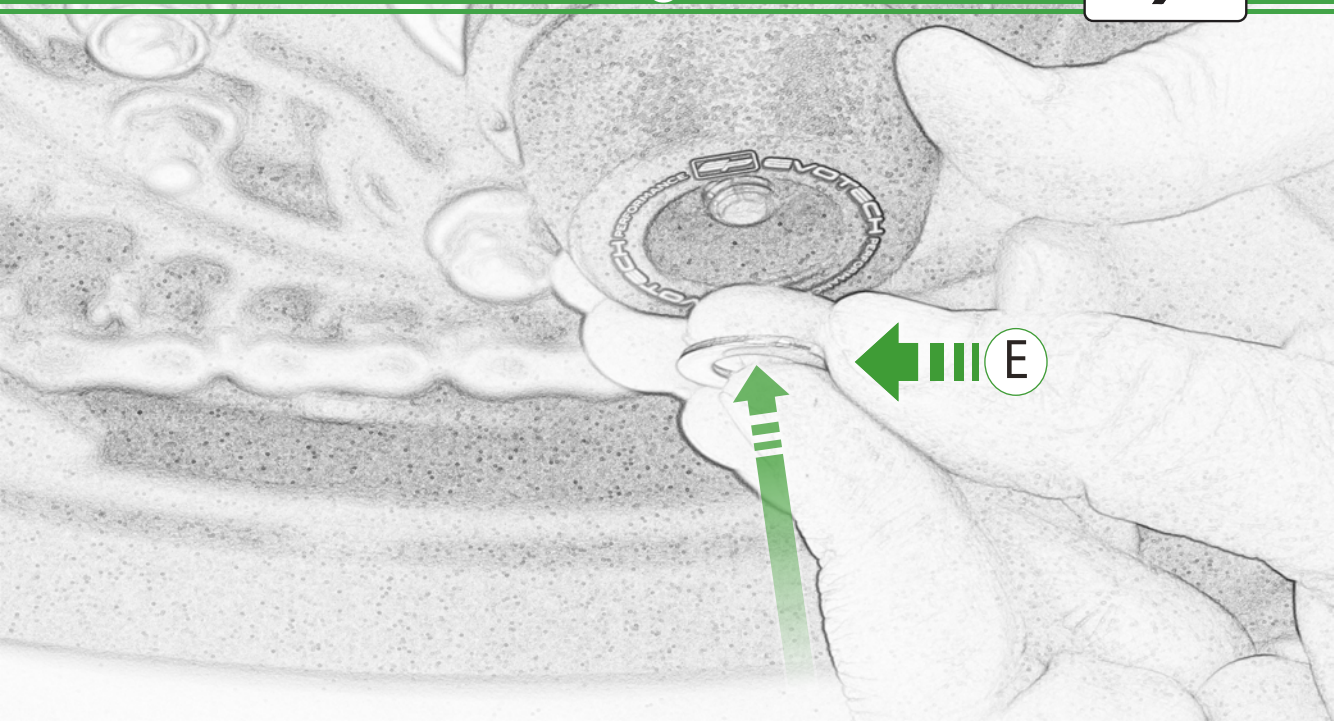

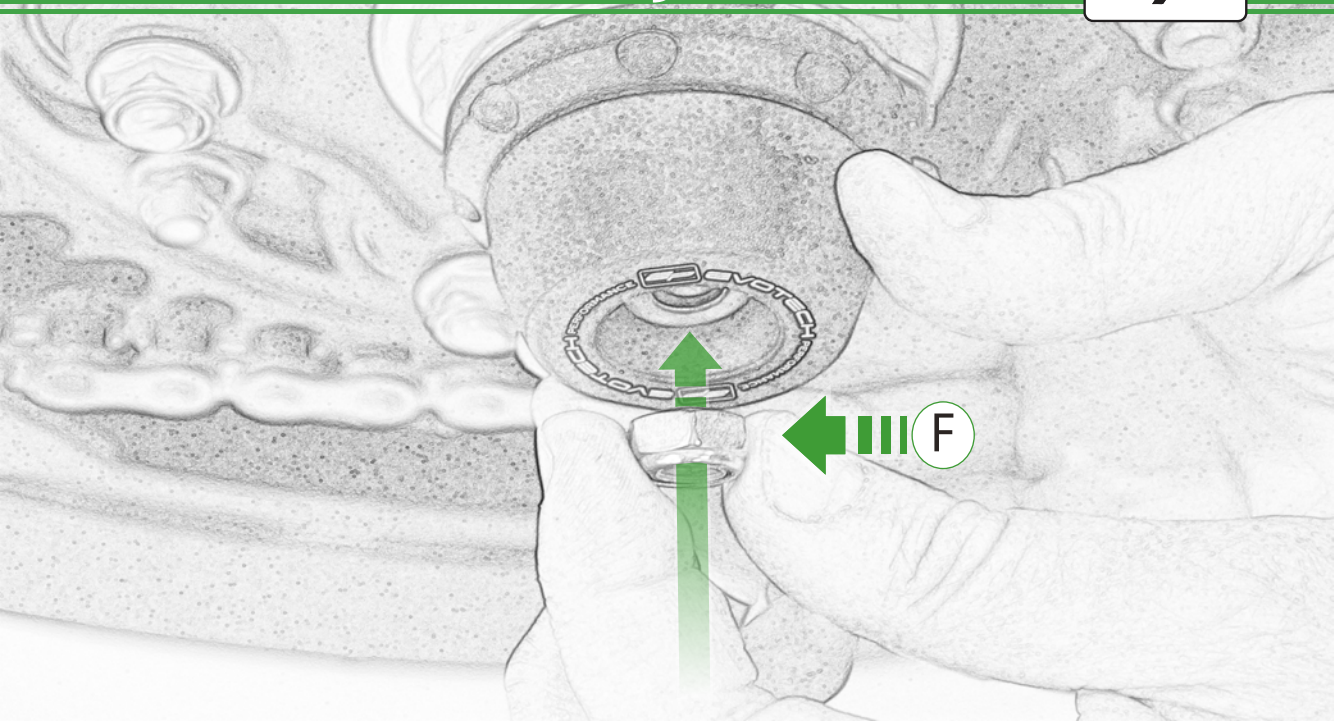

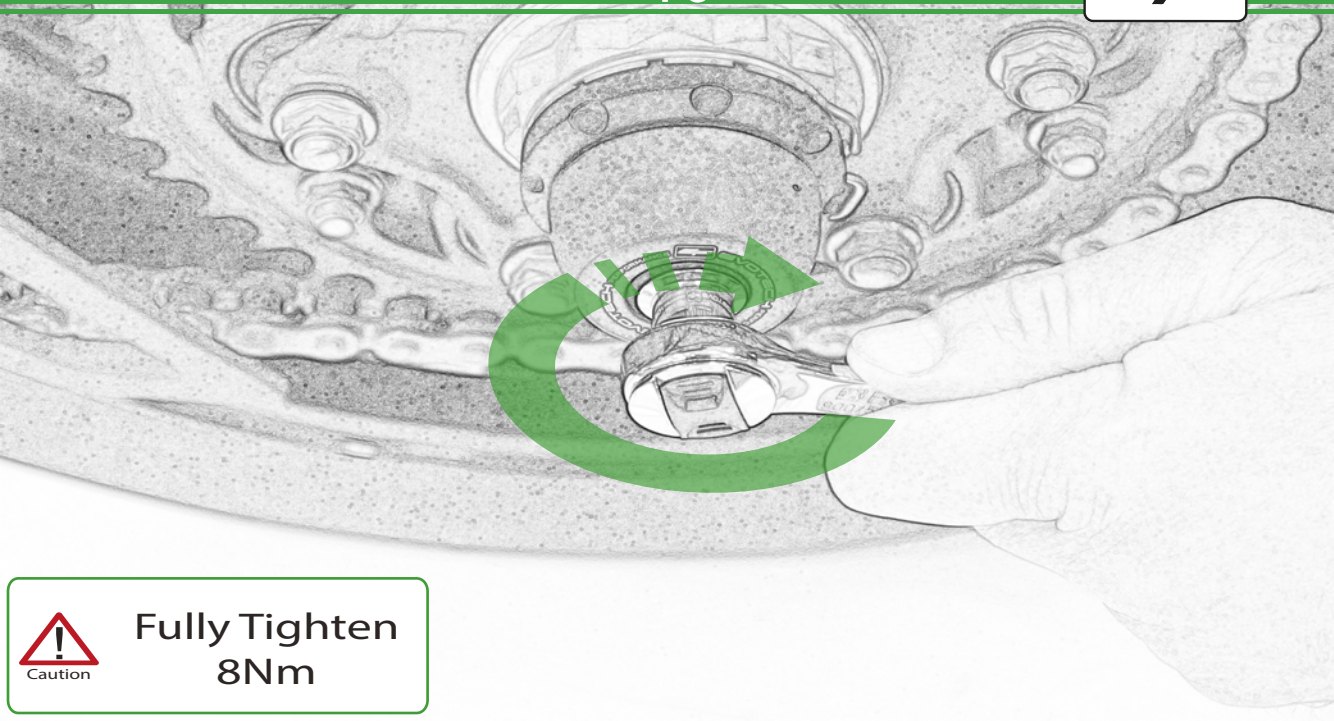

Caution

Fully Tighten
8Nm



ESSENTIAL CHECKS

It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com