

# TRIUMPH SPEED TRIPLE 1200 RS '21-

## M O U N T I N G I N S T R U C T I O N S


REF 20795








**WINDSHIELD NG SPORT**

  
1 Person

  
15 min

  
EASY

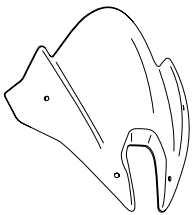

ID.	PIEZA/PART	DESCRIPCIÓN	DESCRIPTION	QTY.	REF.:
1		Cúpula sport	Sport screen	1	20795W/H/N/FM3
2		Soporte metálico	Metal suport	1	SOP1P6----20795
3		Tornillo allen M5x11 Ø11 ISO 7380	M5x11 Ø11 ISO 7380 allen screw	2	TORNI-AI----520
4		Silentblock Ø12xØ6x9	Ø12xØ6x9 silentblock	4	AROPASACABLES-3
5		Casquillo con valona Ø12xØ6,8x7,3	Ø12xØ6,8x7,3 bush with flange	4	CASQUI-1A---750
6		Tornillo allen M5x16 Ø11 ISO 7380	M5x16 Ø11 ISO 7380 allen screw	4	TORNI-I7380-493
7		Tapón tornillo M5 ISO 7380	M5 ISO 7380 screw cap	4	TAPON-----85


# TRIUMPH SPEED TRIPLE 1200 RS '21-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

**1**


DISASSEMBLY  
DESMONTAJE

**A** Tornillería original  
Original screws

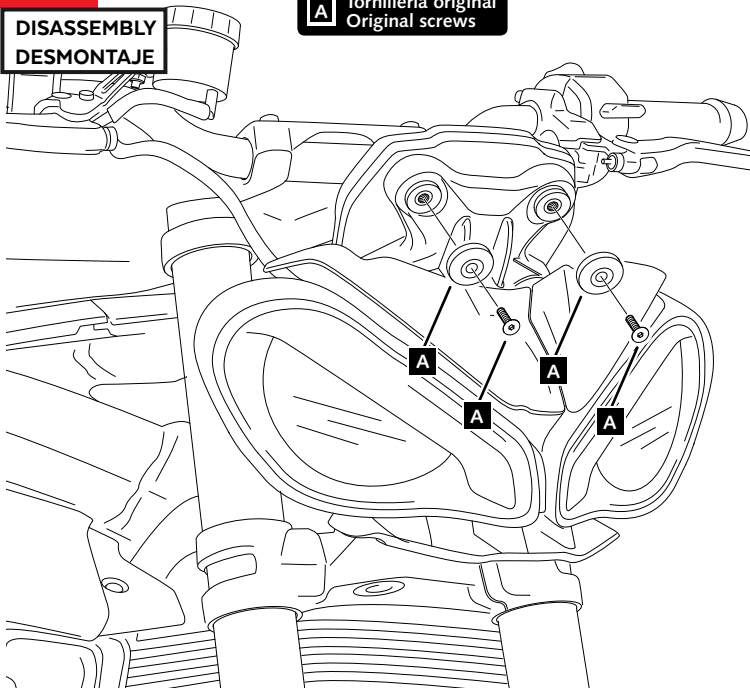


**2**

ASSEMBLY  
MONTAJE

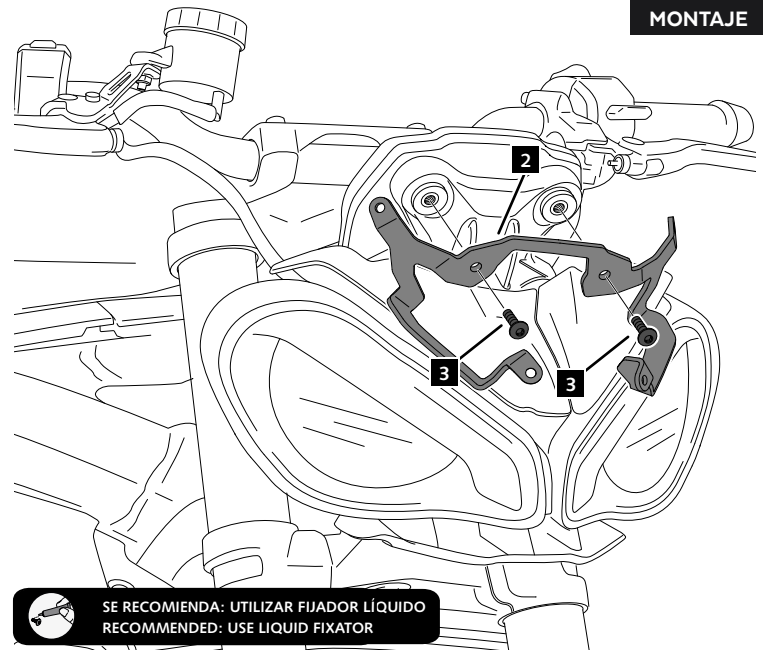

**3**

ASSEMBLY  
MONTAJE

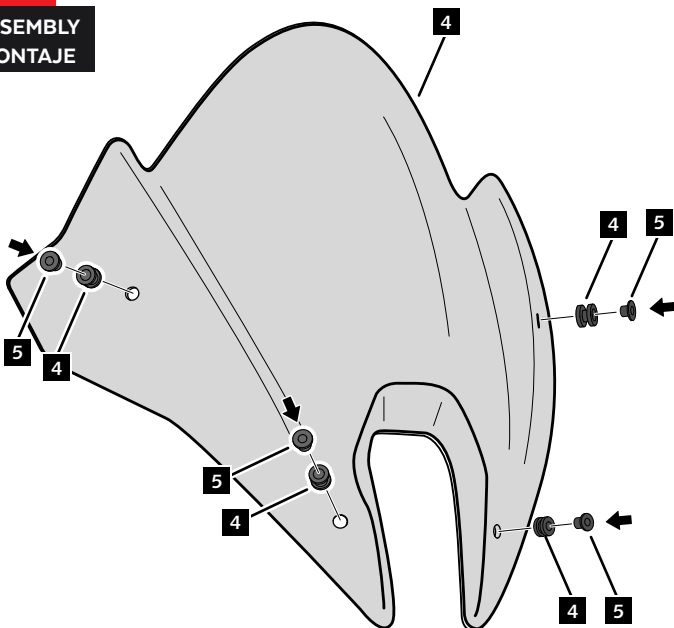

**4**

ASSEMBLY  
MONTAJE

