



**EVOTECH**®  
P E R F O R M A N C E

**Installation Instructions**



## KAWASAKI ZX10R CRASH PROTECTION

**Product Reference - 12952**

### **Kit Contents**


- A** 1 x RH Bobbin Spacer
- B** 1 x LH Bobbin Spacer
- C** 1 x M10 - 100 x 1.25 Cap Head Bolt
- D** 1 x M10 - 90 x 1.25 Cap Head Bolt
- E** 2 x Bobbin Heads
- F** 2 x Impact Absorbing Washer
- G** 2 x M10 Washers



Caution


Only remove engine bolts  
from one side at a time



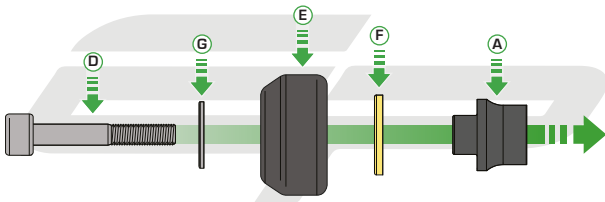




Manufacturers Torque  
Specification  
(Nm)

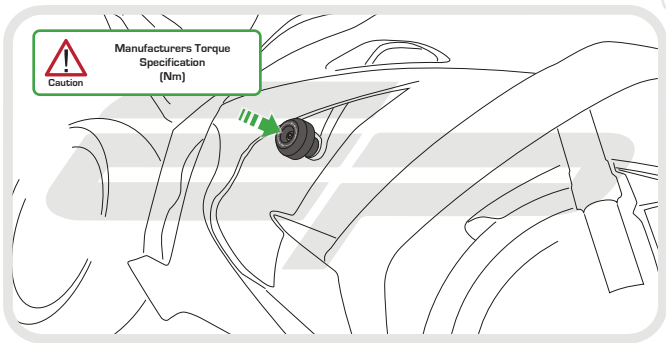




Caution

Only remove engine bolts  
from one side at a time

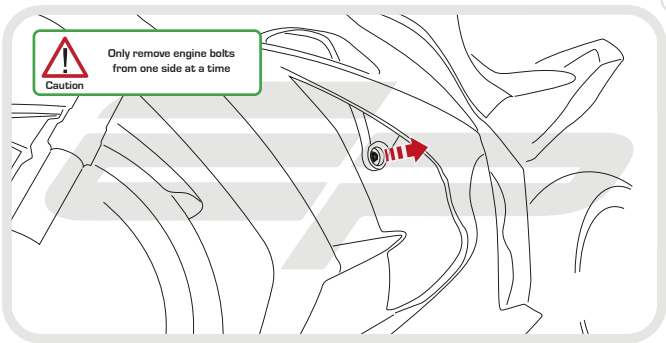


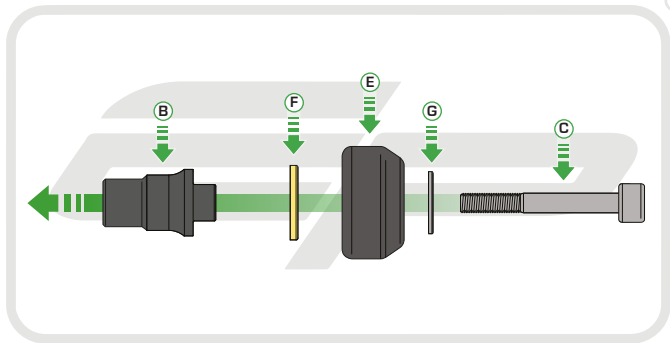



Caution

Manufacturers Torque  
Specification  
(Nm)

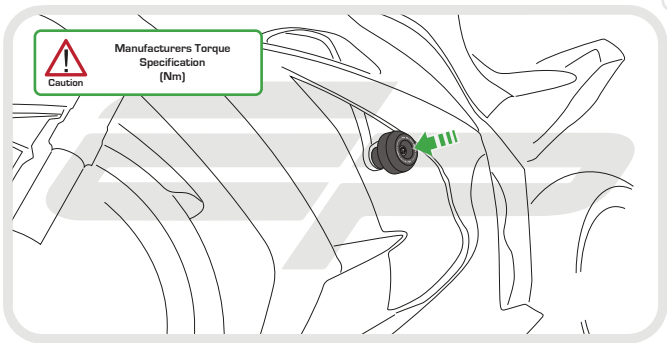





 **ESSENTIAL CHECKS** 

It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



**EVOTECH**®  
P E R F O R M A N C E

[www.evotech-performance.com](http://www.evotech-performance.com)