



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com

Ducati Streetfighter V4 / S Bar end Weights


Installation Instructions



Kit Contents PRN014972


- Ⓐ 2 x Bar End Weights



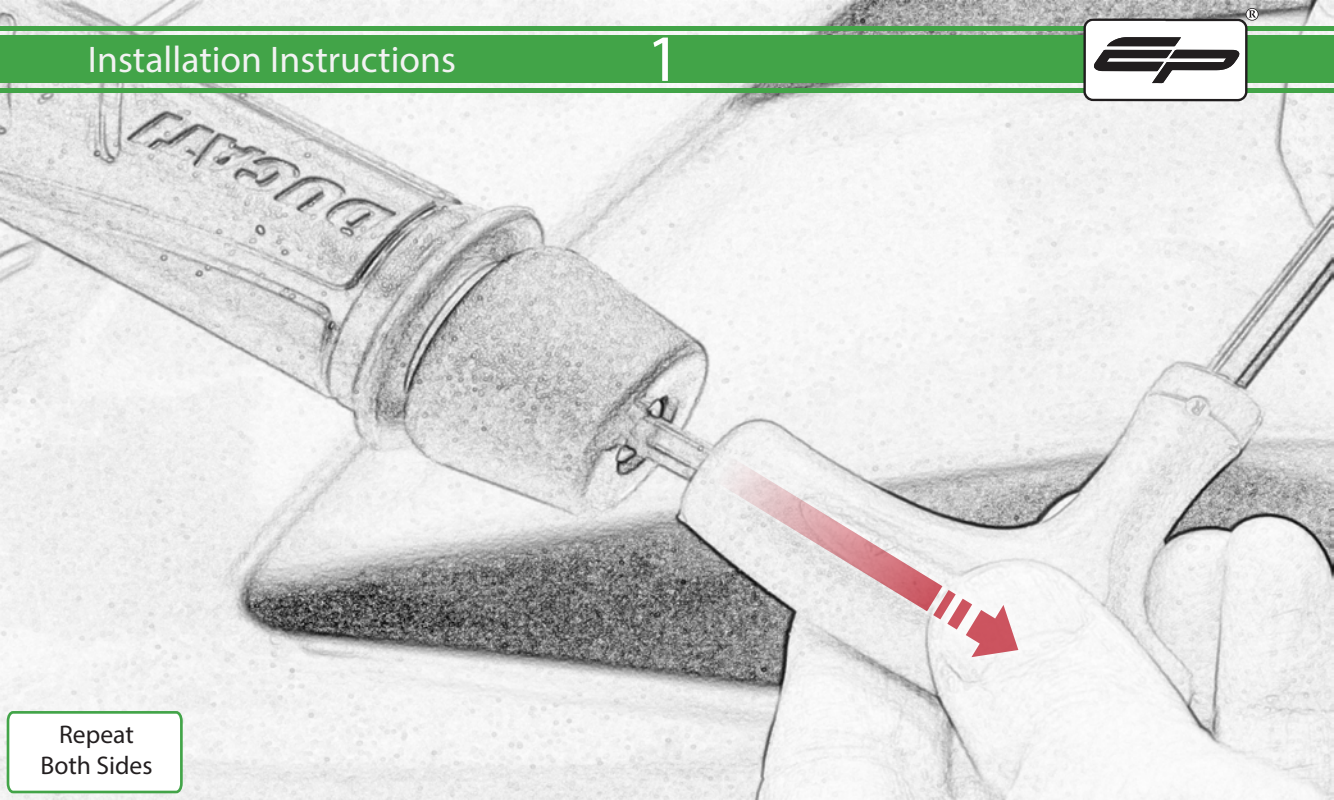

Repeat
Both Sides




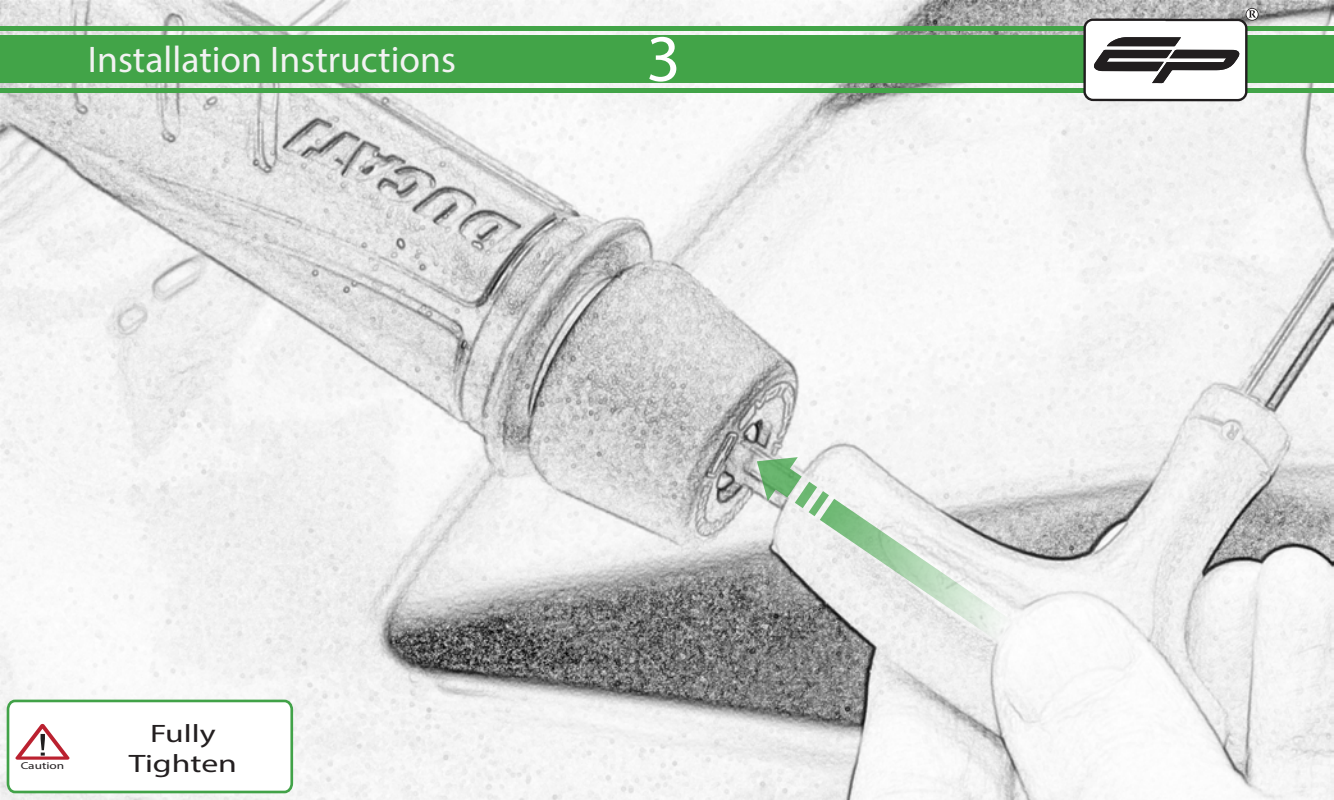

Caution

Fully
Tighten



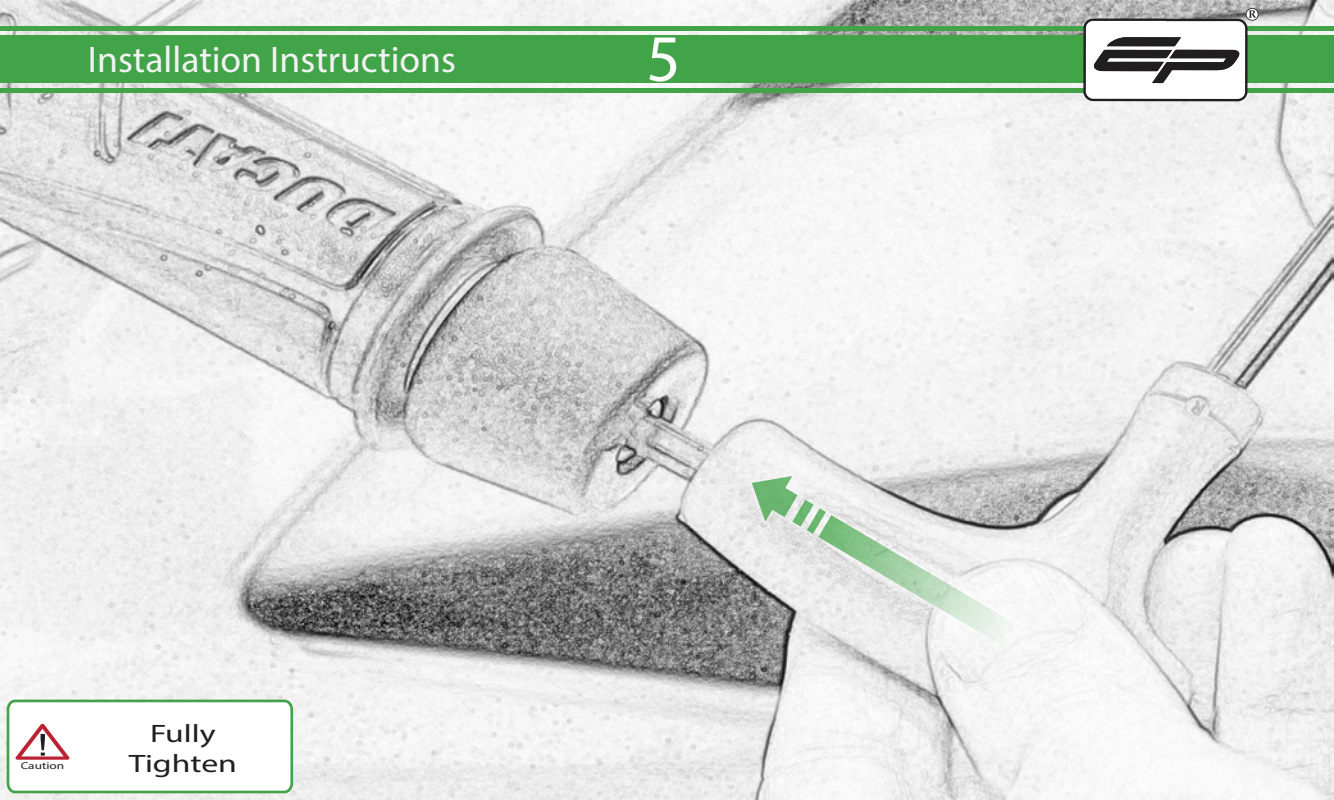

Caution

Fully
Tighten



ESSENTIAL CHECKS

It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com