



**EVOTECH**®  
P E R F O R M A N C E

[www.evotech-performance.com](http://www.evotech-performance.com)


Yamaha MT-10 Bar End  
Installation Instructions




## Kit Contents PRN014397-015651


- Ⓐ 2 x Bar End Inner
- Ⓑ 2 x Bar End Outer
- Ⓒ 2 x M6 x 25 Caphead



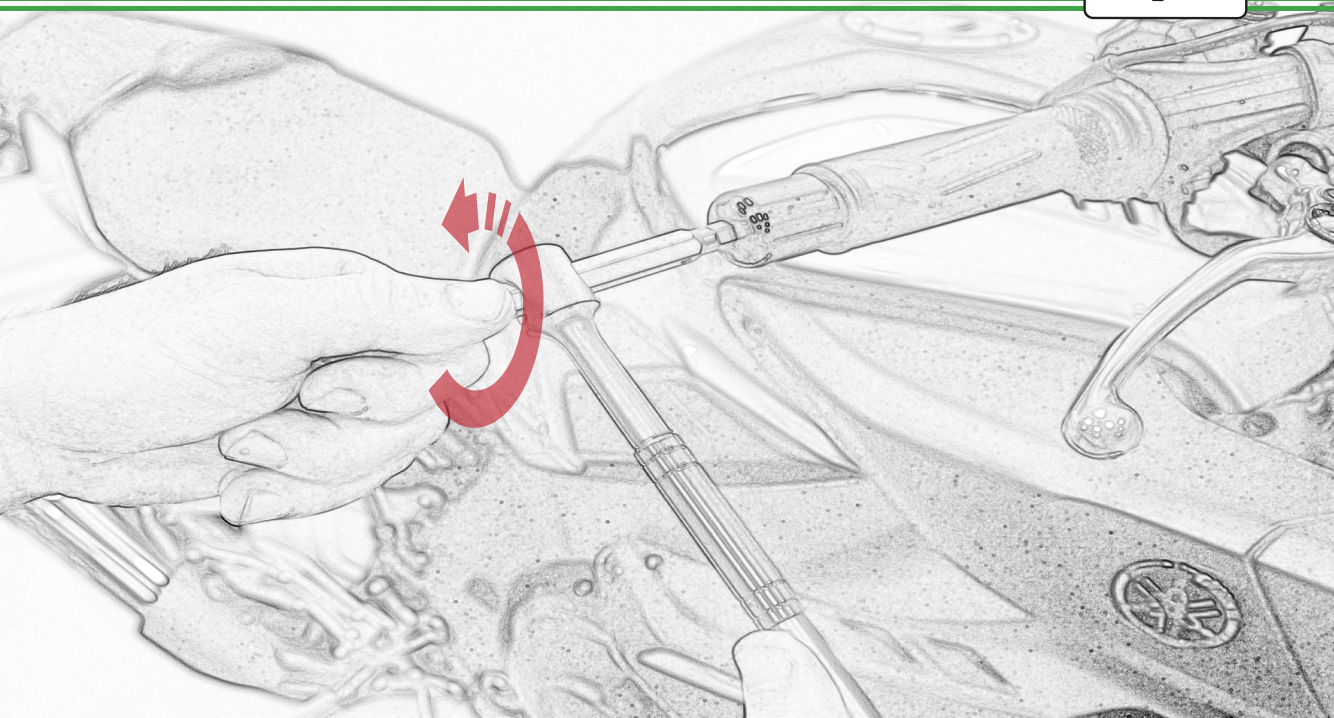


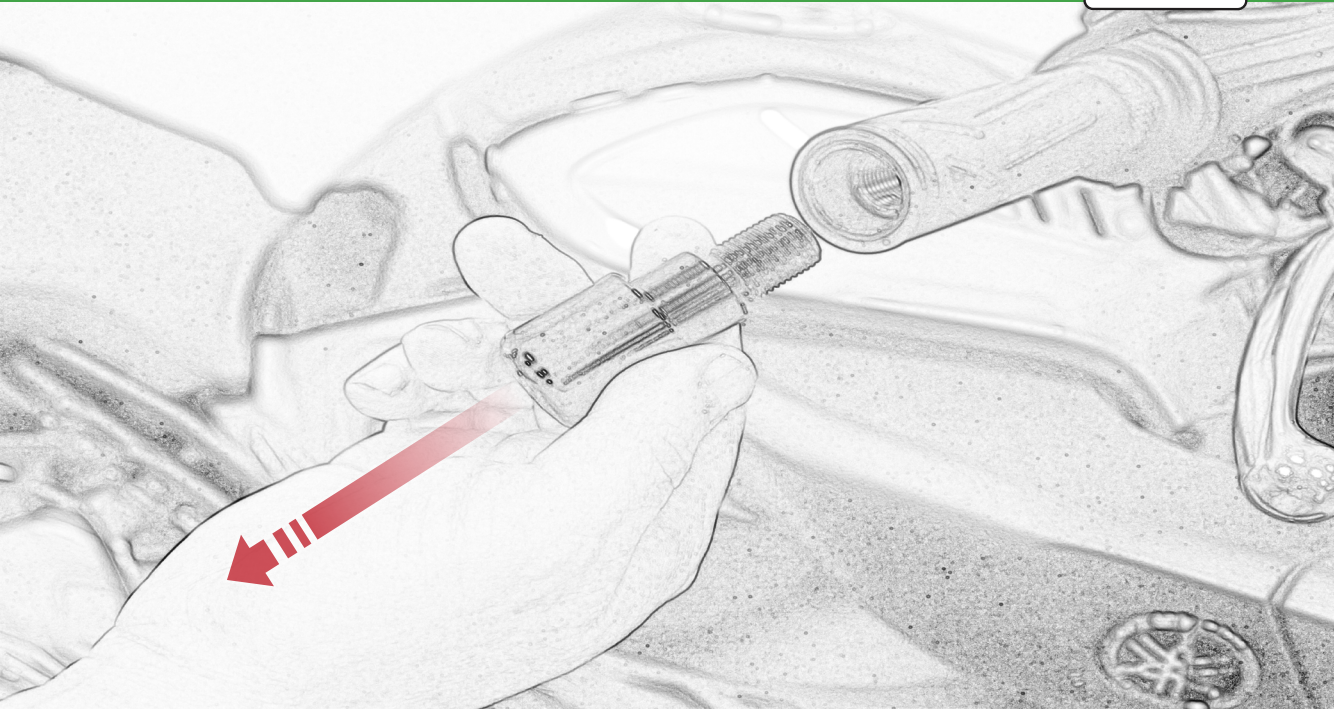




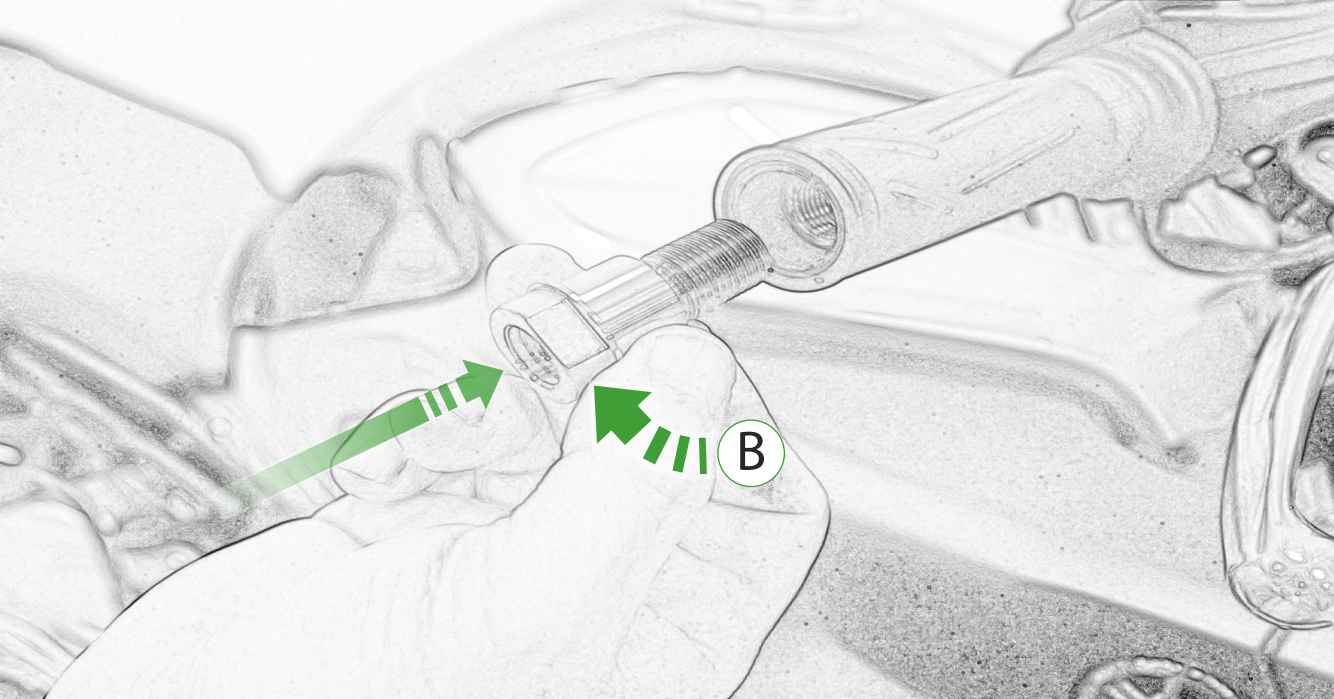




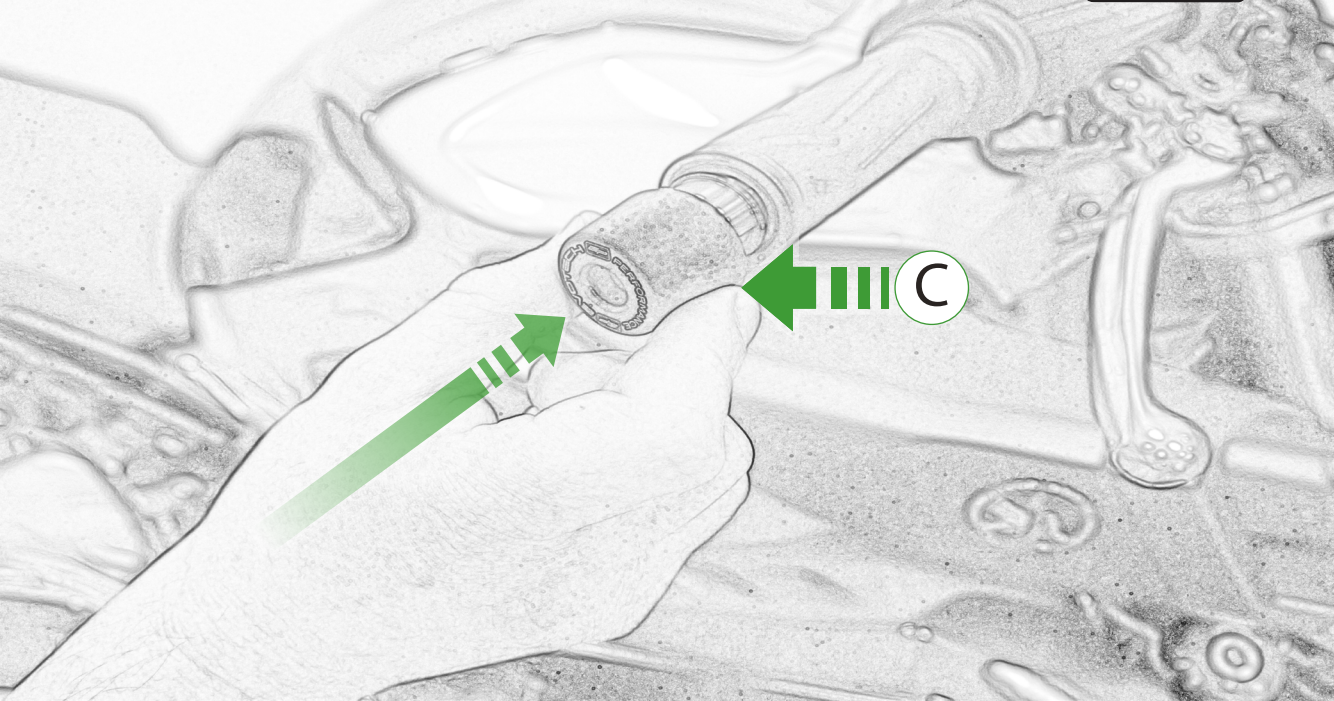




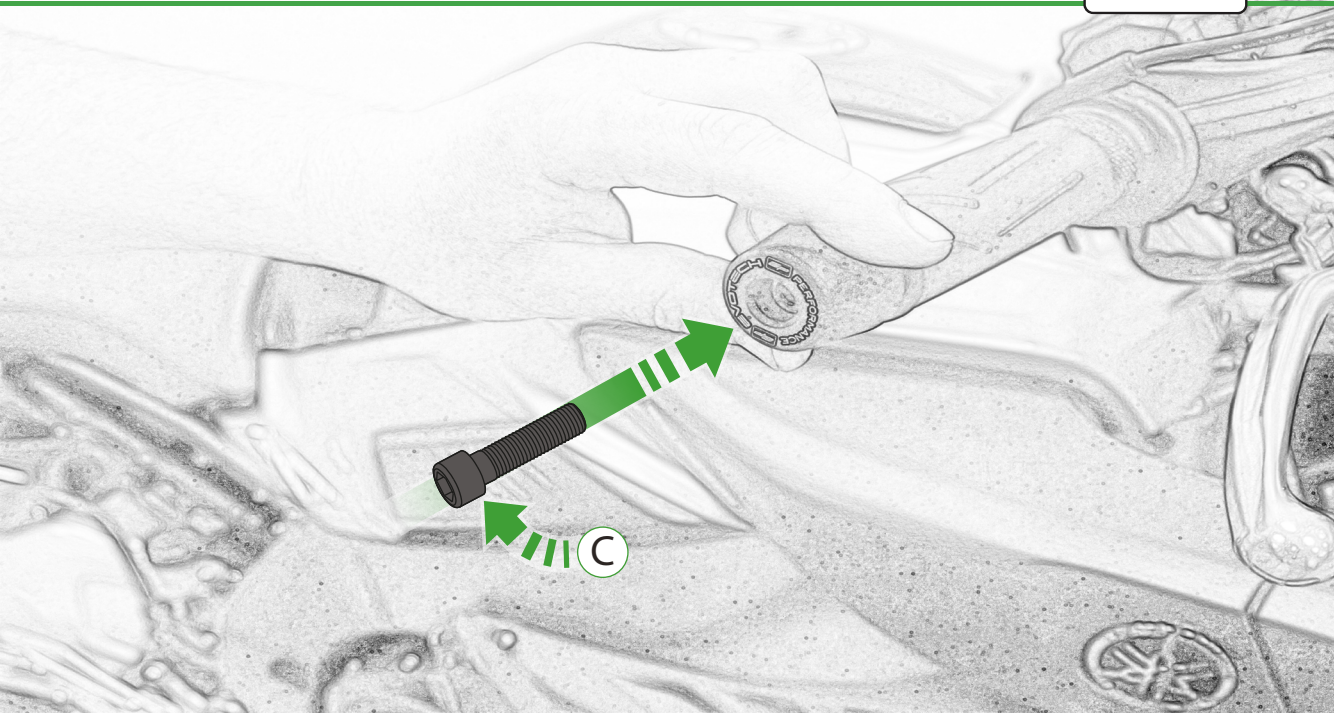

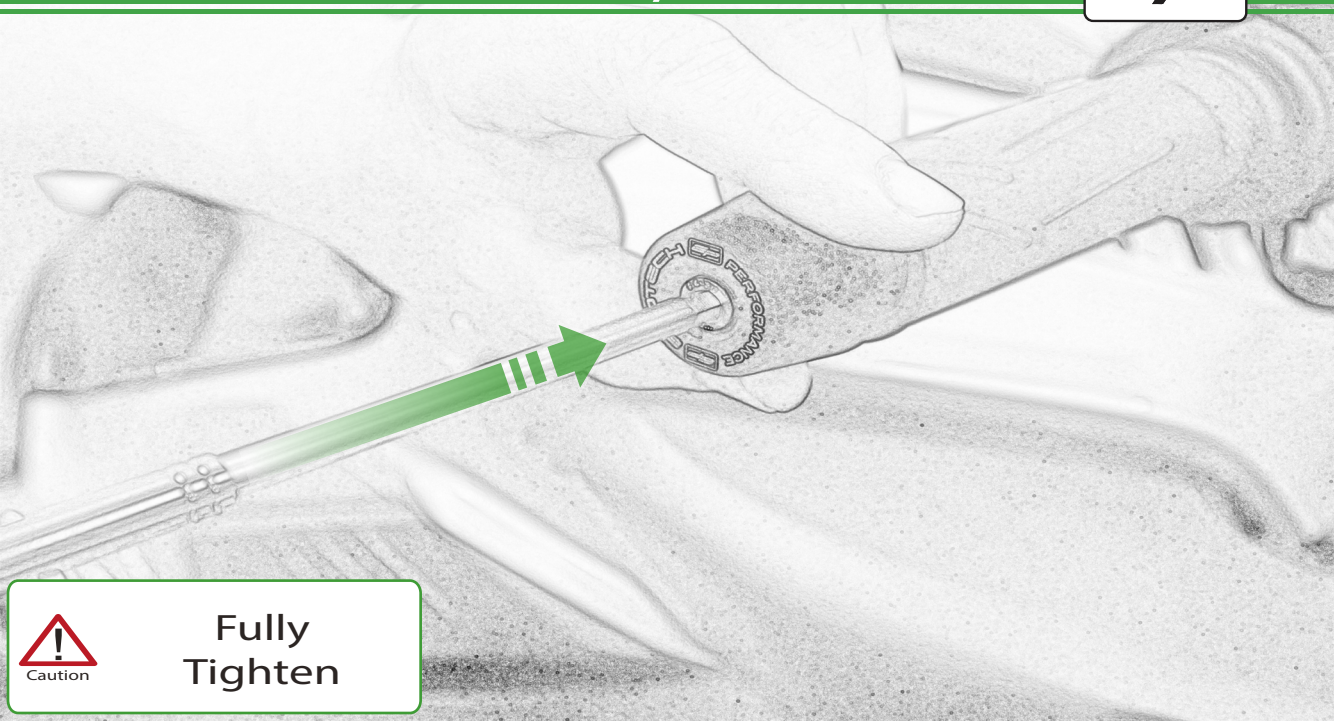

Caution

Fully  
Tighten

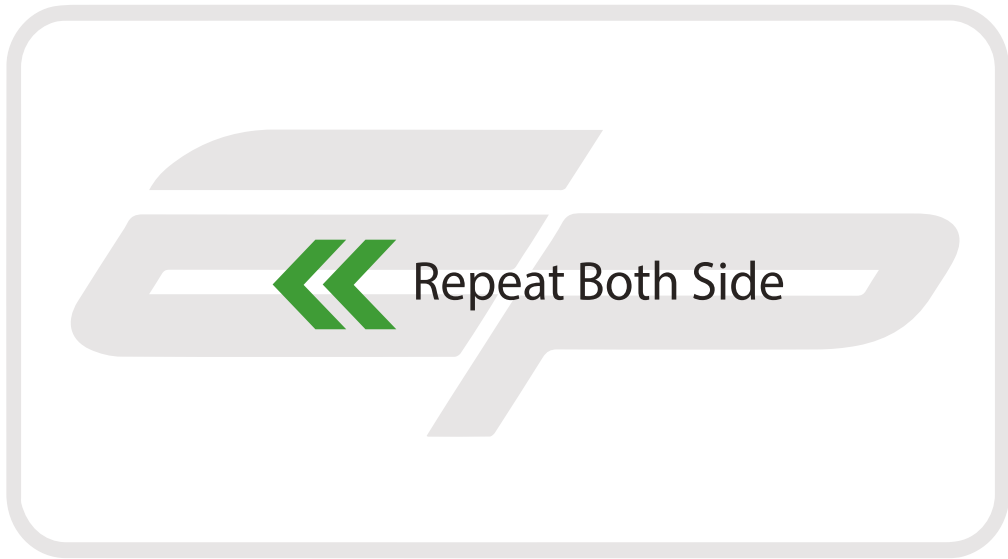



## ESSENTIAL CHECKS



It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced





**EVOTECH**®  
P E R F O R M A N C E

[www.evotech-performance.com](http://www.evotech-performance.com)