

www.evotech-performance.com
Ducati DesertX Garmin
Sat Nav Mount

Installation Instructions




Kit Contents


- (A) 1 x Main Plate
- B 1 x Pivot Plate
- © 1 x Sub Mounting Bracket
- D 2 x M5 x 8mm Black Button Head Bolts
- © 2 x P-clips (No.1)
- © 2 x P-clips (No.2)
- © 2 x P-clips (No.3)
- H 2 x P-clips (No.4)
- 1 2 x Lobe Screw
- ① 2 x M5 Black Washer
- K 2 x Locking Washer


- (L) 2 x M4 x 5mm Black Button Head Bolts
- M 4 x M4 x 10mm Black Button Head Bolts


Sub Kit


- (AA) 1 x Spacer (Short Spacer)
- (BB) 1 x M6 x 35mm Black Button Head
- (CC) 2 x Spacer (Long Spacer)
- (DD) 2 x M6 x 45mm Black Button Head

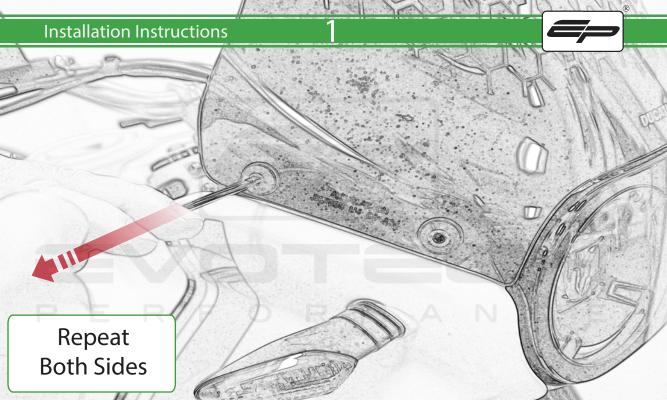


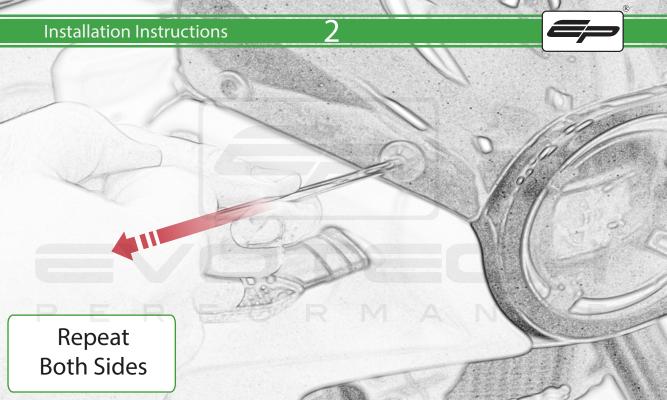


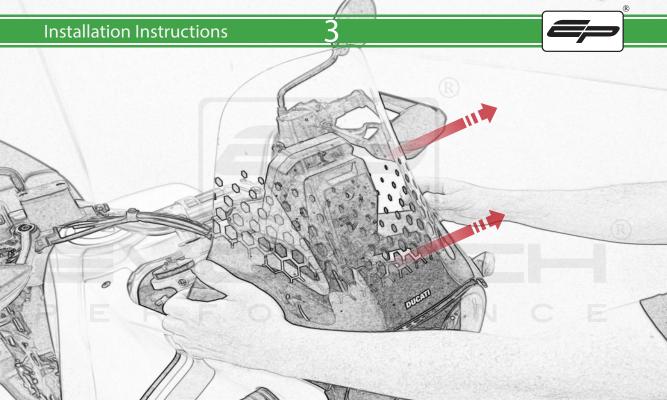


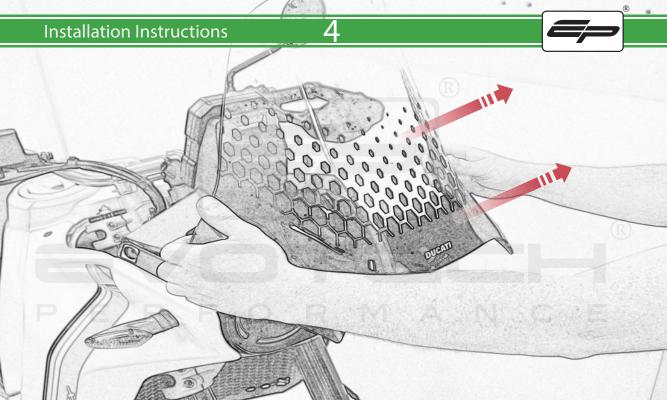


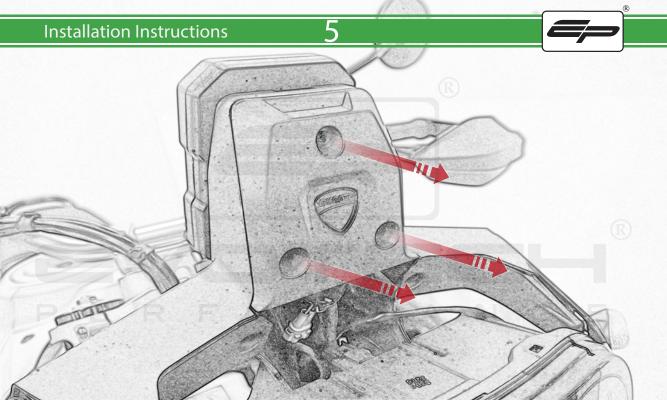

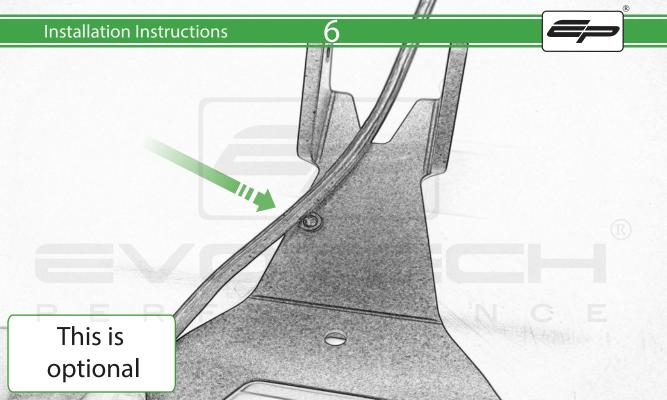

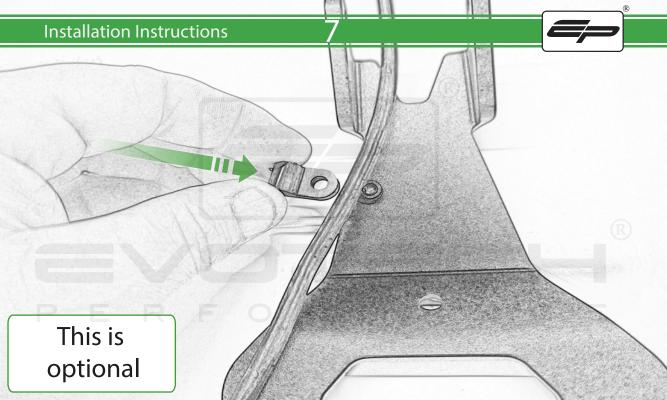

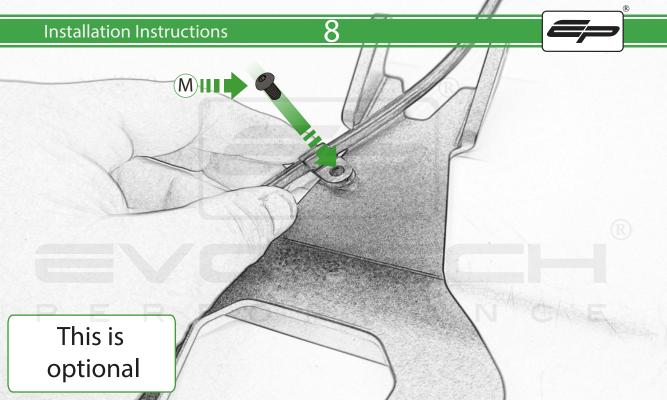


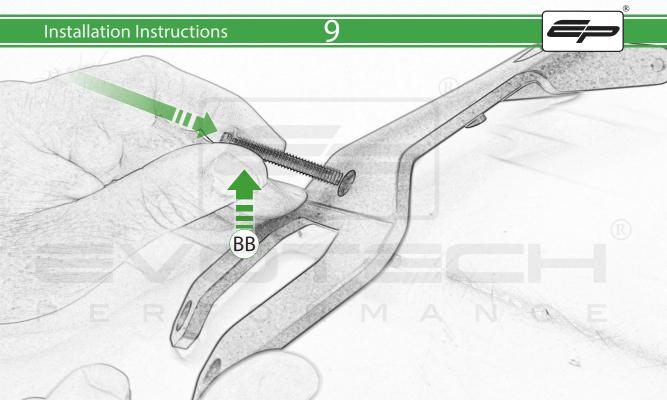











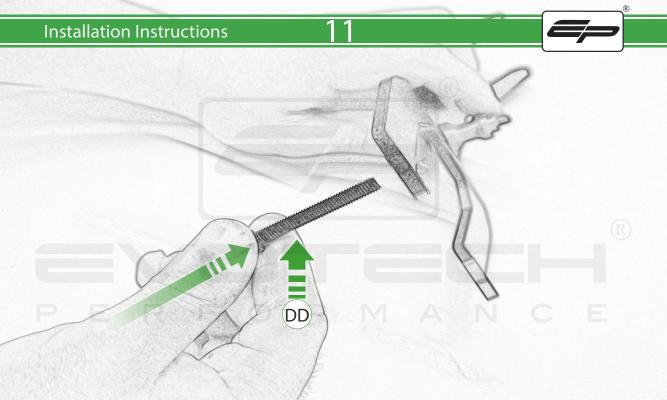


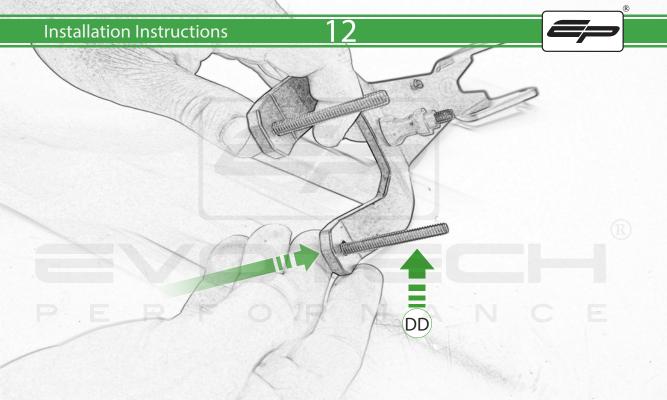


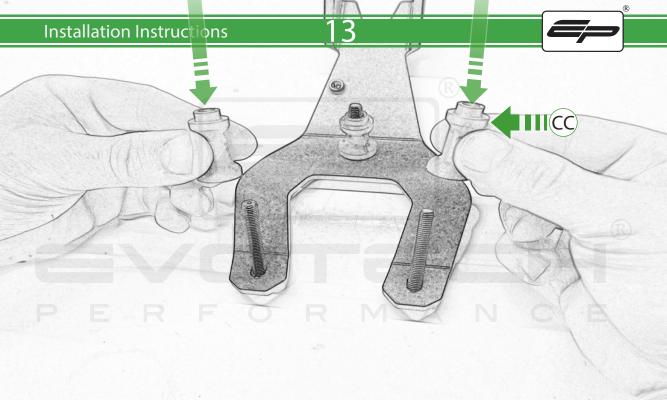


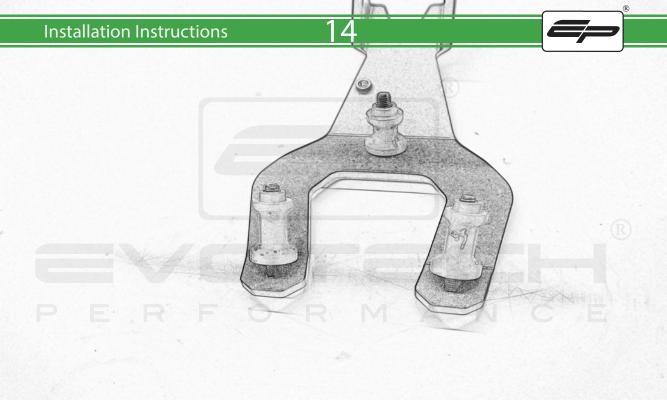

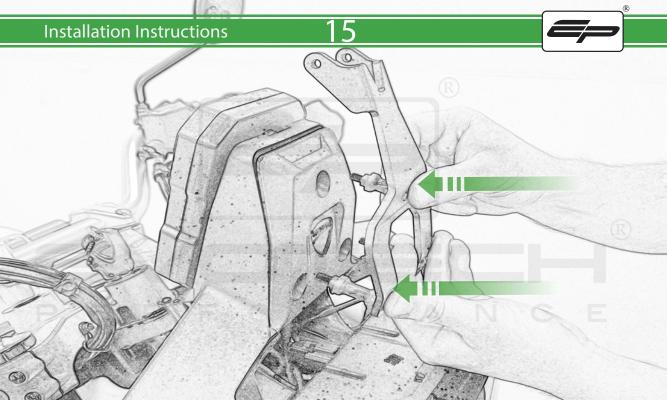


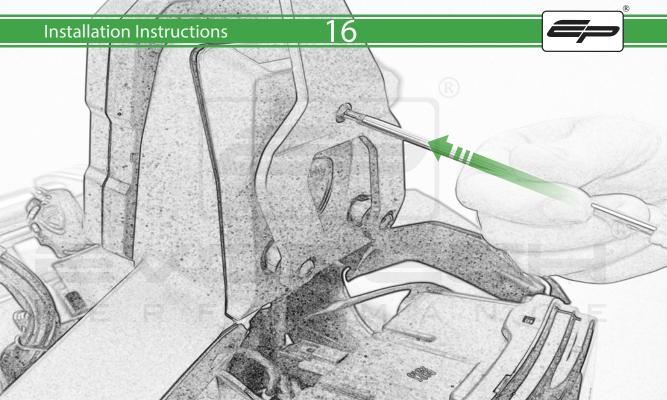

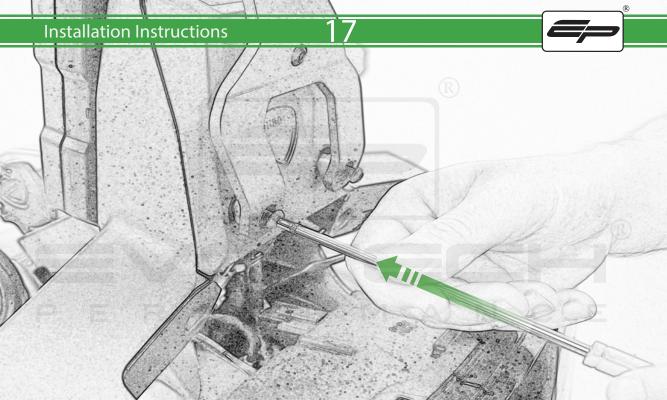

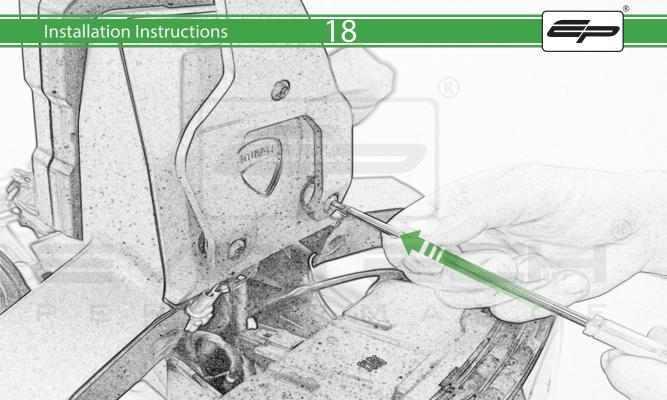




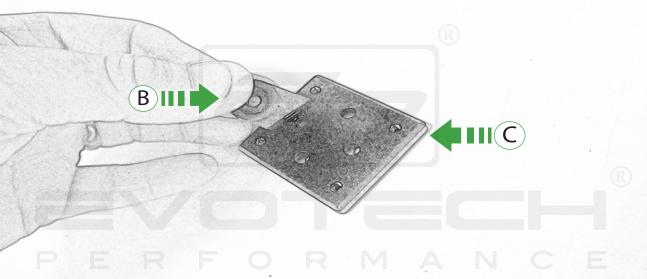






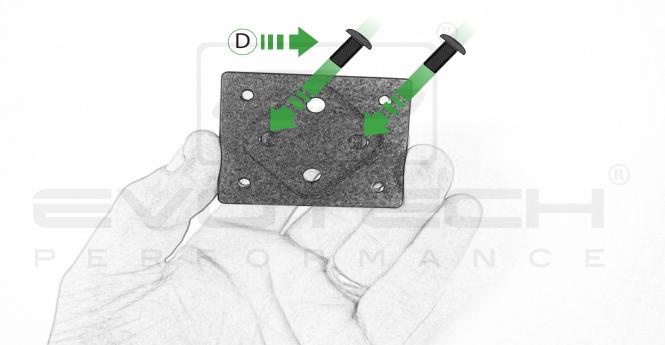

22



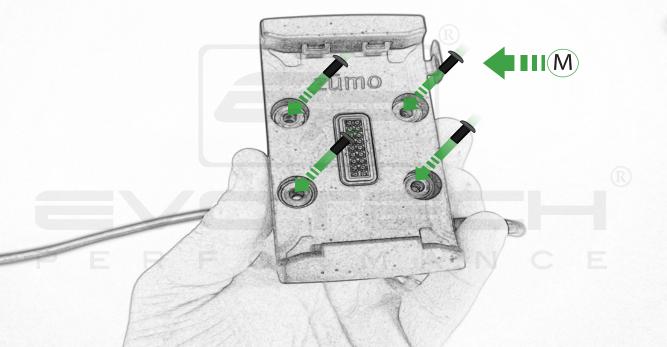


23










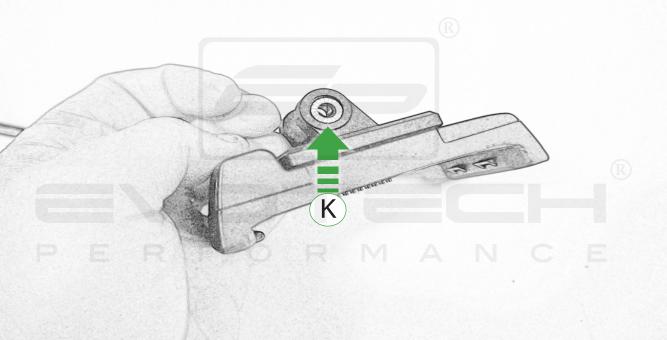






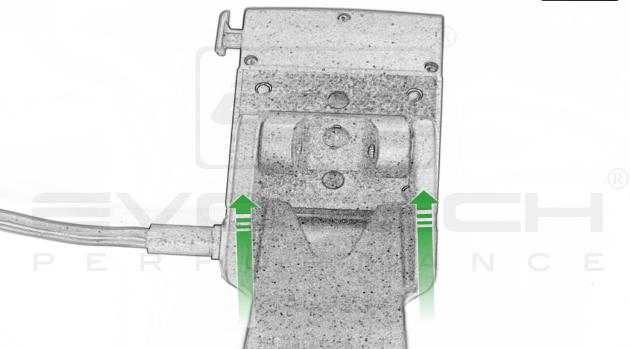



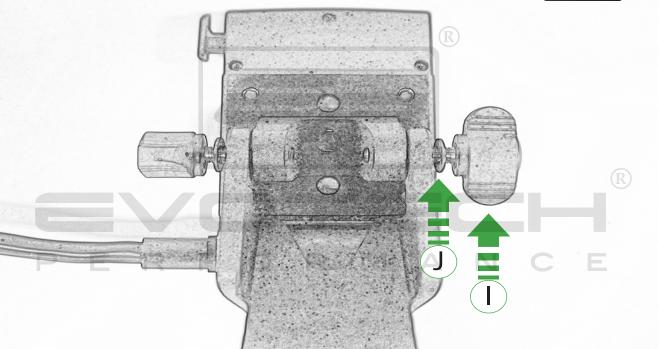





ESSENTIAL CHECKS 🤼



It is recommended that periodic inspections are made to ensure that all bolts are tightend to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



www.evotech-performance.com