

## C-Bow

Suzuki GSX-S 1000 / F ABS  
ab Baujahr 2015

Artikel-Nr.:  
6303531 00 01 schwarz



**KRAUSER**<sup>®</sup>  
MOTORRADGEPÄCKSYSTEME ■ BIKE BAGS

Suzuki GSX-S 1000 / F ABS  
ab Baujahr 2015

Artikel-Nr.:  
4003-055-131 schwarz

## Montage



## Hinweise

### Montagehinweis:

Die Voraussetzung für die Montage ist natürlich eine gewisse technische Erfahrung. Wenn Sie sich nicht sicher sind, wie man eine bestimmte Arbeit ausführt, sollten Sie diese Ihrer Fachwerkstatt überlassen.

Ziehen sie alle zugänglichen Schrauben zuerst nur locker an. Nachdem alles montiert ist, werden die Schrauben dann auf das entsprechende Anzugsmoment festgezogen. Dadurch wird sichergestellt, dass das Produkt spannungsfrei angebaut ist.

Anzugsmomente des Motorradherstellers beachten!  
Nach der Montage alle Verschraubungen auf festen Sitz kontrollieren!

## Bausatz

2	700007063	C-Bow schwarz
1	700009023	C-Bow Adapter vorne links
1	700009024	C-Bow Adapter vorne rechts
1	700009025	C-Bow Halteadapter hinten
1	700009026	Schraubensatz:

2x Inbusschrauben M8x35  
2x Inbusschrauben M6x30  
8x Sechskantschrauben M6x18  
8x U-Scheiben Ø6,4

## Werkzeuge


Inbusschlüssel 5/6  
Gabel-Ringschlüssel 10

## Vorbereitung

Links und rechts die hintere Schraube M8 der Sozios-Fußrastenausleger sowie die 2 Schrauben M6 unter dem Soziussitz entfernen. Alle Originalschrauben entfallen.

### Montage C-Bow Adapter vorne rechts und links:

Die Halter werden mit den  
Inbusschrauben M8x35 am  
Sozios-Fußrastenausleger montiert.





2x

1




**2** Montage C-Bow Halteadapters hinten:  
Der Halteadapter wird unter dem  
Soziussitz/Heck mit den Inbusschrauben  
M6x30 in den freien Gewinden montiert.

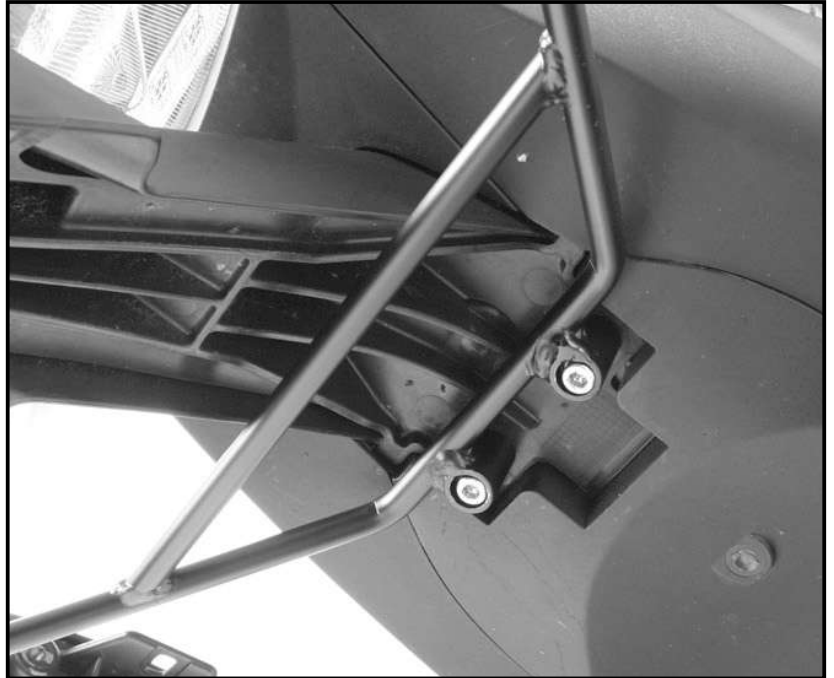

2x

**3** Montage der C-Bow links + rechts:  
Dazu die Sechskantschrauben M6x18  
und die U-Scheiben Ø6,4 verwenden.

Alle Teile korrekt ausrichten und die  
Verschraubungen festziehen.



8x

8x



Weiteres Zubehör:  
SPORTRACK

Für die jeweilige Bestellnummer siehe Katalog oder auf unserer webseite.  
Weiteres Zubehör in Vorbereitung.



**Hepco & Becker GmbH**  
An der Steinmauer 6  
D-66955 Pirmasens  
Tel.: 06331 - 1453 - 100  
[www.hepco-becker.de](http://www.hepco-becker.de)



**Krauser GmbH**  
An der Steinmauer 6  
D-66955 Pirmasens  
Tel.: 06331 - 1453 - 250  
[www.krauser.de](http://www.krauser.de)

# C-Bow

Suzuki GSX-S 1000 / F ABS  
from date of manufacture 2015

item.-no.:  
6303531 00 01 black



Suzuki GSX-S 1000 / F ABS  
from date of manufacture 2015

item.-no.:  
4003-055-131 black

## Assembling instructions



## Note

### Installation note:

Of course, the assembly requires a certain technical experience. If you are not sure how to execute a determined action, you should ask your local distributor to do it.

First, tighten all screws only loosely. After mounting all parts, the screws should be tightened to the torque specified. This guarantees, that the product is mounted without tension.

Observe the tightening torques of the motorcycle manufacturer!  
Control all screw connections after the assembling for tightness!

## Kit

- 2 700007063 C-Bow schwarz
- 1 700009023 C-Bow adapter front left
- 1 700009024 C-Bow adapter front right
- 1 700009025 C-Bow holding adapter rear

- 1 700009026 Screw kit:

2x allen screw M8x35  
2x allen screw M6x30  
8x hexagon bolt M8x18  
8x washer Ø6,4

## Tools required

Allen key 5/6  
Wrench 10

## Preparing


Dismantle the rear screw M8 of the passengers footrest holder left and right.

Dismantle the screws M6 under the passenger seat/rear cover.

All original screws are obsolete.

### Fastening of the C-Bow adapters front left + right:

With allen screws M8x35 to the free thread of the passengers footrest holder.




2x

1



**2** Fastening of the C-Bow holding adapter rear:

With allen screws M6x30 at the free threads under the passenger seat/rear cover.




2x



**3** Fastening of the C-Bow:

with hexagon bolts M6 x 18 and washers  $\varnothing 6,4$ .

After mounting all parts, the screws should be tightened to the torque specified.



8x

8x



Also available:  
SPORTRACK

For item-numbers see our catalog or on our website.  
More accessories are in progress.



Hepco & Becker GmbH  
An der Steinmauer 6  
D-66955 Pirmasens  
Tel.: 0049 6331 - 1453 - 100  
www.hepco-becker.de



Krauser GmbH  
An der Steinmauer 6  
D-66955 Pirmasens  
Tel.: 0049 6331 - 1453 - 250  
www.krauser.de