

C-Bow

YAMAHA YZF-R1 / M
ab Baujahr 2015

Artikel-Nr.:
6304545 00 01 schwarz



KRAUSER[®]
MOTORRADGEPÄCKSYSTEME ■ BIKE BAGS

YAMAHA YZF-R1 / M
ab Baujahr 2015

Art.-Nr.: 4004.053.131 schwarz

Montage



Hinweise

Montagehinweis:

Die Voraussetzung für die Montage ist natürlich eine gewisse technische Erfahrung. Wenn Sie sich nicht sicher sind, wie man eine bestimmte Arbeit ausführt, sollten Sie diese Ihrer Fachwerkstatt überlassen.

Ziehen sie alle zugänglichen Schrauben zuerst nur locker an. Nachdem alles montiert ist, werden die Schrauben dann auf das entsprechende Anzugsmoment festgezogen. Dadurch wird sichergestellt, dass das Produkt spannungsfrei angebaut ist.

Anzugsmomente des Motorradherstellers beachten!
Nach der Montage alle Verschraubungen auf festen Sitz kontrollieren!

Bausatz


- 2 700007063 C-Bow schwarz
- 1 700009007 C-Bow Adapter vorne links
- 1 700009008 C-Bow Adapter vorne rechts
- 1 700009009 C-Bow Adapter hinten
- 1 700009010 Schraubensatz:

- 2x Inbusschrauben M6x45
- 8x Sechskantschrauben M6x18
- 4x Linsenkopfschrauben M8x40
- 10x U-Scheiben Ø6,4
- 2x selbstsichernde Mutter M6
- 4x Aludistanzen Ø18xØ9x5mm

Werkzeuge


- Inbusschlüssel 4+5
- Gabel-Ringschlüssel 10

Kombinierbar mit Sportrack 6704545

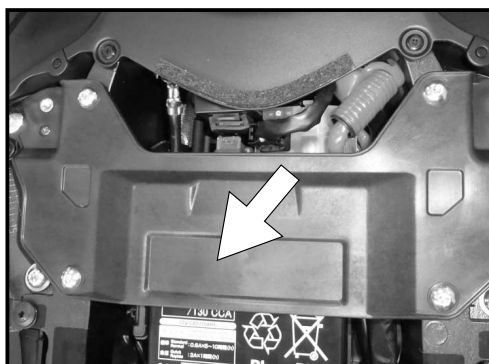


Vorbereitung:

Fahrersitz und Soziussitz müssen demontiert werden.
Die Kunststoffabdeckung unter dem Sitz entfernen (siehe Bild).

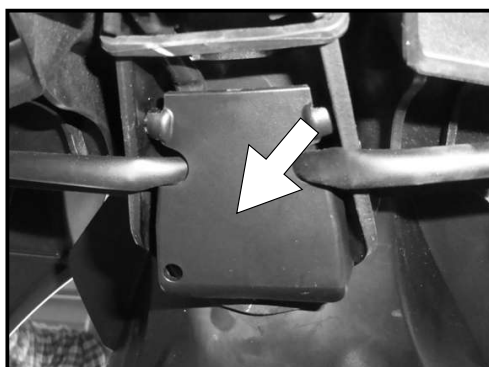

Vorbereitung:

Kunststoffabdeckung unter dem Heckkotflügel entfernen - diese entfällt.

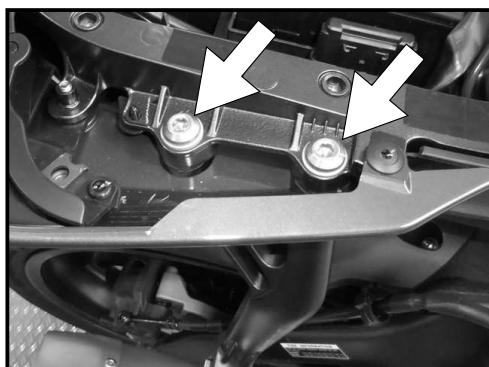


Vorbereitung:

Schrauben der Soziusfußrasten links und rechts demontieren.
Originalschrauben entfallen.



1 Montage der vorderen C-Bow Halter links und rechts:

In die 4 Bohrungen der Schrauben der Soziusfußrastenbefestigung von oben die Linsenkopfschrauben M8x40 durch die Original U-Scheiben stecken. Die vorderen C-Bowhalter werden von unten an den überstehenden Gewinden der Linsenkopfschrauben zusammen mit den Original-Fußrasten montiert.

Die Aludistanzen Ø18xØ9x5mm zwischen Rahmen und C-Bow Halter einfügen.

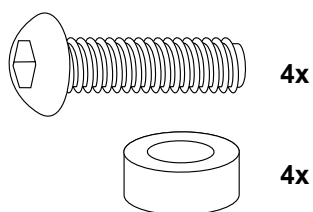

2 Montage des hinteren C-Bow Halters:
Die Originalschrauben (siehe Abbildung) entfernen und durch die beiliegenden Inbusschrauben M6x45 ersetzen.

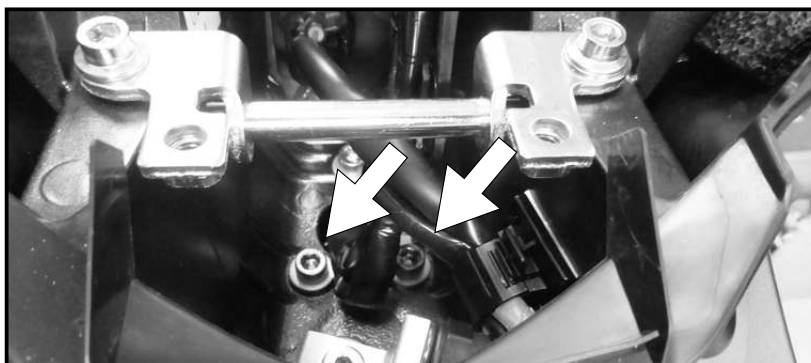

3 Montage des hinteren C-Bow Halters:
Der hintere C-Bowhalter wird von unten an den überstehenden Gewinden der Inbusschrauben mit U-Scheiben ø6,4 und selbstsichernden Muttern M6 montiert.



Montage der C-Bow links + rechts:
an den montierten C-Bow Adaptern.
Dazu die Sechskantschrauben M6x18
und die U-Scheiben Ø6,4 verwenden.

Alle Teile korrekt ausrichten und die
Verschraubungen festziehen.

Kunststoffabdeckung (unter Fahrersitz)
wieder anschrauben. Sitze montieren.



4



Weiteres Zubehör:

Sportrack

Für die jeweilige Bestellnummer siehe Katalog oder auf unserer webseite.
Weiteres Zubehör in Vorbereitung.



Hepco & Becker GmbH
An der Steinmauer 6
D-66955 Pirmasens
Tel.: 0049 6331 - 1453 - 100
www.hepco-becker.de



Krauser GmbH
An der Steinmauer 6
D-66955 Pirmasens
Tel.: 0049 6331 - 1453 - 250
www.krauser.de

C-Bow

YAMAHA YZF-R1 / M
from date of manufacture 2015



YAMAHA YZF-R1 / M
from date of manufacture 2015

item.-no.: 6304545 00 01 black

Item-no.: 4004.053.131 black

Assembling instructions



Note

Installation note:

Of course, the assembly requires a certain technical experience. If you are not sure how to execute a determined action, you should ask your local distributor to do it.

First, tighten all screws only loosely. After mounting all parts, the screws should be tightened to the torque specified. This guarantees, that the product is mounted without tension.

Observe the tightening torques of the motorcycle manufacturer!
Control all screw connections after the assembling for tightness!

Kit


- | | | |
|---|-----------|---------------------------|
| 2 | 700007063 | C-Bow black |
| 1 | 700009007 | C-Bow adapter front left |
| 1 | 700009008 | C-Bow adapter front right |
| 1 | 700009009 | C-Bow adapter rear |
| 1 | 700009010 | Screw kit: |

- 2x allen screw M6x45
- 8x hexagon bolt M6x18
- 4x filister head screw M8x40
- 10x washer Ø6,4
- 2x self-lock nut M6
- 4x alu spacer Ø18xØ9x5mm


Tools required

- Allen key 4+5
- Wrench 10


combinable with Sportrack 6704545

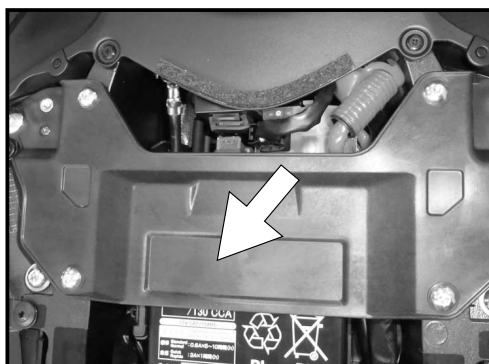

Preparing:
Dismantle seat and passenger seat.
Dismantle plastic cover under the seat - see picture.

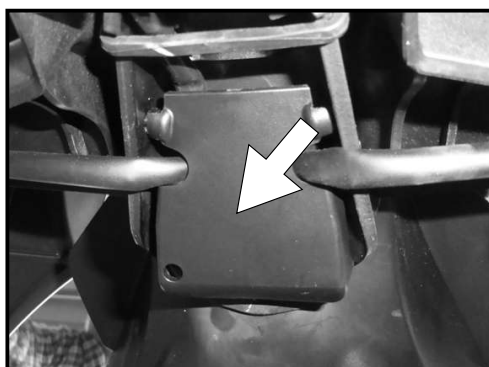

Preparing:
Dismantle plastic cover under the fender - it is obsolete.

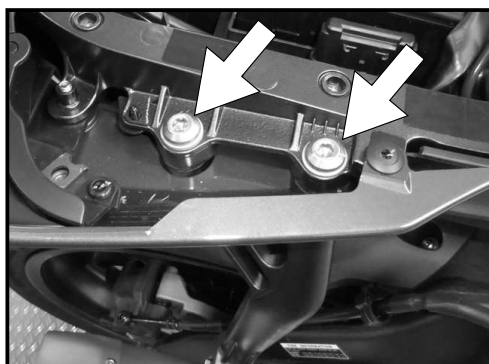

Preparing:
Dismantle screws of the passengers footrests left and right.
Original screws are obsolete.


1 Fastening of the front C-Bow holders
left and right:

Mount the filister head screws M8x40 in the free holes of the screws of the passenger footrest from above together with the original washers.

Fix the front holders left and right at the projecting threads of the filister head screws together with the footrest.



Add alu spacer $\text{Ø}18 \times \text{Ø}9 \times 5 \text{mm}$ between frame and C-Bow holder.

Mount plastic cover again.

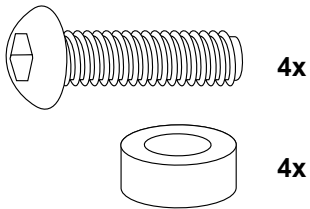

2 Fastening of the rear C-Bow holder:

Change original screws (see picture) with the included allen screws M6x45.

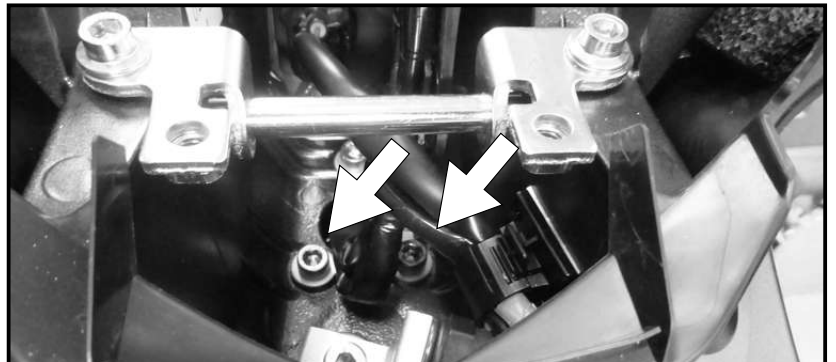

3 Fastening of the rear C-Bow holder:
at the projecting threads of the allen screws with washers $\text{Ø}6,4$ and self lock nuts M6.




Fastening of the C-Bow:

with hexagon bolts M6 x 18 and washers $\varnothing 6,4$ to the adapters.

After mounting all parts, the screws should be tightened to the torque specified.

Mount plastic cover under drivers seat again. Mount seats.

4



8x

8x



Also available:

Sportrack

For item-numbers see our catalog or on our website.
More accessories are in progress.



Hepco & Becker GmbH
An der Steinmauer 6
D-66955 Pirmasens
Tel.: 0049 6331 - 1453 - 100
www.hepco-becker.de



Krauser GmbH
An der Steinmauer 6
D-66955 Pirmasens
Tel.: 0049 6331 - 1453 - 250
www.krauser.de