



EVOTECH®
P E R F O R M A N C E

**Triumph Street Triple
Crash Protection**


Installation Instructions





Product No: PRN013706


Kit Contents

- A** 1 x M10 x 190 Caphead
- B** 1 x M10 x 160 Caphead
- C** 1 x Short Spacer
- D** 1 x Long Spacer
- E** 2 x Bobbin Head
- F** 2 x M10 Washer
- G** 2 x Polyurathane Washer

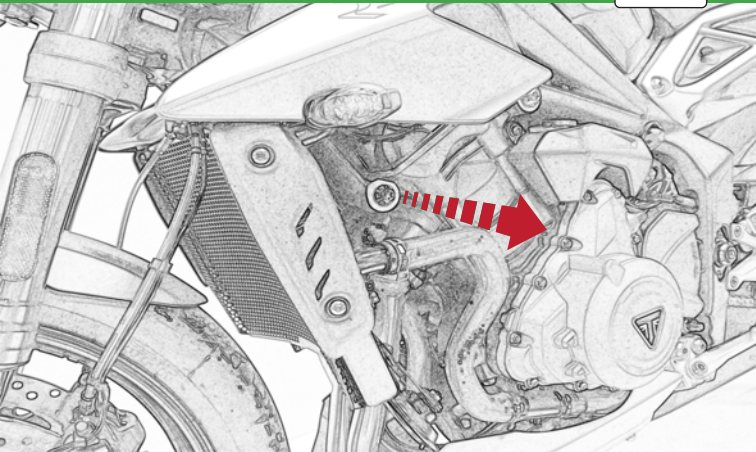

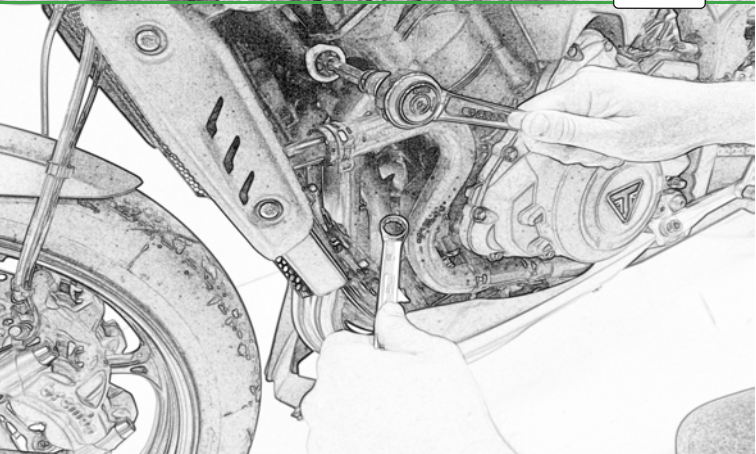

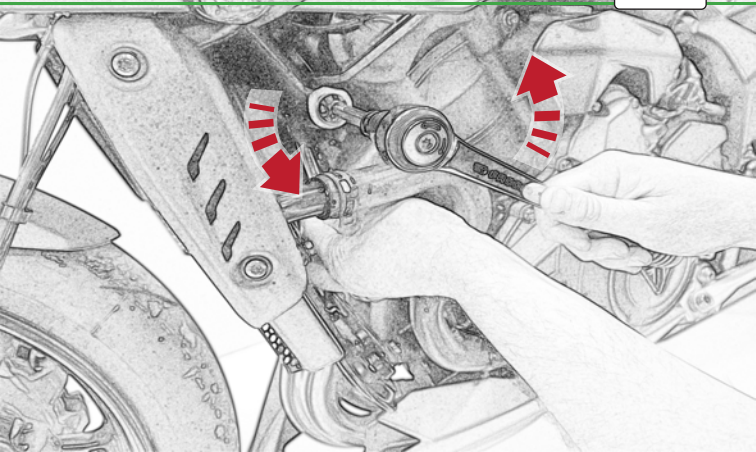

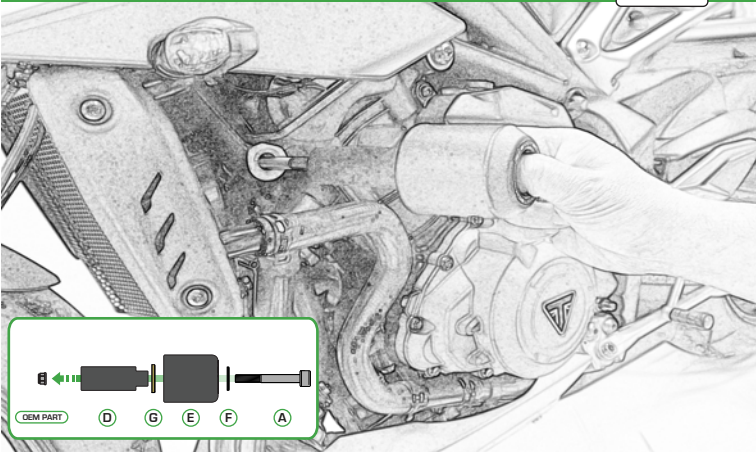

DEM PART


D

G

E


F

A

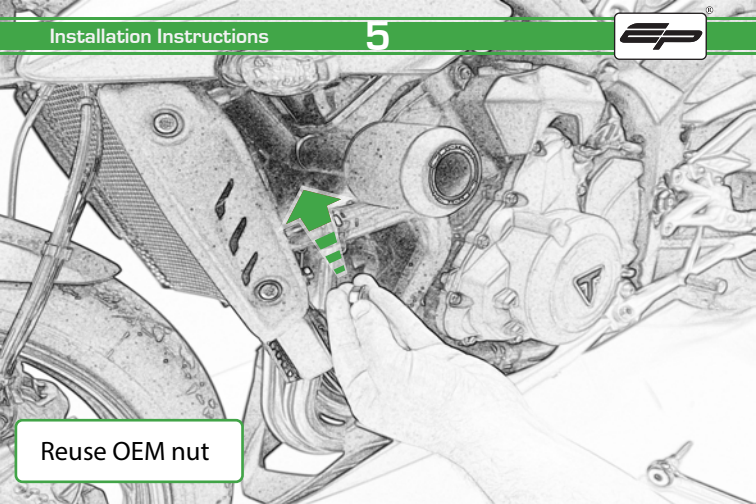



Reuse OEM nut



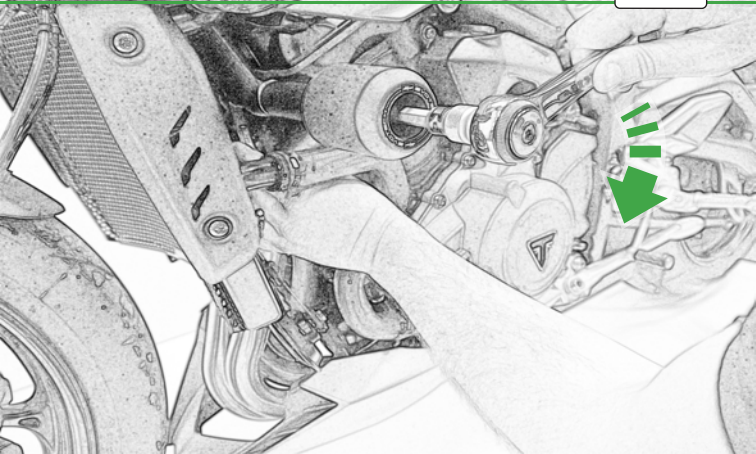



Repeat stages
1 - 7 for the right
hand side

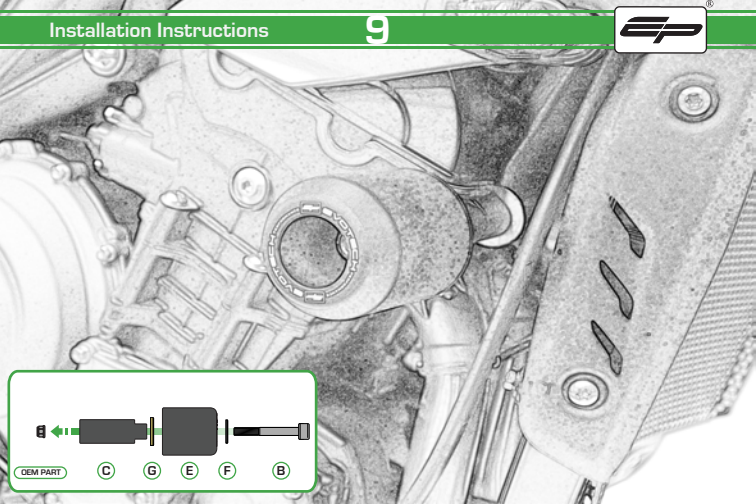

DEM PART

C

G

E

F

B



ESSENTIAL CHECKS



It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced