

Kit Contents

A 1 x Main Bracket

B 1 x Number Plate Bracket

© 1 x Light Spacer

D 1 x Number Plate Light

E 1 x Reflector Kit


🖲 1 x Rear Light Connector

© 2 x M5 x 12 Countersunk Screws

(H) 2 x Side Mounting Brackets






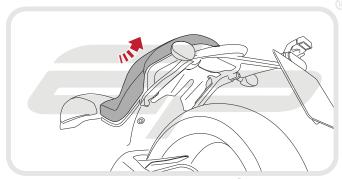








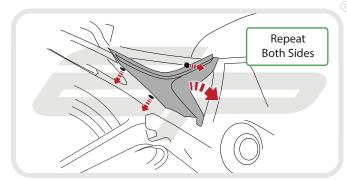








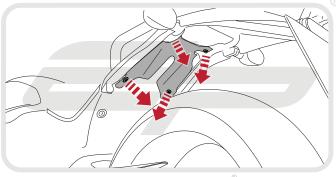








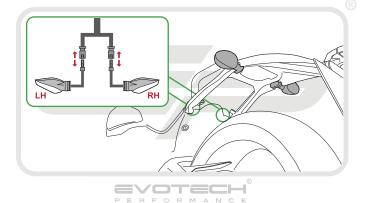






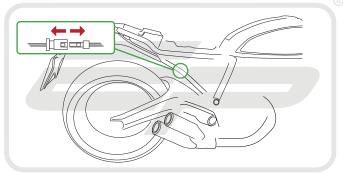








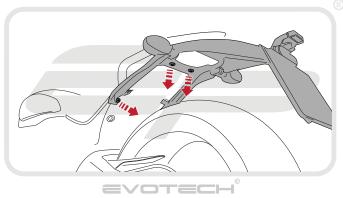


PERFORMANCE



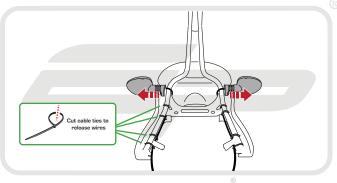




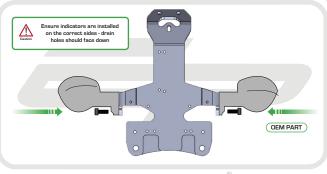








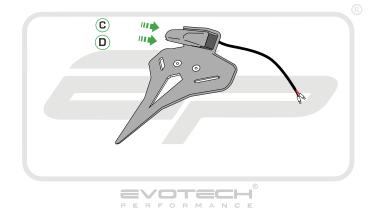






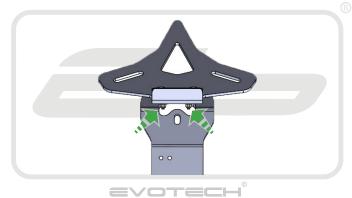

PERFORMANCE






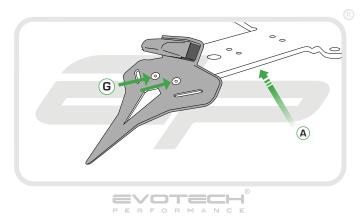






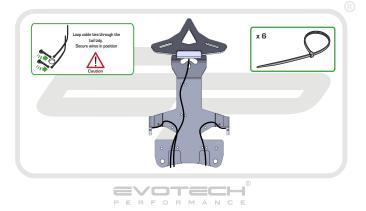






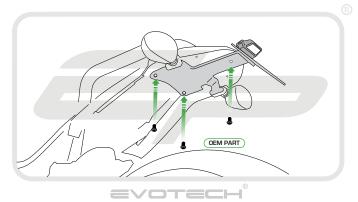

PERFORMANCE






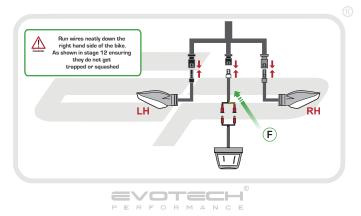






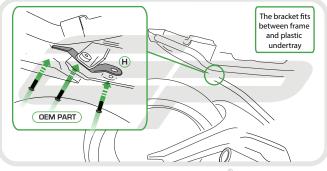




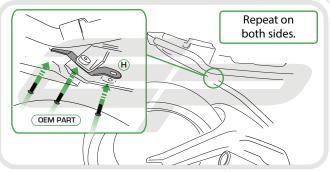


16



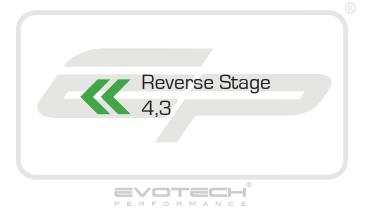


Reflector Bracket Installation



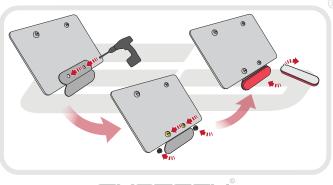



Number Plate Adapter Installation Instructions

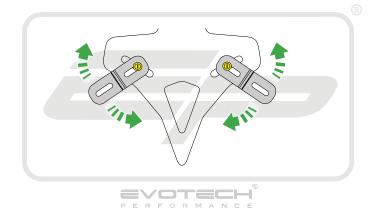



www.evotech-performance.com





After installation of your tail tidy ensure that the licence plate does not contact the rear tyre when suspension is fully compressed. Ensure all electrics including indicators, tail light, brake light and licence plate light lights are working correctly before riding the motorcycle. It is recommended that periodic inspections are made to ensure that all fixings are fully tightend.

