

## Husqvarna Vitpilen Tail Tidy

**Installation Instructions** 


## Installation Instructions




## Kit Contents PRN014052

- 1 x Reflector Kit
- B 1 x Rubber CapC 1 x Grommet
- ① 1 x Chain Adjuster Block
- (E) 2 x Indicator Stem
- F 2 x Indicator Nut
- © 2 x M5 x 10 Caphead Bolts
- (H) 2 x M5 x 12 Caphead Bolts
- ① 2 x M5 x 10 C/sink Screws
- ① 2 x 4mm Dowel Pins
- (K) 4 x M8 x 20 Black Button Head Bolts



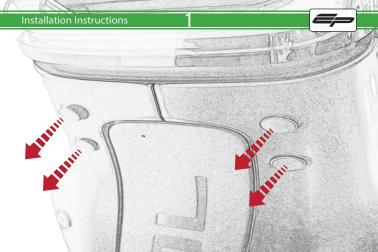




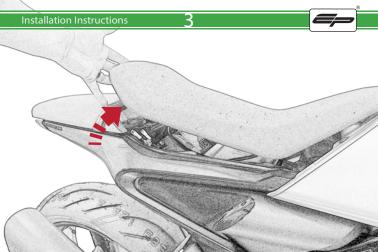











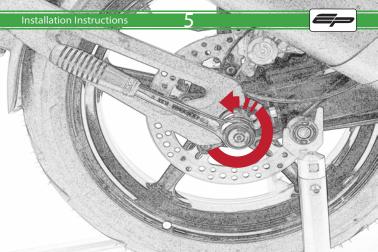


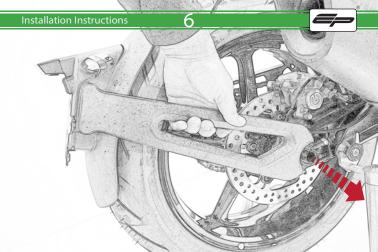


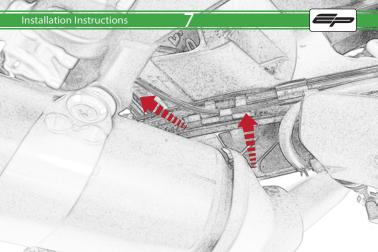


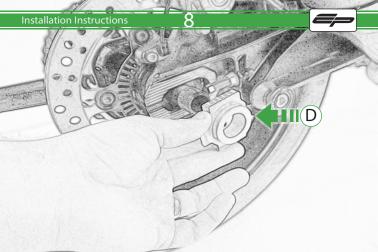


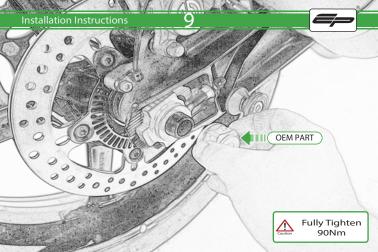


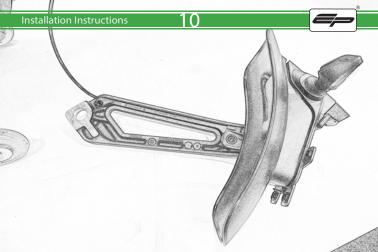


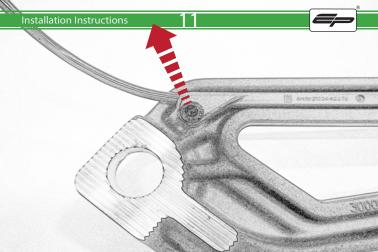


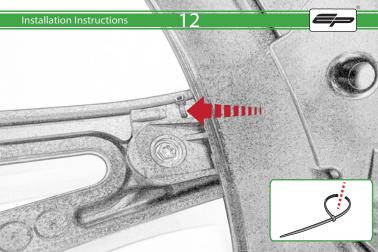


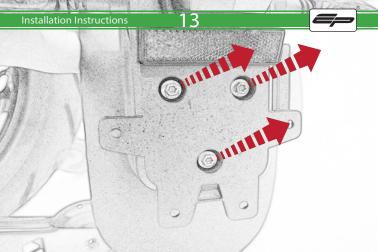


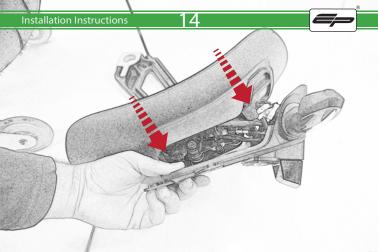

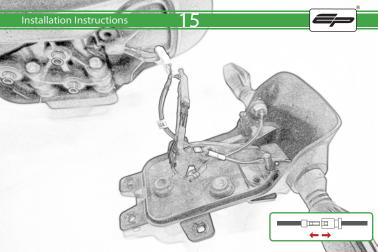

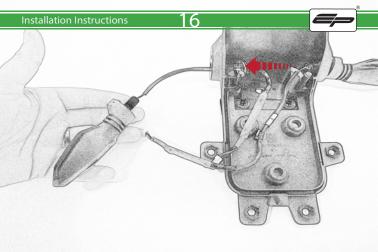

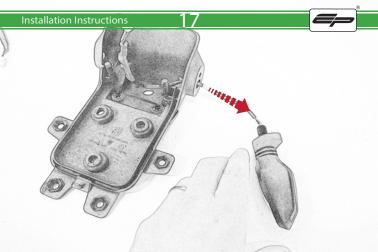


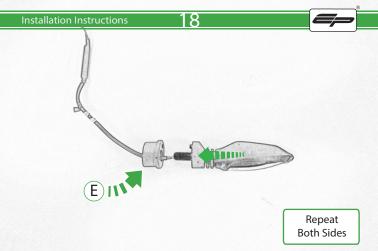

Installation Instructions


<u> 19</u>



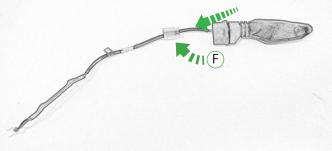



Repeat Both Sides




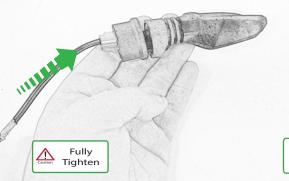


Repeat Both Sides

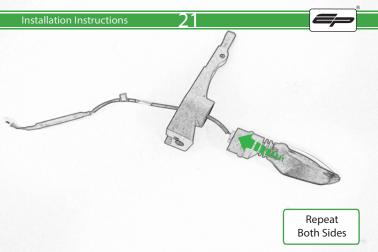


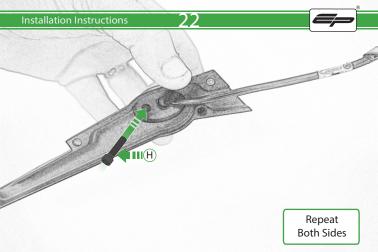

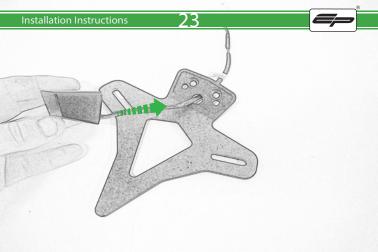

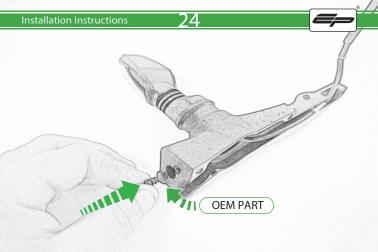




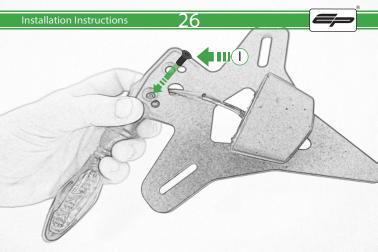








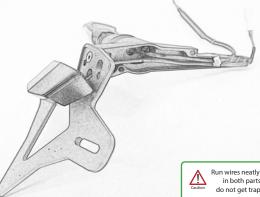



Run wires neatly down the channel in both parts ensuring they do not get trapped or squashed

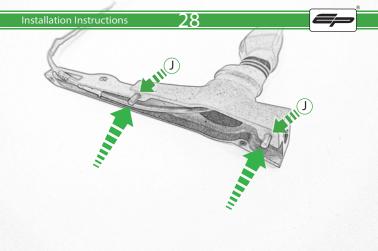


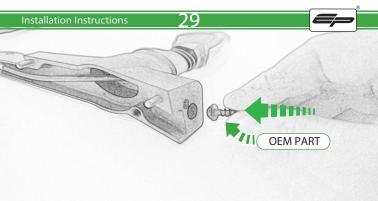


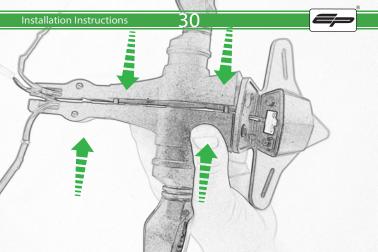


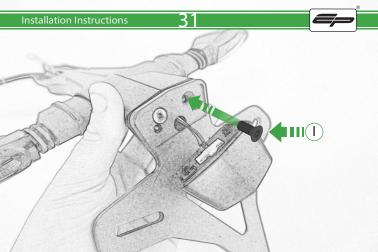


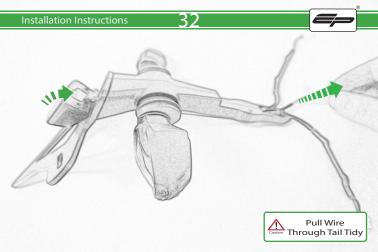


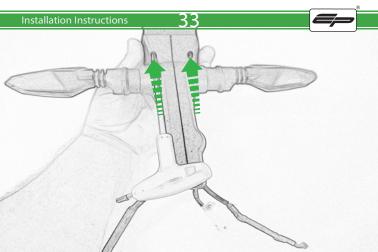


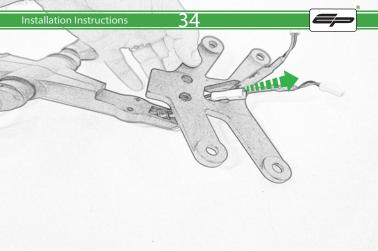


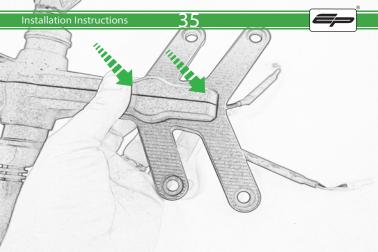


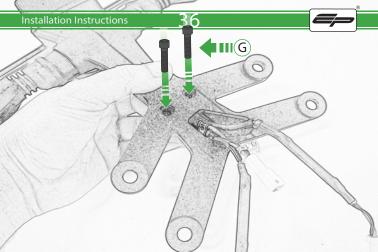


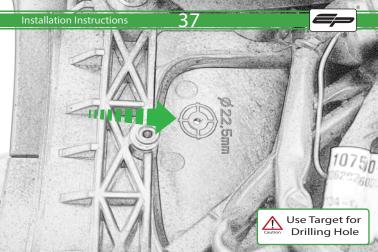


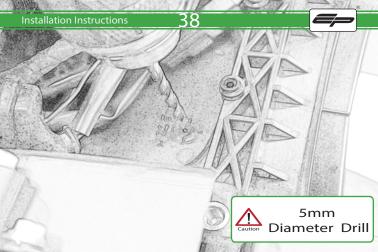


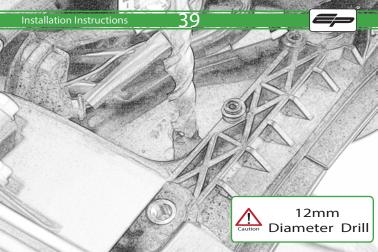


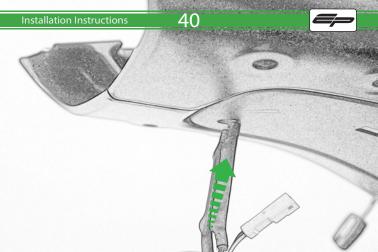


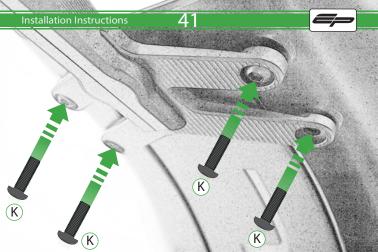

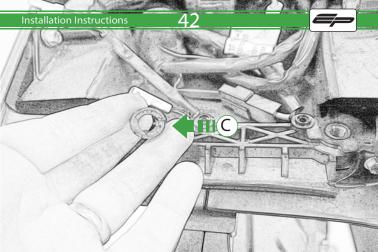

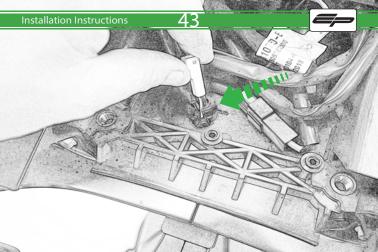

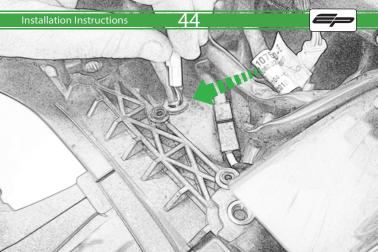

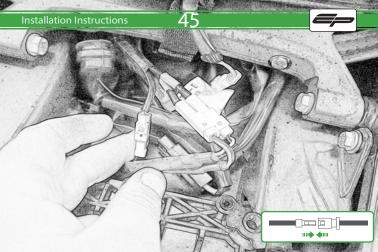




## Reverse Stages






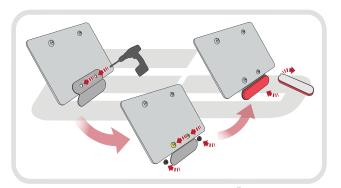



## Installation Instructions



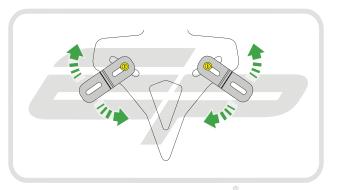







After installation of your tail tidy ensure that the licence plate does not contact the rear tyre when suspension is fully compressed.

Ensure all electrics including indicators, tail light, brake light

and licence plate light lights are working correctly before riding the motorcycle.

It is recommended that periodic inspections are made to ensure that all fixings are fully tightend.





www.evotech-performance.com