




Ducati Hypermotard 950
Tail Tidy (Single Race Exhaust)


Installation Instructions






Kit Contents PRN014518


- (A) 1 x Reflector Kit
- (B) 1 x Threaded Bars
- (C) 1 x M4 Special Washers
- (D) 2 x Nylon Spacer
- (E) 2 x M5 x 8 Silver Button Head Bolts
- (F) 2 x M4 x 10 Silver Button Head Bolts
- (G) 2 x M4 x 12 Black Button Head Bolts
- (H) 2 x M5 x 10 Countersunk Screws
- (I) 2 x Support Arm Washers
- (J) 3 x M8 x 12 Silver Button Head Bolts
- (K) 10 x M4 x 8 Black Button Head Bolts

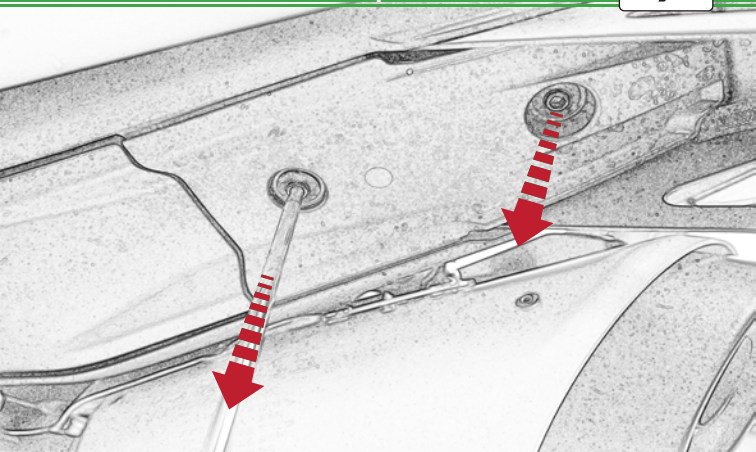


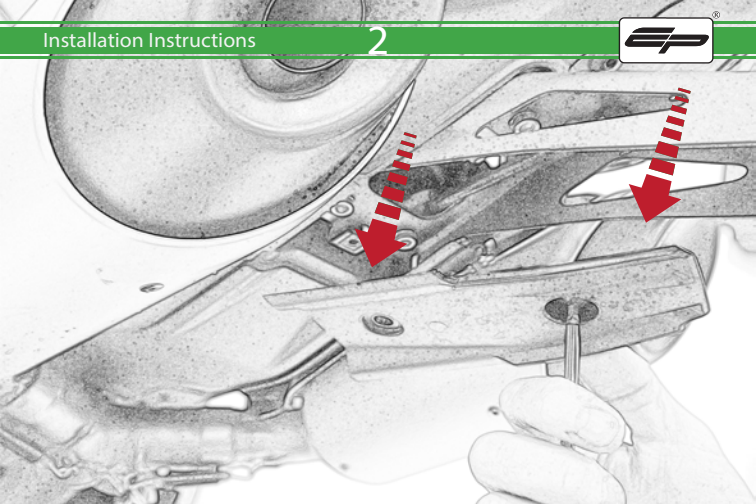


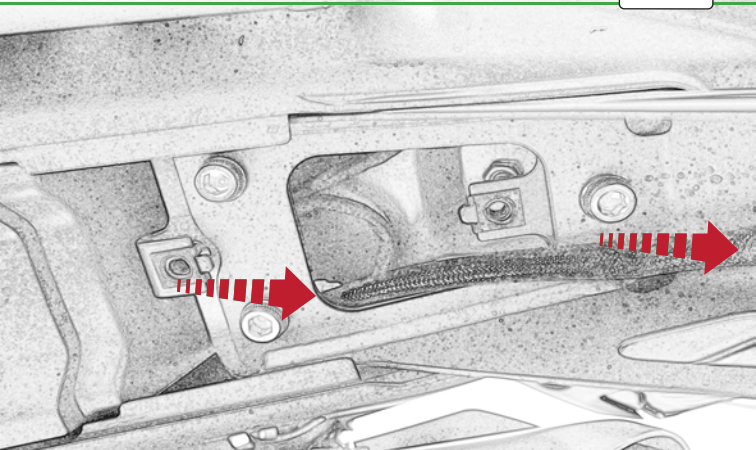


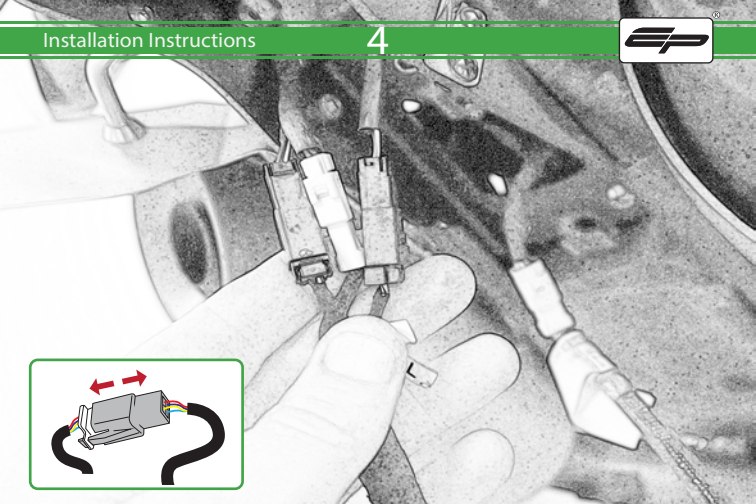
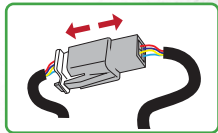



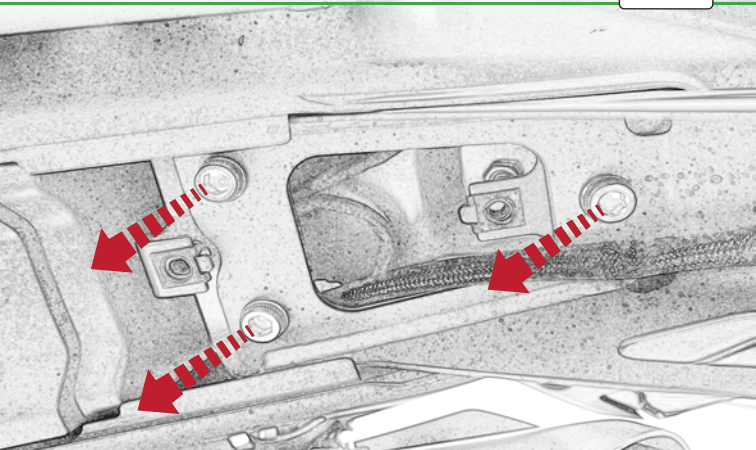



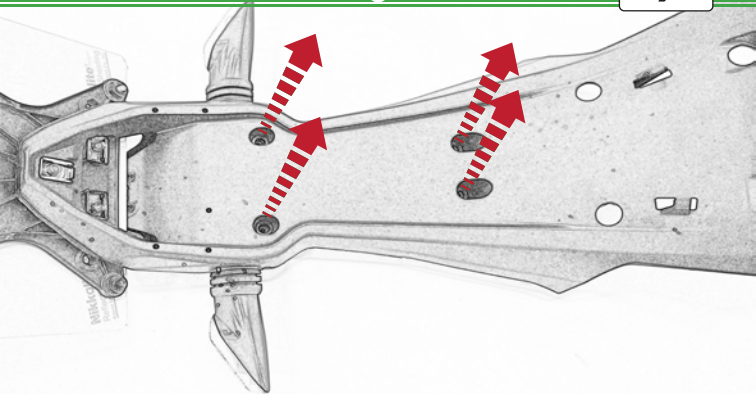


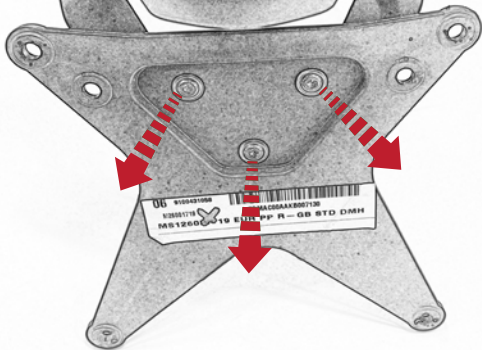



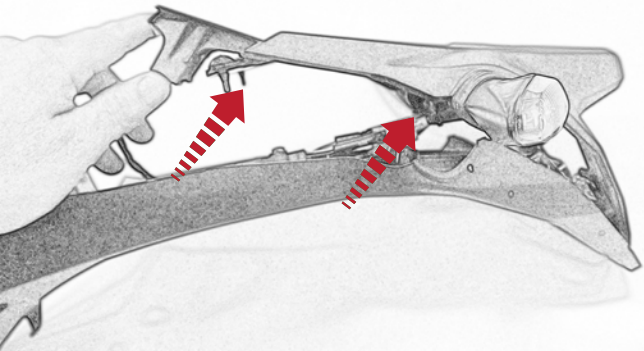


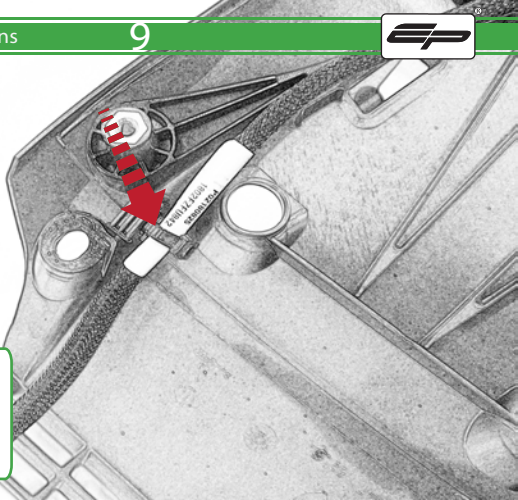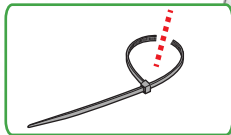


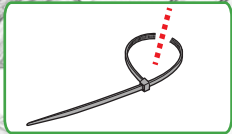
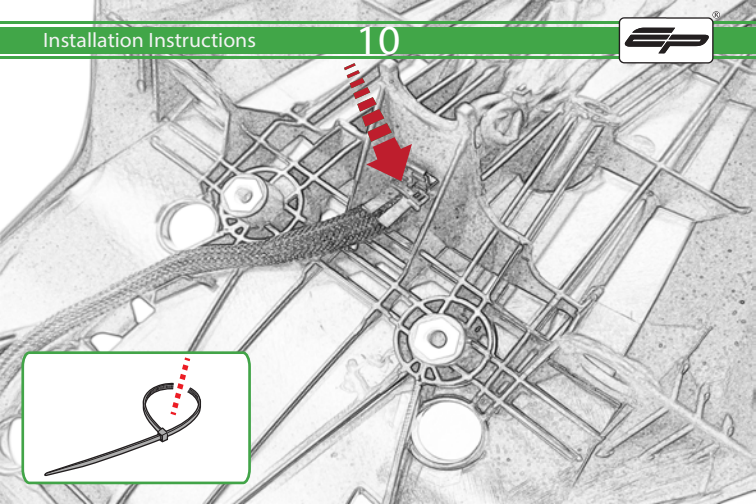


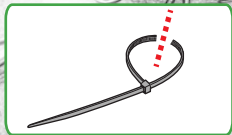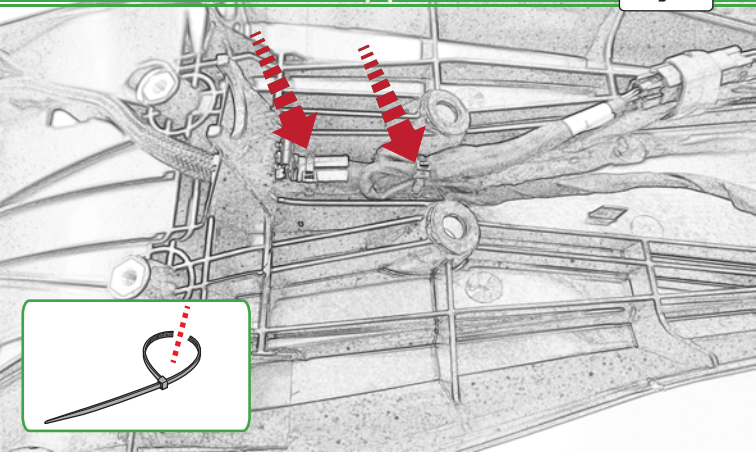


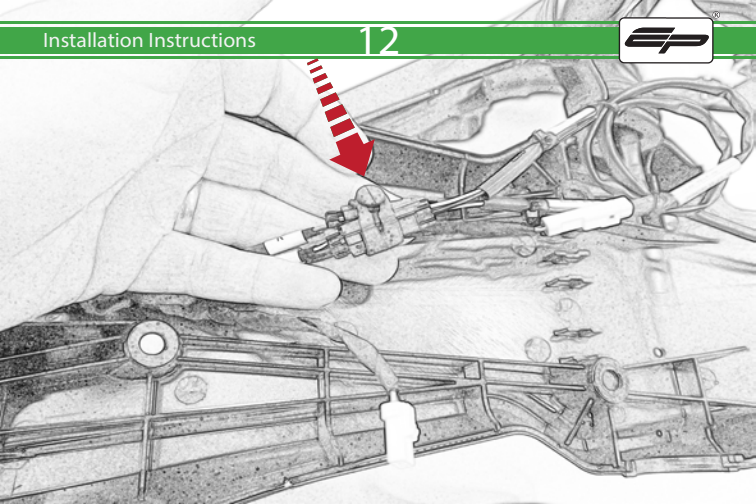

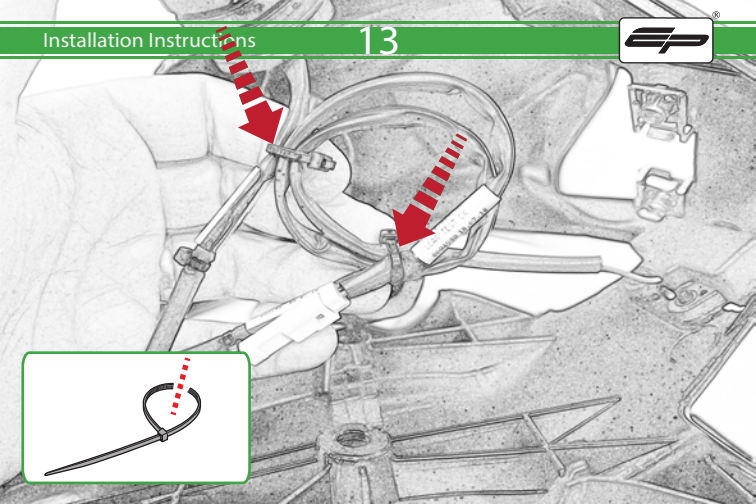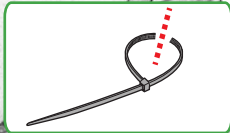


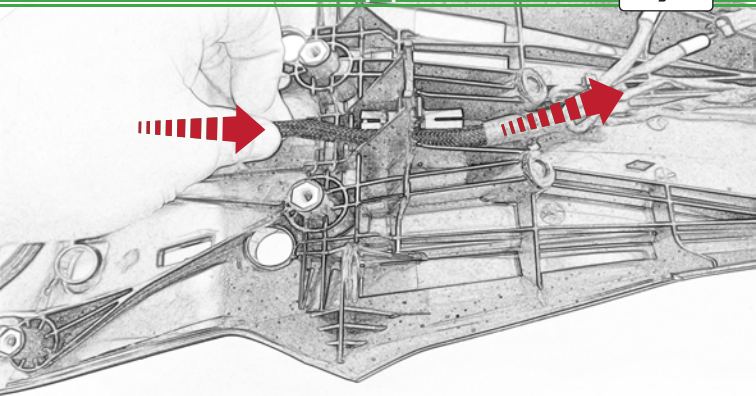


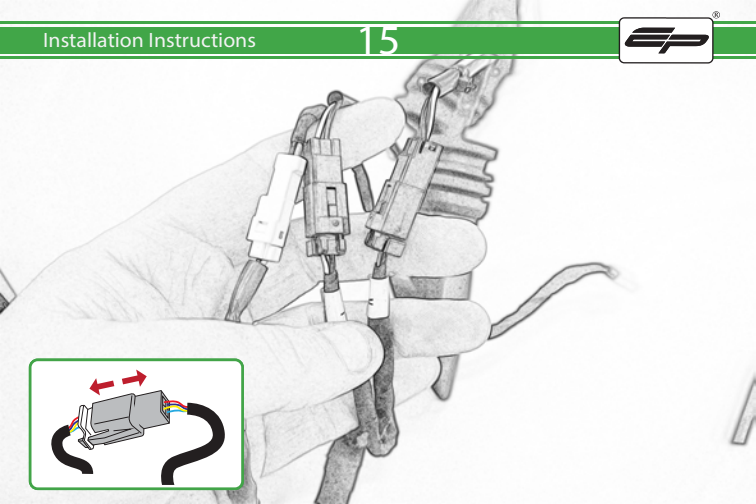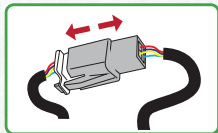


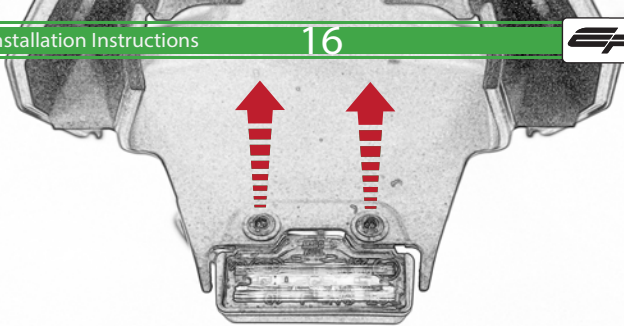




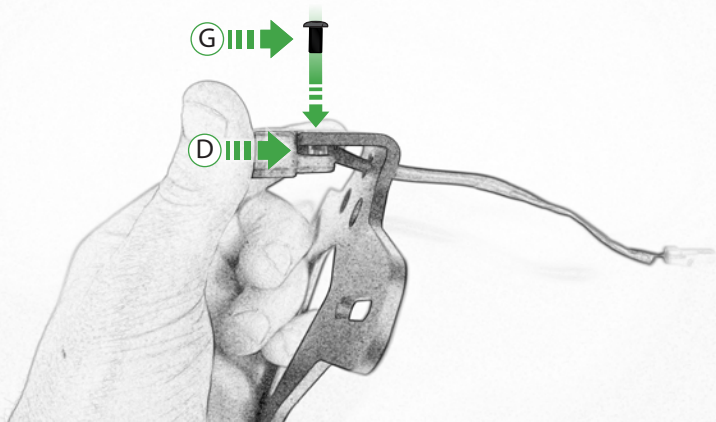


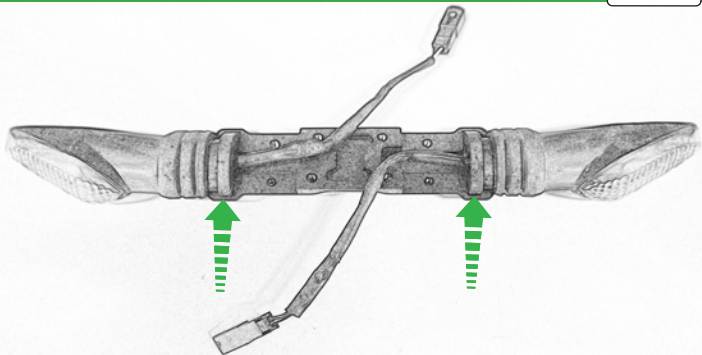


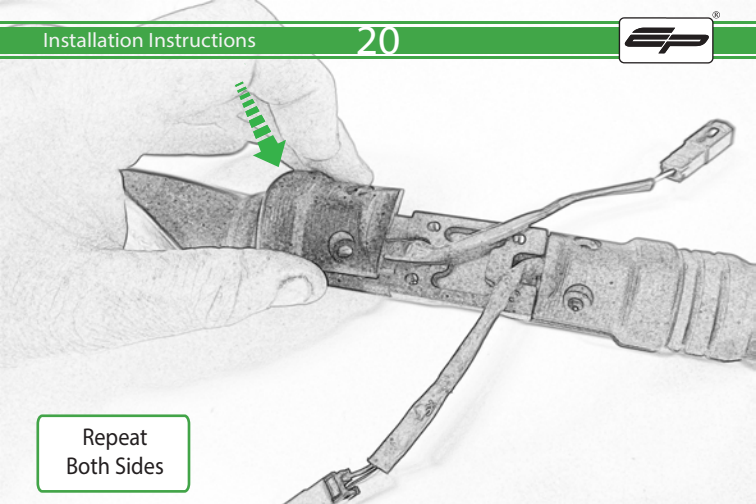



Repeat
Both Sides

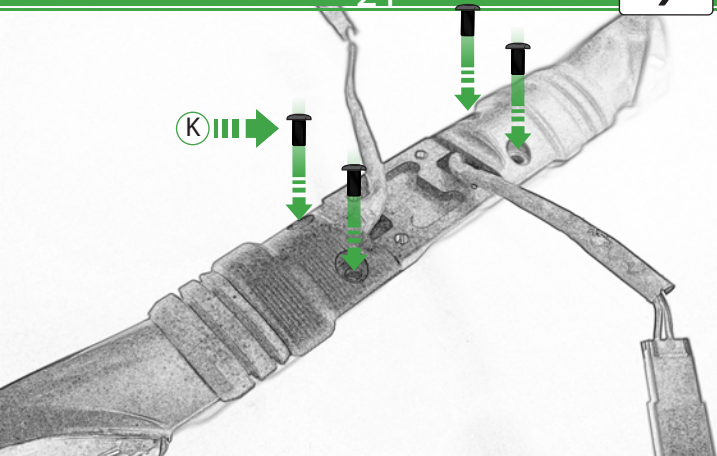


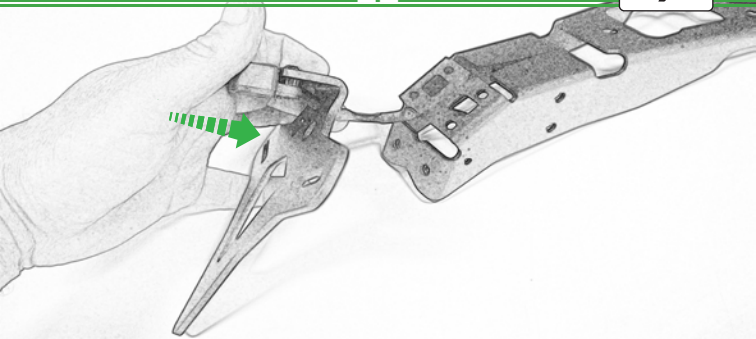

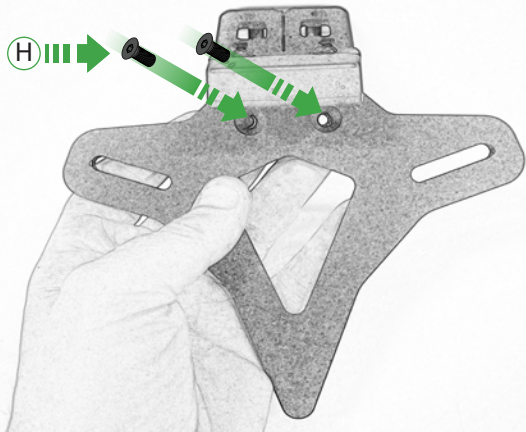


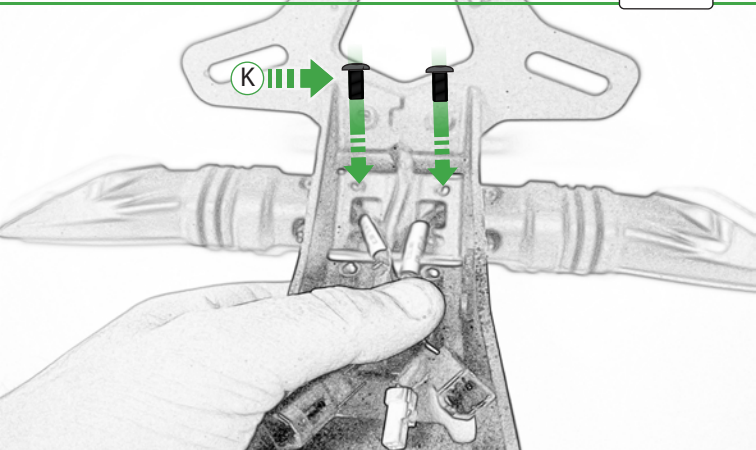


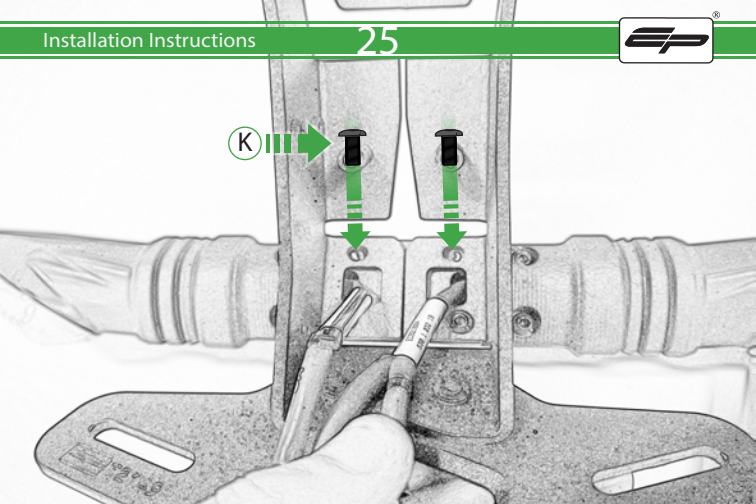

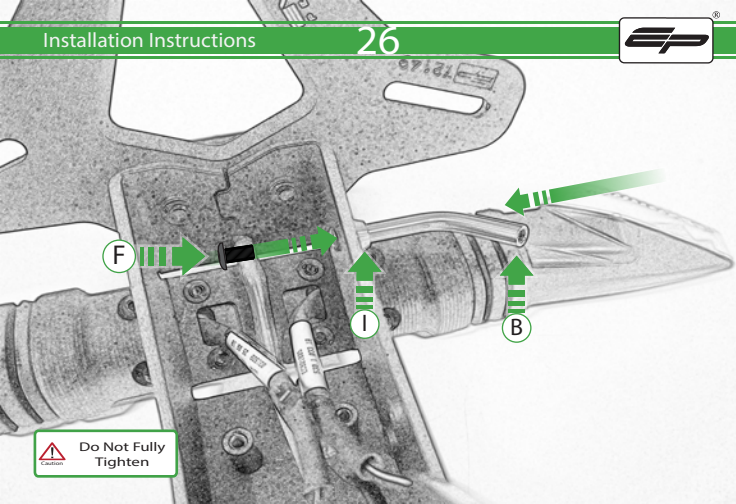

Do Not Fully
Tighten

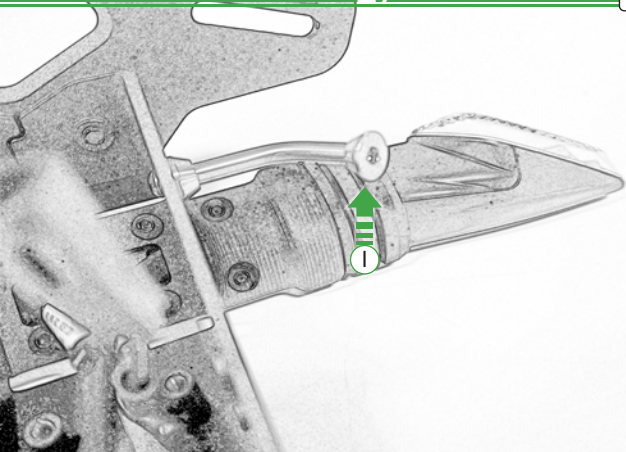


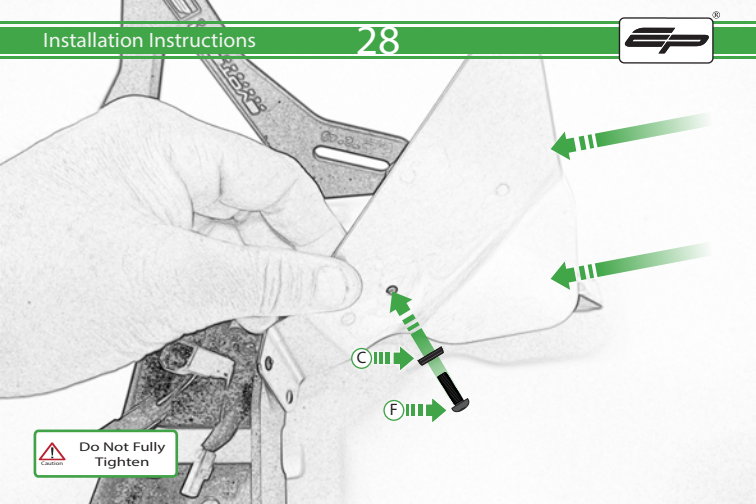


Do Not Fully Tighten


C


F

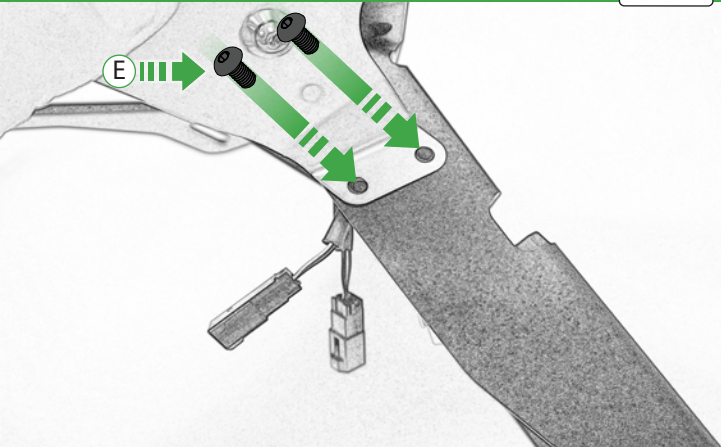



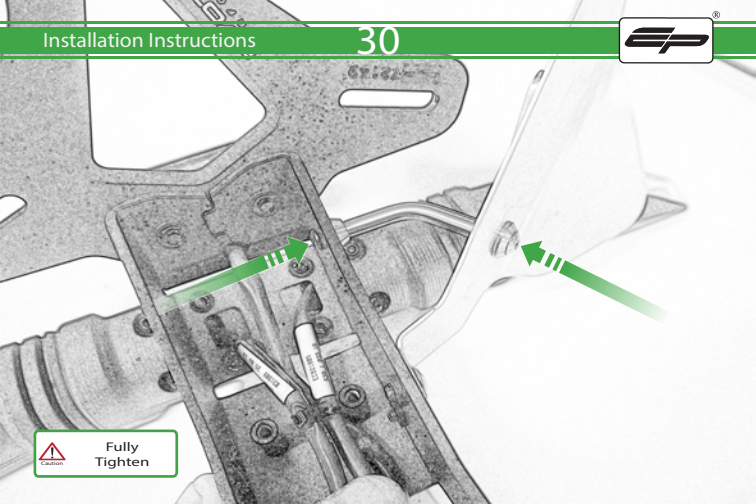


 Fully Tighten

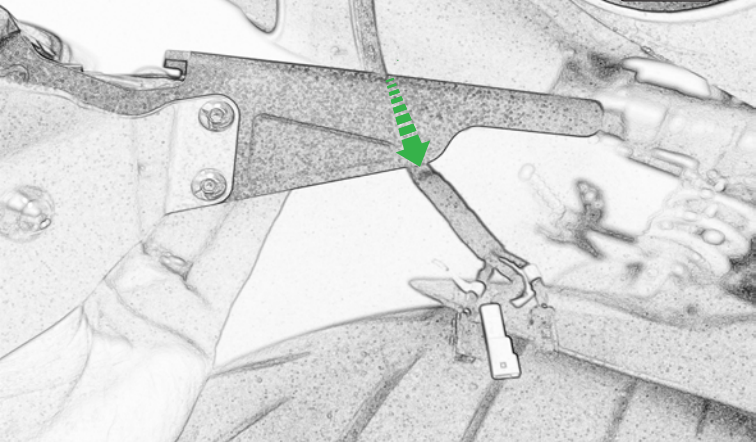

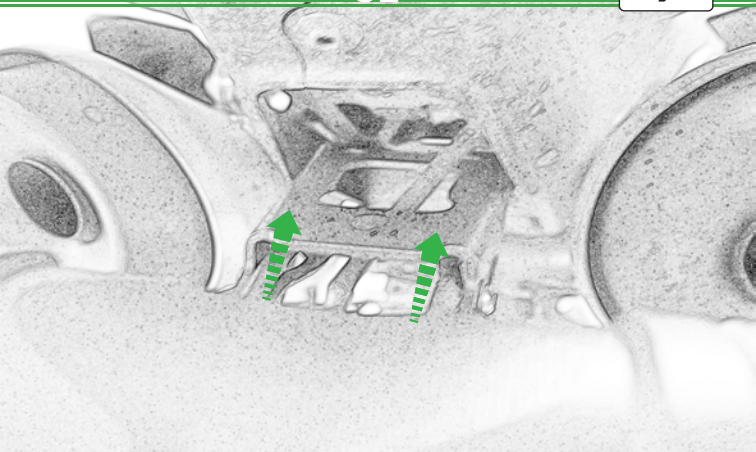

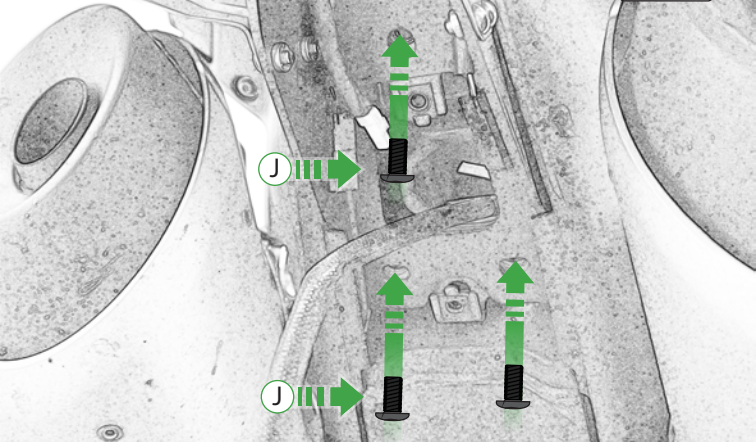


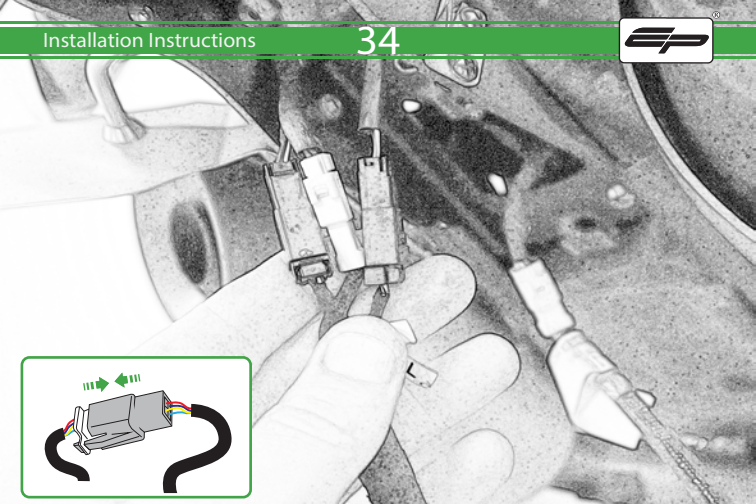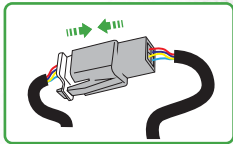



Caution

Locate loom in the tail tidy area
ensuring they do not
get trapped or squashed

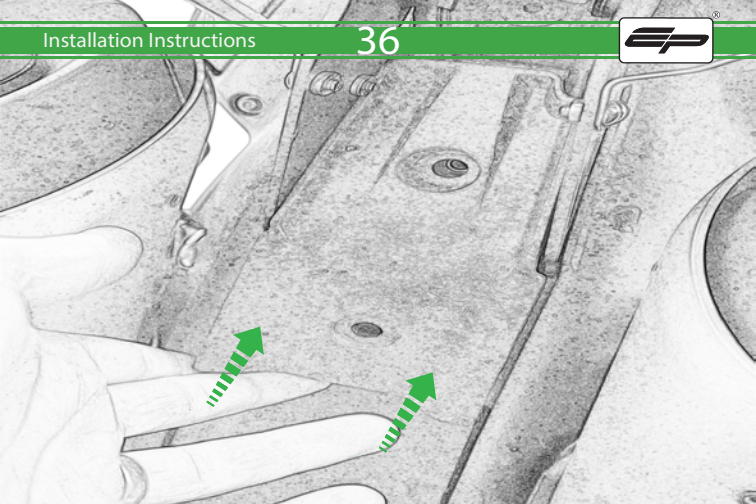




OEM PART



OEM PART




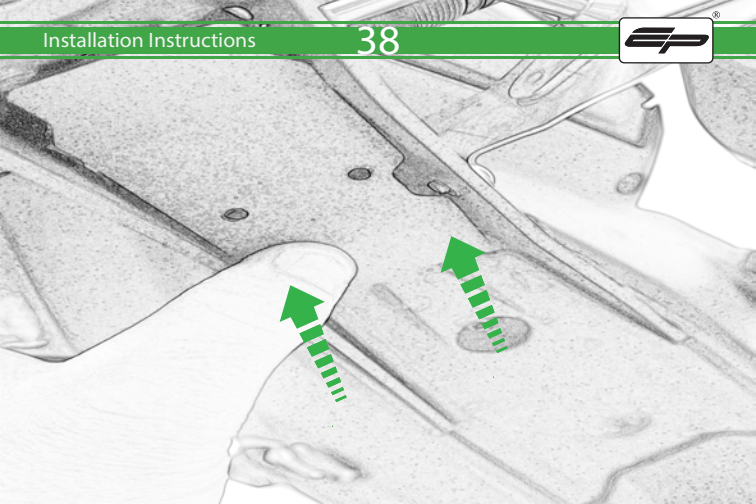




(K) →



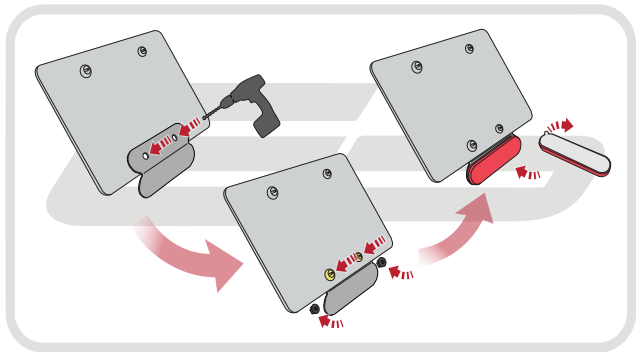

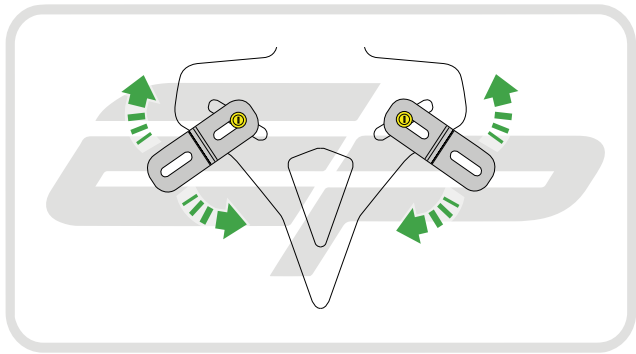



 **ESSENTIAL CHECKS** 

After installation of your tail tidy ensure that the licence plate does not contact the rear tyre when suspension is fully compressed.

Ensure all electrics including indicators, tail light, brake light and licence plate light lights are working correctly before riding the motorcycle.

It is recommended that periodic inspections are made to ensure that all fixings are fully tightend.



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com