




EVOTECH®
P E R F O R M A N C E


Ducati Diavel 1260
Tail Tidy


Installation Instructions



Kit Contents PRN014701


- | | |
|---------------------------------|----------------------------------|
| (A) 1 x Reflector Kit | (M) 1 x loom Connector |
| (B) 1 x Light Connector | (N) 2 x M6 Flange Nut |
| (C) 1 x Rear Light | (O) 2 x P-clip Number 3 |
| (D) 1 x Light Housing | (P) 2 x M4 x 6 Button Head Bolt |
| (E) 1 x Main Arm | (Q) 2 x Rubber Pads |
| (F) 1 x Number Plate Bracket | (R) 2 x M6 x 20 Button Head Bolt |
| (G) 1 x Sub Indicator Bracket | (S) 4 x M6 Washers |
| (H) 1 x Main Cover Bracket | (T) 4 x M8 x 30 Button Head Bolt |
| (I) 1 x Plastic Cover Plate L/H | (U) 4 x M6 x 25 Button Head Bolt |
| (J) 1 x Plastic Cover Plate R/H | (V) 9 x M5 x 10 Button Head Bolt |
| (K) 1 x Inner Frame Bracket R/H | |
| (L) 1 x Inner Frame Bracket L/H | |


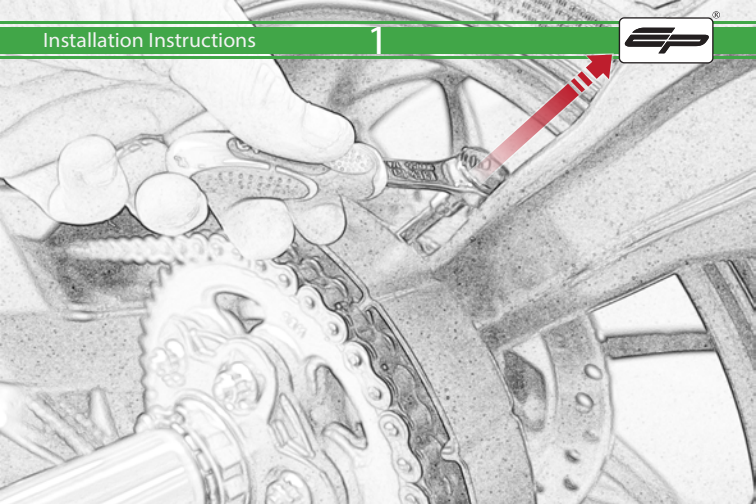


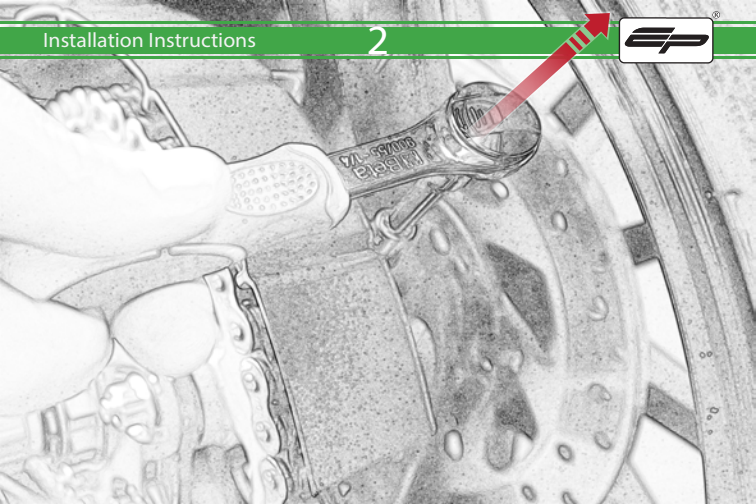


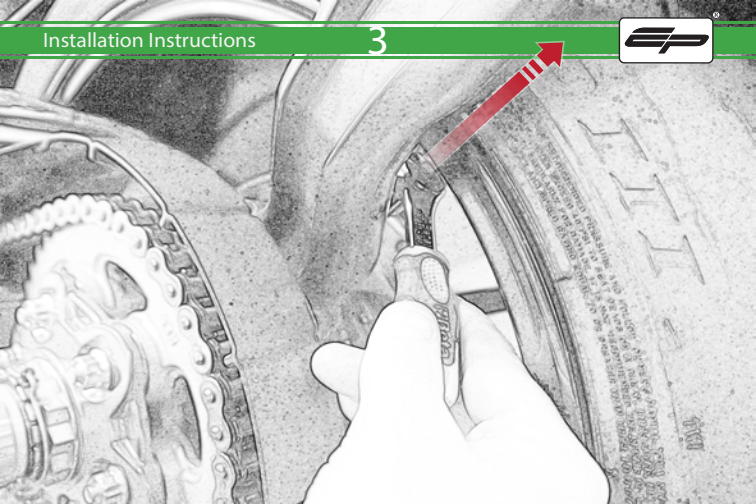


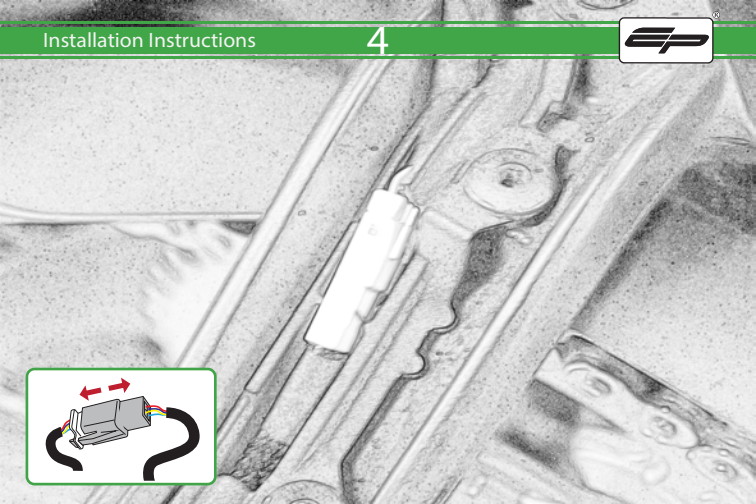


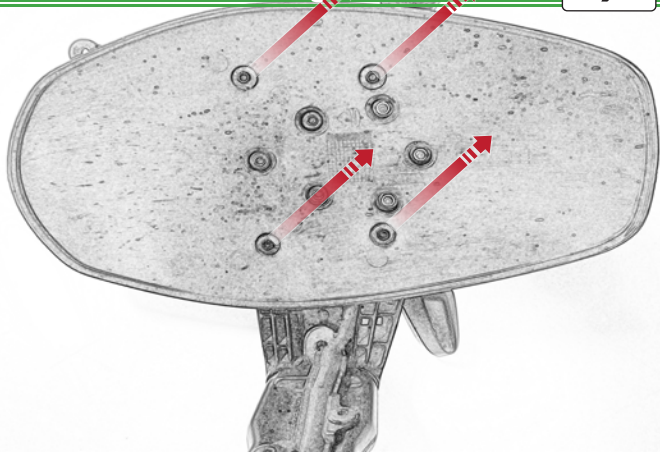


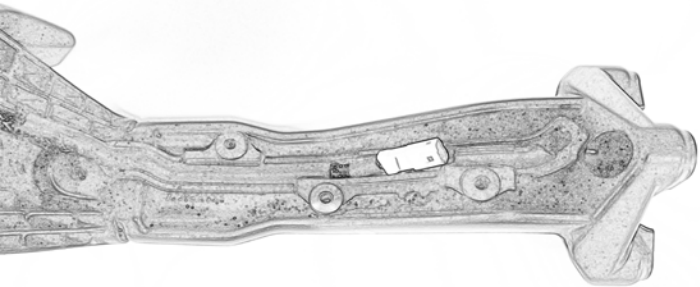



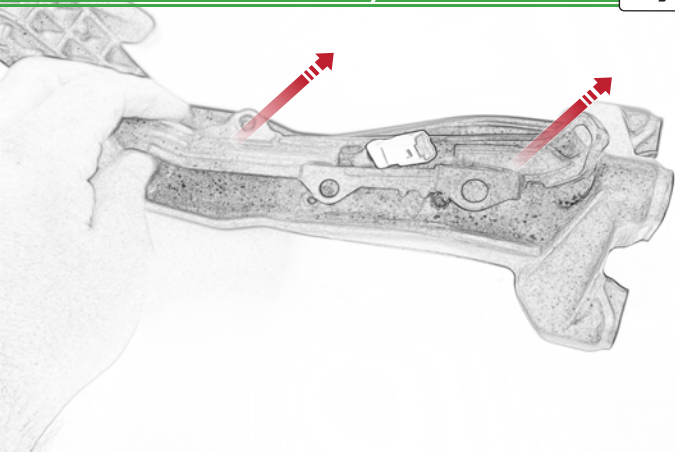


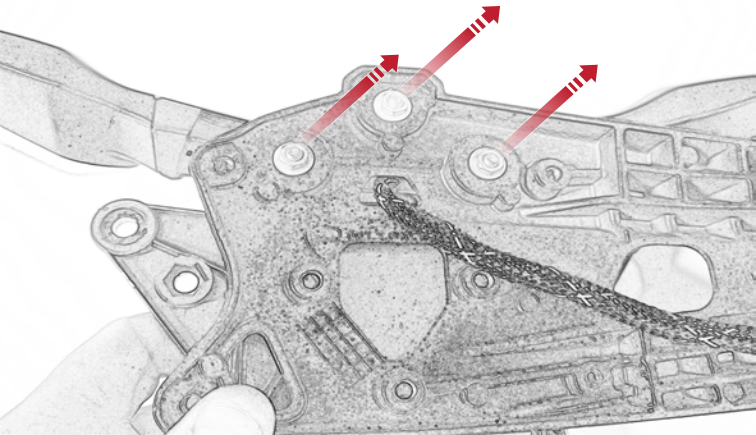


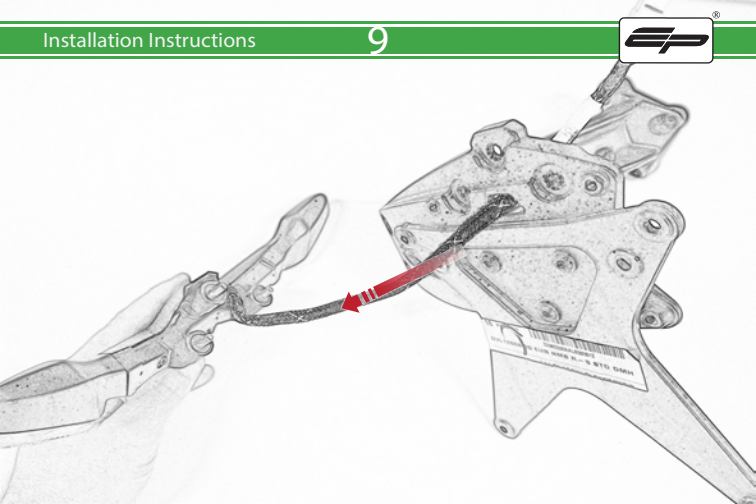


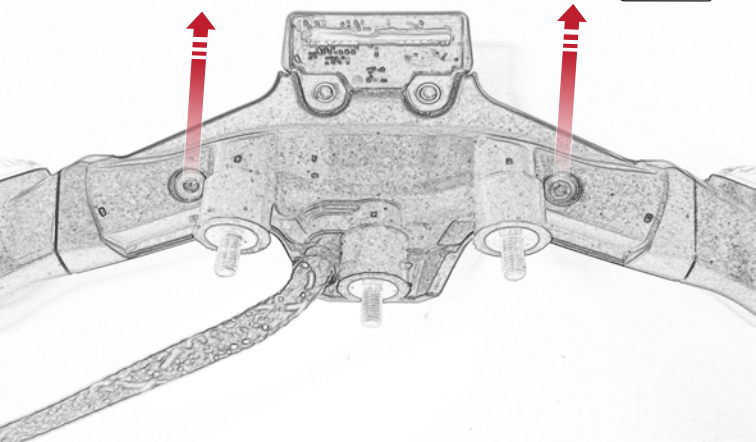


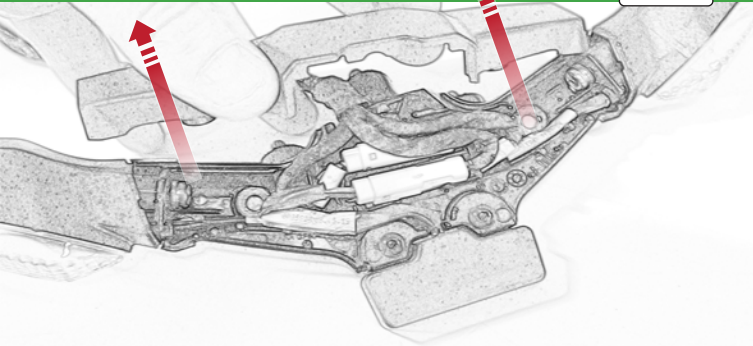


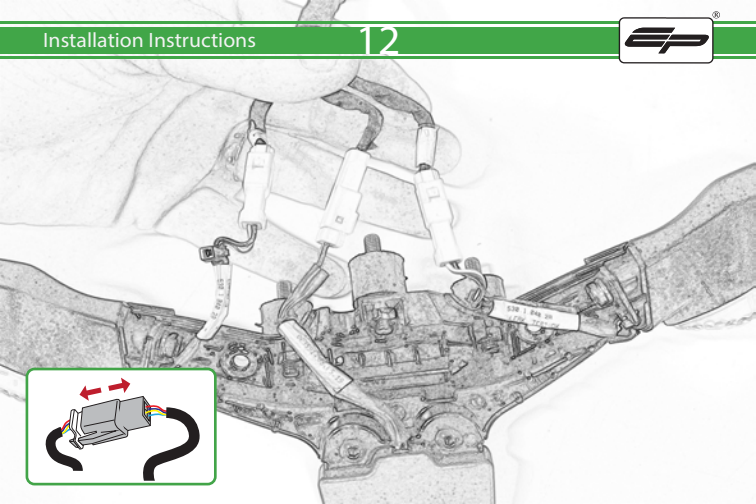

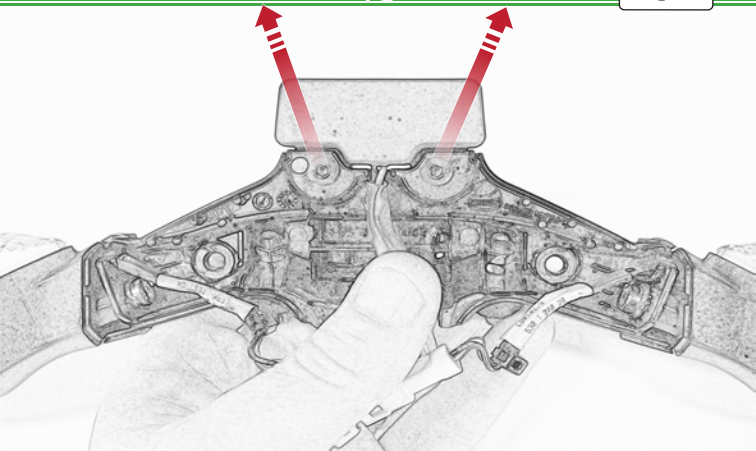


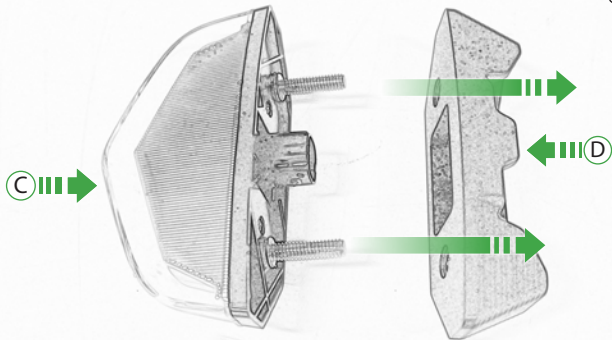


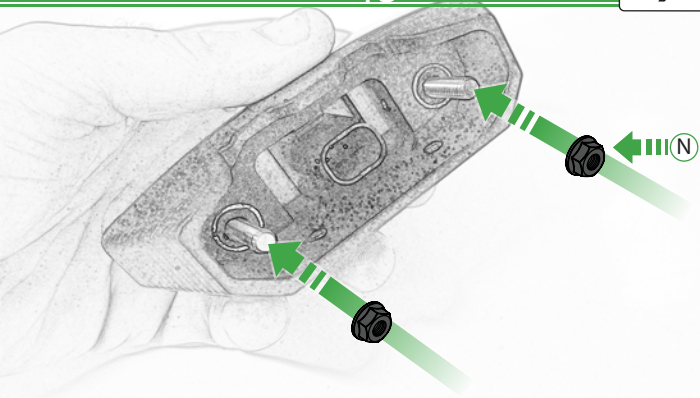


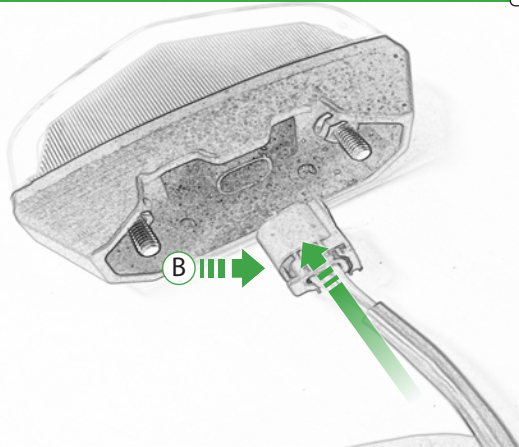





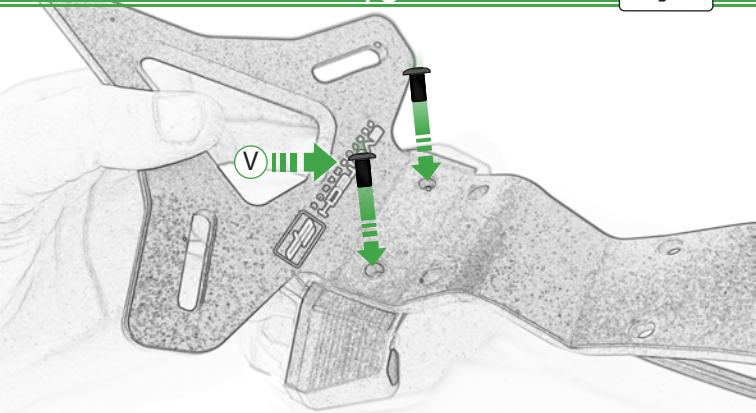


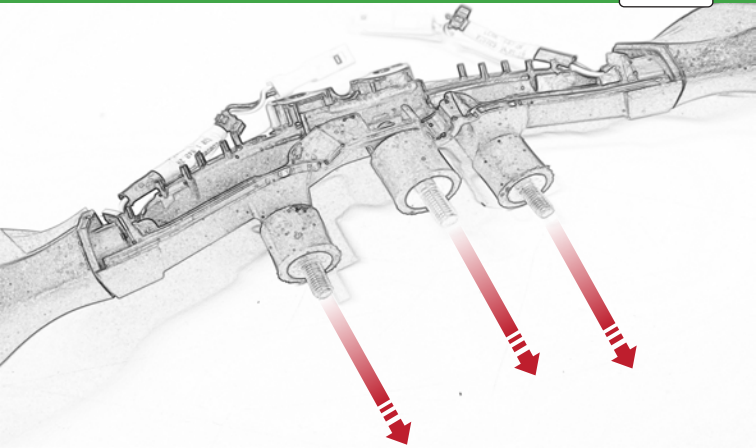



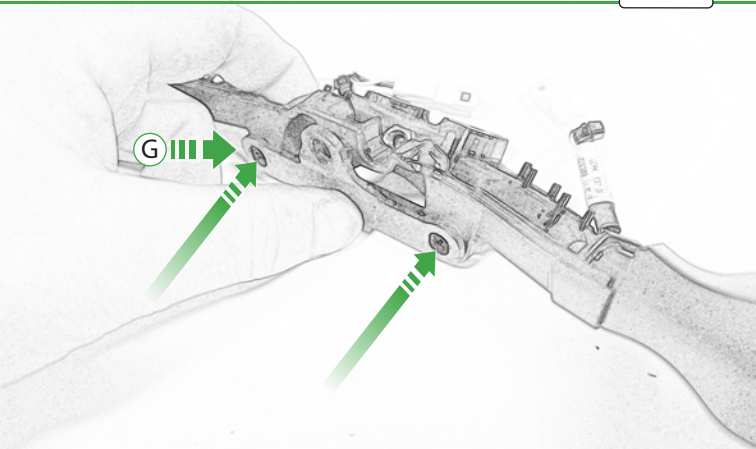


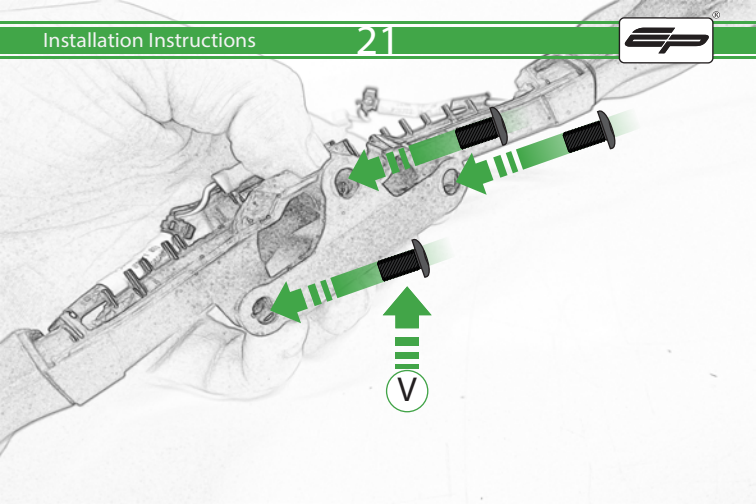


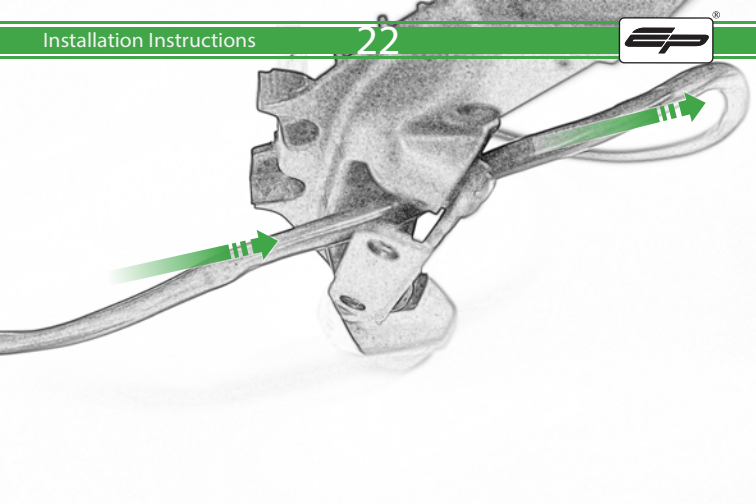

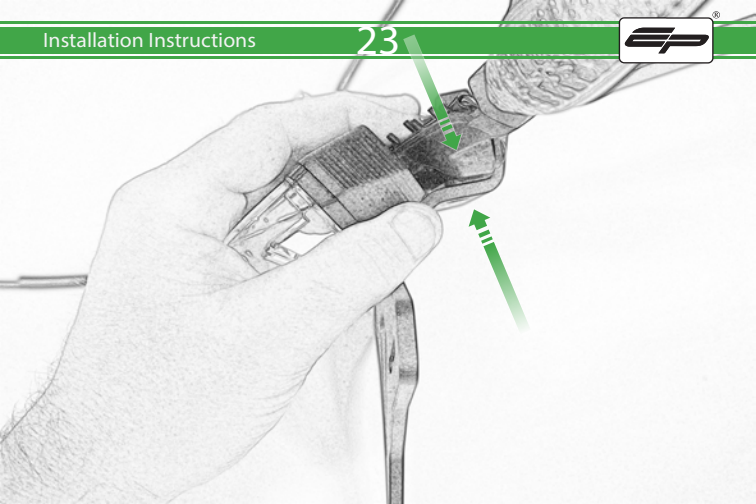

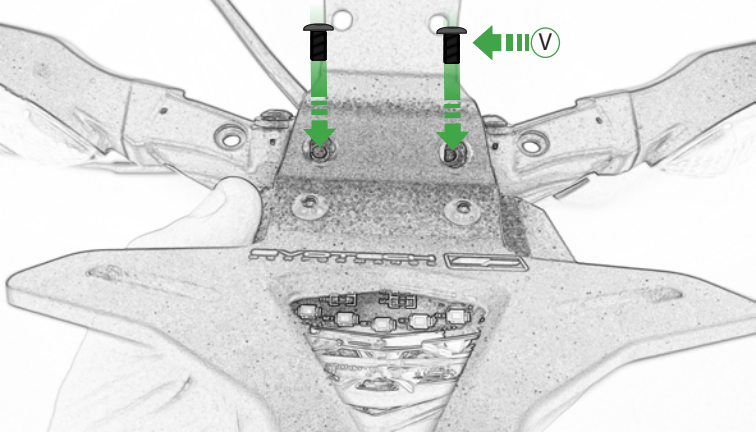


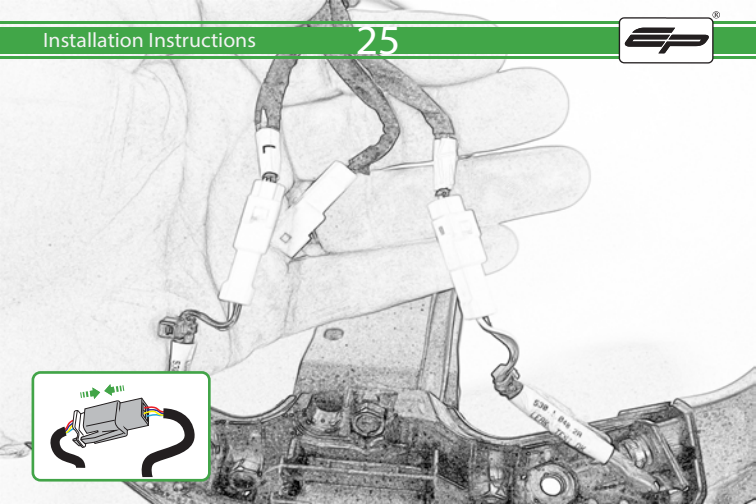

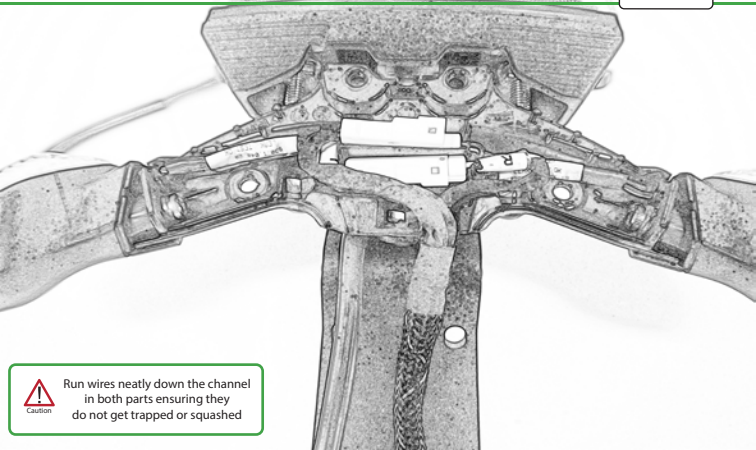



Caution


Run wires neatly down the channel in both parts ensuring they do not get trapped or squashed

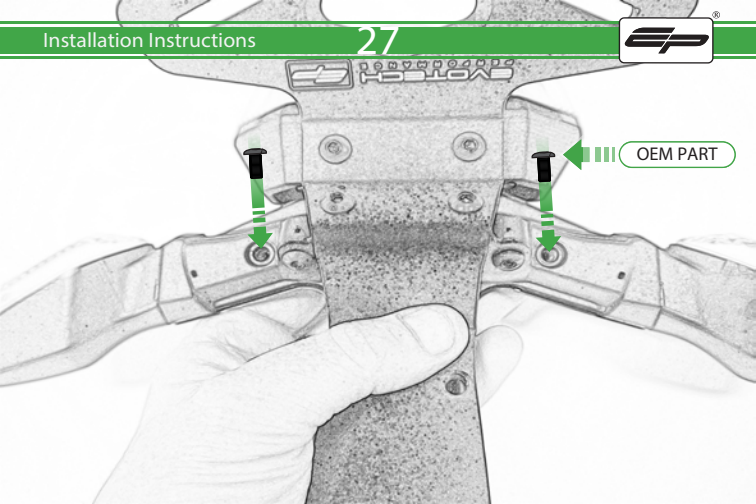



OEM PART

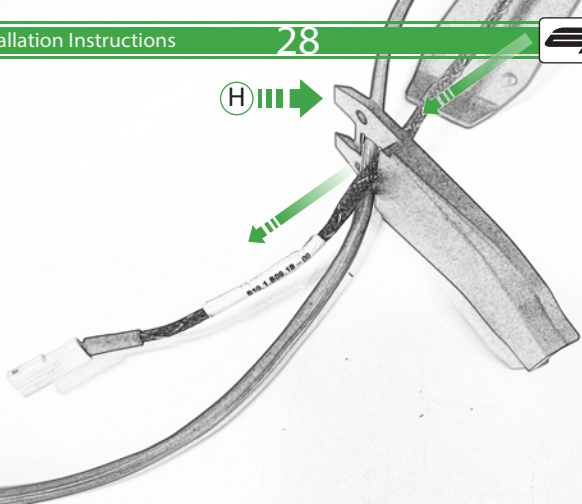


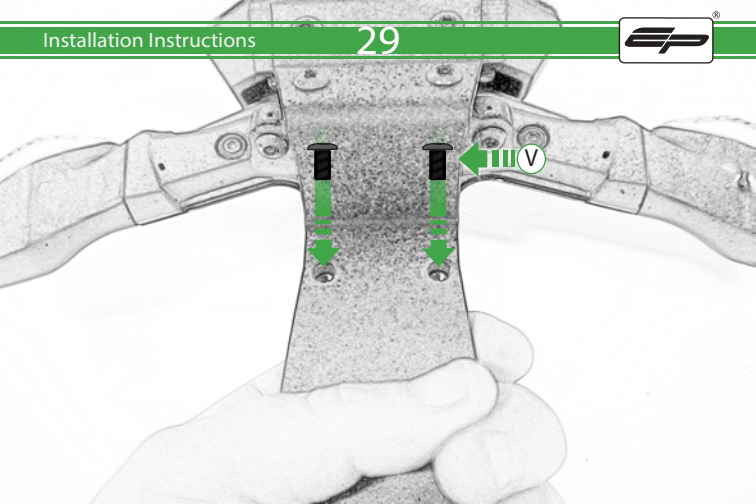


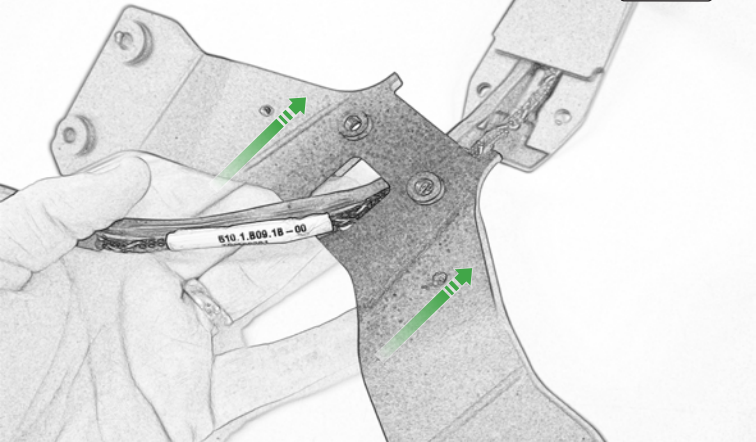

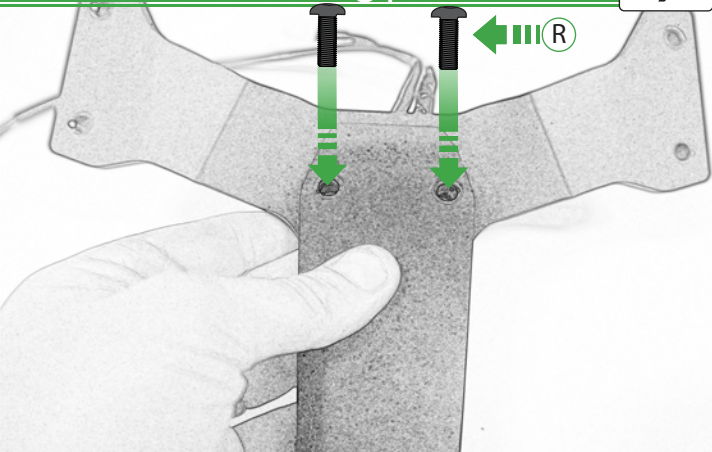


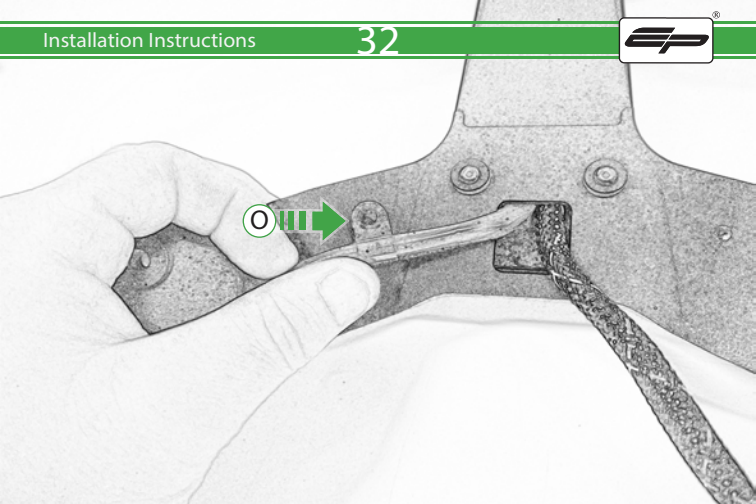


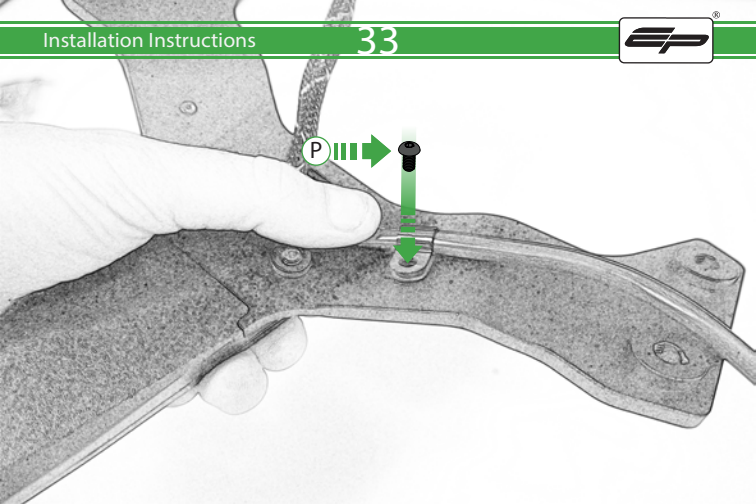



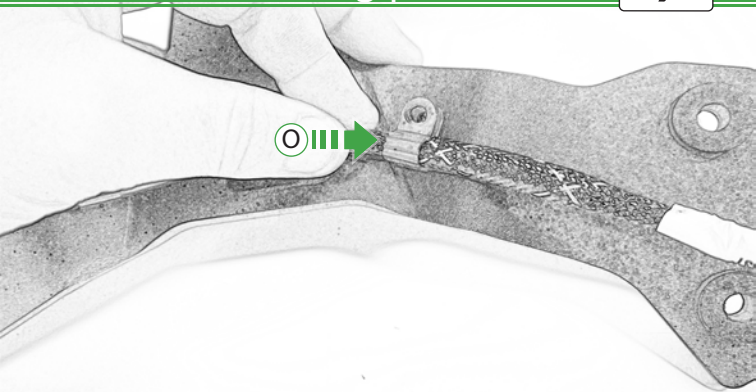


35
P III

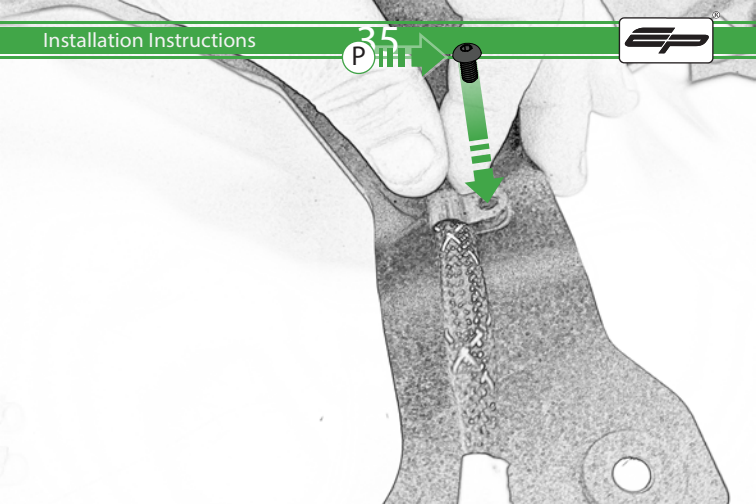


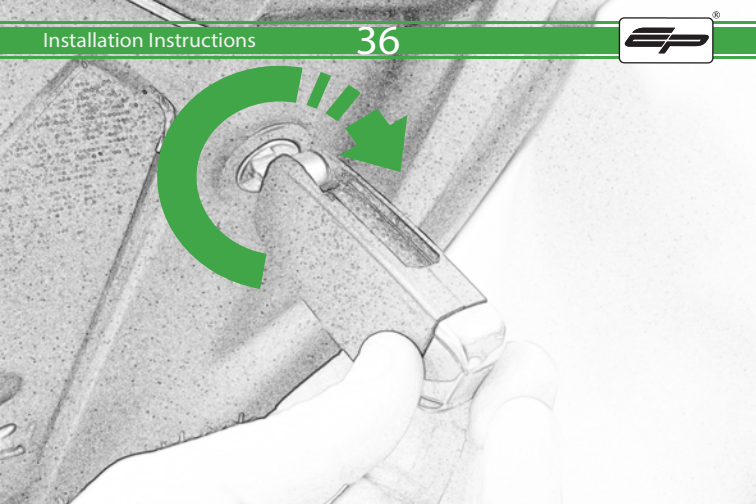

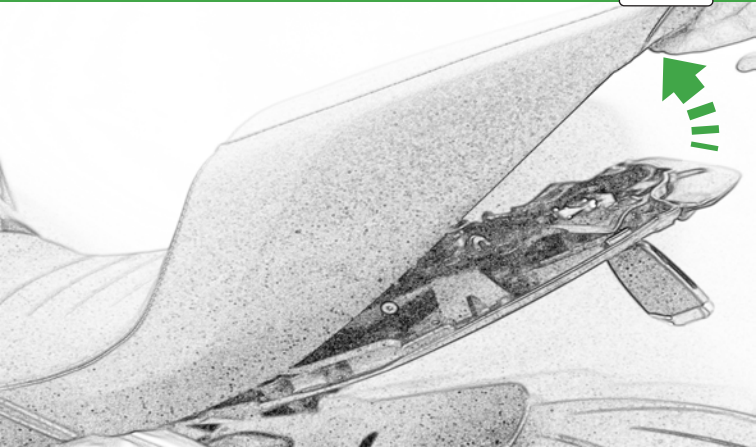

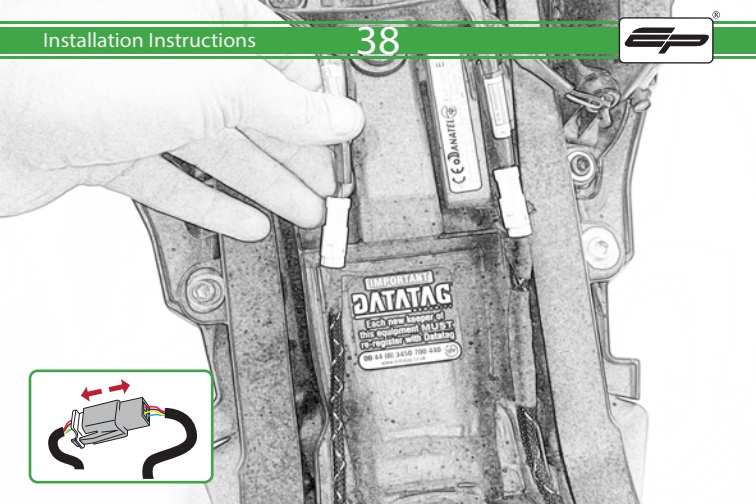


IMPORTANT DATATAG
Each new keeper of
this equipment MUST
re-register with Datatag
00 44 181 3450 700 440
www.datatag.co.uk

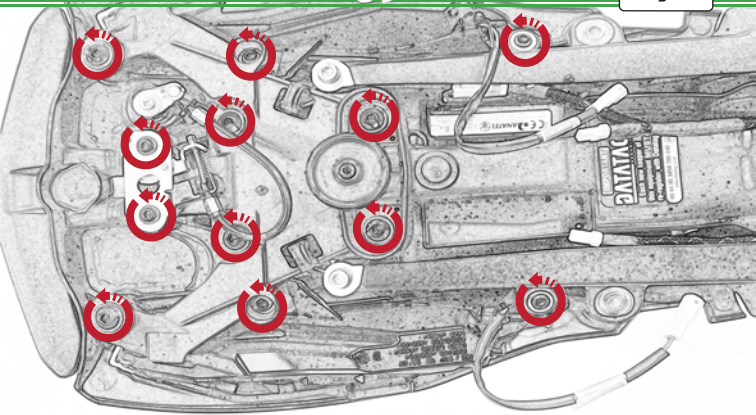




Repeat
Both Sides

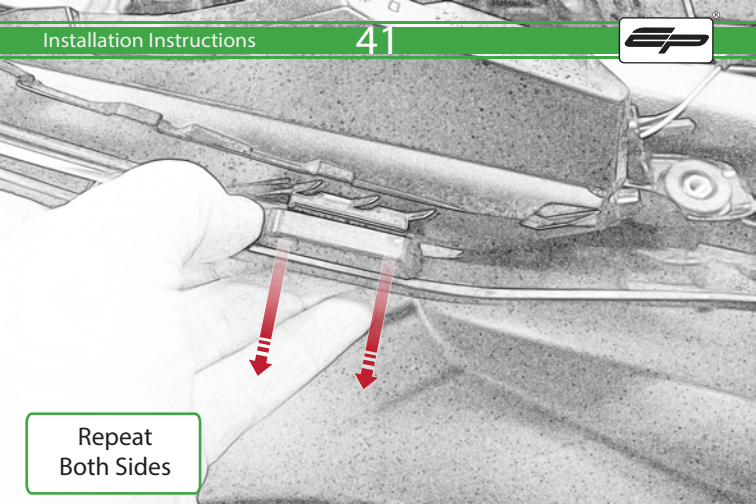


Repeat
Both Sides

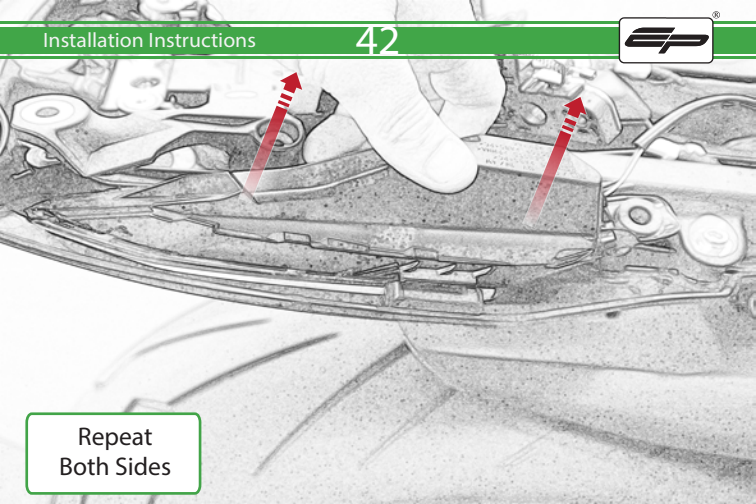


Repeat
Both Sides



Repeat
Both Sides

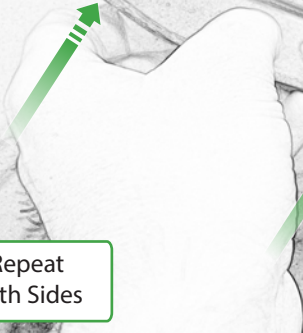A close-up photograph of a hand pointing to a specific component on a metal chassis. Two green arrows with dashed lines point from the hand towards the component. The component is a small, rectangular metal block mounted on a metal plate. The background shows various other parts of the chassis, including screws and wiring.


Repeat
Both Sides

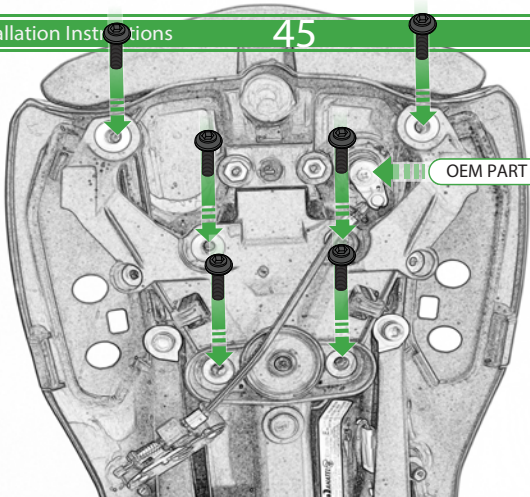



OEM PART




OEM PART

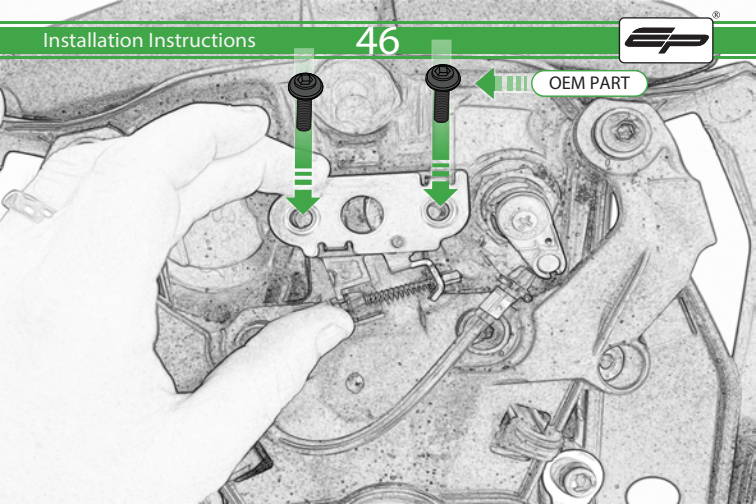


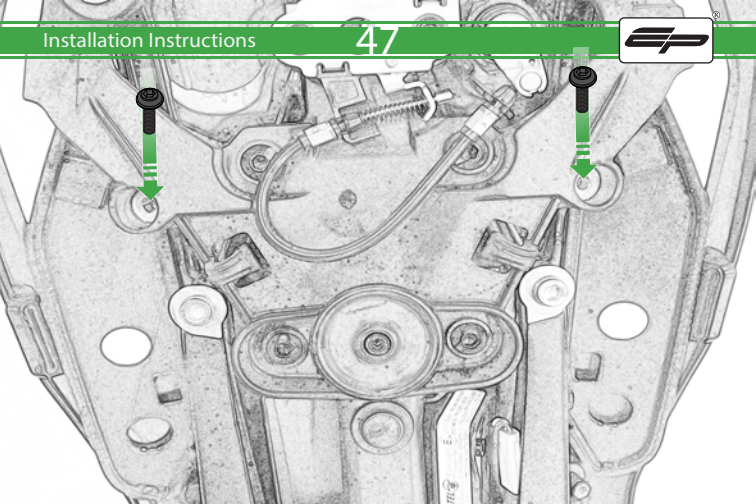

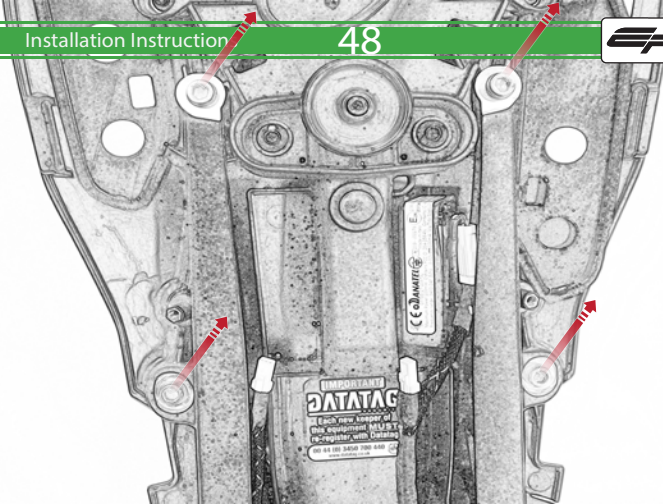


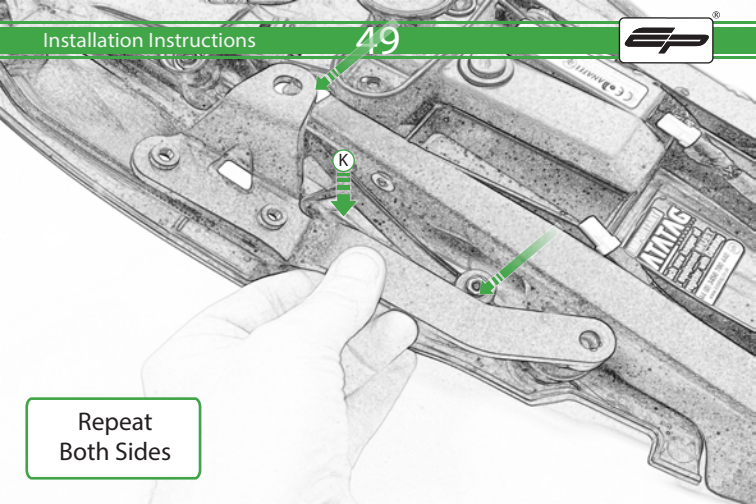


Repeat
Both Sides

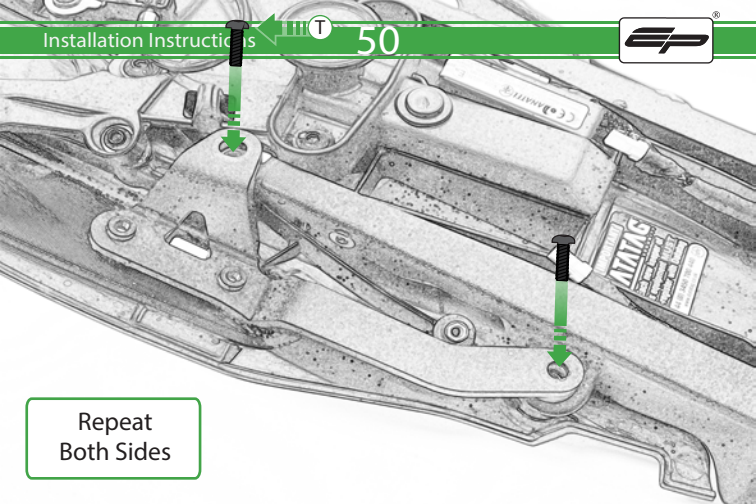


Repeat
Both Sides

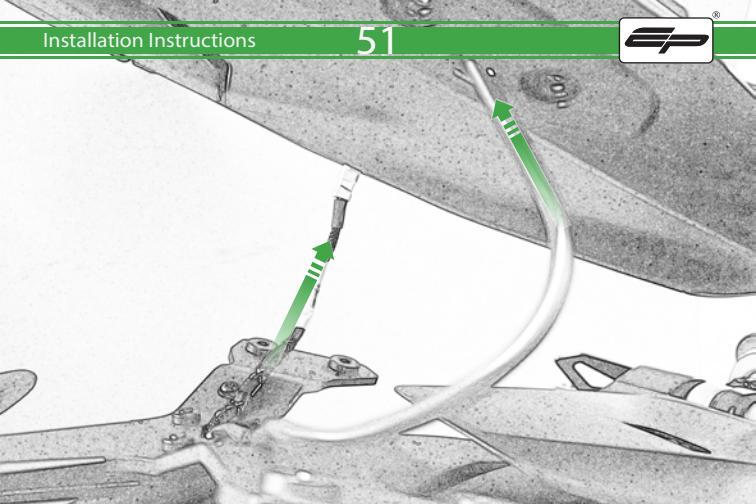

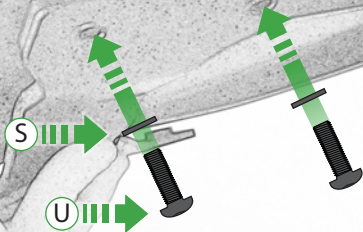


Do Not Fully
Tighten

Repeat
Both Sides

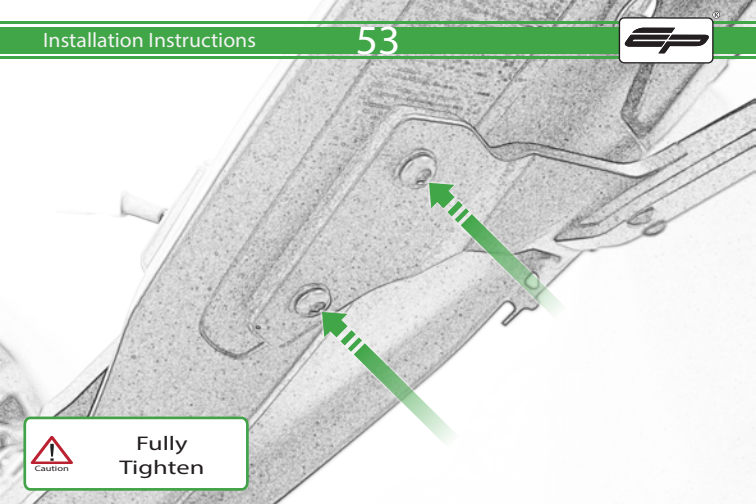


Caution

Fully
Tighten

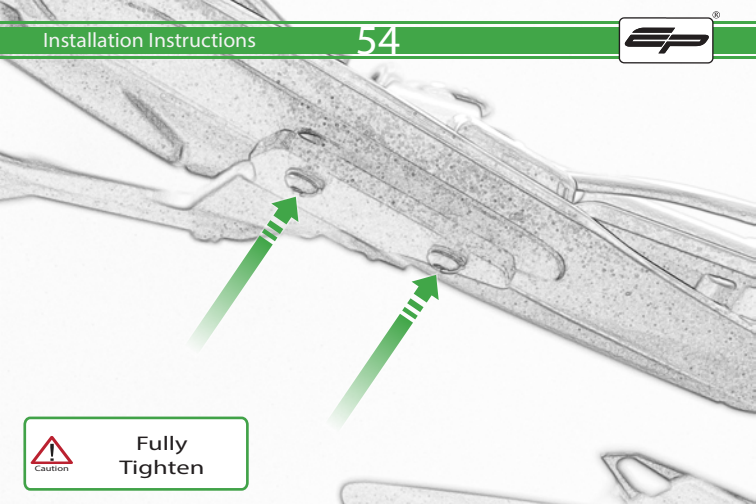


Caution



Fully
Tighten

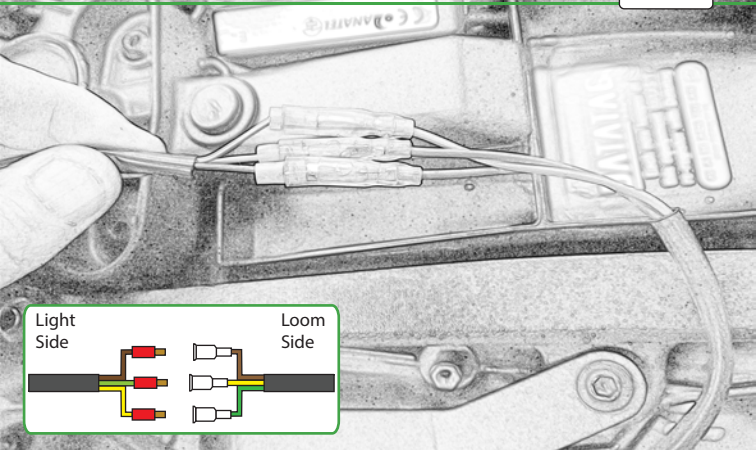



Light
Side


Loom
Side




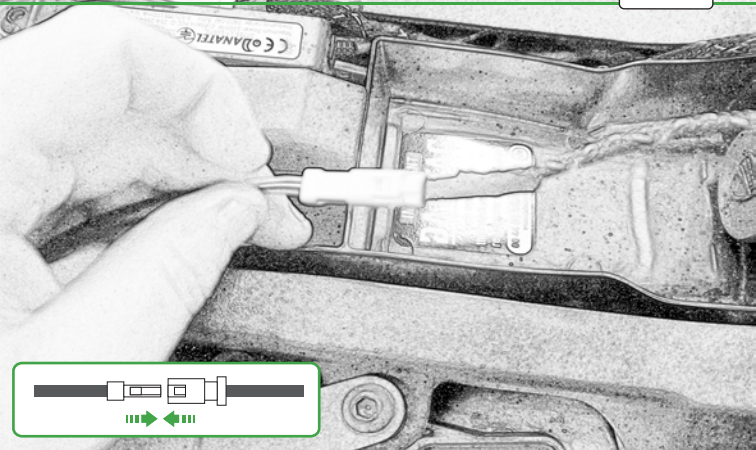


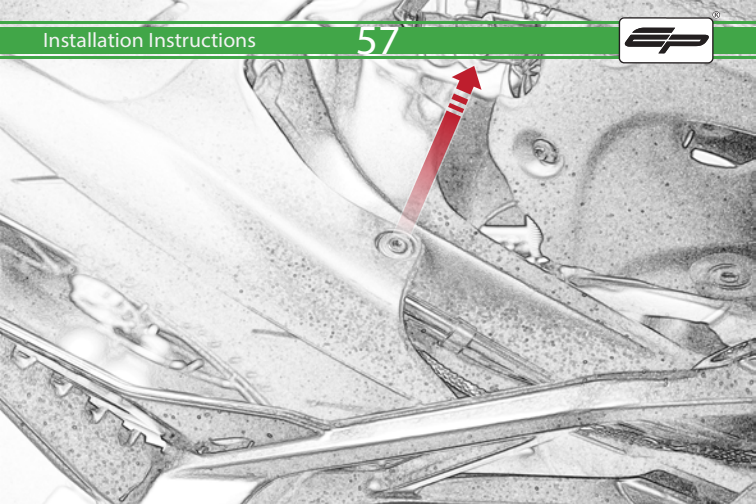



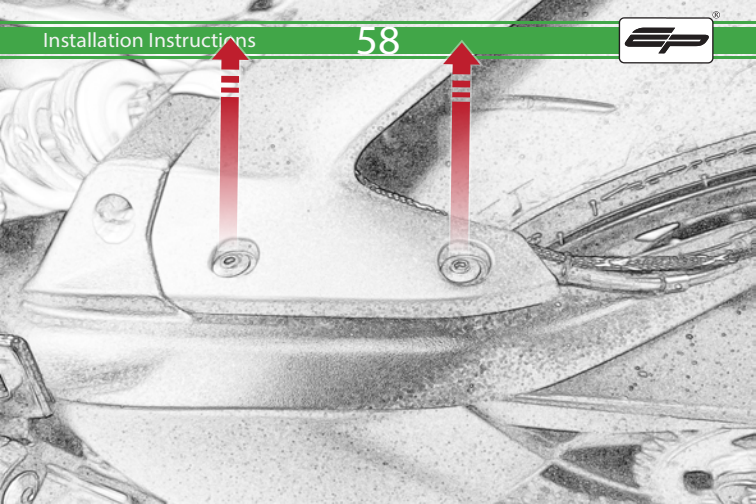



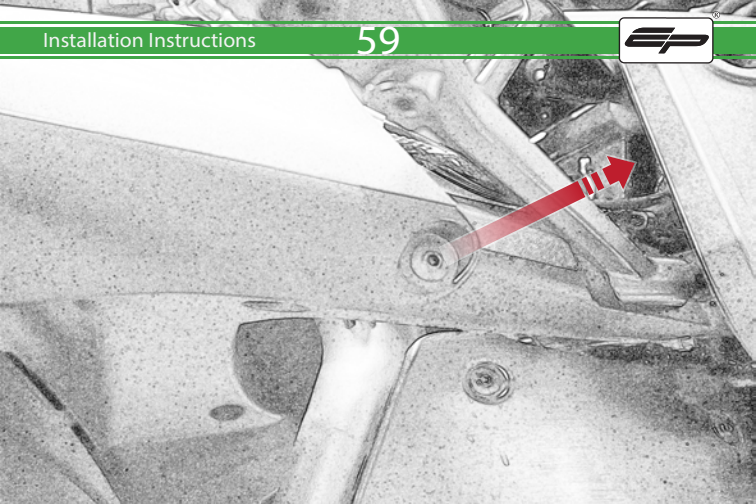


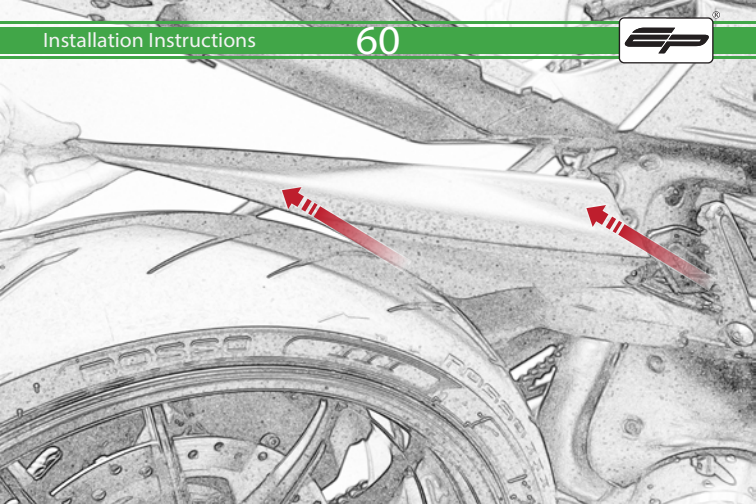

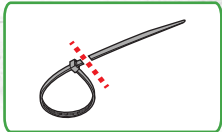


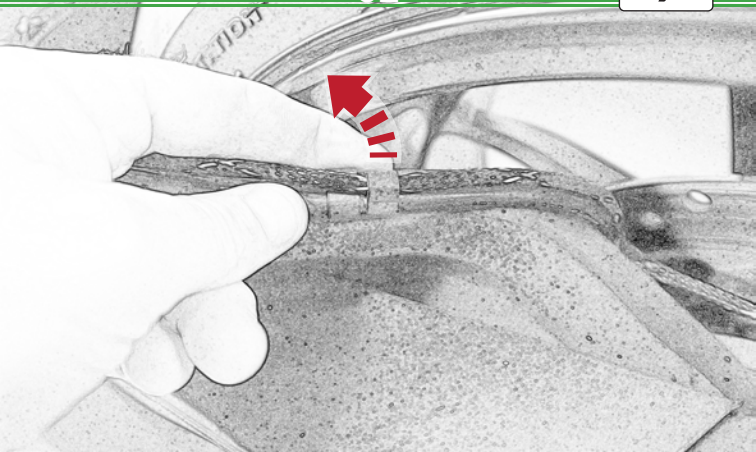

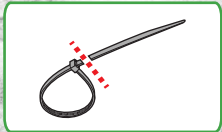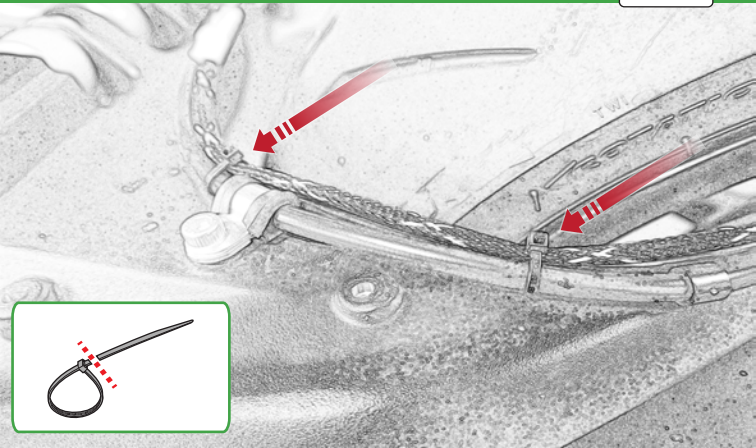


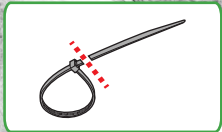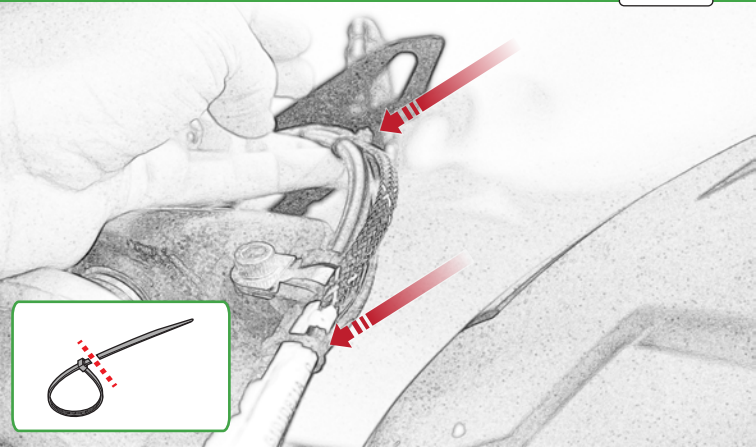





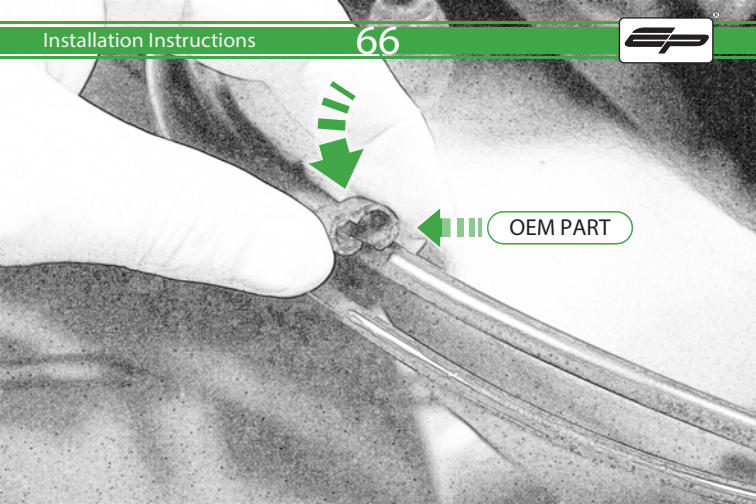


OEM PART

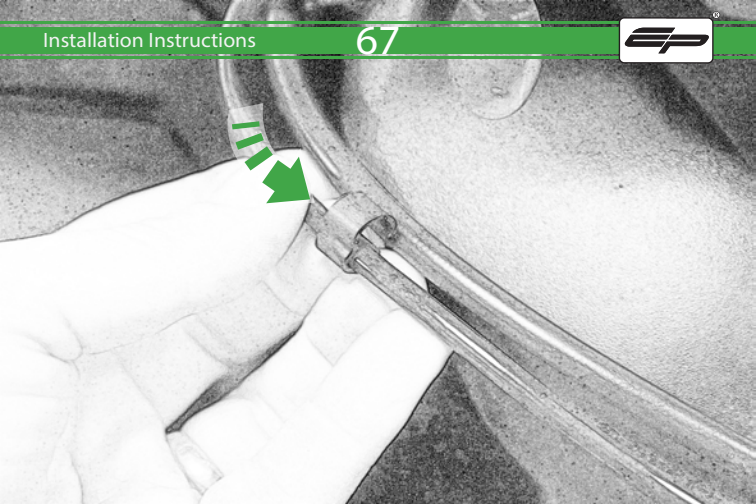


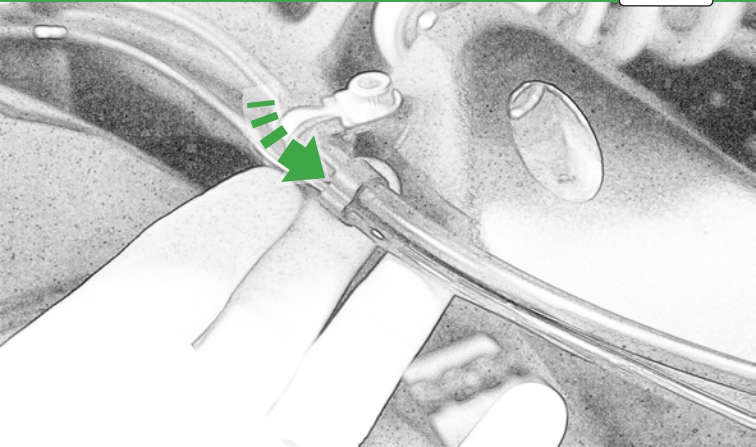


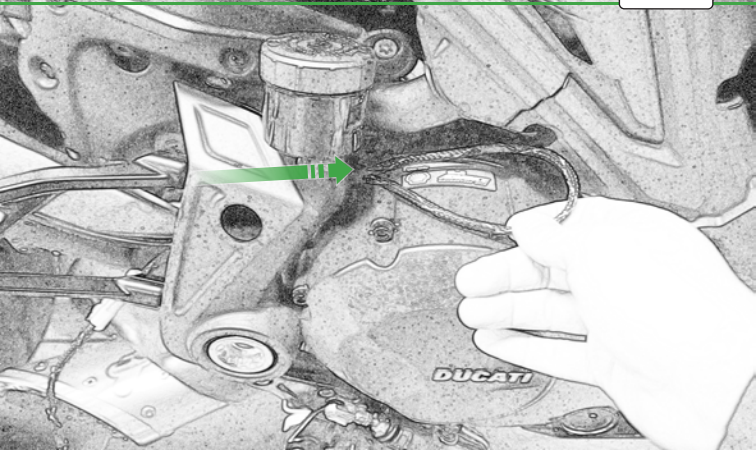





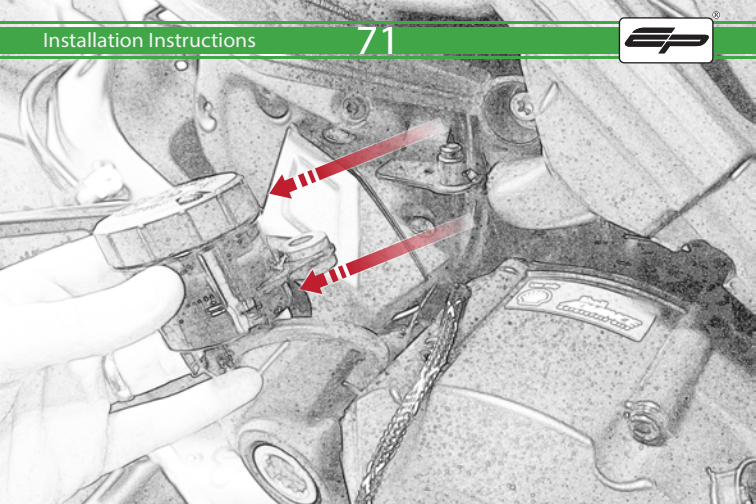

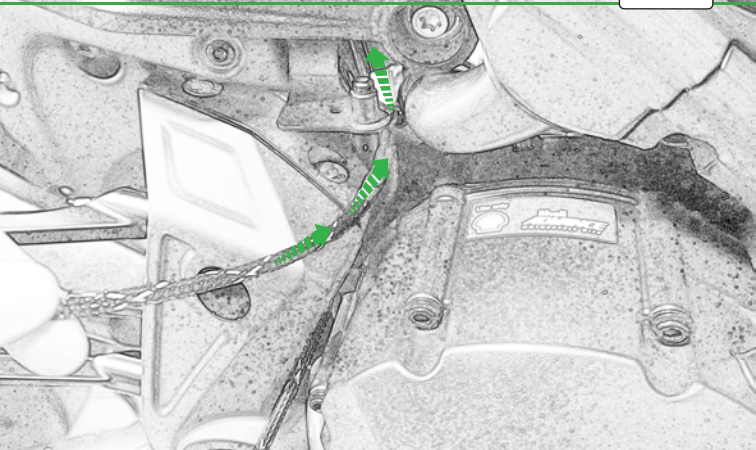


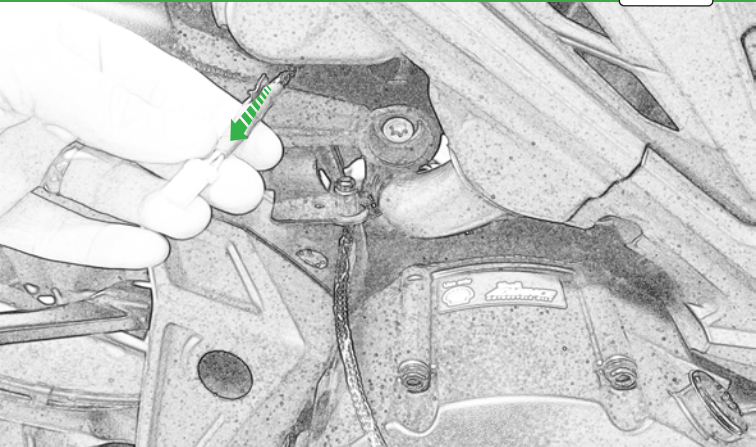


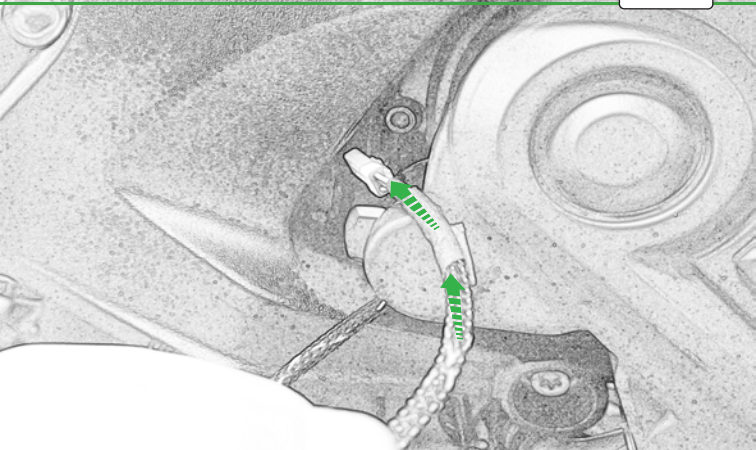


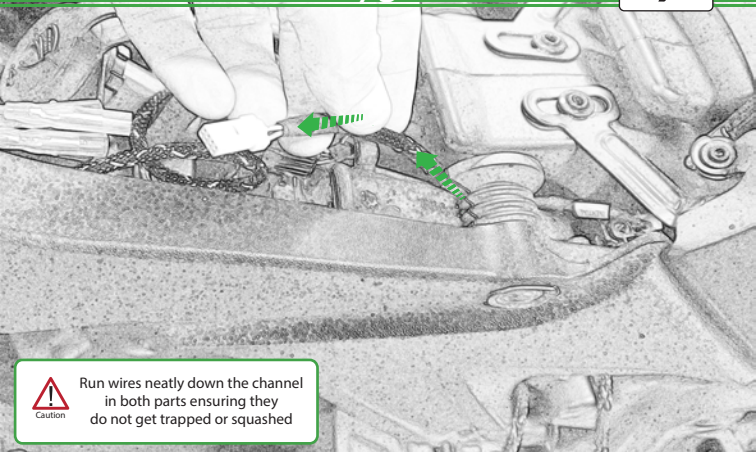

Caution


Run wires neatly down the channel in both parts ensuring they do not get trapped or squashed

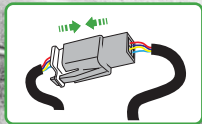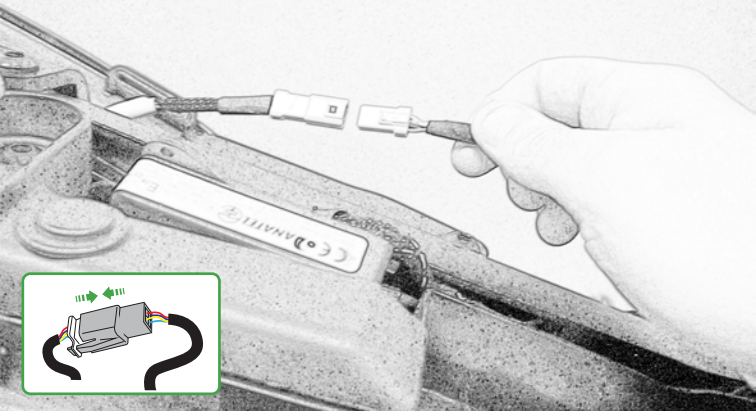

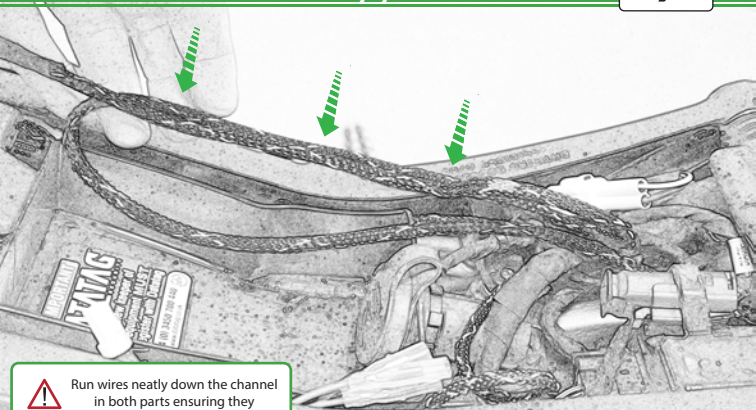



Caution

Run wires neatly down the channel in both parts ensuring they do not get trapped or squashed

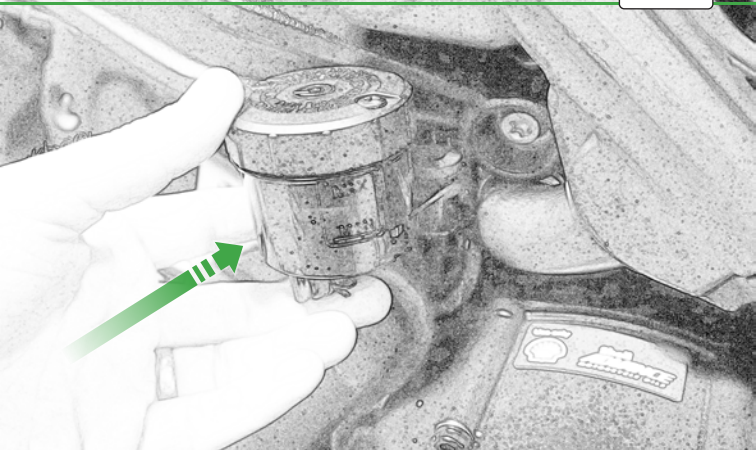



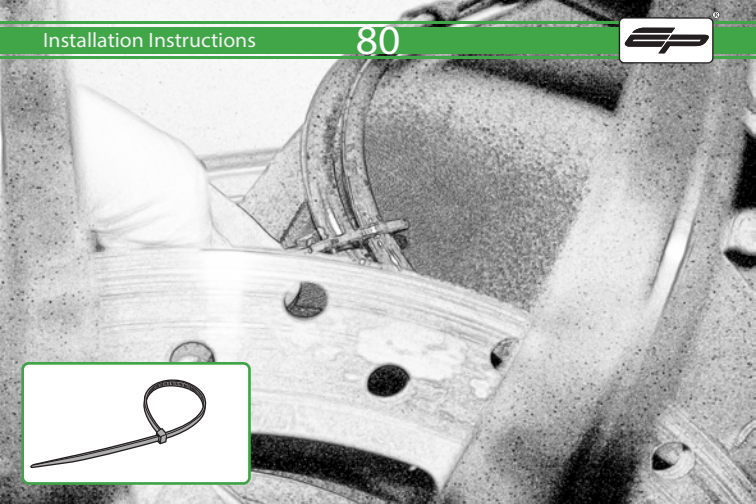

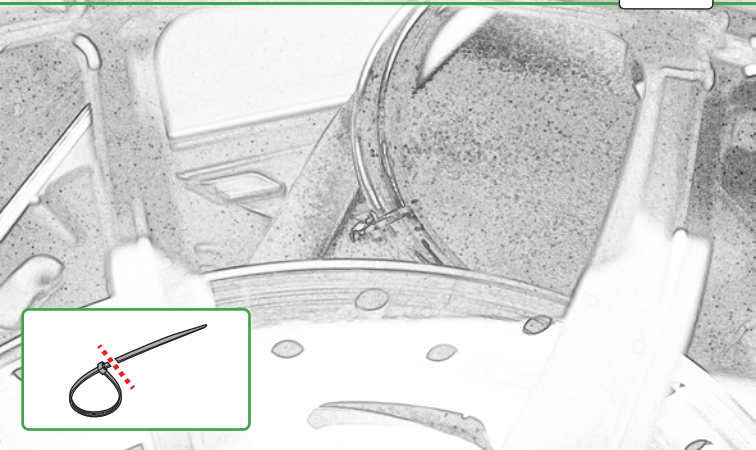









Reverse Stages

56 - 60

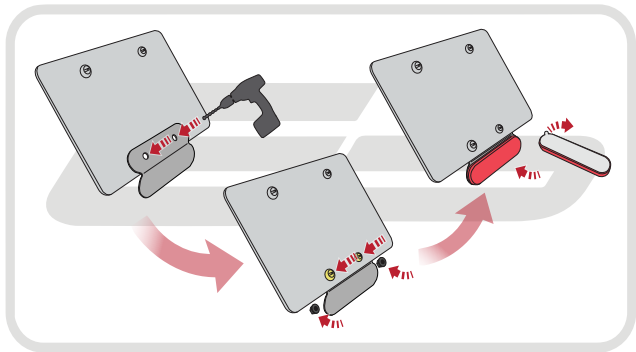

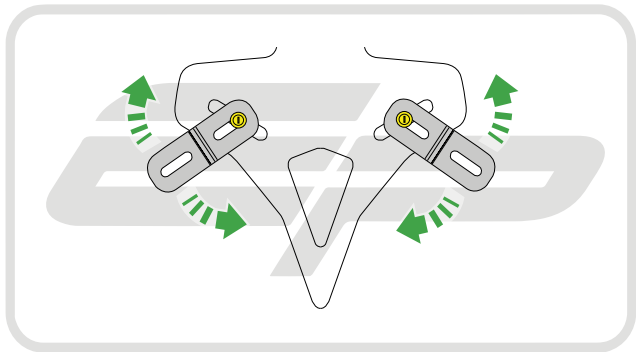



 **ESSENTIAL CHECKS** 

After installation of your tail tidy ensure that the licence plate does not contact the rear tyre when suspension is fully compressed.

Ensure all electrics including indicators, tail light, brake light and licence plate light lights are working correctly before riding the motorcycle.

It is recommended that periodic inspections are made to ensure that all fixings are fully tightend.



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com