



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com


Triumph Speed Twin Tail Tidy

Installation Instructions





Kit Contents: P1N01-4722


- 1 x Main Bracket
- 1 x Light Bracket
- 2 x M4 x 50mm Button Head Bolt
- 2 x M6 x 45mm Button Head Bolt

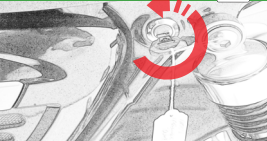





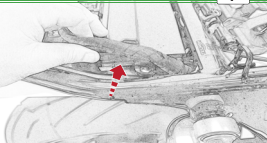


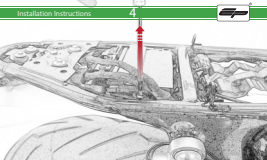


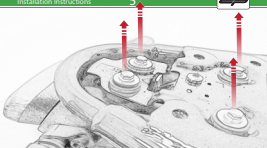

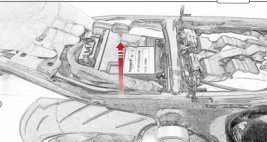

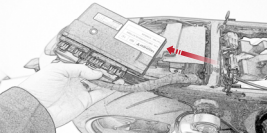


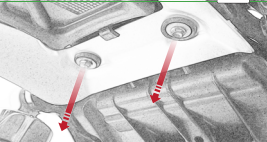


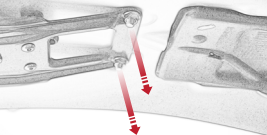








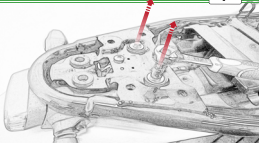


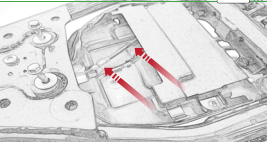


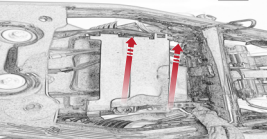

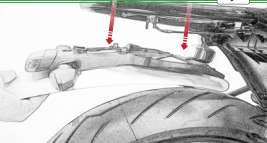


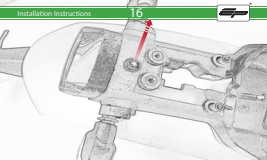


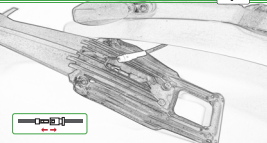







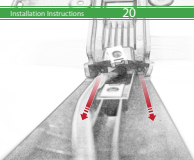

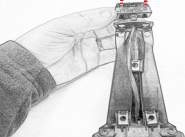




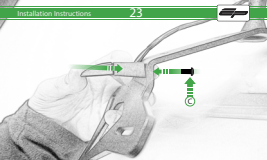





Keep wires flat throughout the
tearing.
Do not wire in position.




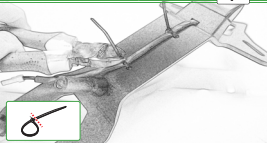



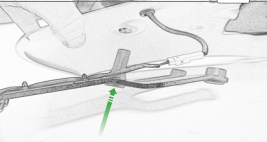


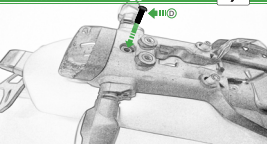


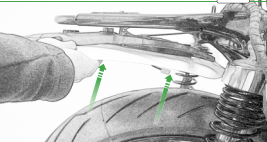




OEM PART

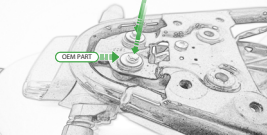

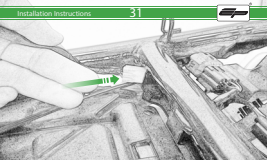




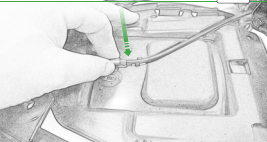




OEM PART

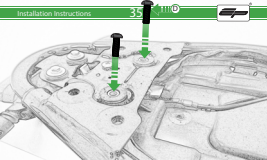







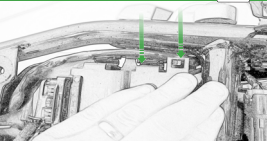




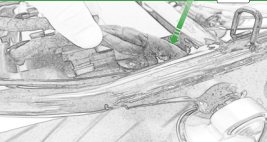

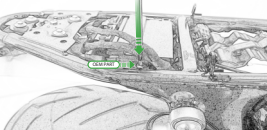


LOCK WASH





EVOTECH[®]
P E R F O R M A N C E



EVOTECH[®]
P E R F O R M A N C E



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com