



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com


Honda CBR 1000 RR-R / SP Tail Tidy


Installation Instructions







Kit Contents PRN014802


- (A) 1 x Retro Light
- (B) 1 x Con 26 Loom Connector
- (C) 2 x M4 Flange Nuts
- (D) 2 x M5 x 16 Black Button Head Bolts
- (E) 4 x M5 x 12 Caphead Bolts

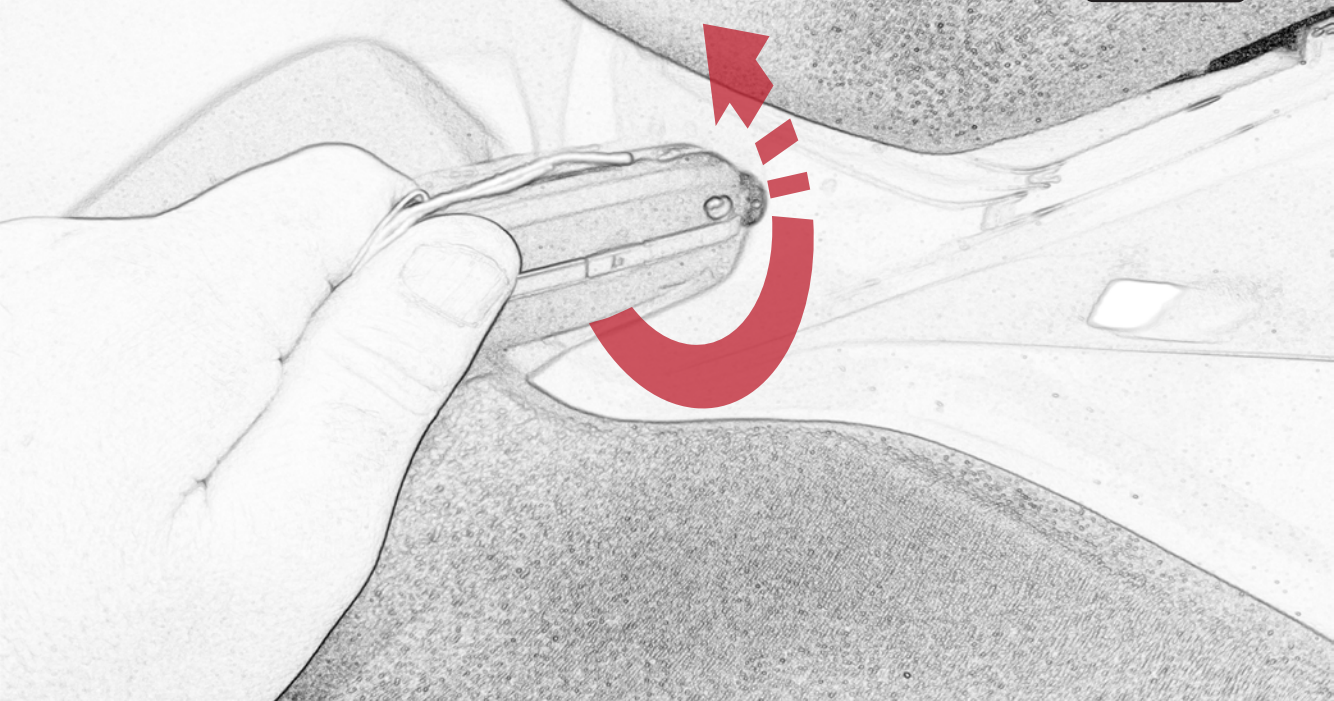


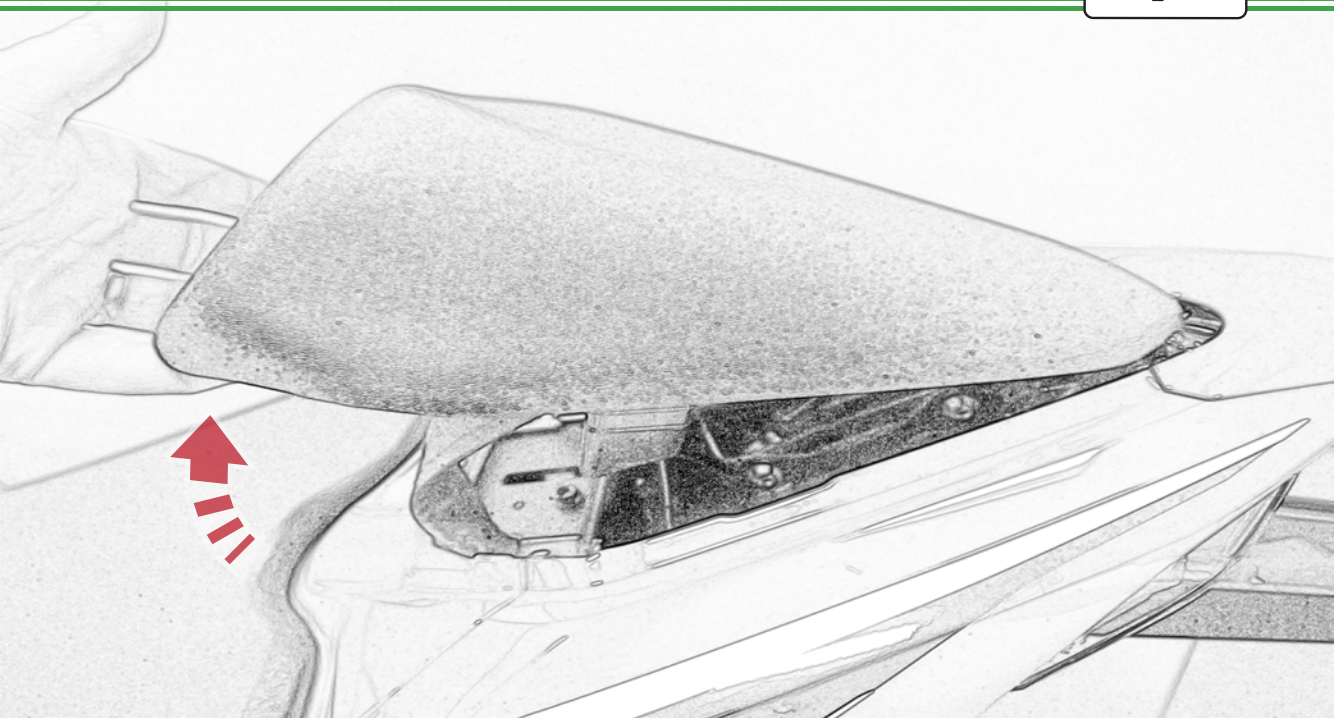


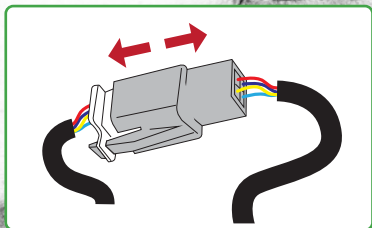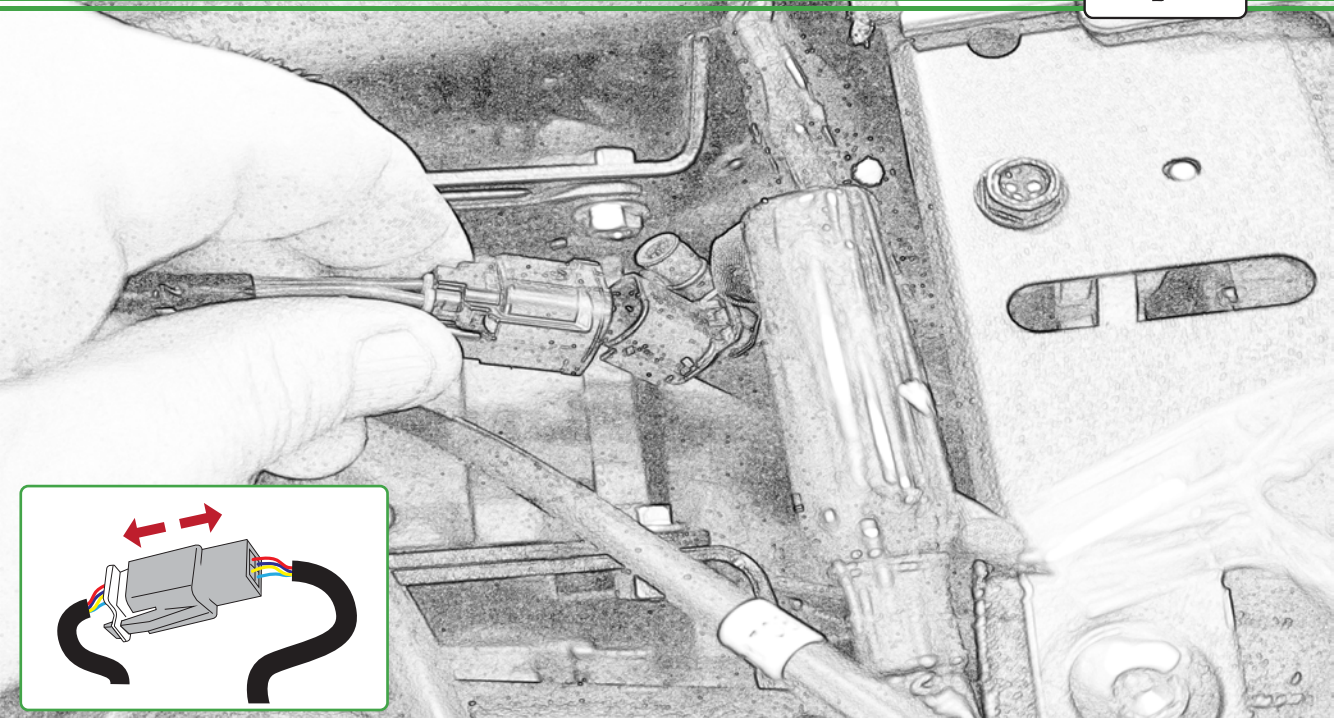


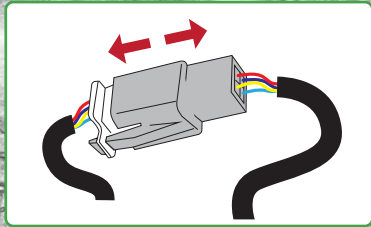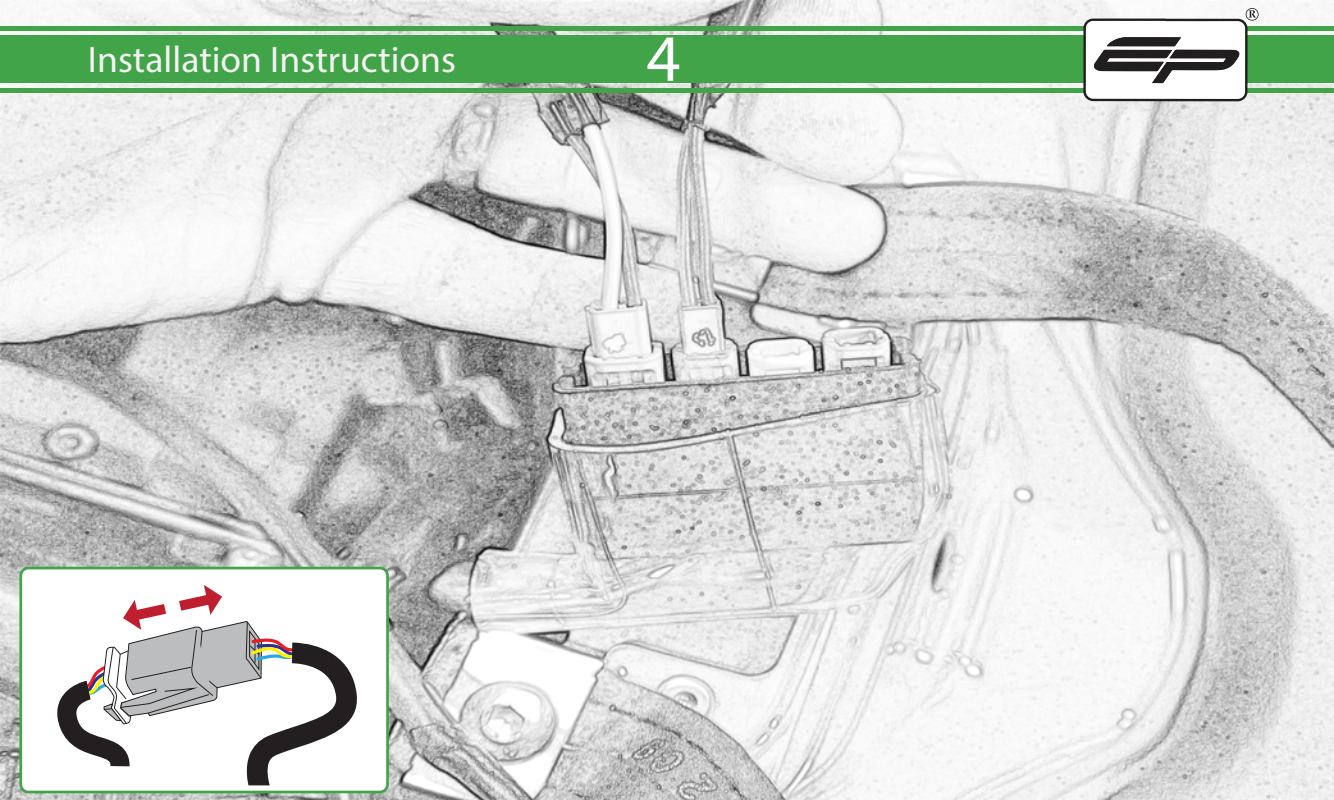


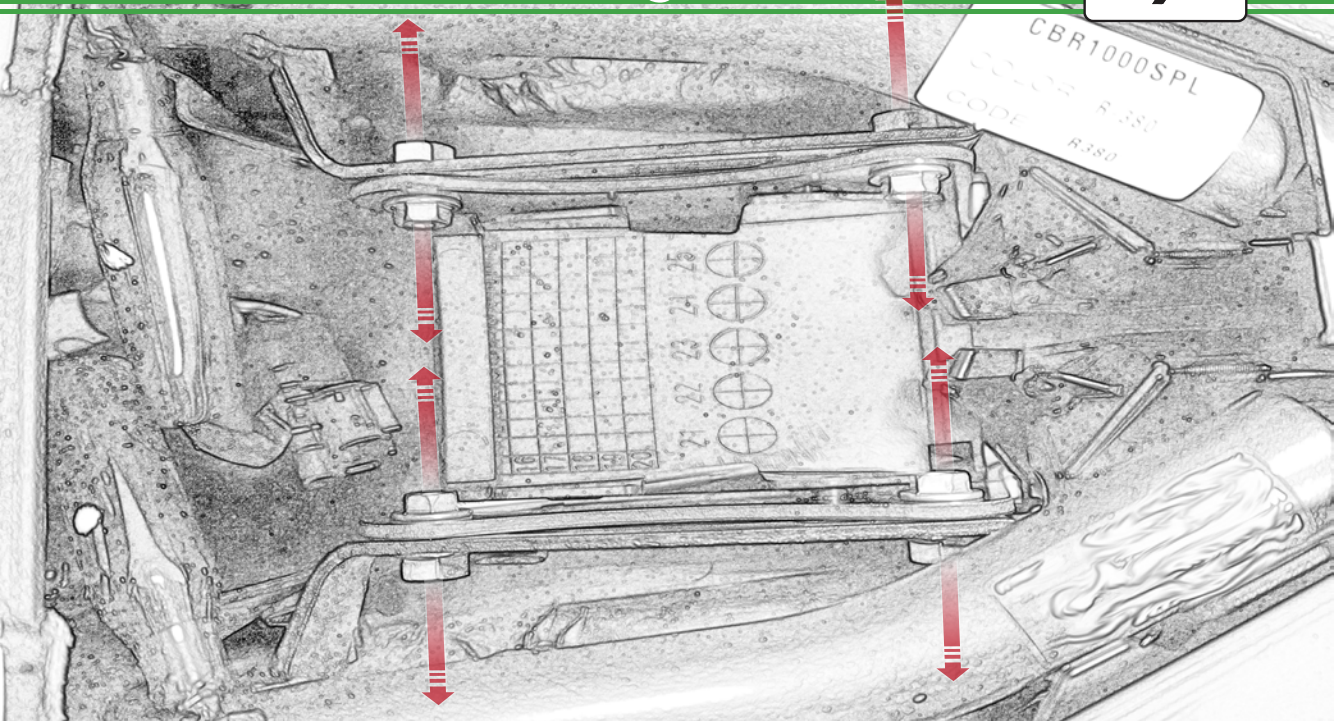


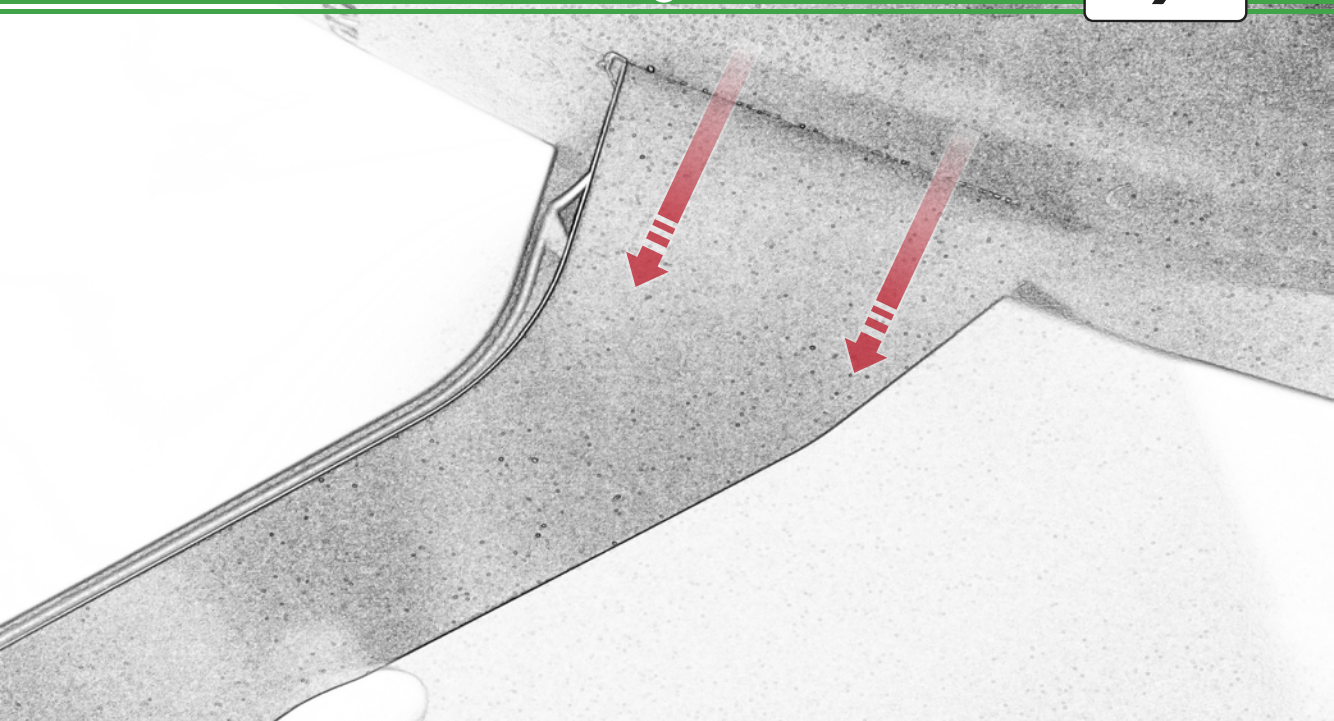


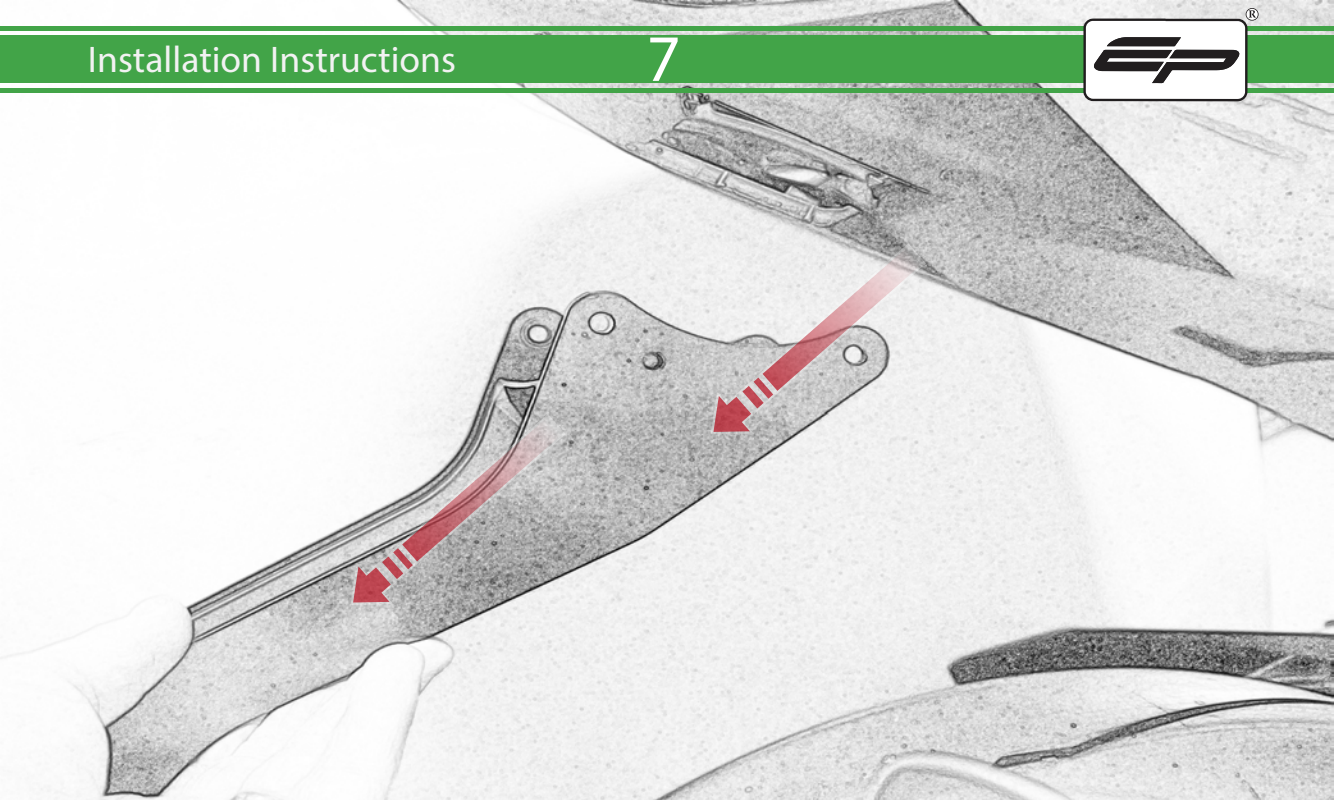


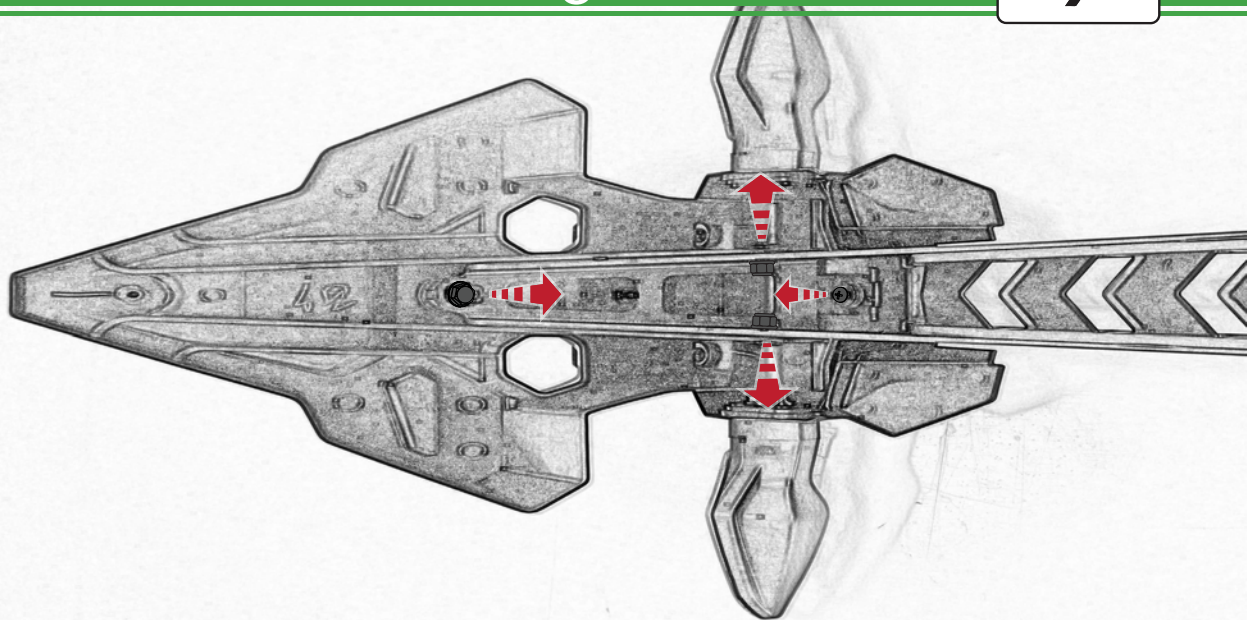


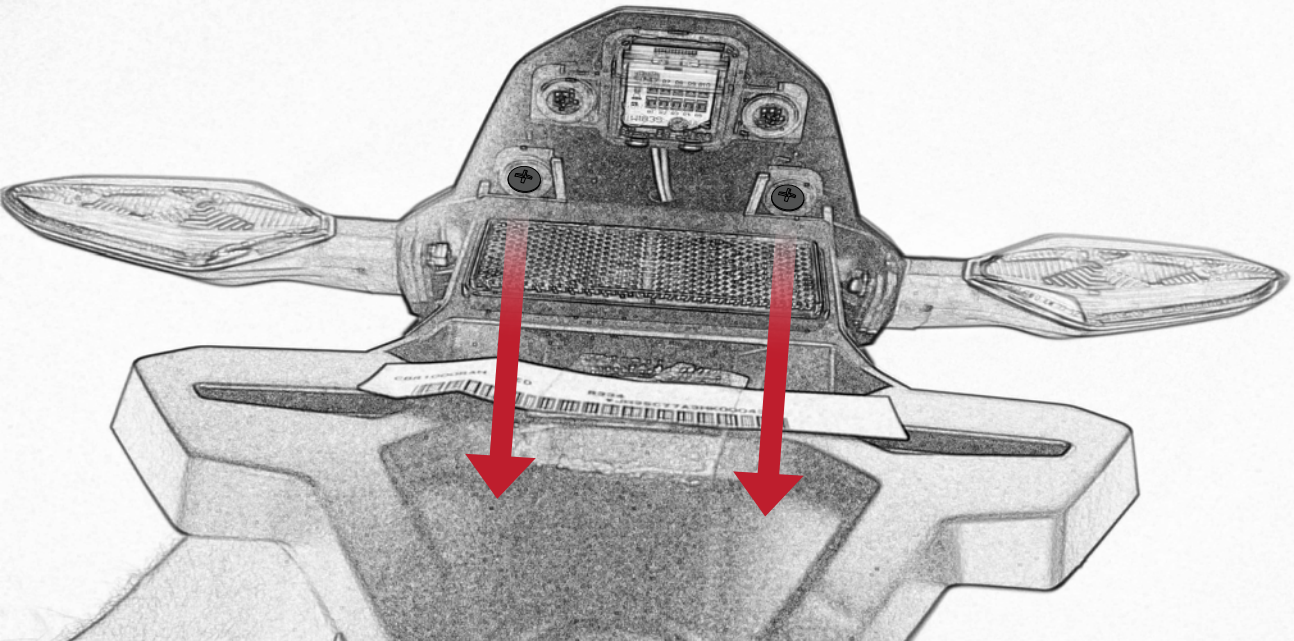

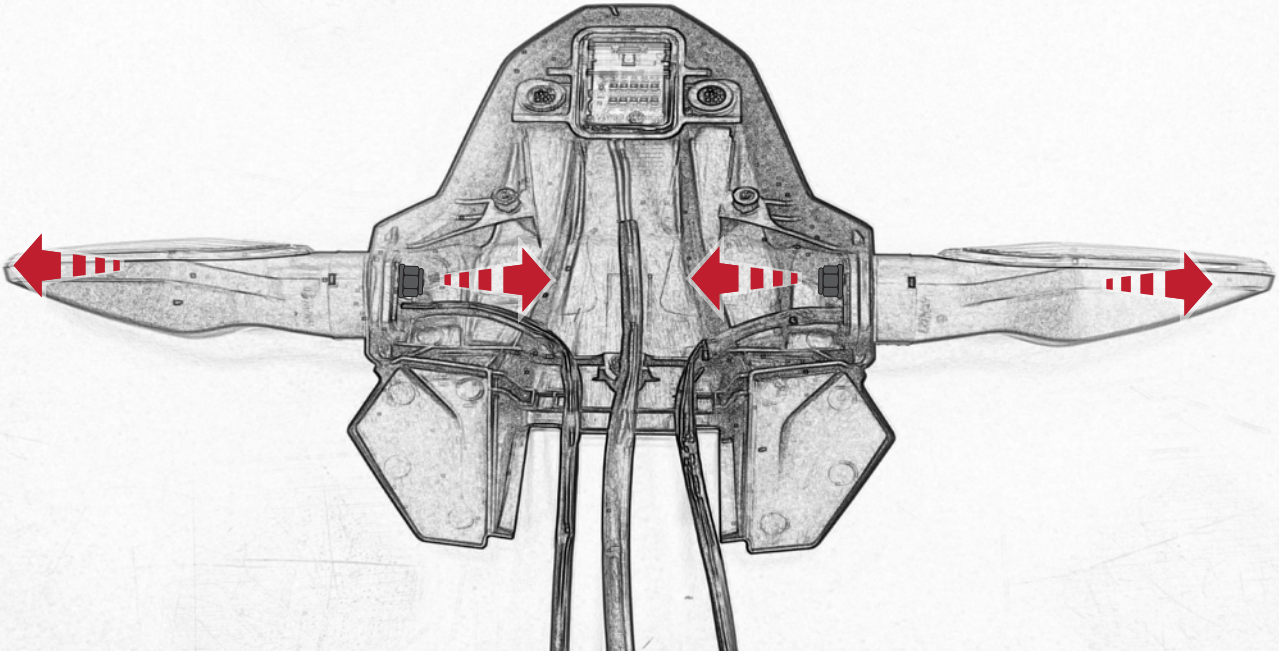


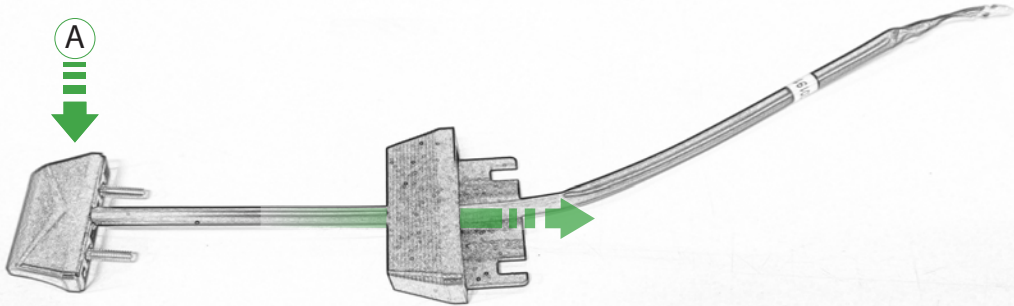

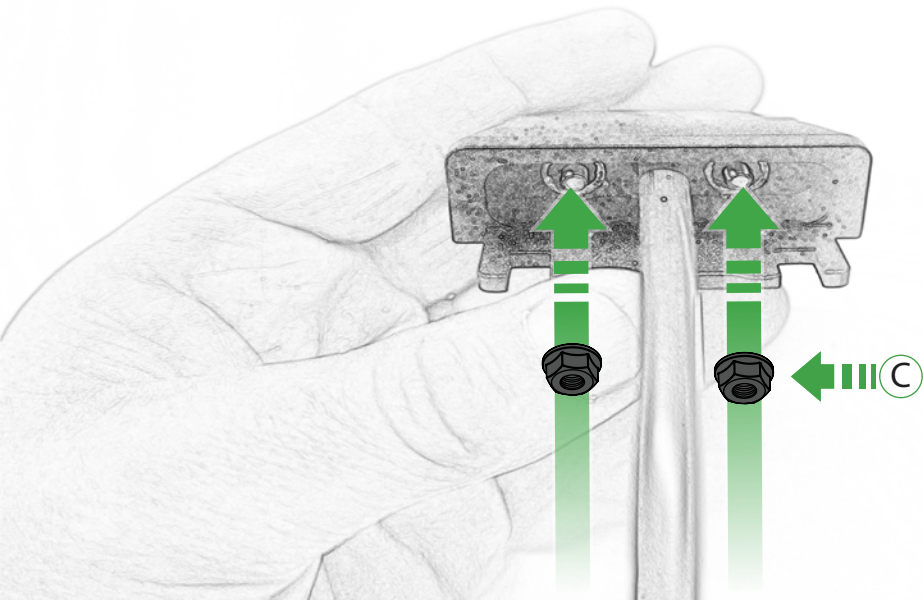


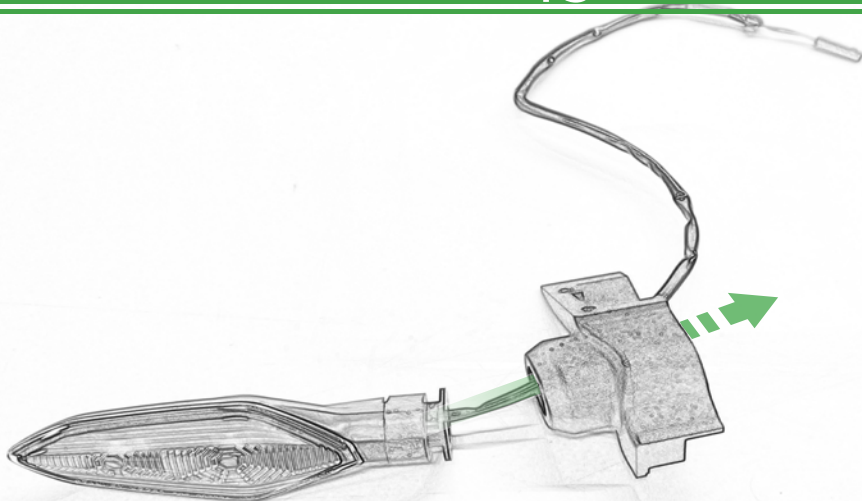


Repeat
Both Sides

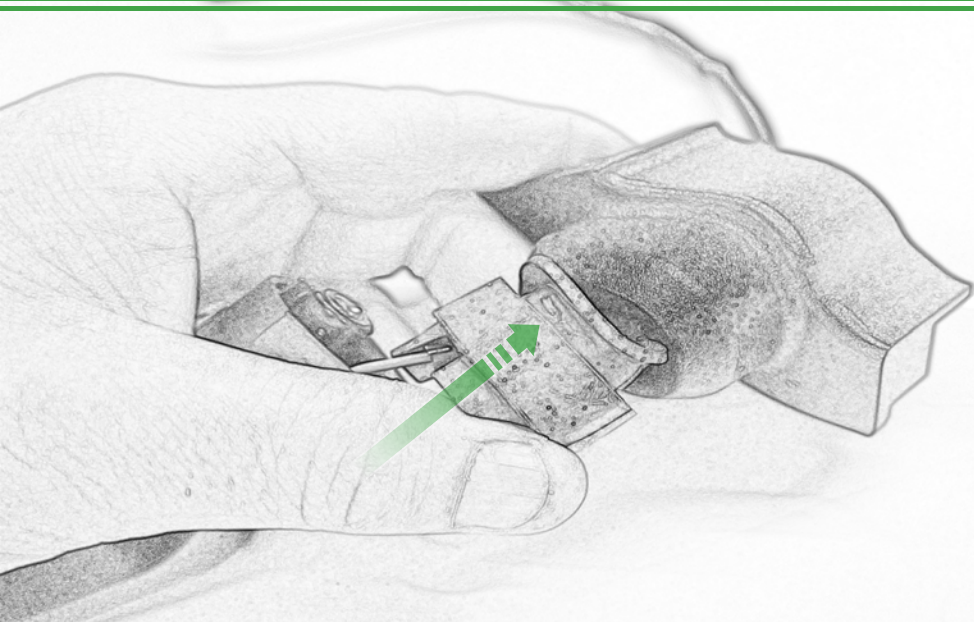

Repeat
Both Sides

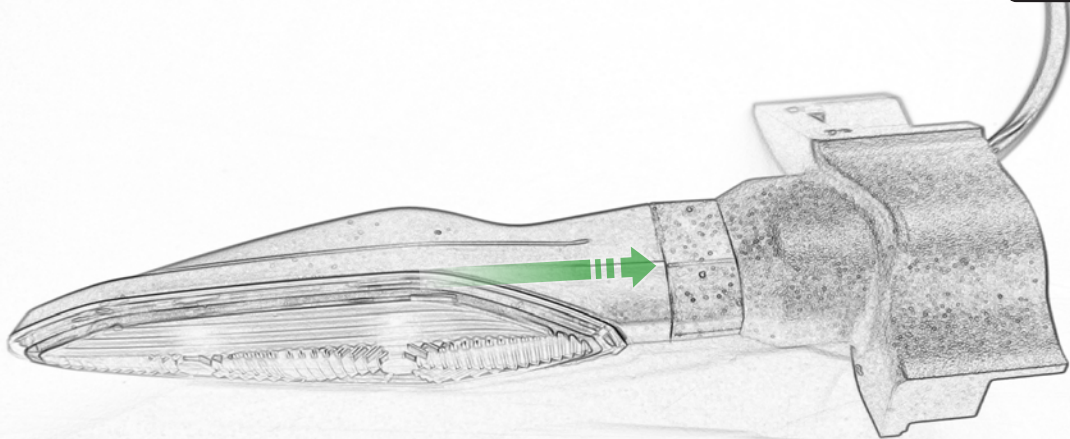


Repeat
Both Sides

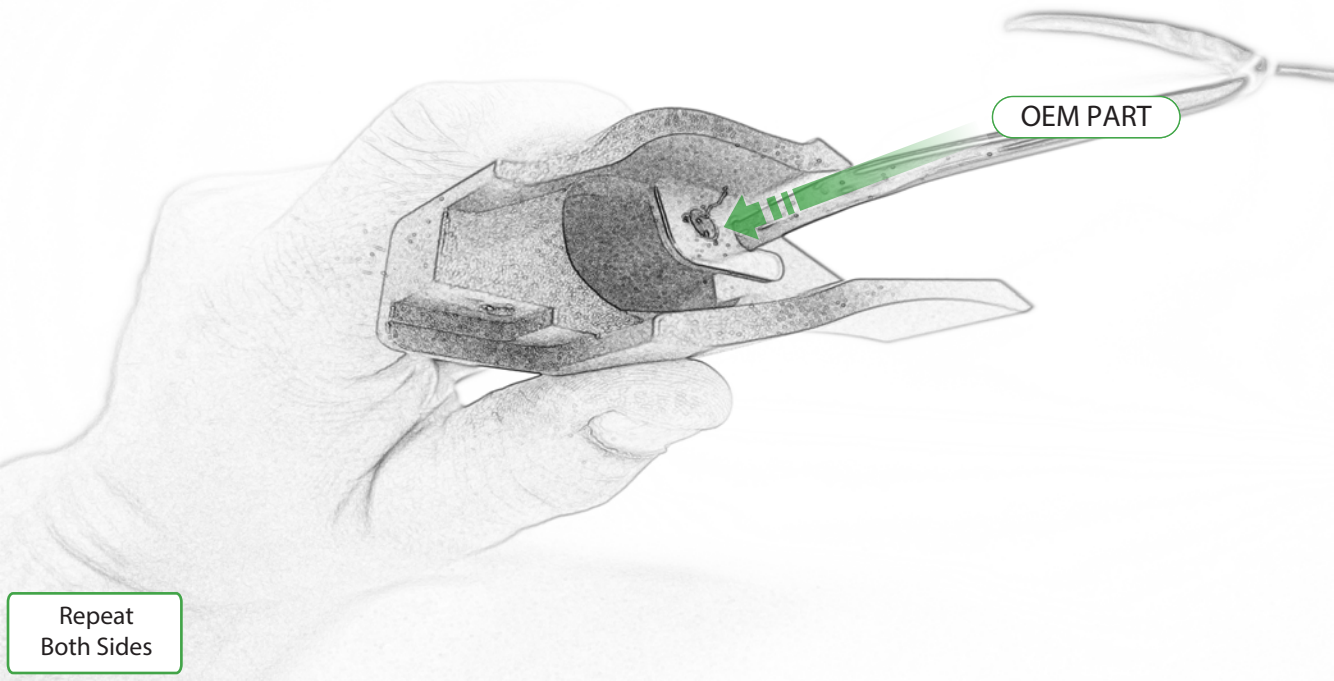


OEM PART


Repeat
Both Sides

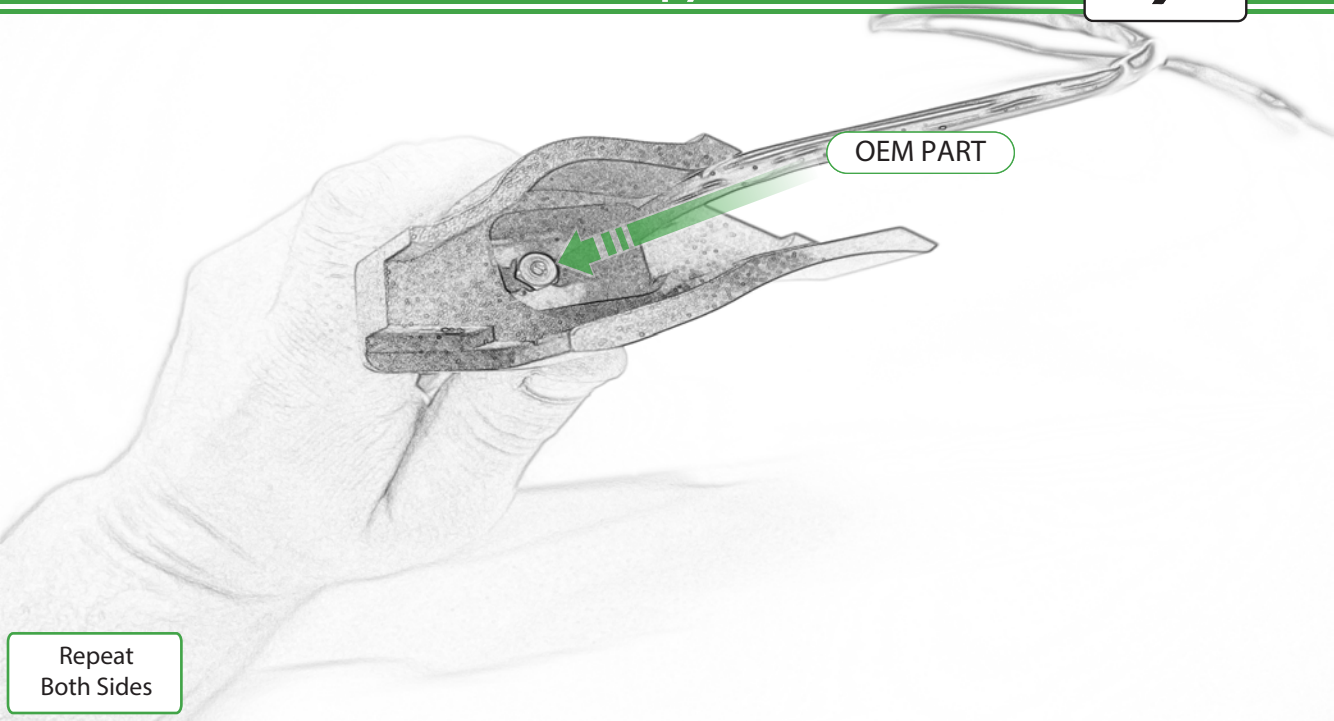


OEM PART


Repeat
Both Sides

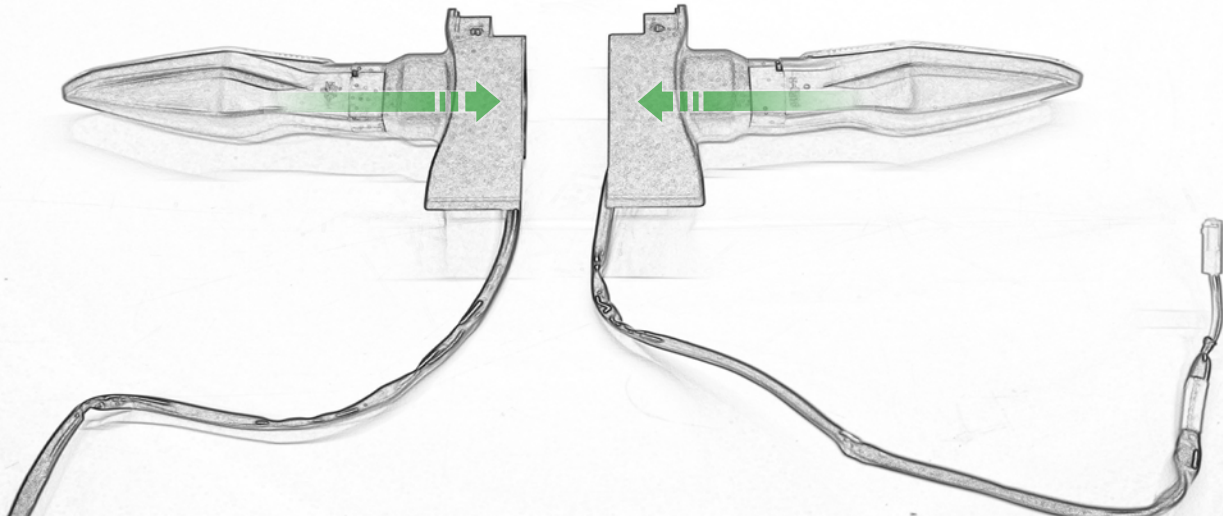


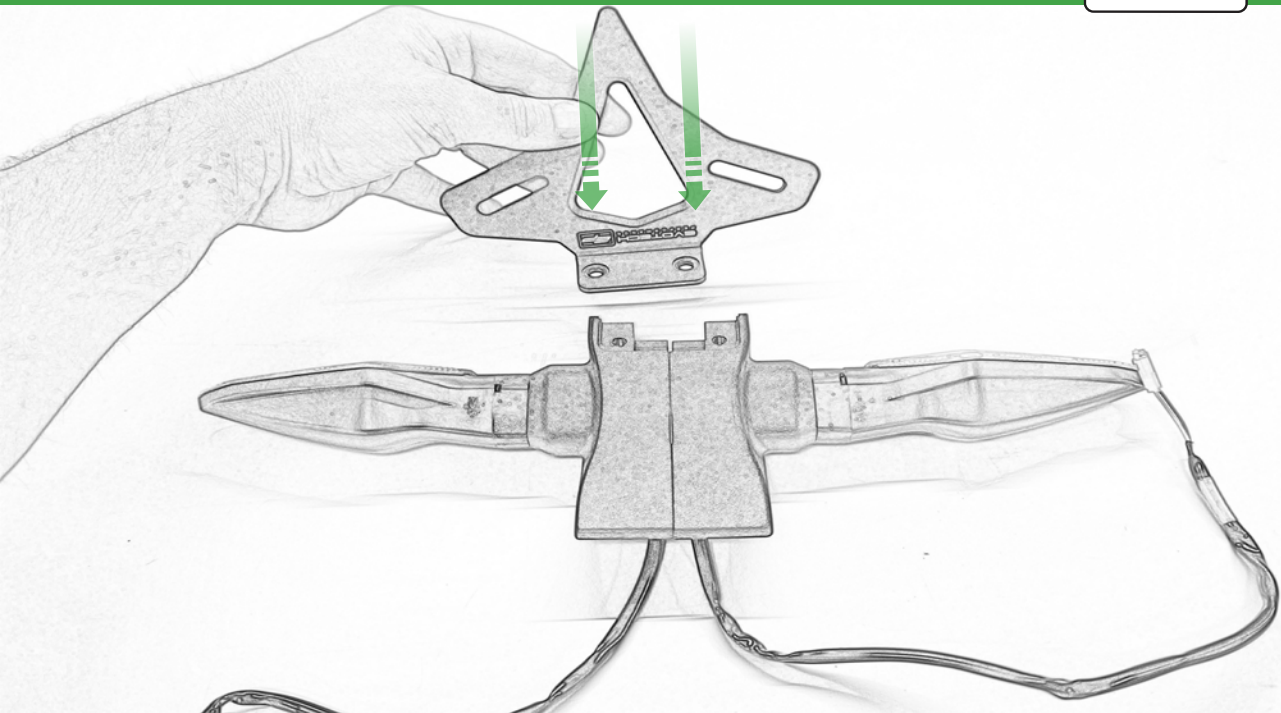


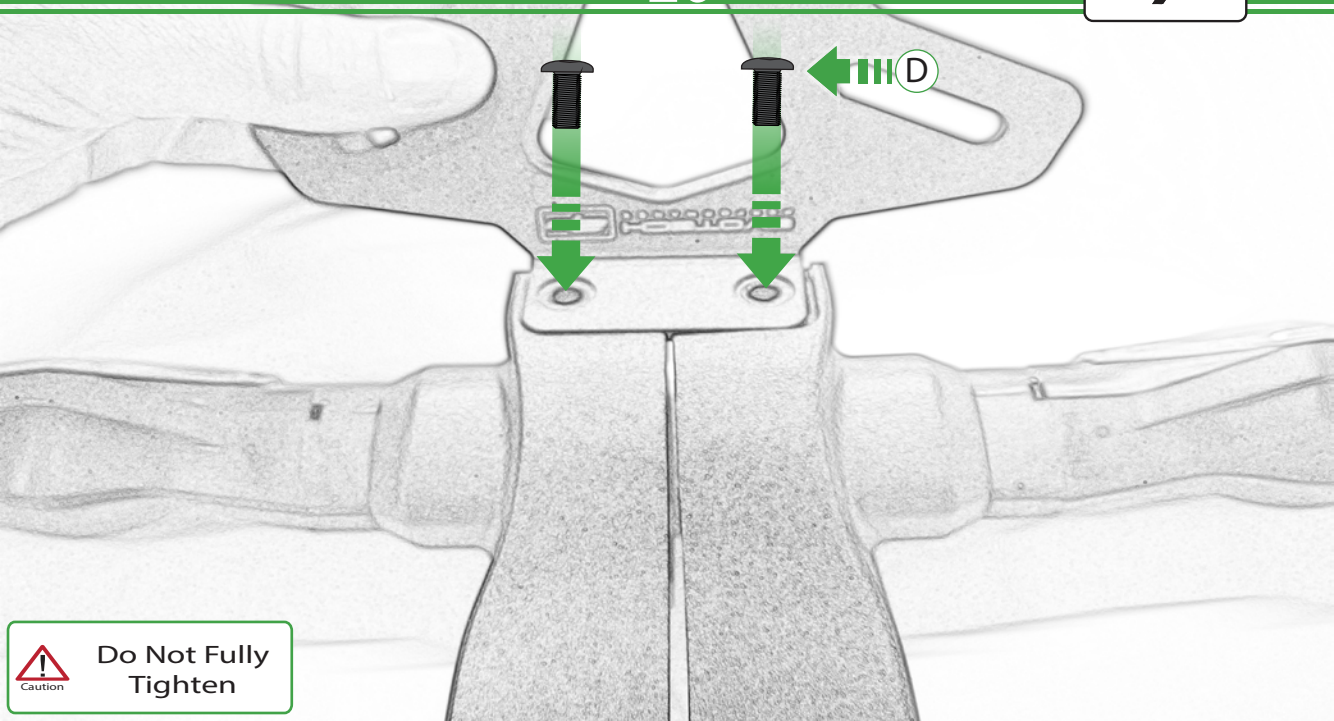



Do Not Fully Tighten

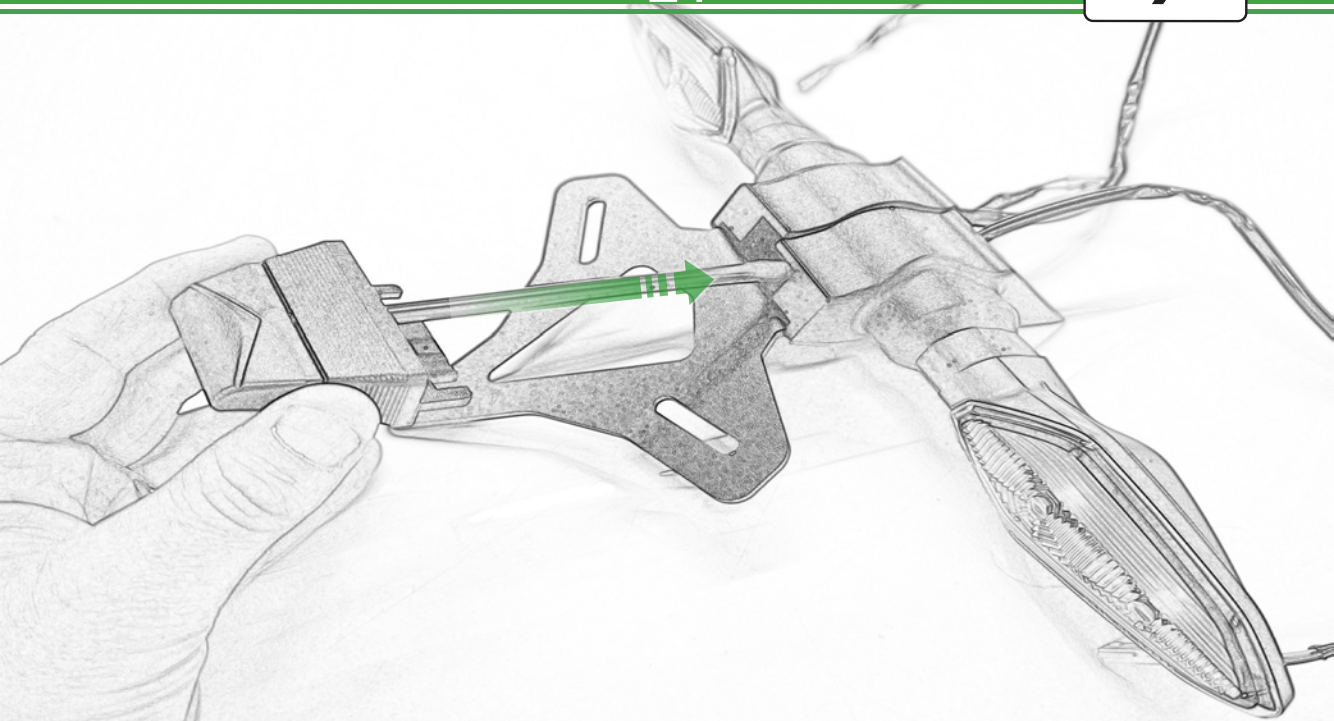

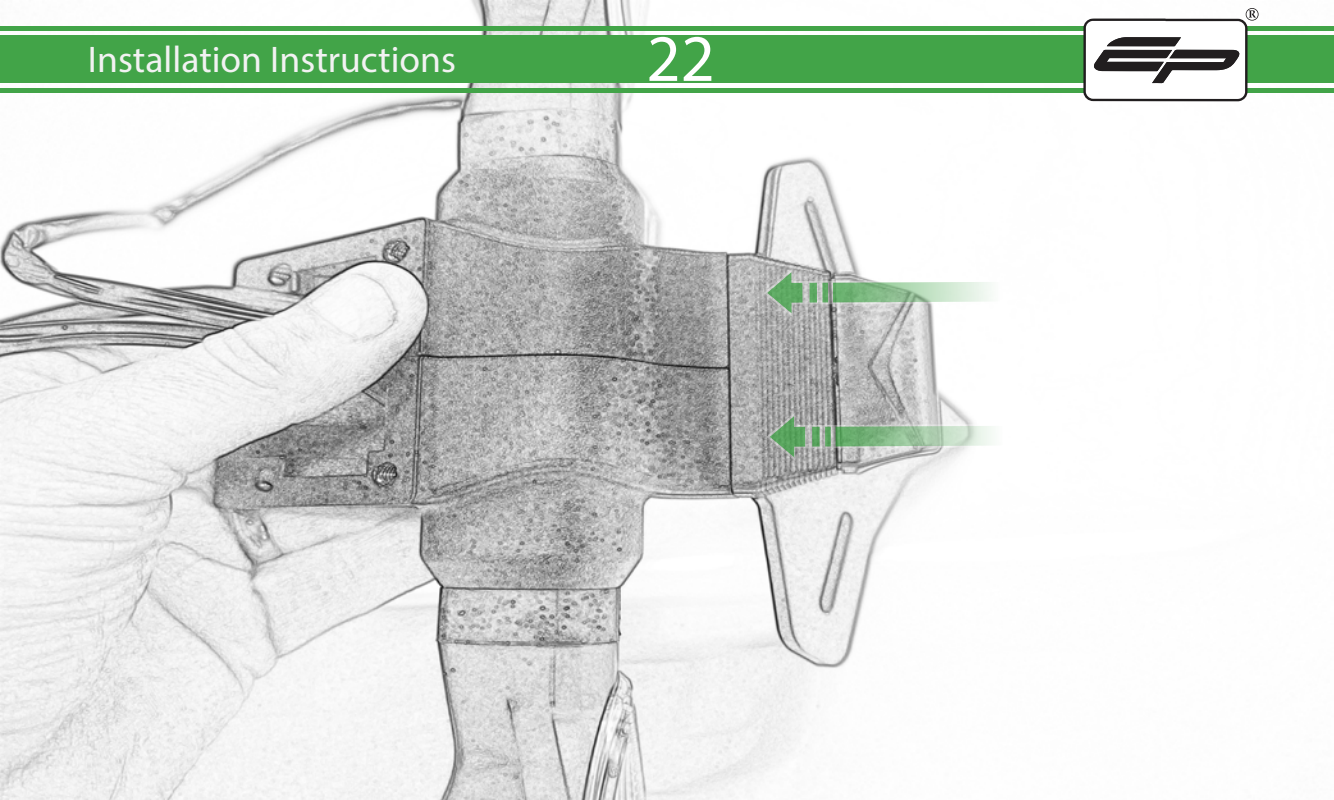


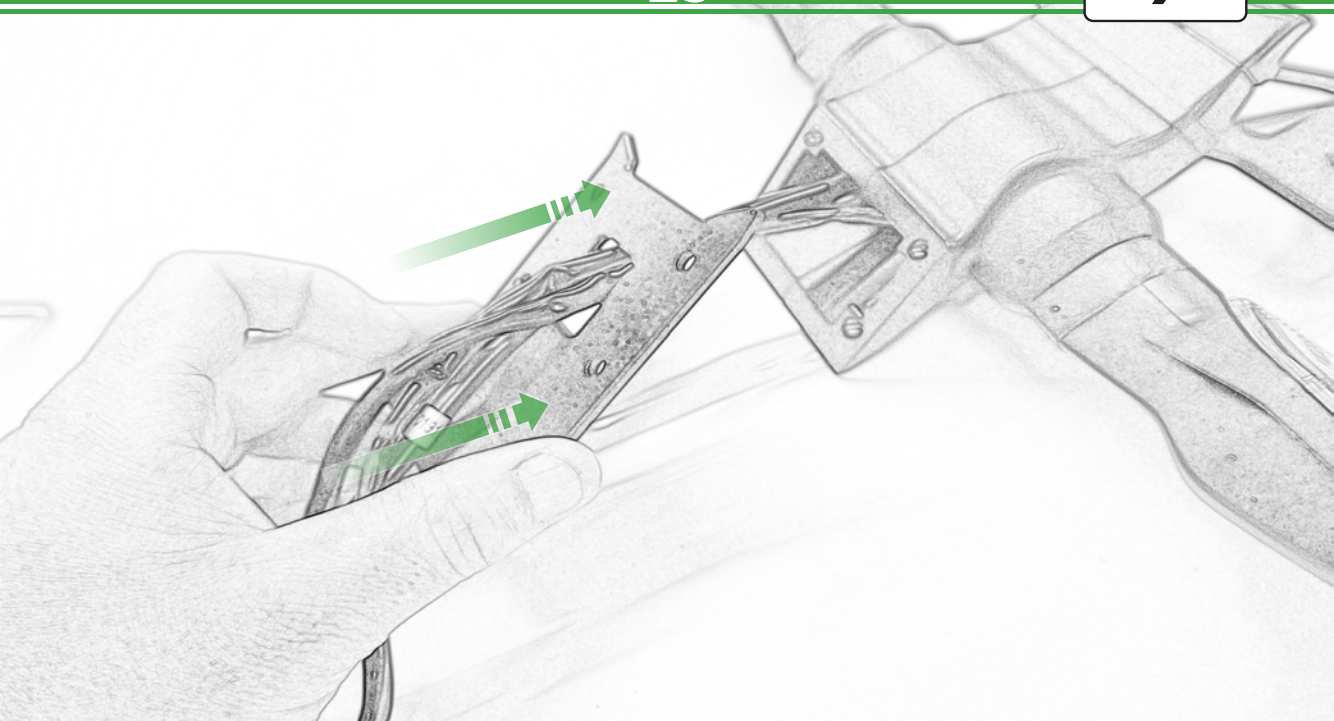

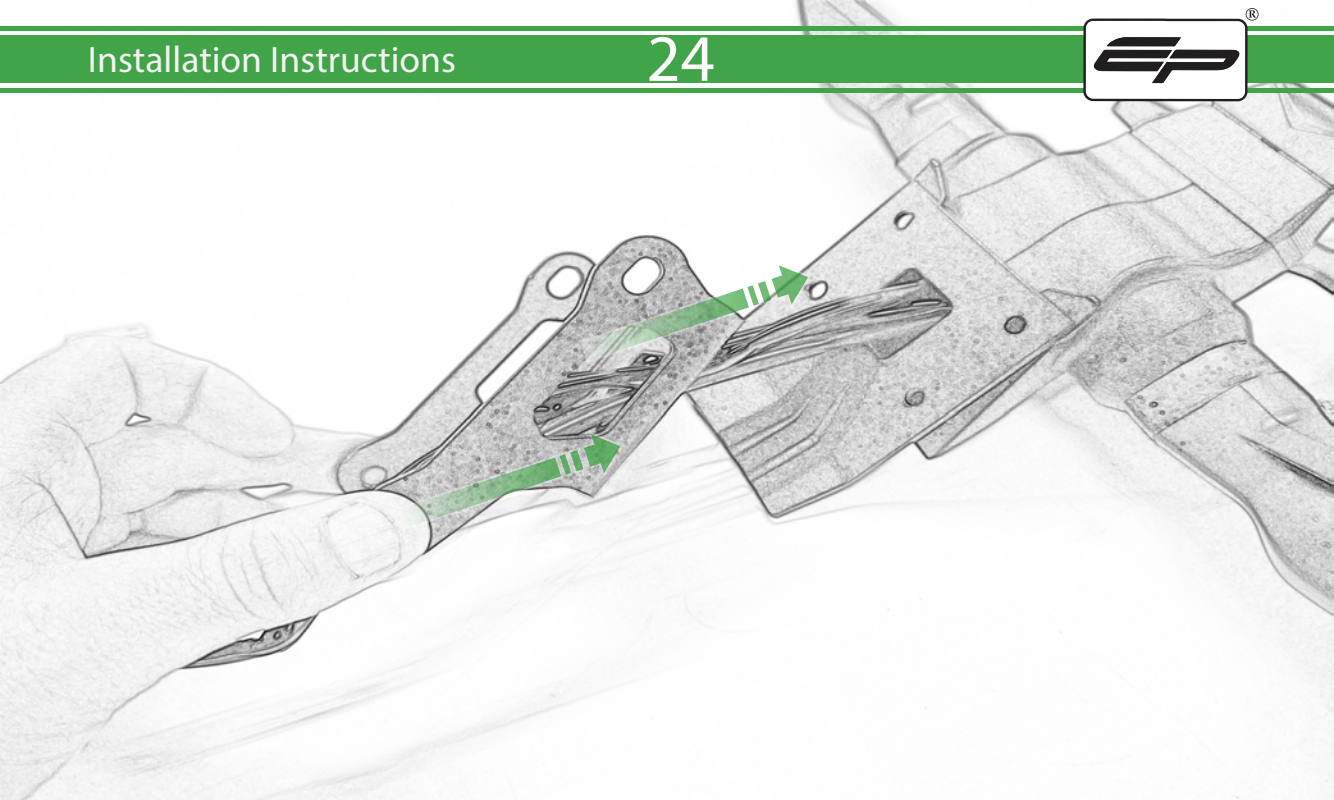


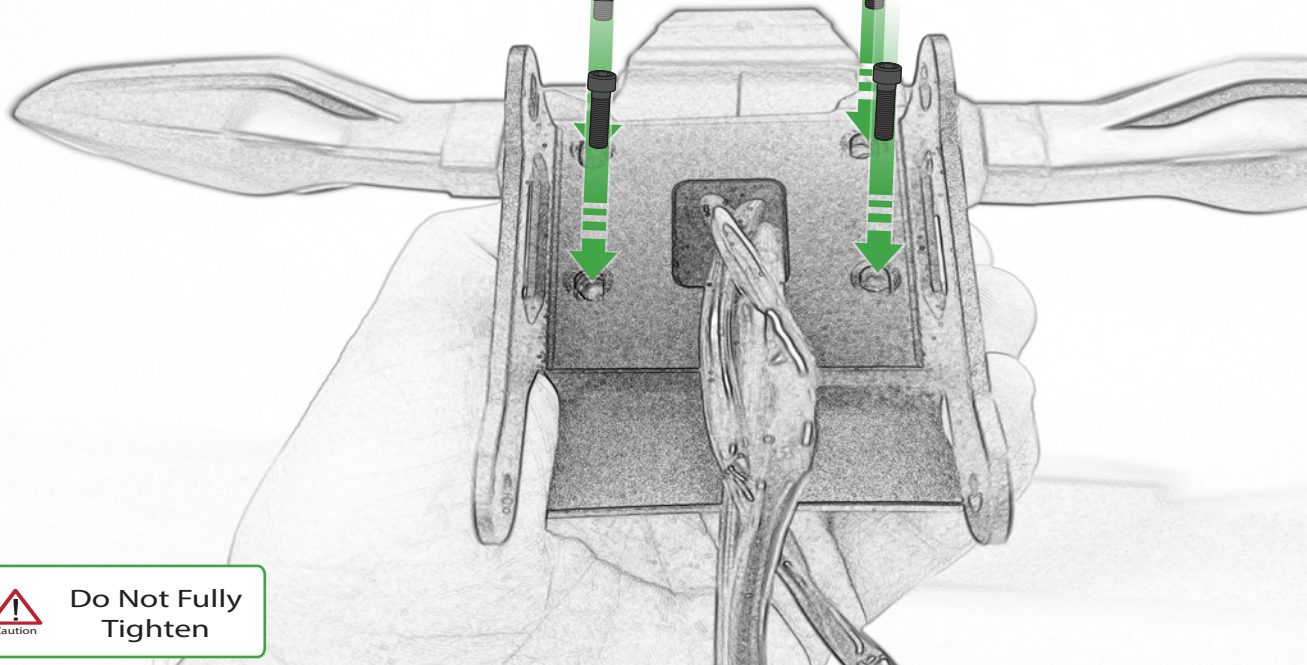

Do Not Fully Tighten

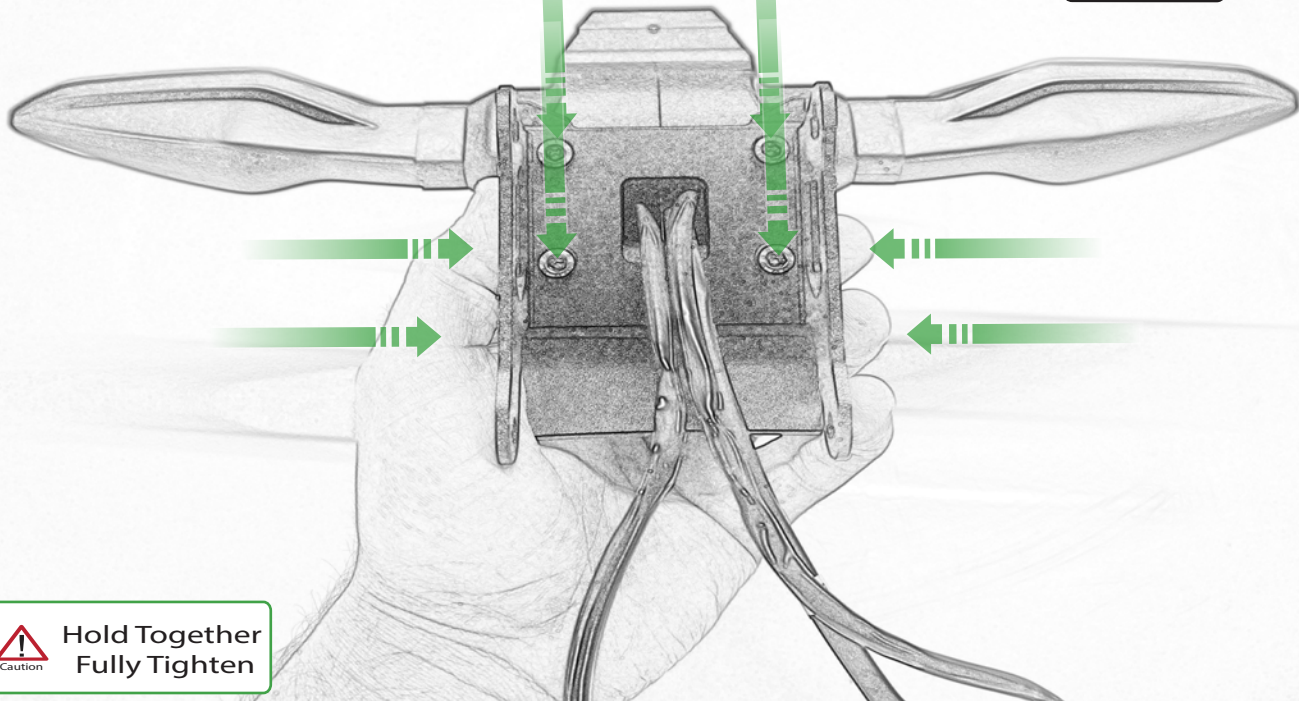



Hold Together
Fully Tighten

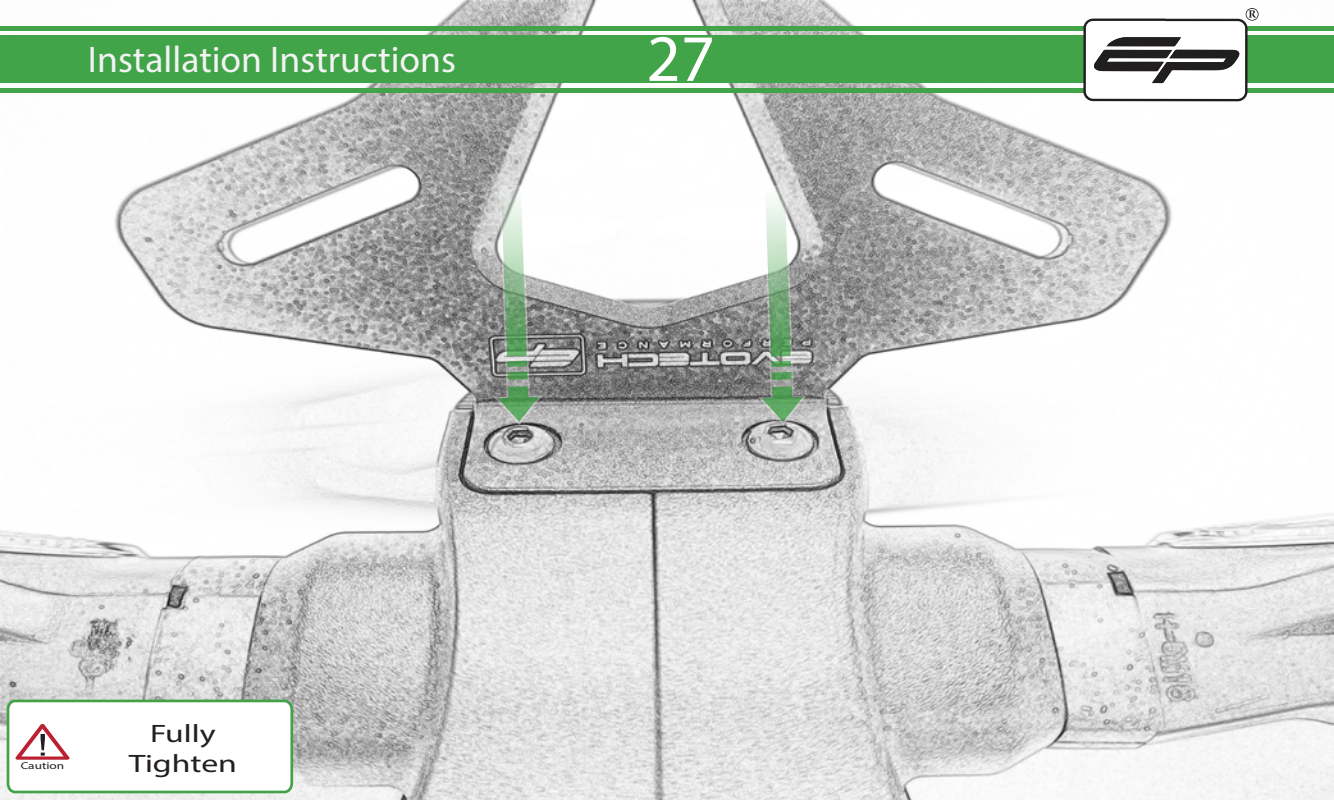

Caution

Fully
Tighten

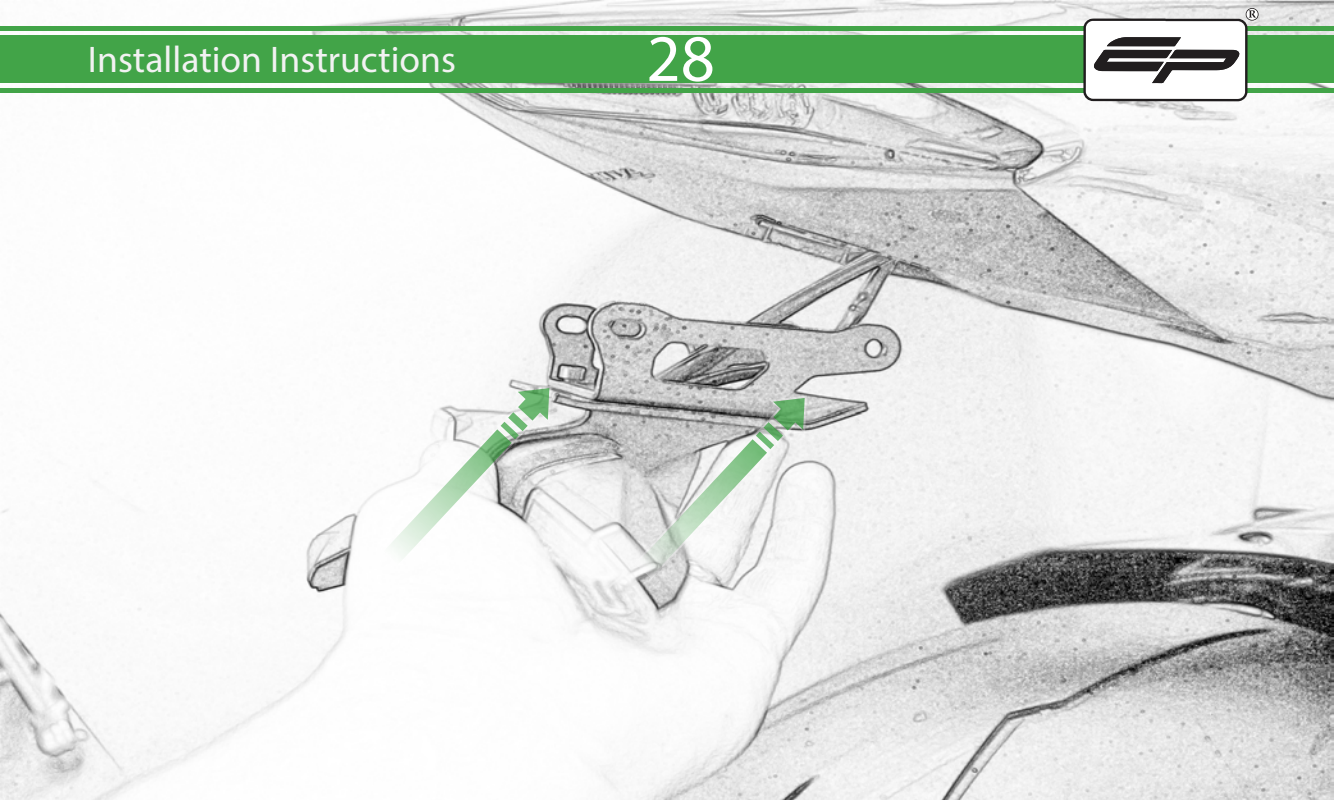

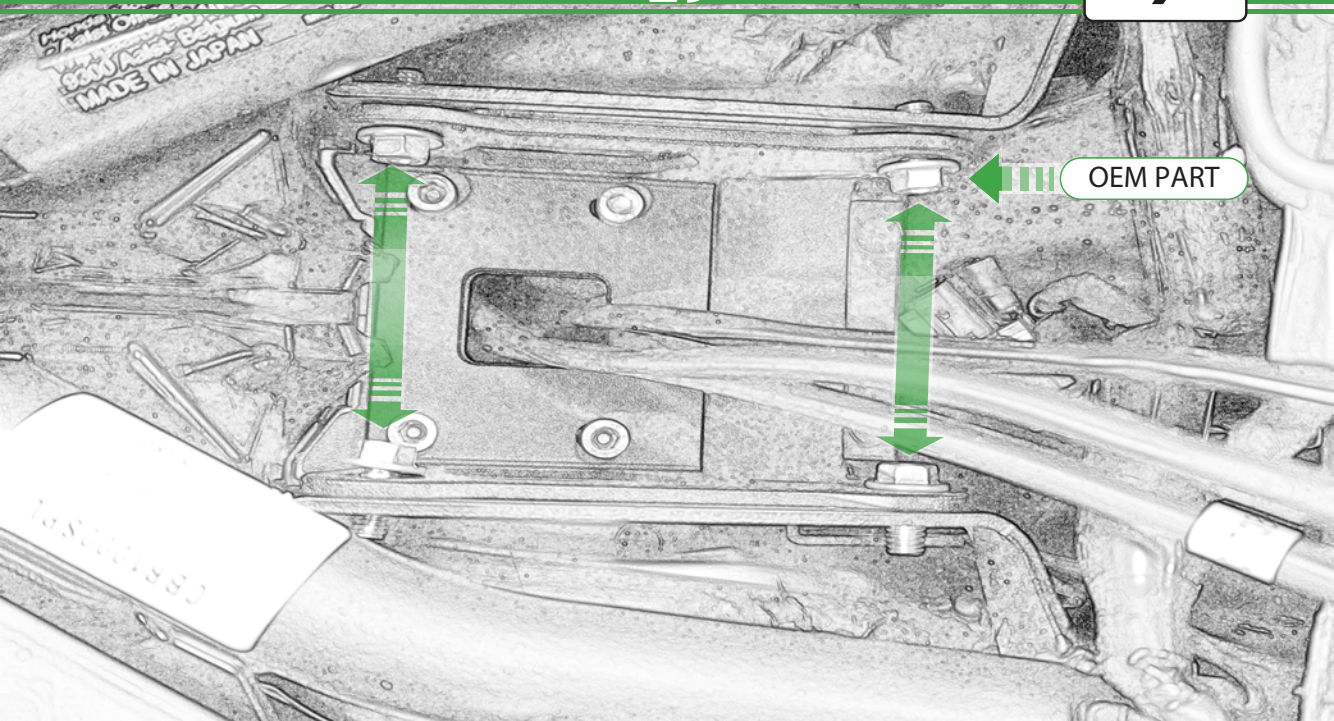

Original
Part
9300 Aset Bekas
MADE IN JAPAN

OEM PART


CSR1002501






OEM PART





Fully
Tighten

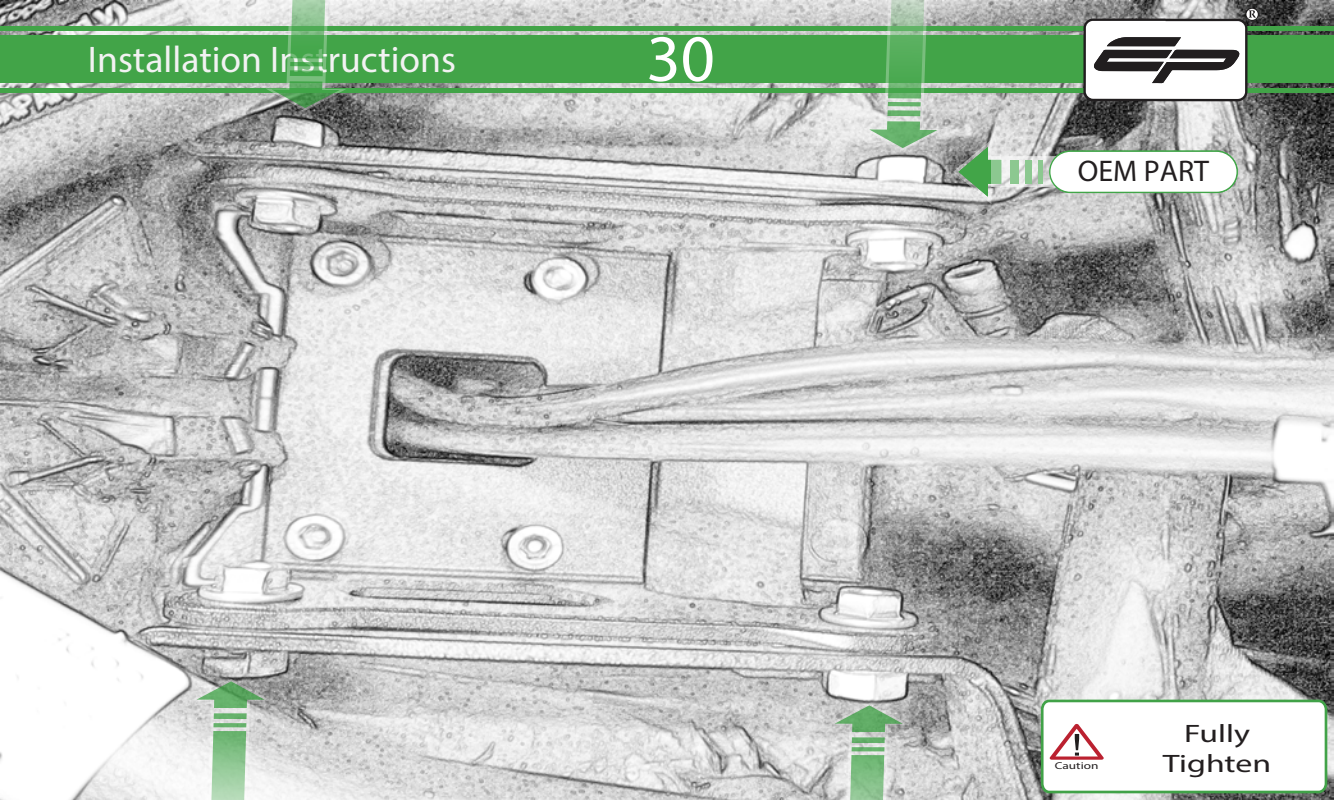


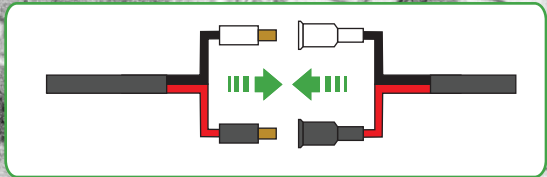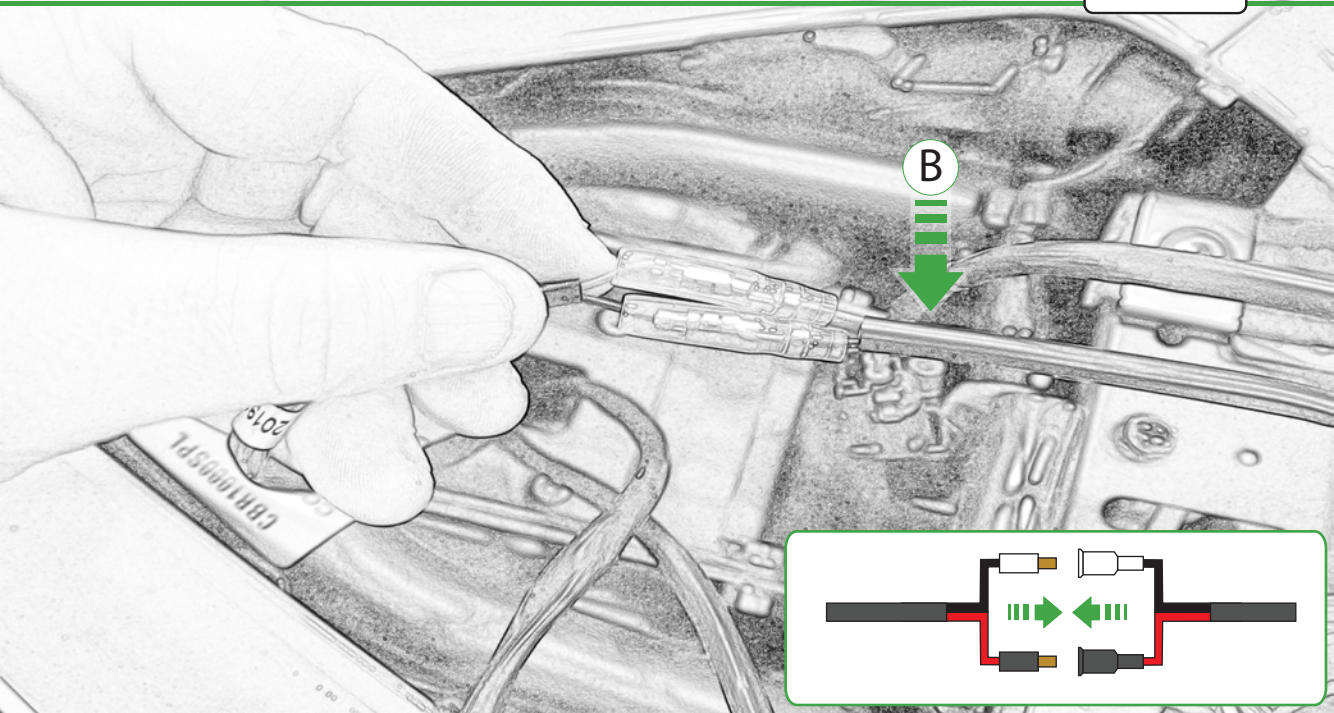

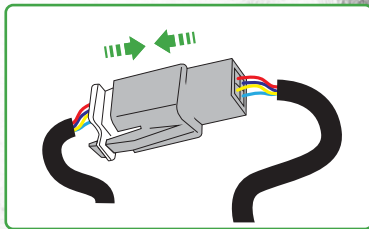

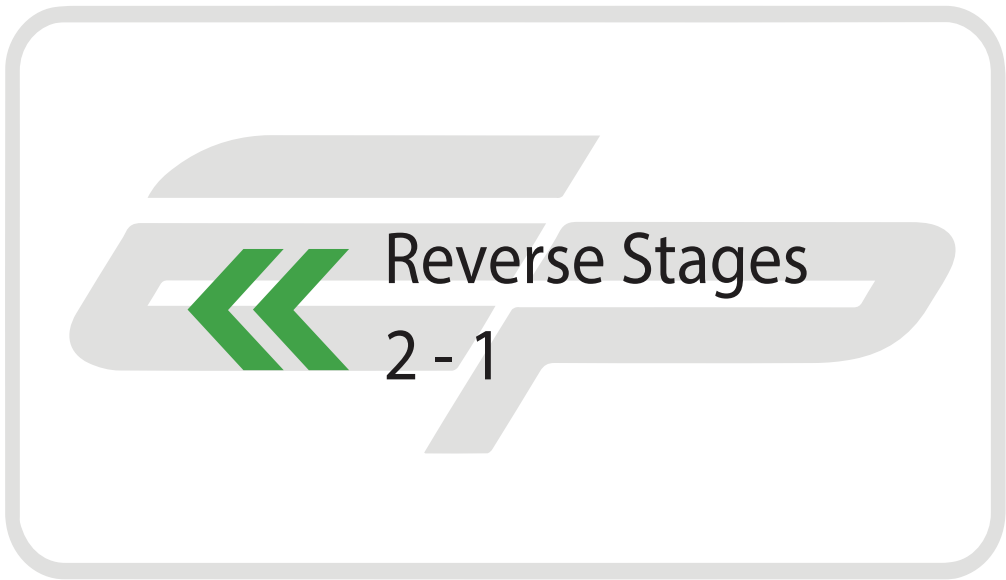

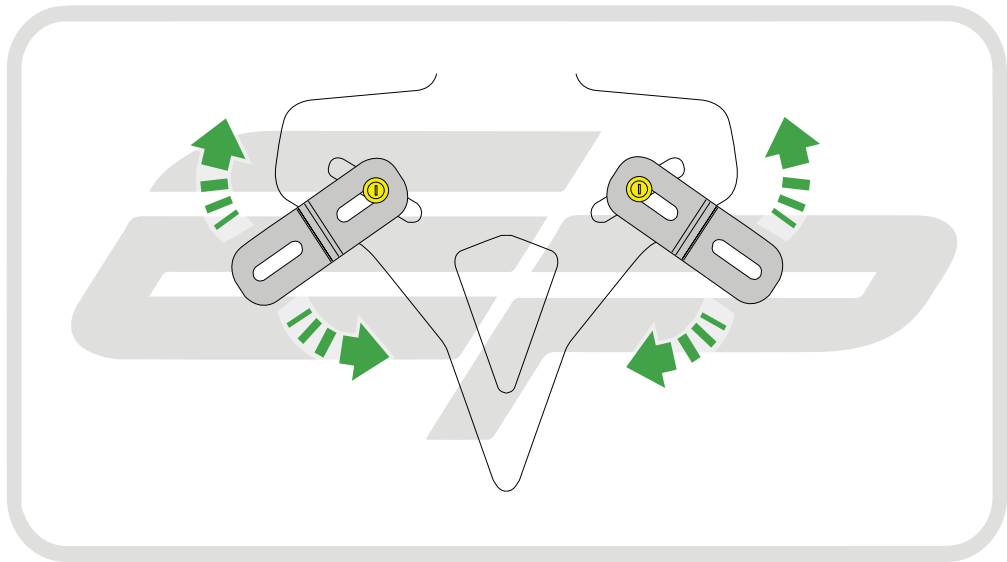

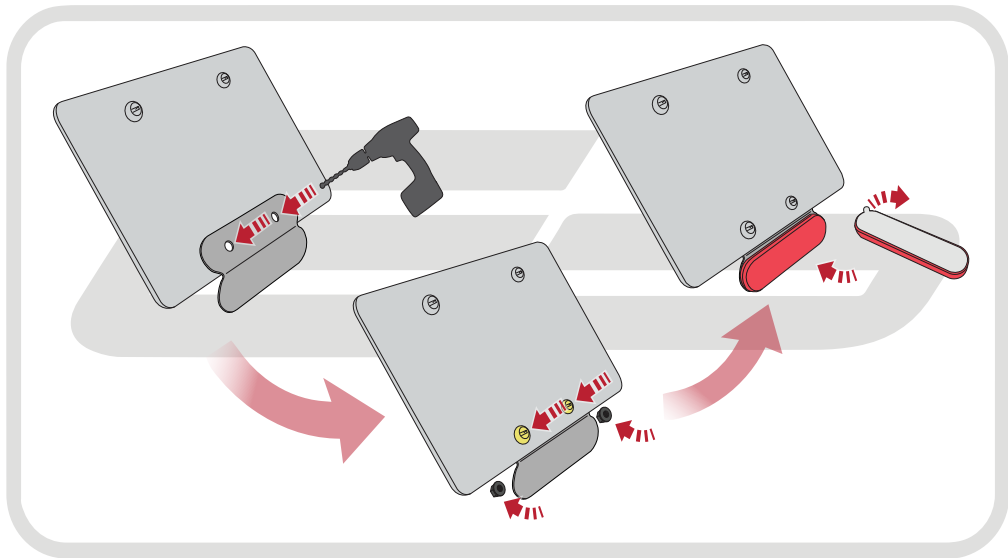



ESSENTIAL CHECKS



After installation of your tail tidy ensure that the licence plate does not contact the rear tyre when suspension is fully compressed.

Ensure all electrics including indicators, tail light, brake light and licence plate light lights are working correctly before riding the motorcycle.

It is recommended that periodic inspections are made to ensure that all fixings are fully tightend.



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com