

Panigale V4
Tail Tidy


Installation Instructions





Kit Contents PRN013868

- (A) 1 x Reflector Kit
- (B) 2 x M5 Black Washers
- © 2 x M5 x 50 Stainless Steel Button Head Bolts
- 2 x M5 x 16 Black Button Head Bolts
- © 2 x M4 x 12 Black Button Head Bolts
- F) 2 x M5 x 12 Black Countersunk Screws
- © 2 x Indicator Adaptors
- H 2 x 4mm x 18mm Dowel Pin
- 1 2 x Black Spacers
- J 4 x M4 x 10 Stainless Steel Button Head Bolts
- € 4 x Indicator Clamps



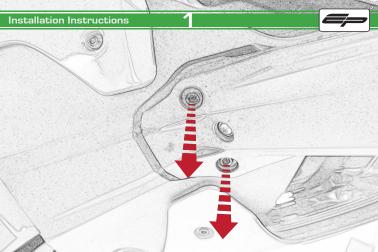


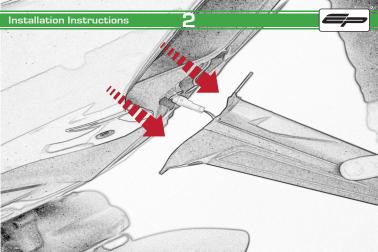


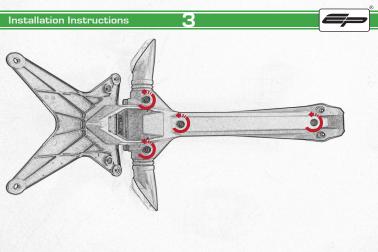







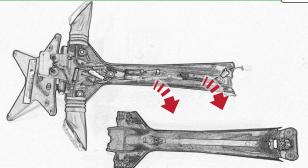

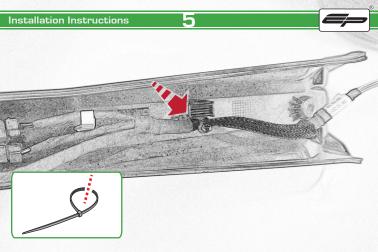


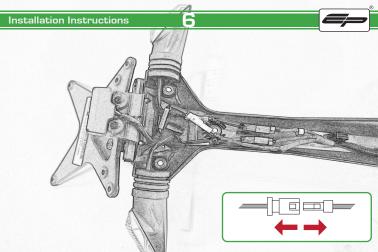

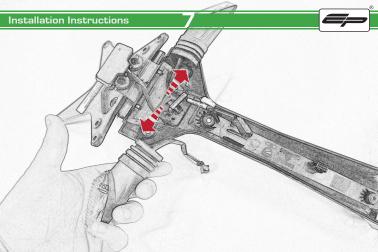






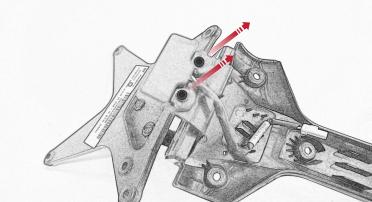



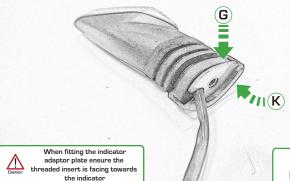

Repeat Both Sides









Repeat Both Sides







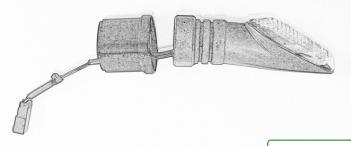


Repeat Both Sides

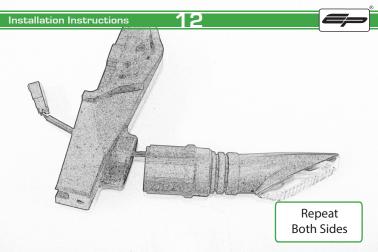


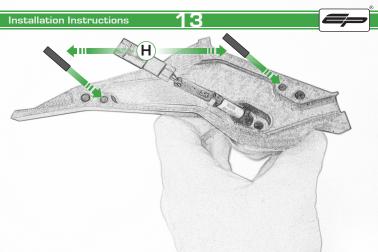

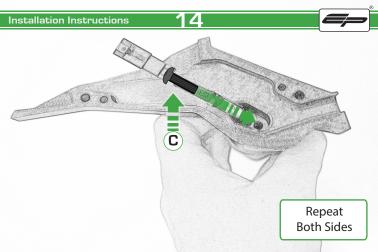





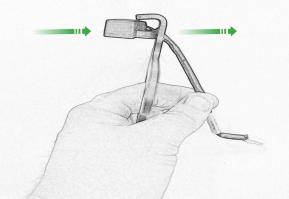








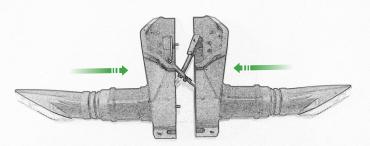

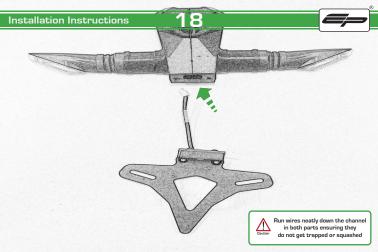


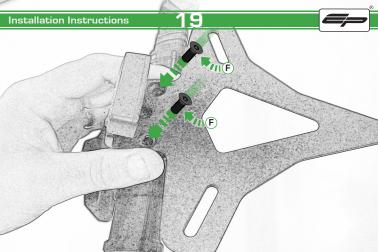


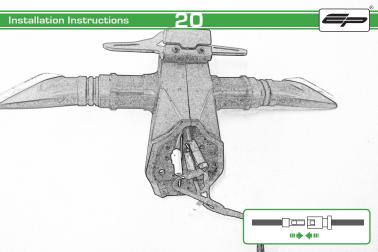


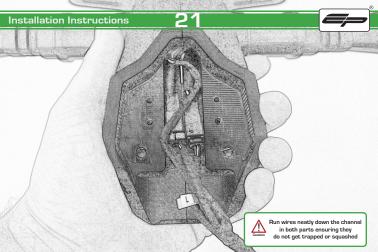




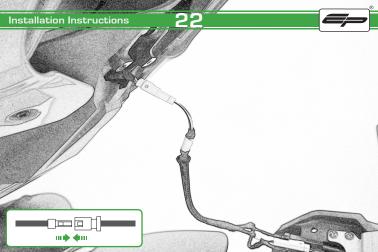

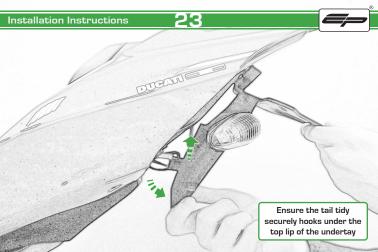

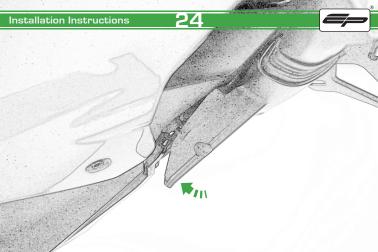

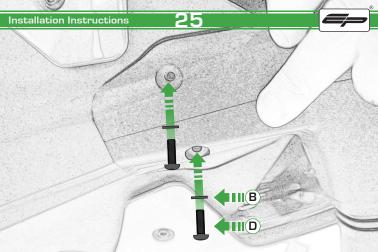






After installation of your tail tidy ensure that the licence plate does not contact the rear tyre when suspension is fully compressed.

Ensure all electrics including indicators, tail light, brake light and licence plate light lights are working correctly before riding the motorcycle.

It is recommended that periodic inspections are made to ensure that all fixings are fully tightend.






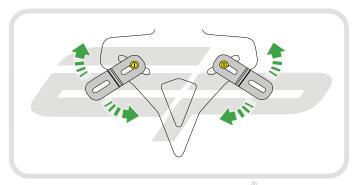





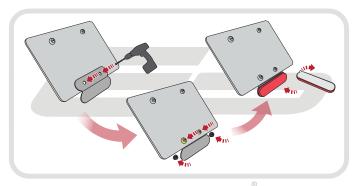





www.evotech-performance.com