



**EVOTECH**®  
P E R F O R M A N C E

[www.evotech-performance.com](http://www.evotech-performance.com)

Triumph Tiger 660 Sport  
Tail Tidy





- (A) 2 x Indicator Stems
- (B) 2 x M6 x 60 Caphead Bolt
- (C) 2 x M6 x 12mm Black Button Head Bolt
- (D) 2 x M6 x 16mm Caphead Bolt
- (E) 4 x M4 x 5mm Black Button Head Bolt


EVOTECH<sup>®</sup>  
P E R F O R M A N C E







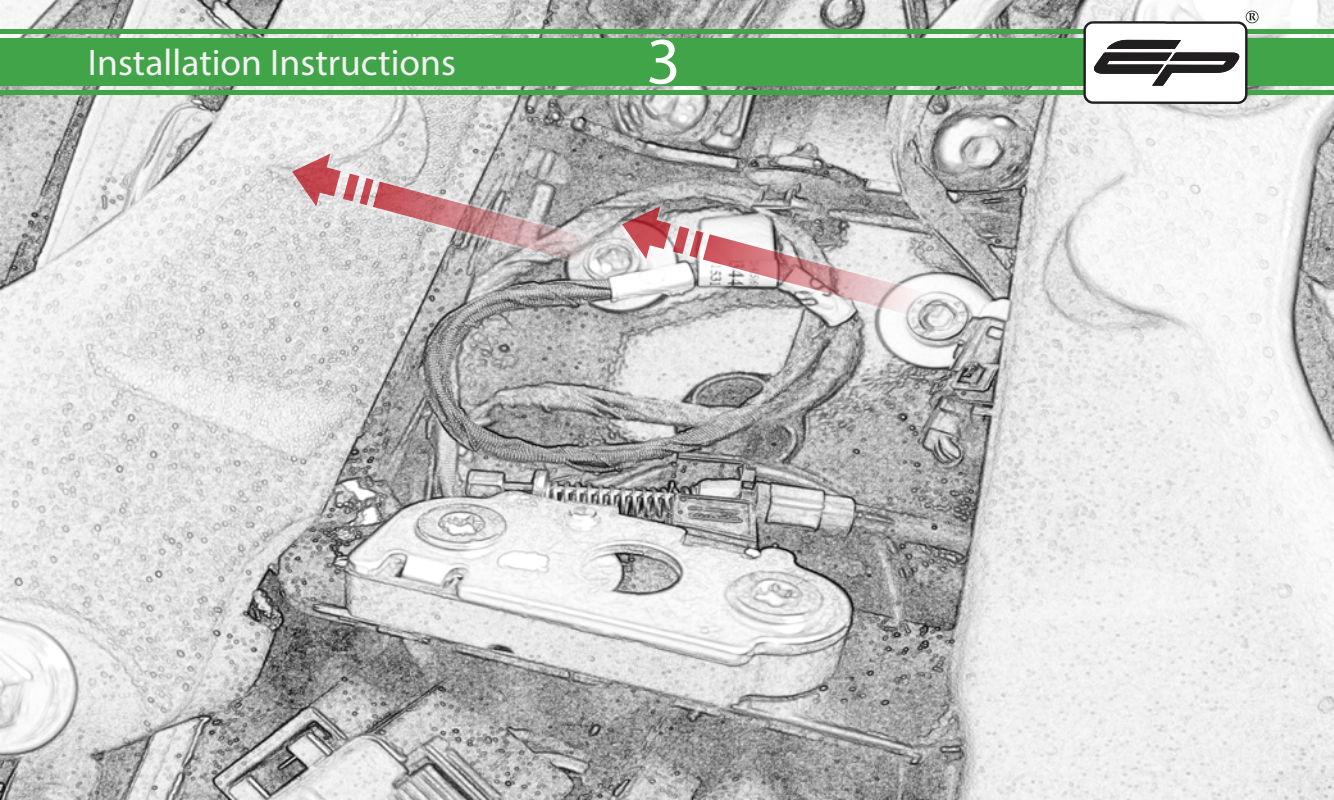


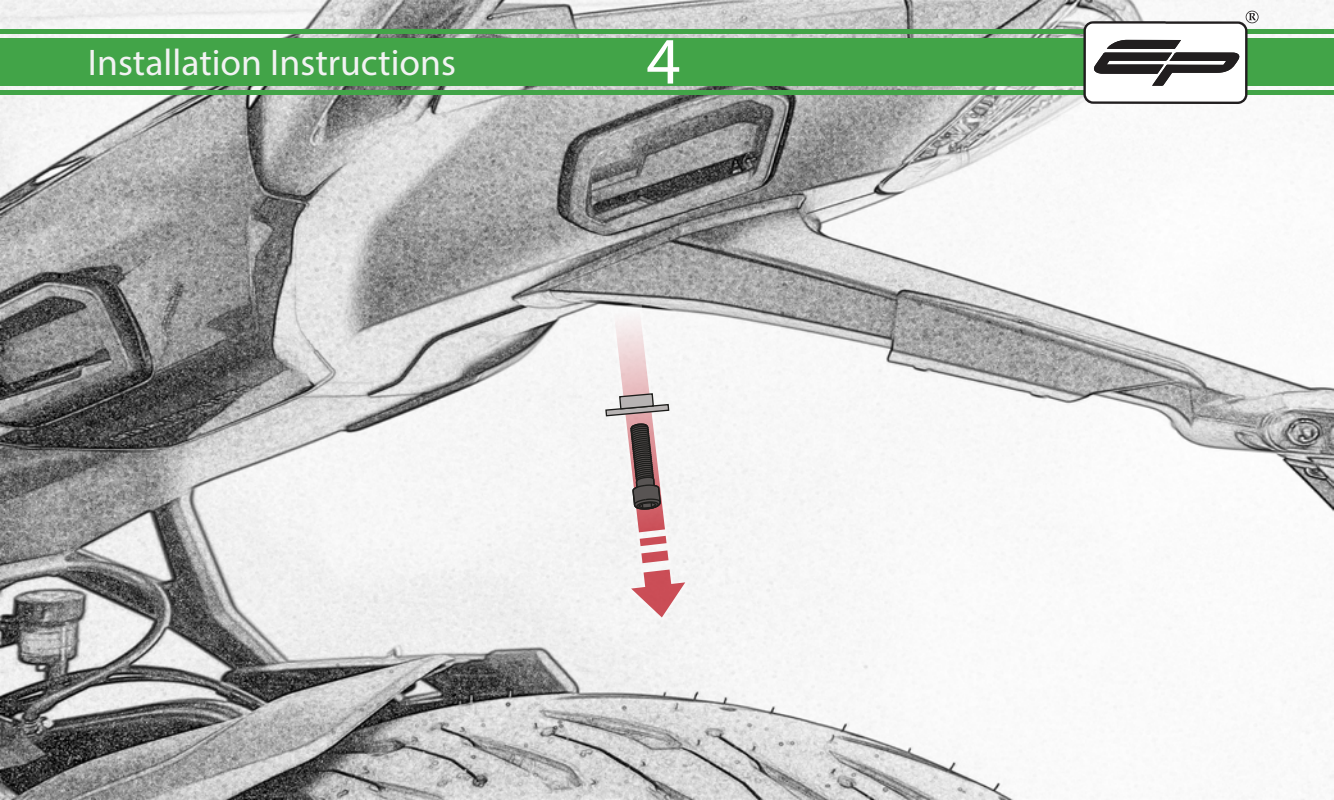


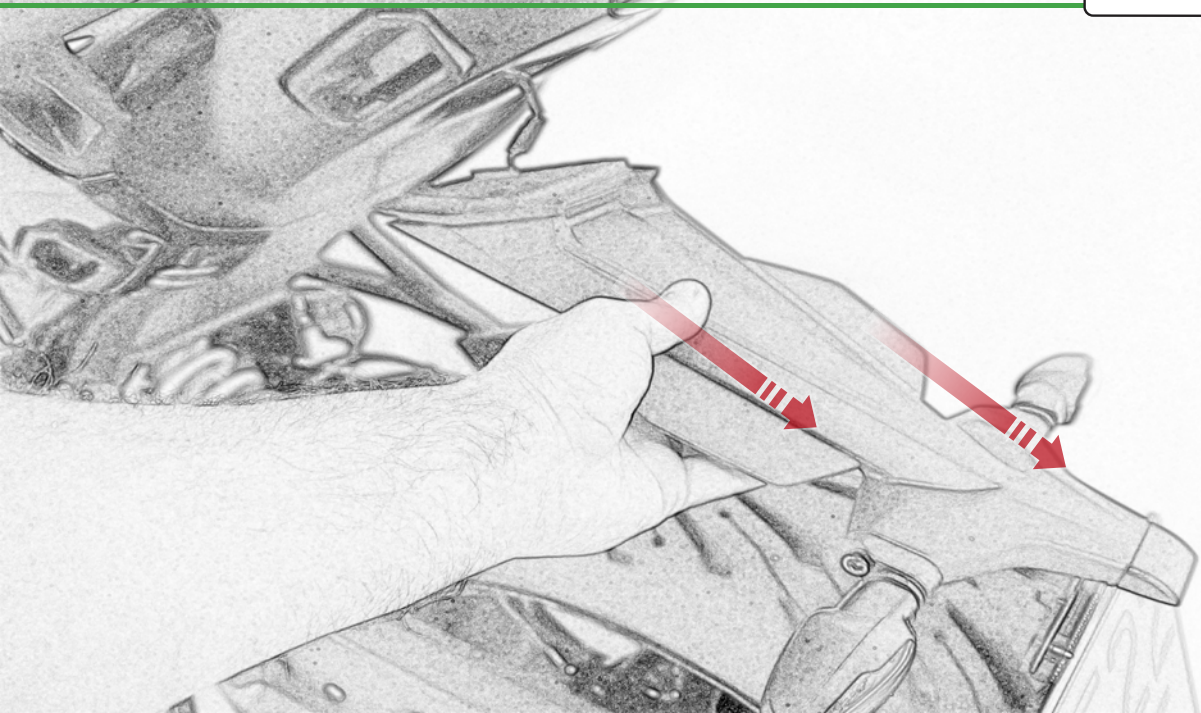


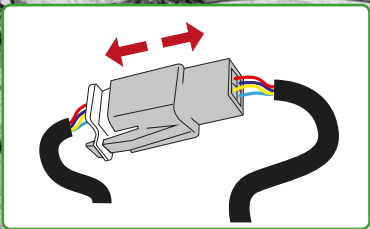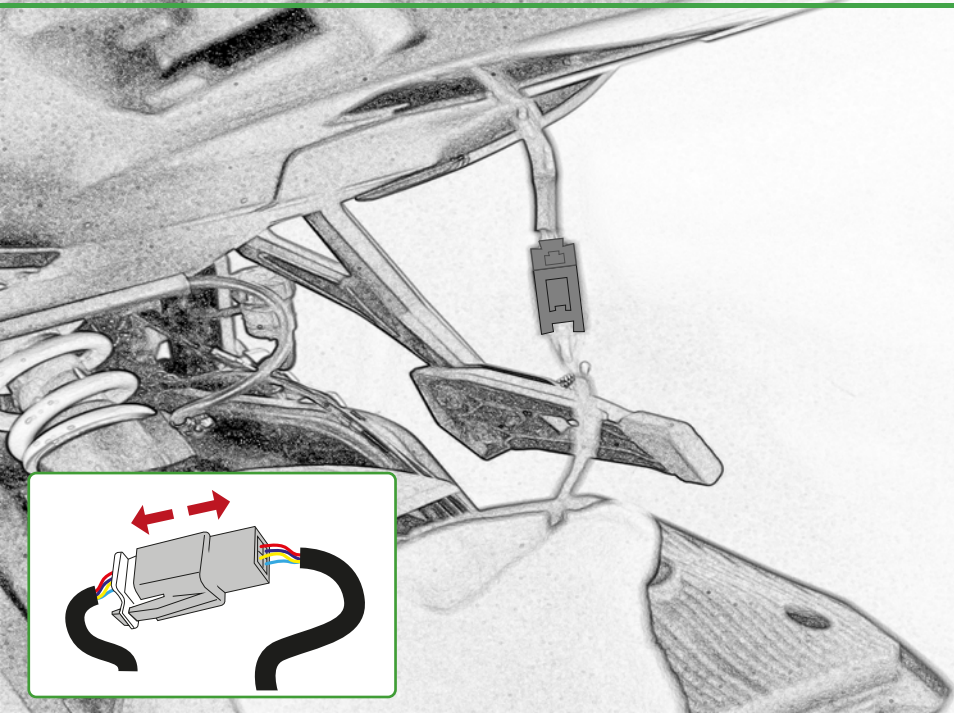




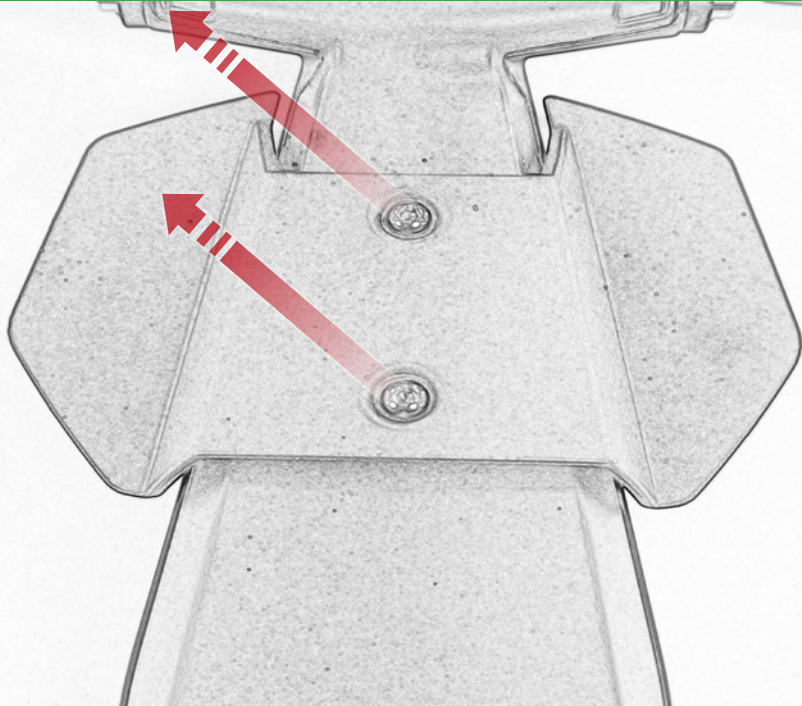


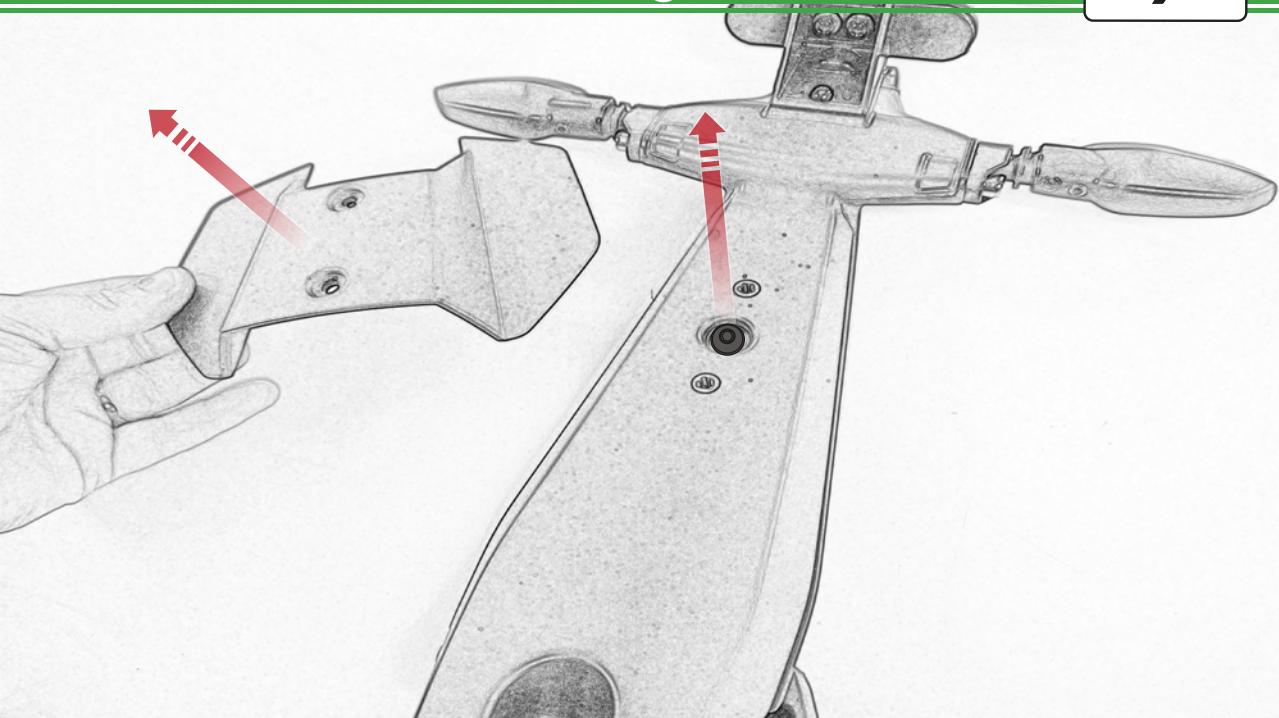



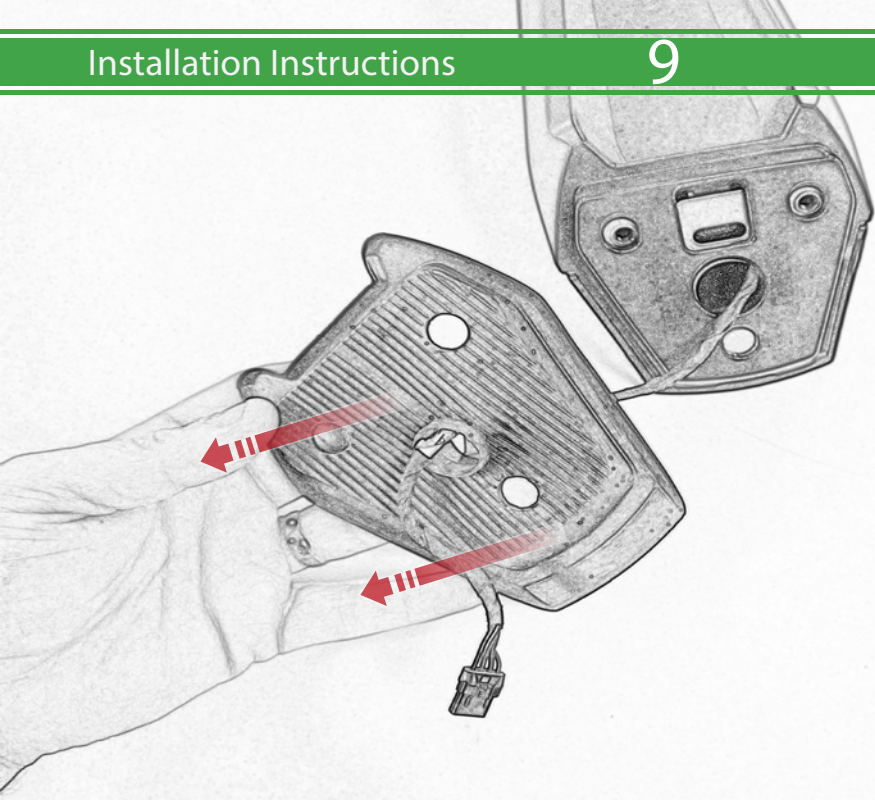


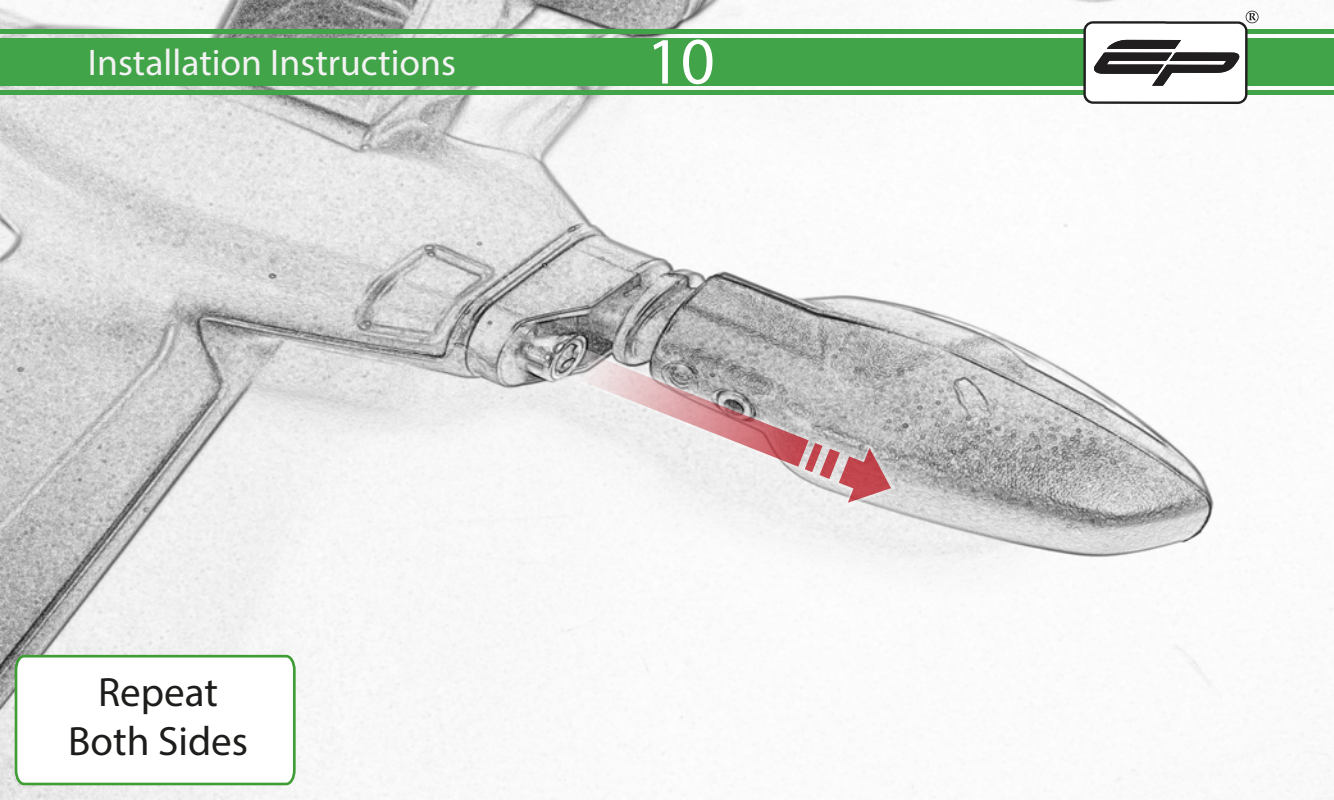


Repeat  
Both Sides

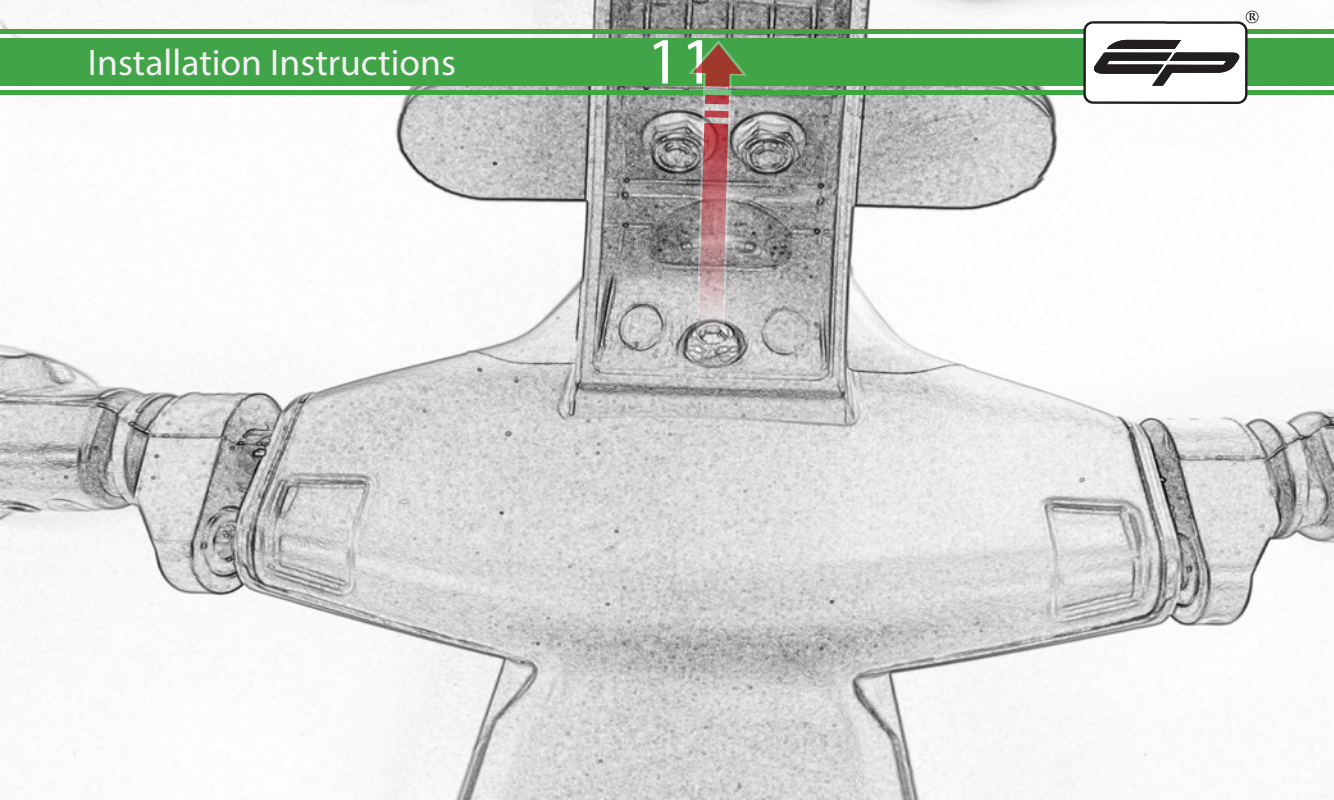

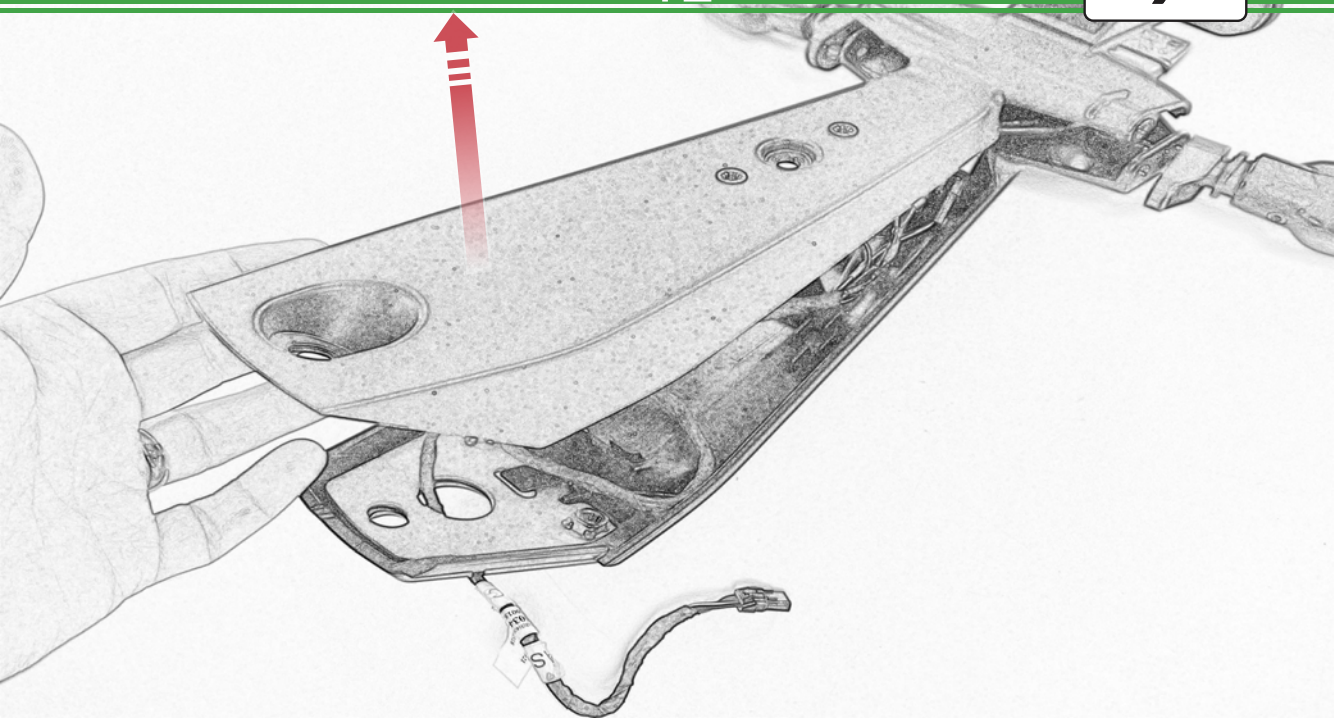


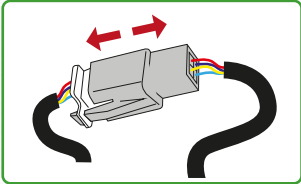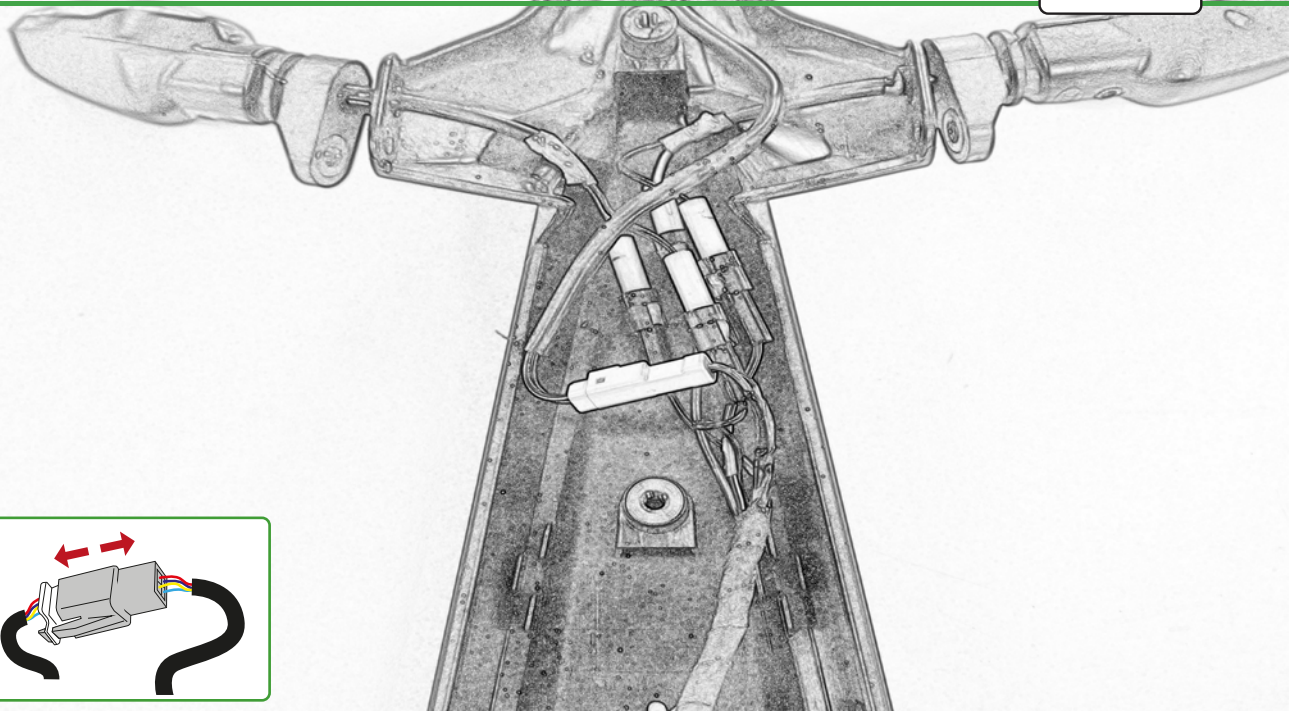


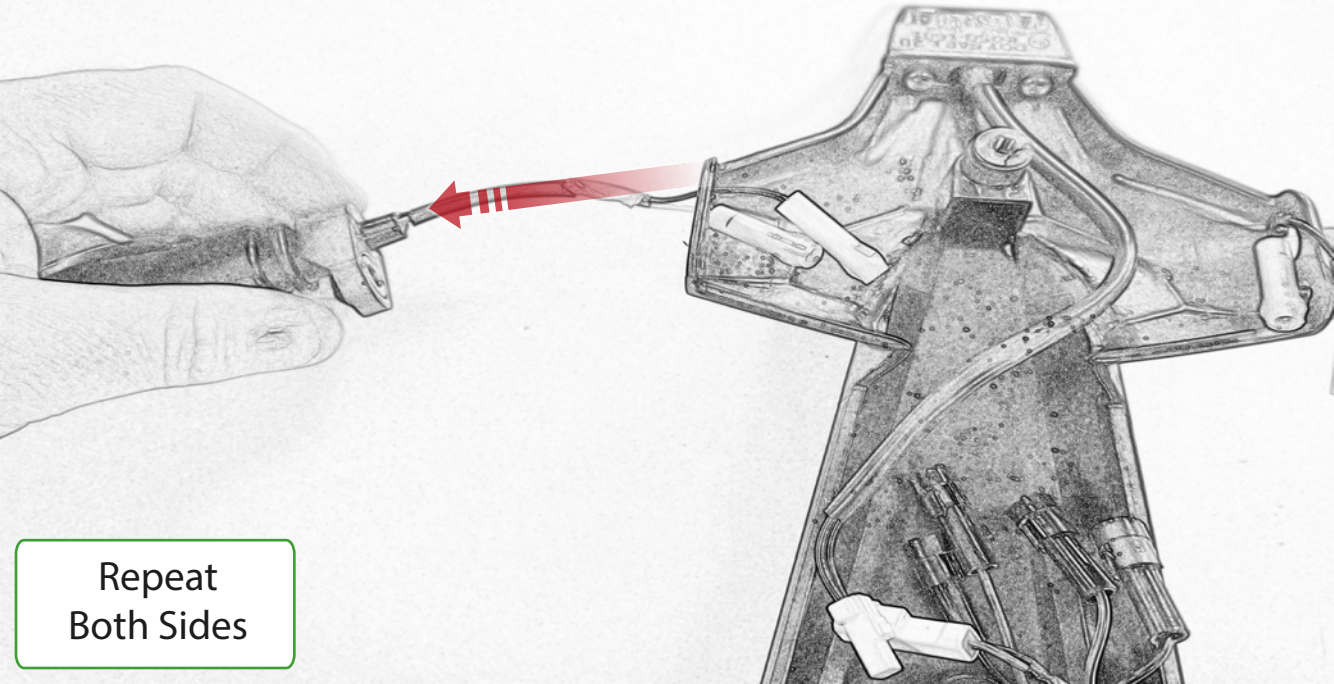


Repeat  
Both Sides




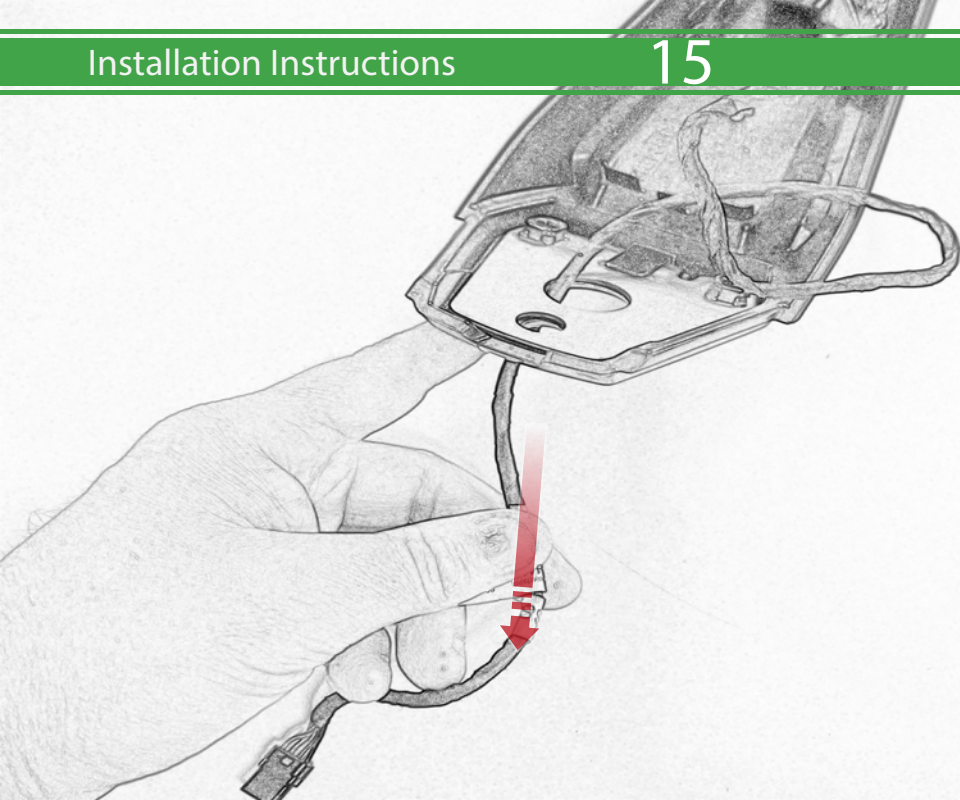

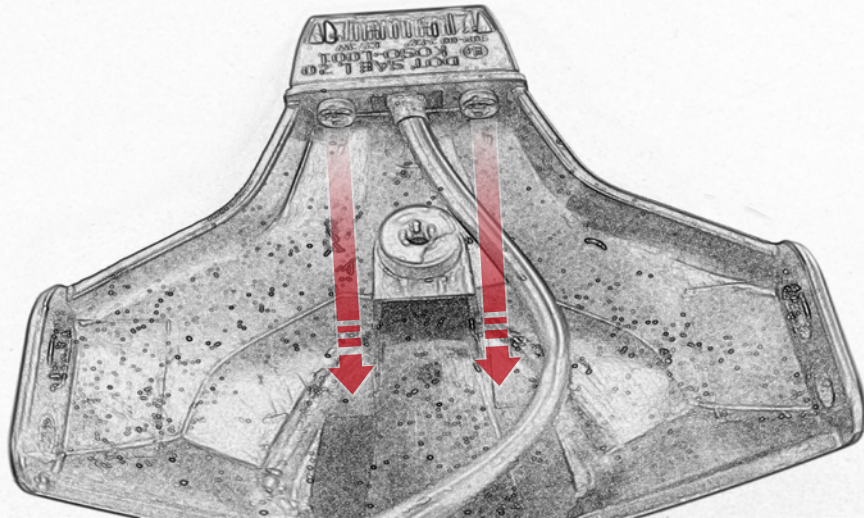


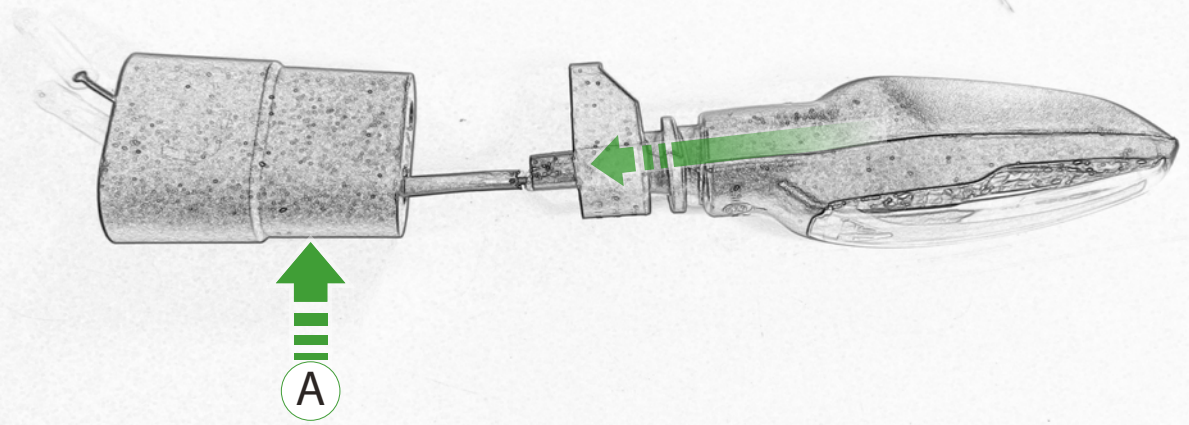


Repeat  
Both Sides

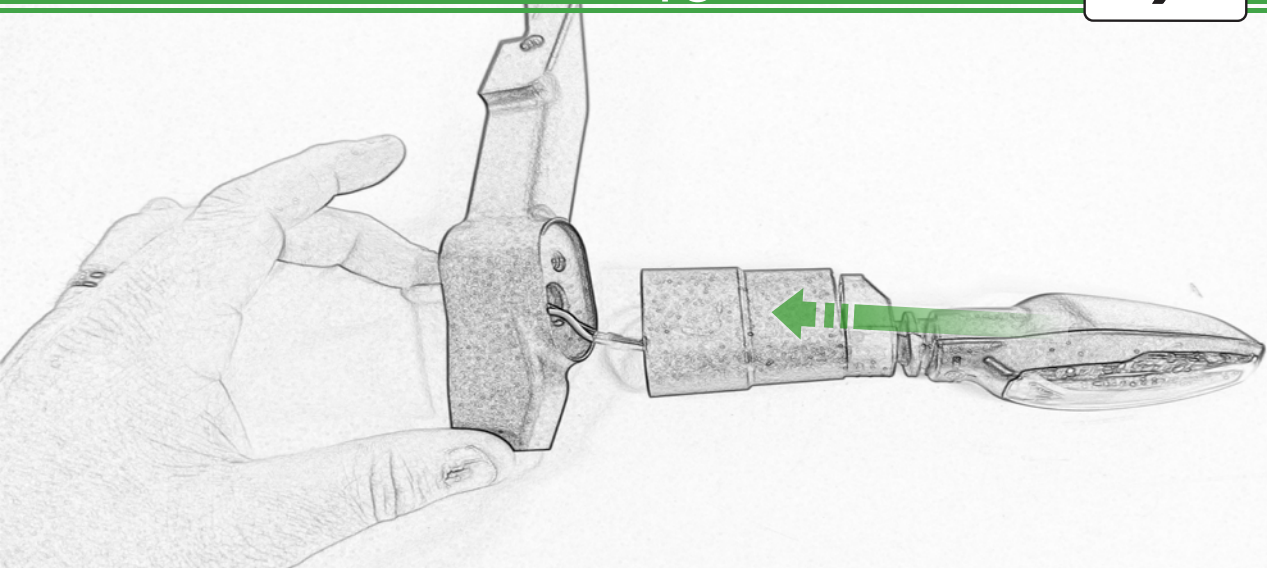




Repeat  
Both Sides

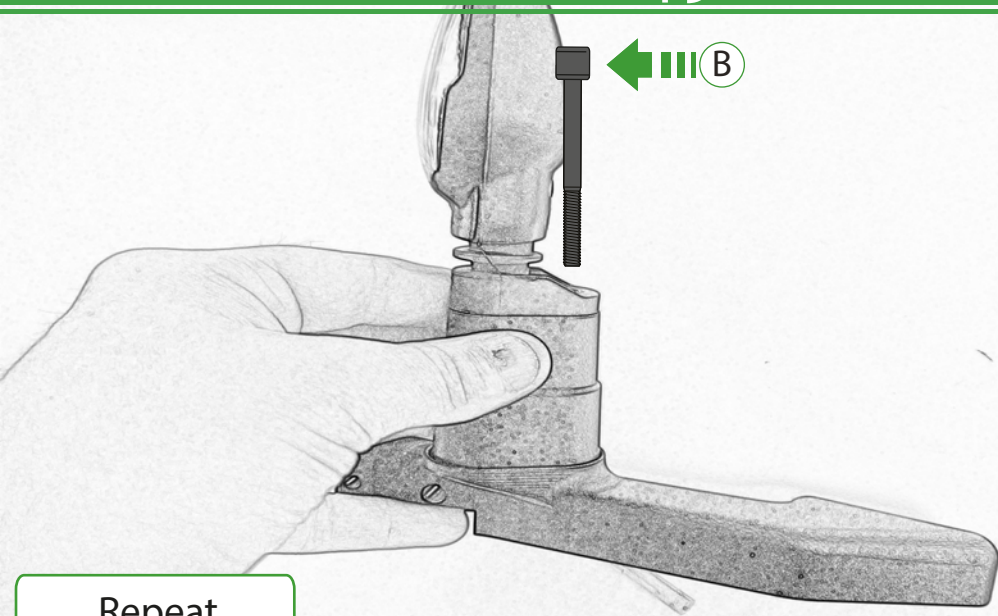


Repeat  
Both Sides

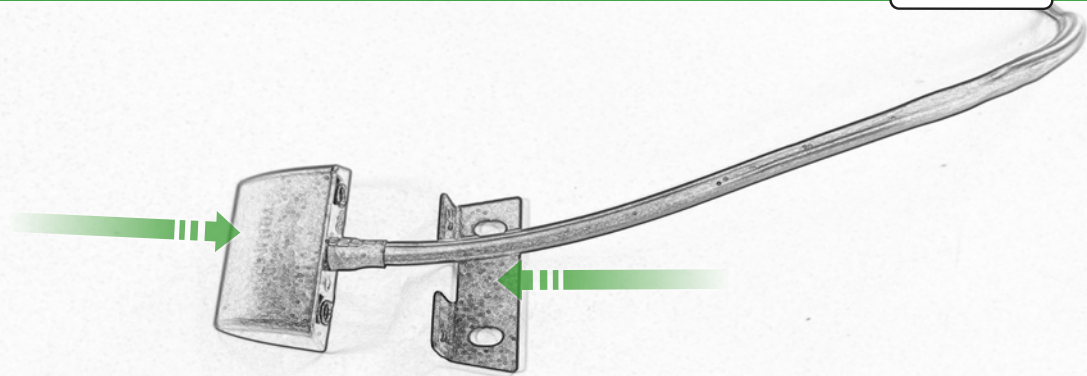


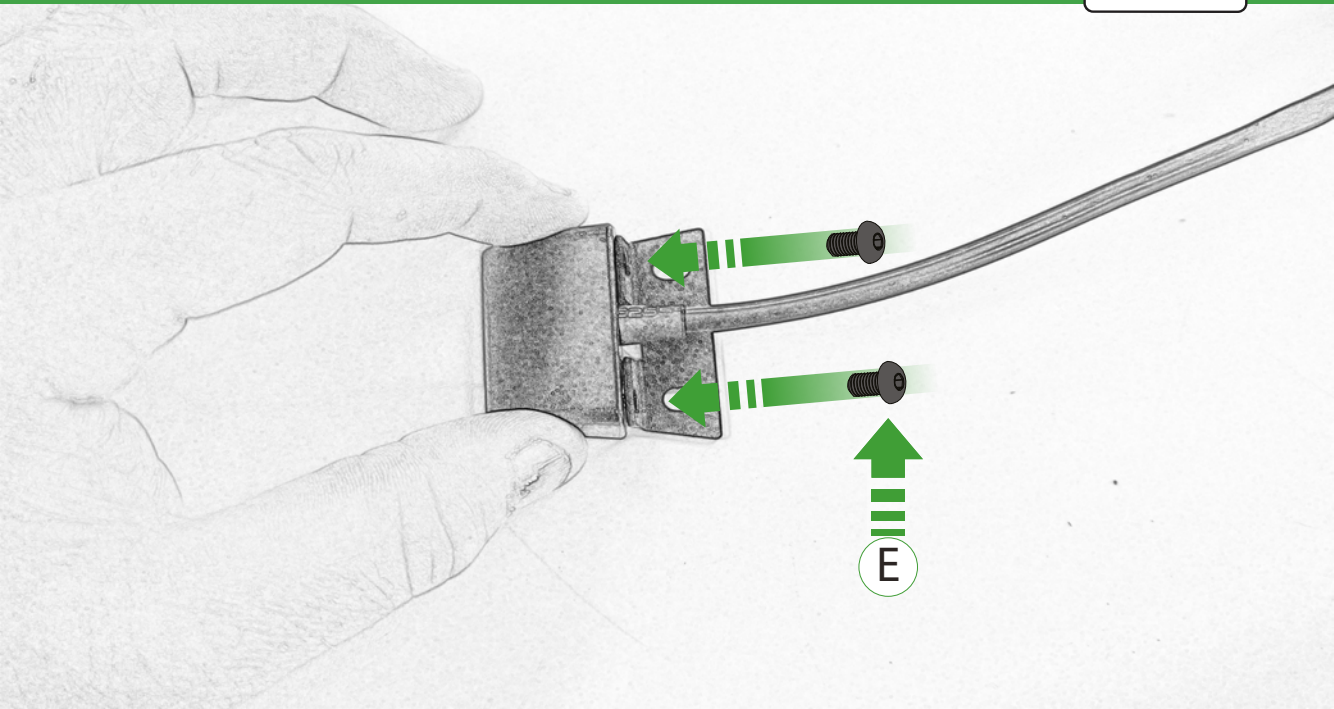


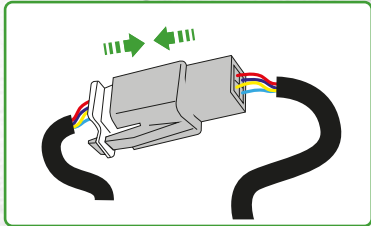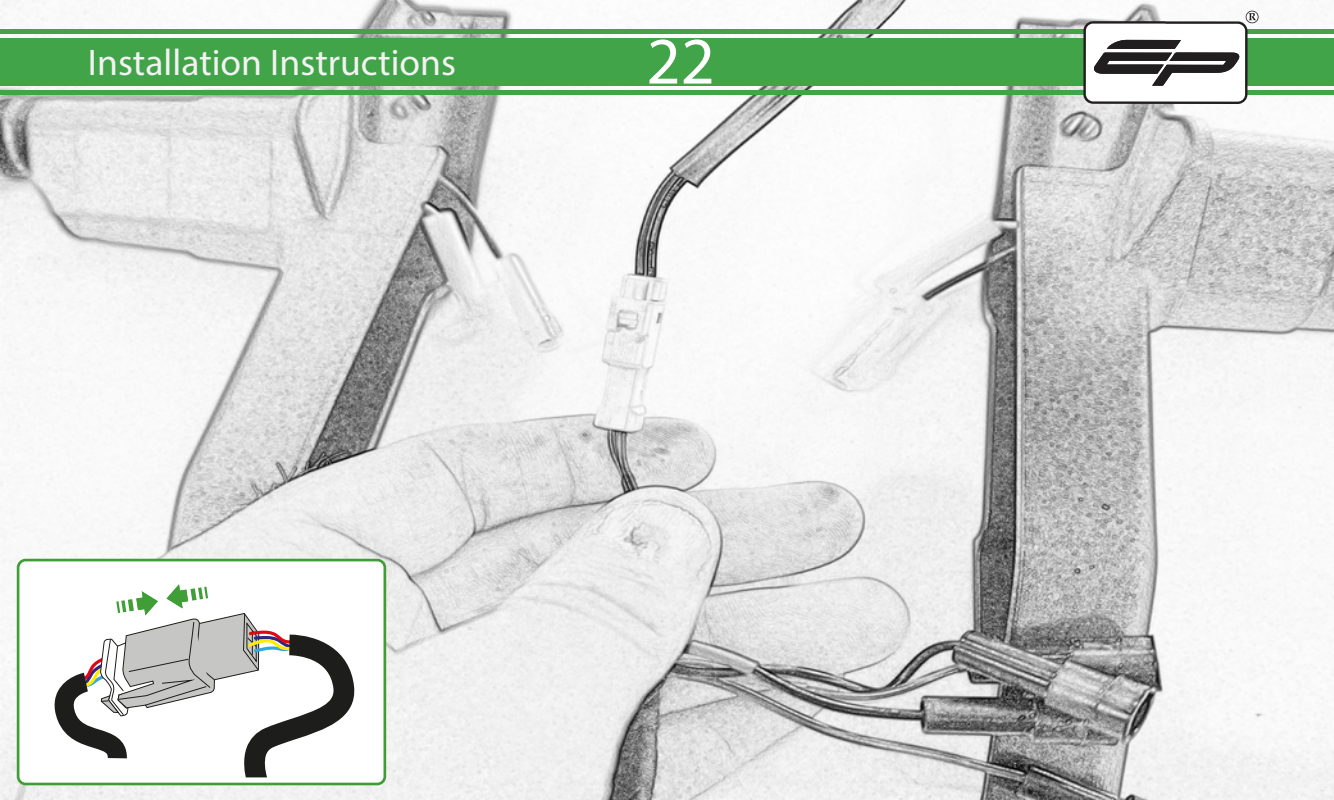





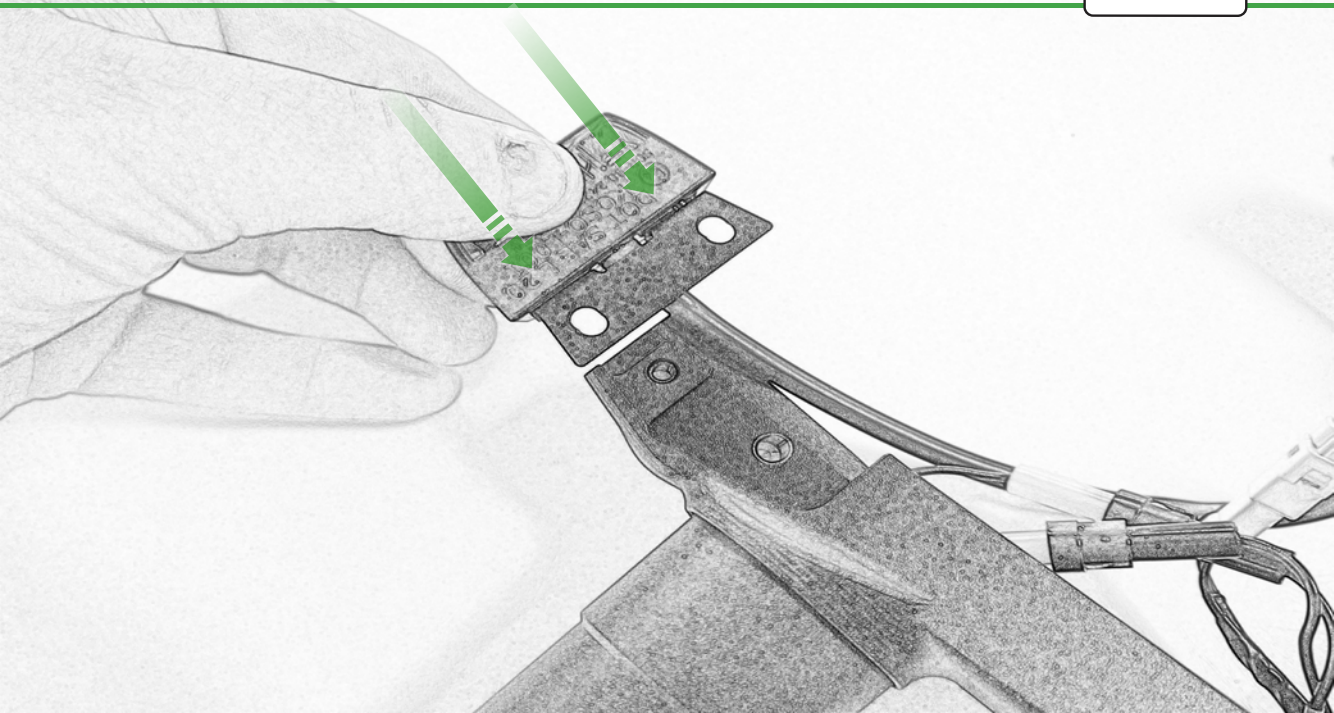


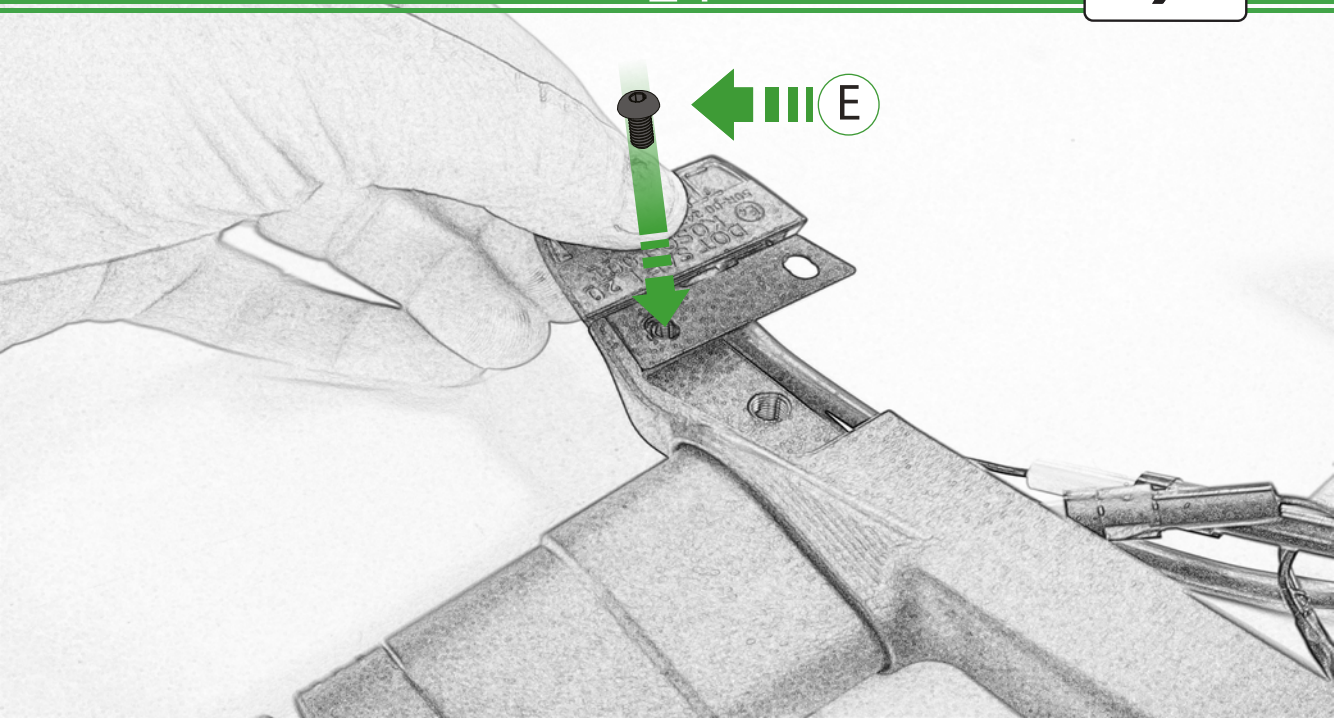


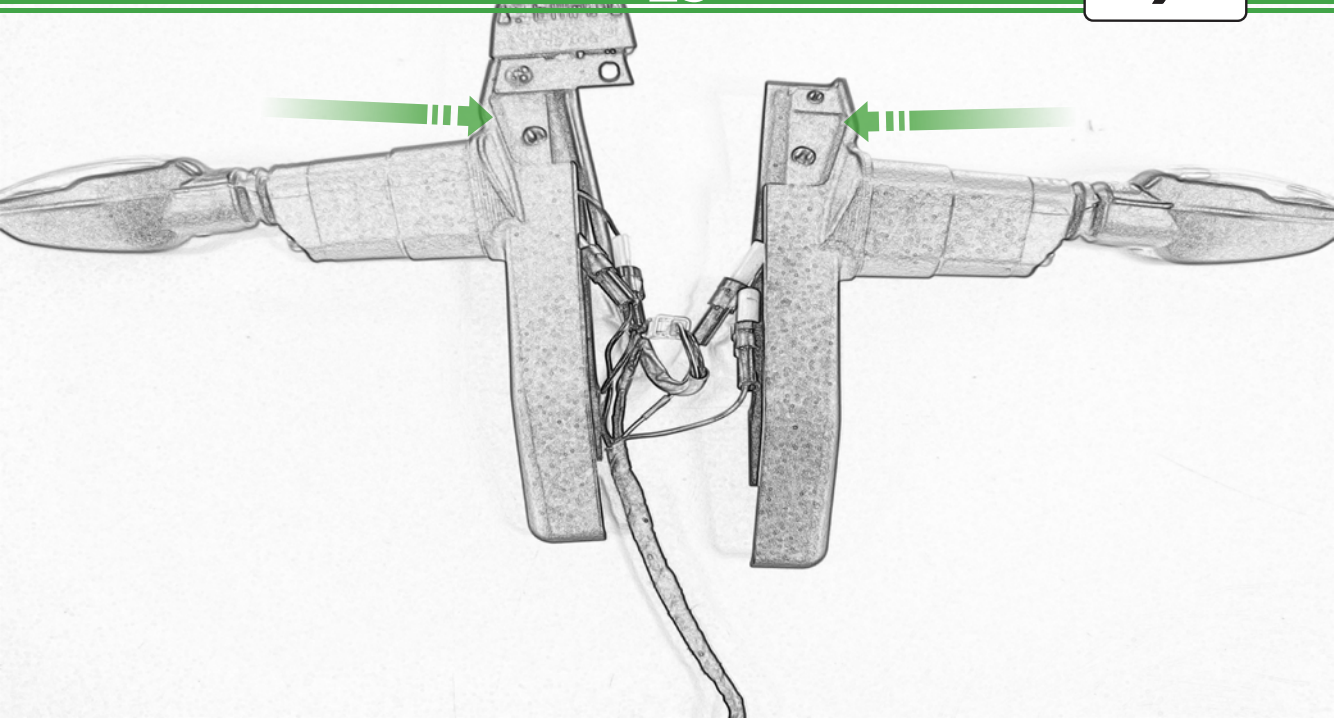


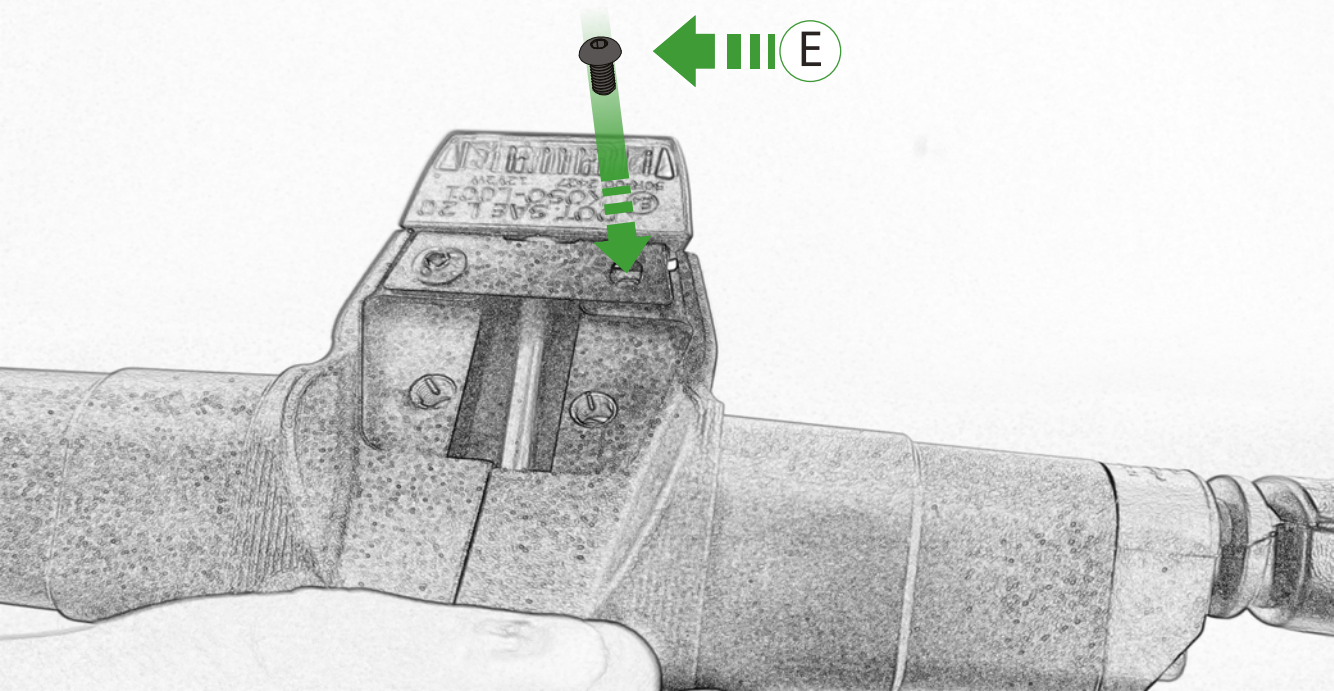

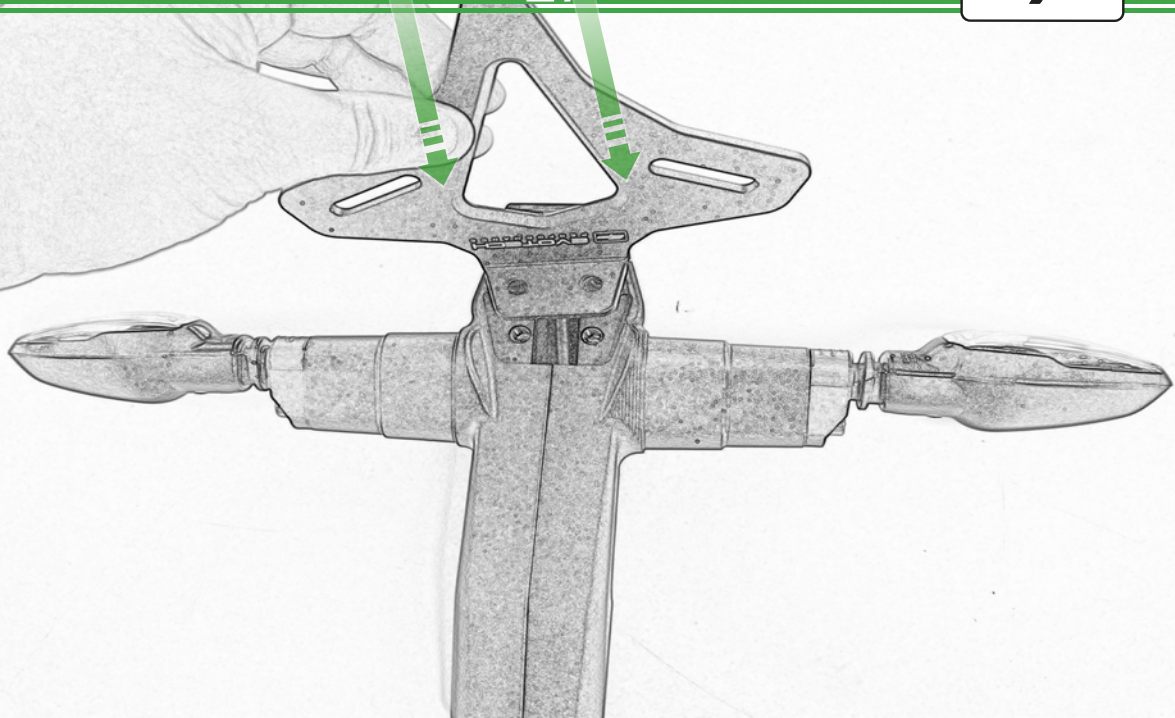



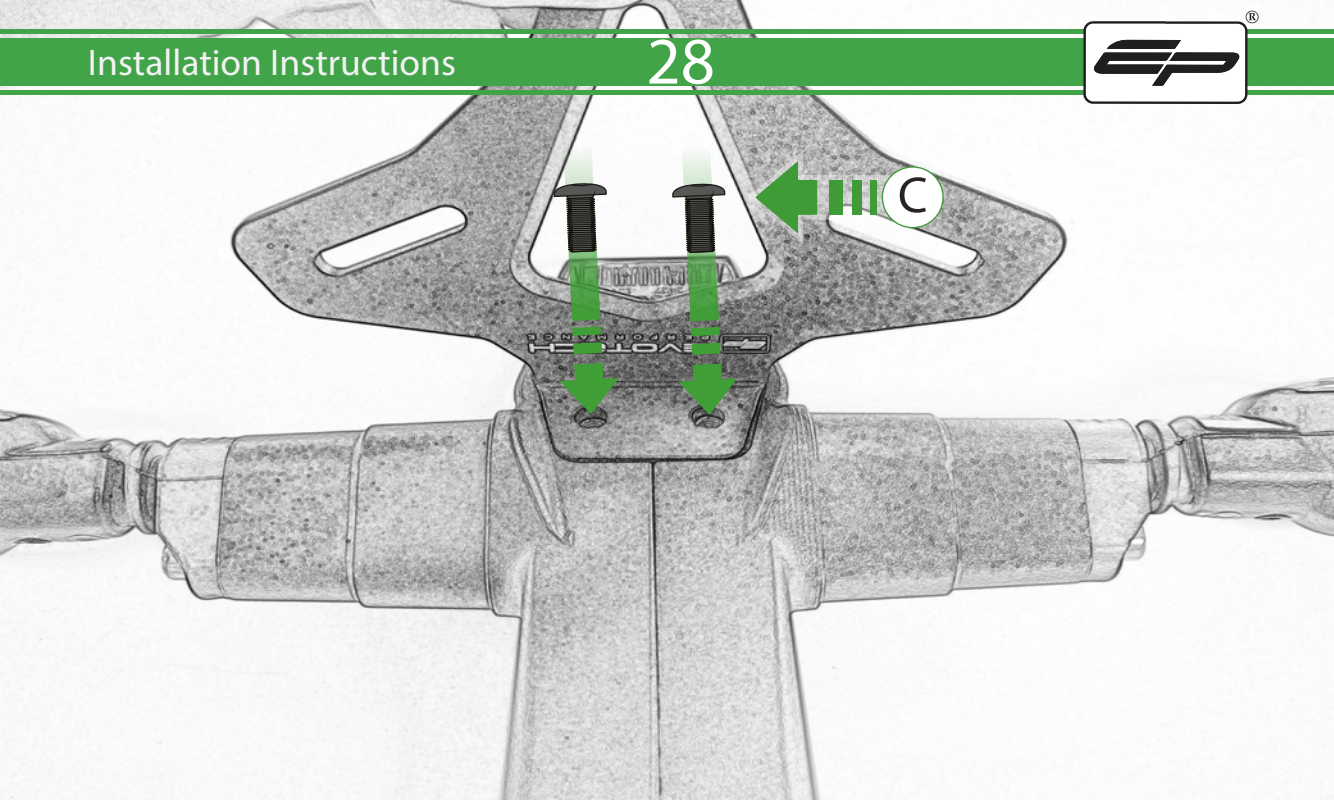


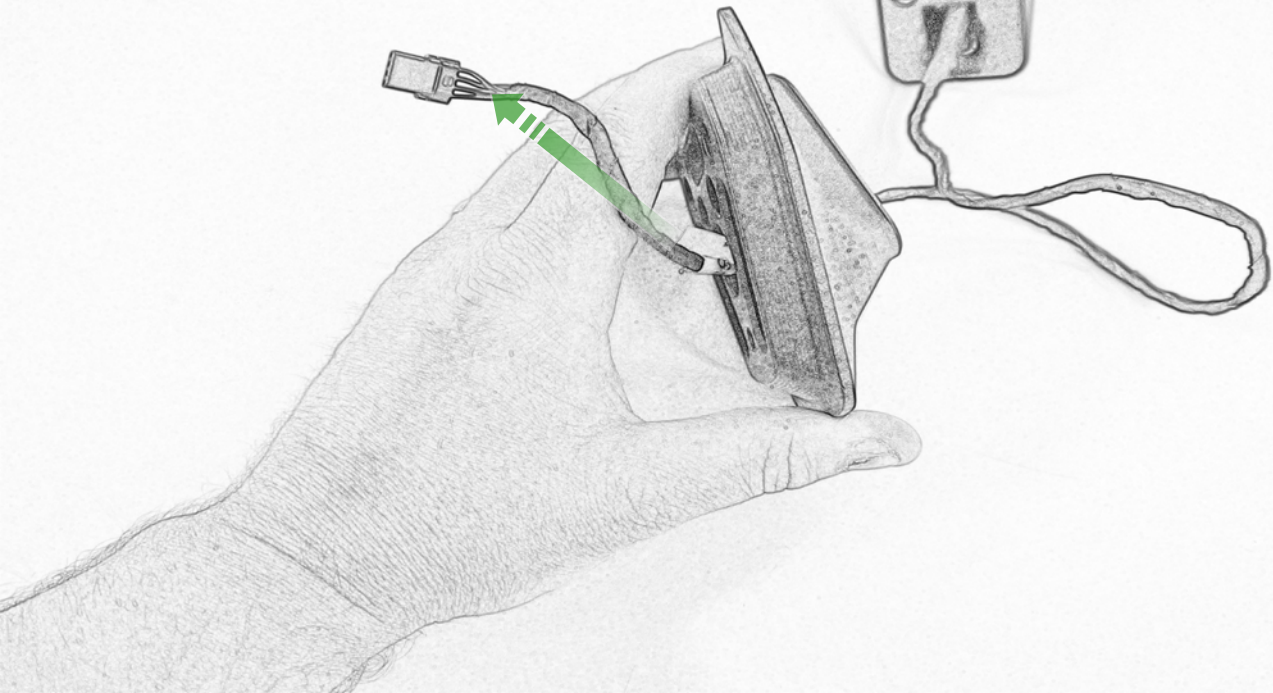


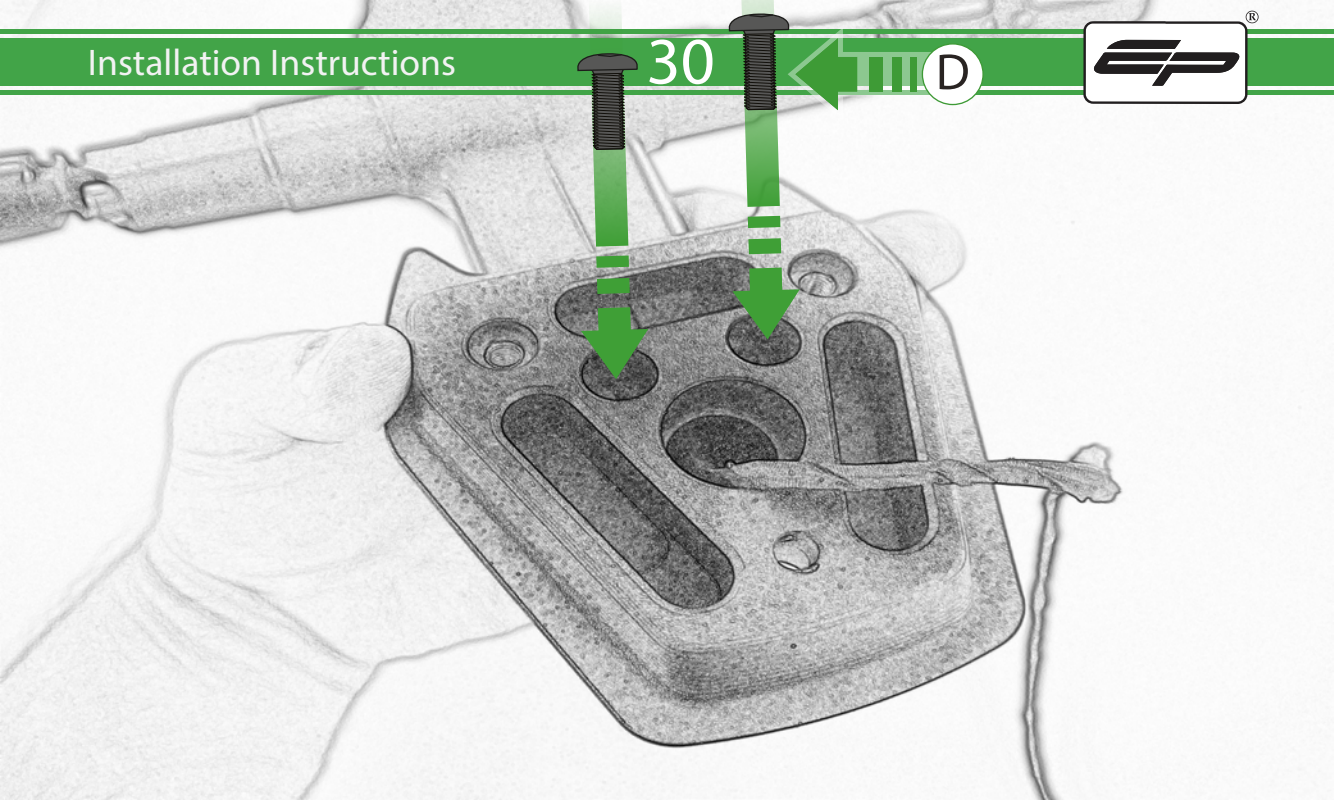




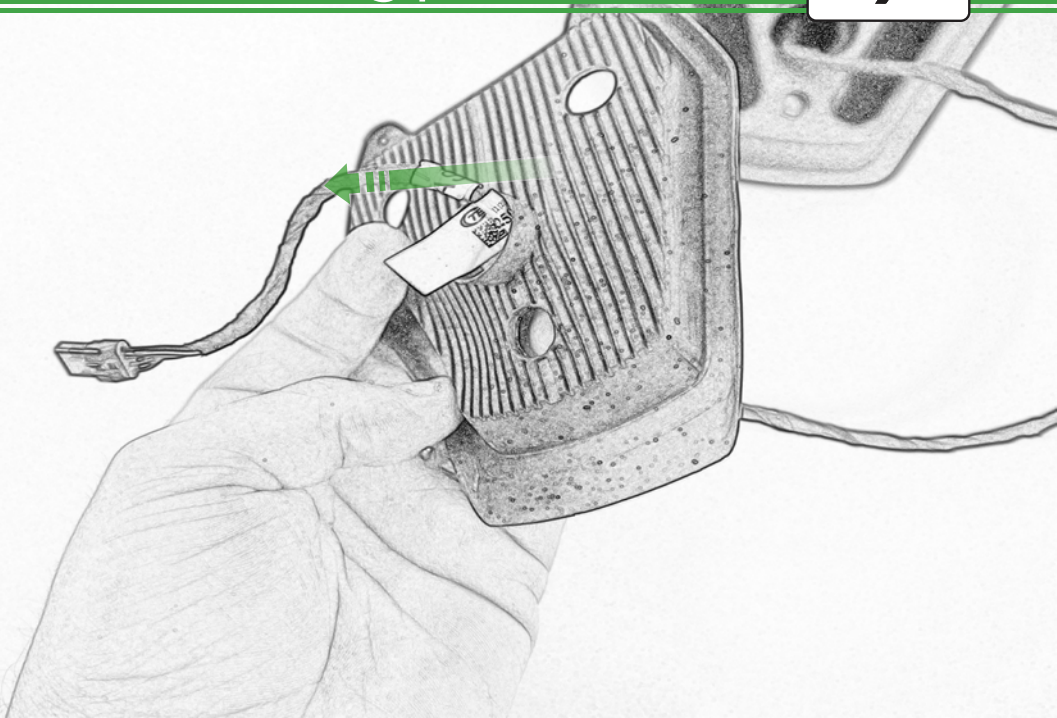

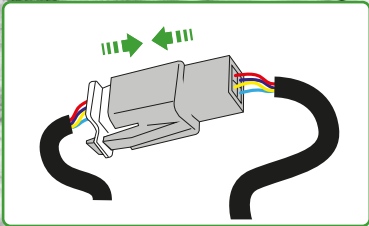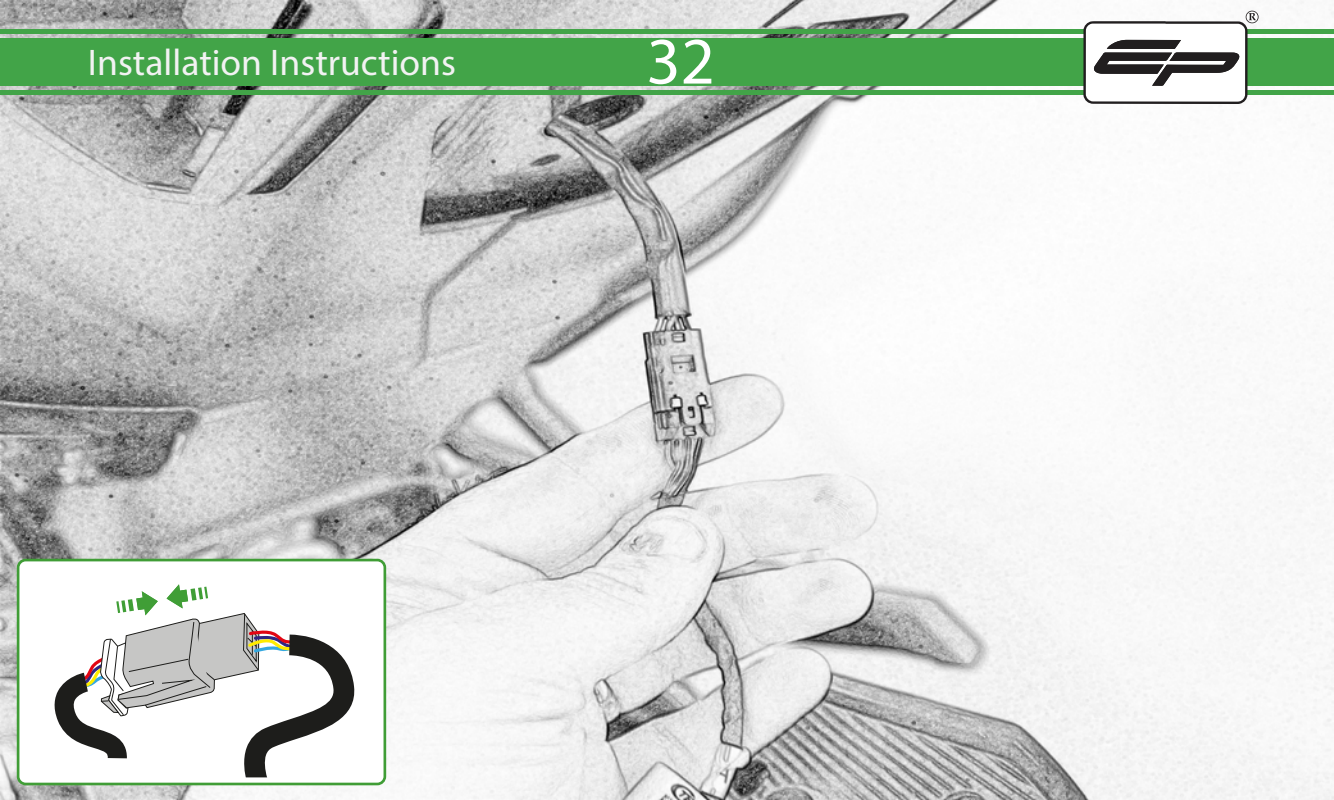

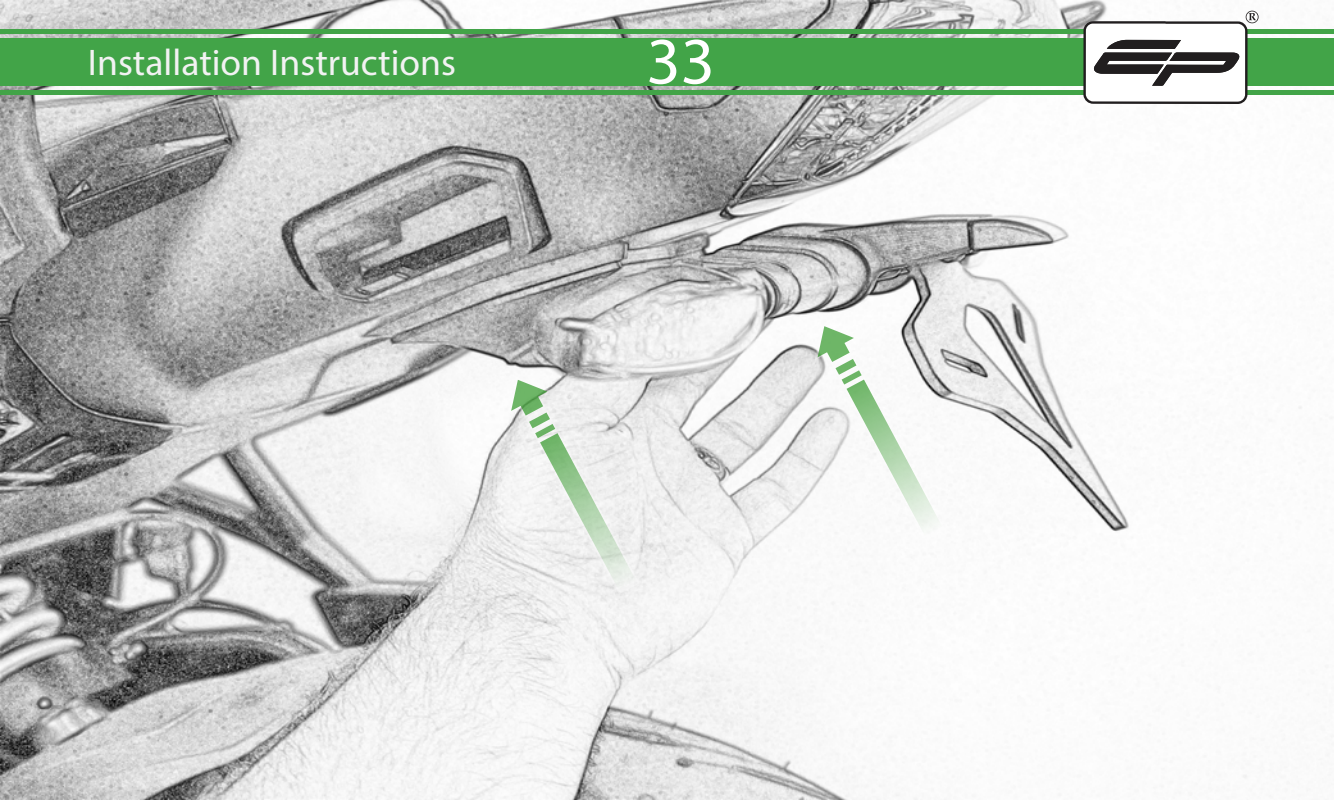

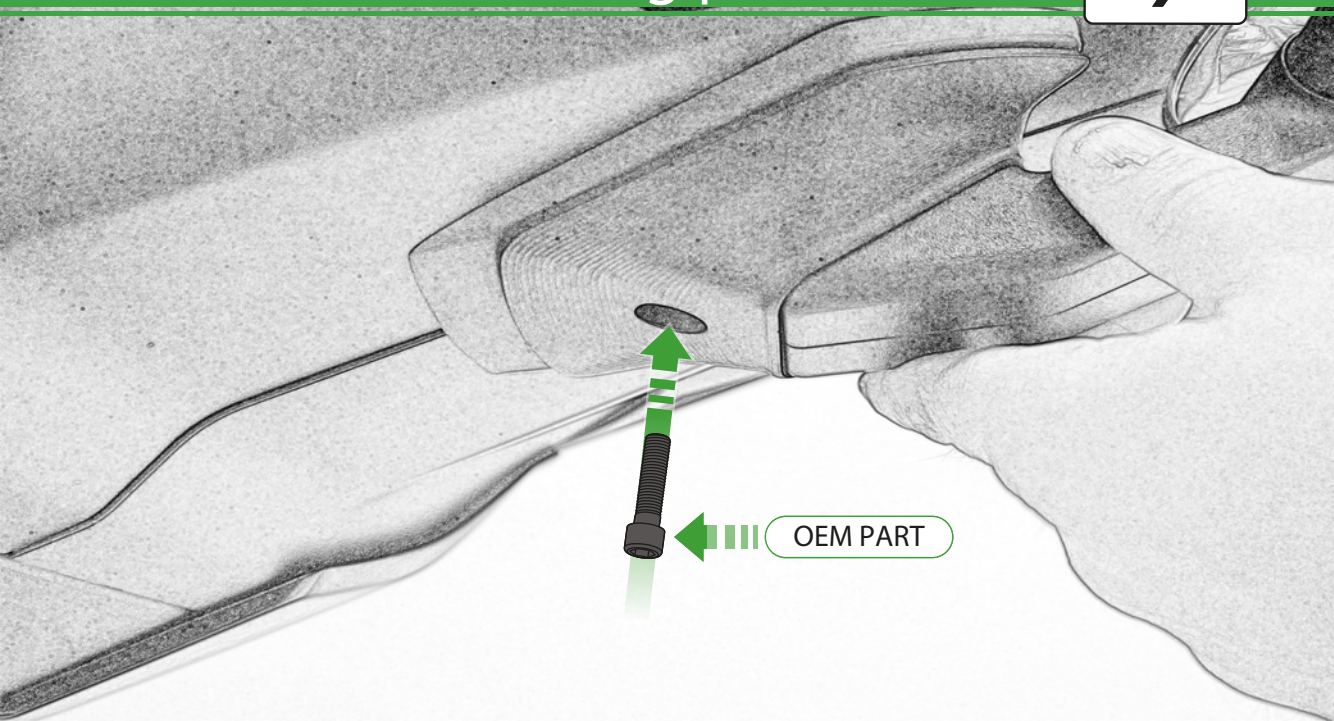



OEM PART



OEM PART

OEM PART

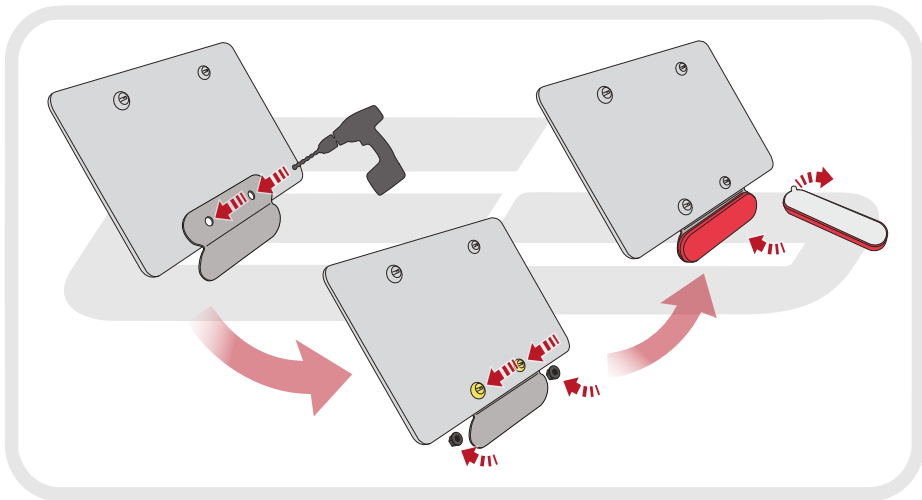

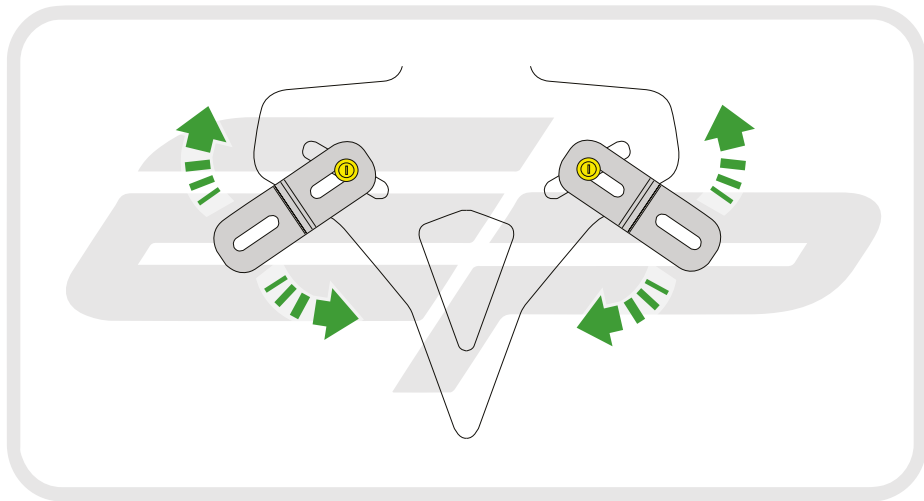



## ESSENTIAL CHECKS



After installation of your tail tidy ensure that the licence plate does not contact the rear tyre when suspension is fully compressed.

Ensure all electrics including indicators, tail light, brake light and licence plate light lights are working correctly before riding the motorcycle.

It is recommended that periodic inspections are made to ensure that all fixings are fully tightend.





**EVOTECH**®  
P E R F O R M A N C E

[www.evotech-performance.com](http://www.evotech-performance.com)