



EVOTECH®
P E R F O R M A N C E


Installation Instructions

SUZUKI SV 650 2016
CRASH PROTECTION


Product Reference - 13170



Kit Contents

- A** 1 x M12 Spindle
- B** 2 x Bobbin Spacers
- C** 2 x Bobbin Heads
- D** 2 x Impact Absorbing Washers
- E** 2 x M12 Nuts
- F** 2 x M12 Washers

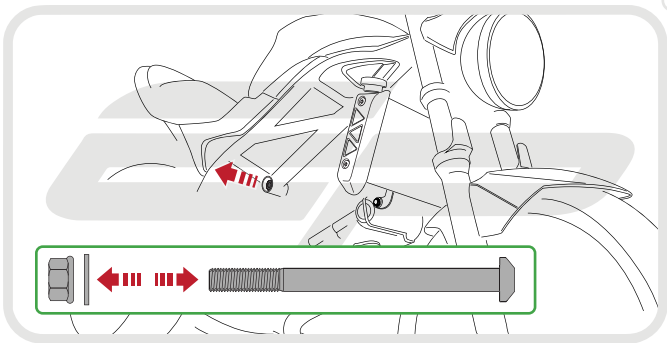



Remove finger tight nut from one end of the spindle and slide on components

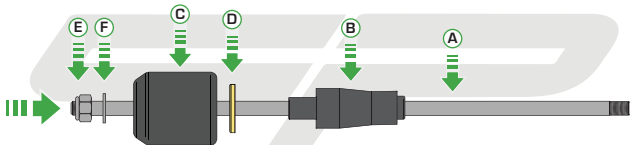

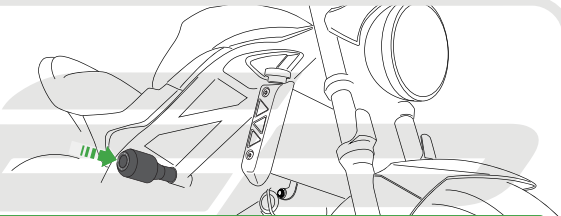

Slide parts assembled in step 2 through main engine mount

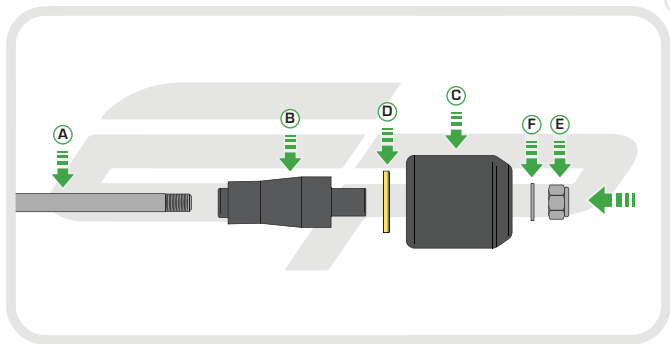

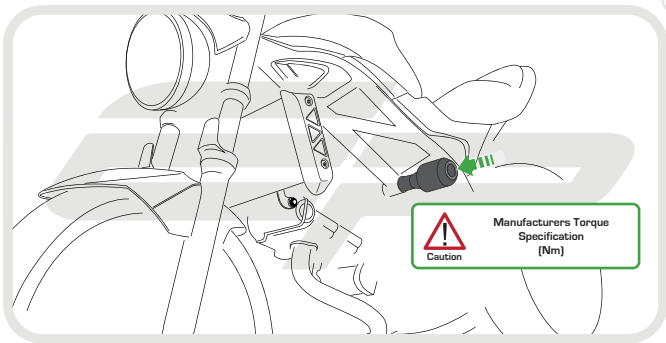



ESSENTIAL CHECKS



It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com