

**EVOTECH**®  
P E R F O R M A N C E


[www.evotech-performance.com](http://www.evotech-performance.com)


Suzuki V-Strom 650 / XT  
Crash Protection Instructions




## Kit Contents PRN015152

- (A) 2 x Mounting Brackets
- (B) 2 x Bobbin Spacer
- (C) 2 x Poly Washer
- (D) 2 x Bobbin Head
- (E) 2 x M12 Washer
- (F) 2 x M12 x 105mm Caphead Bolt
- (G) 4 x M8 x 50mm Caphead Bolt

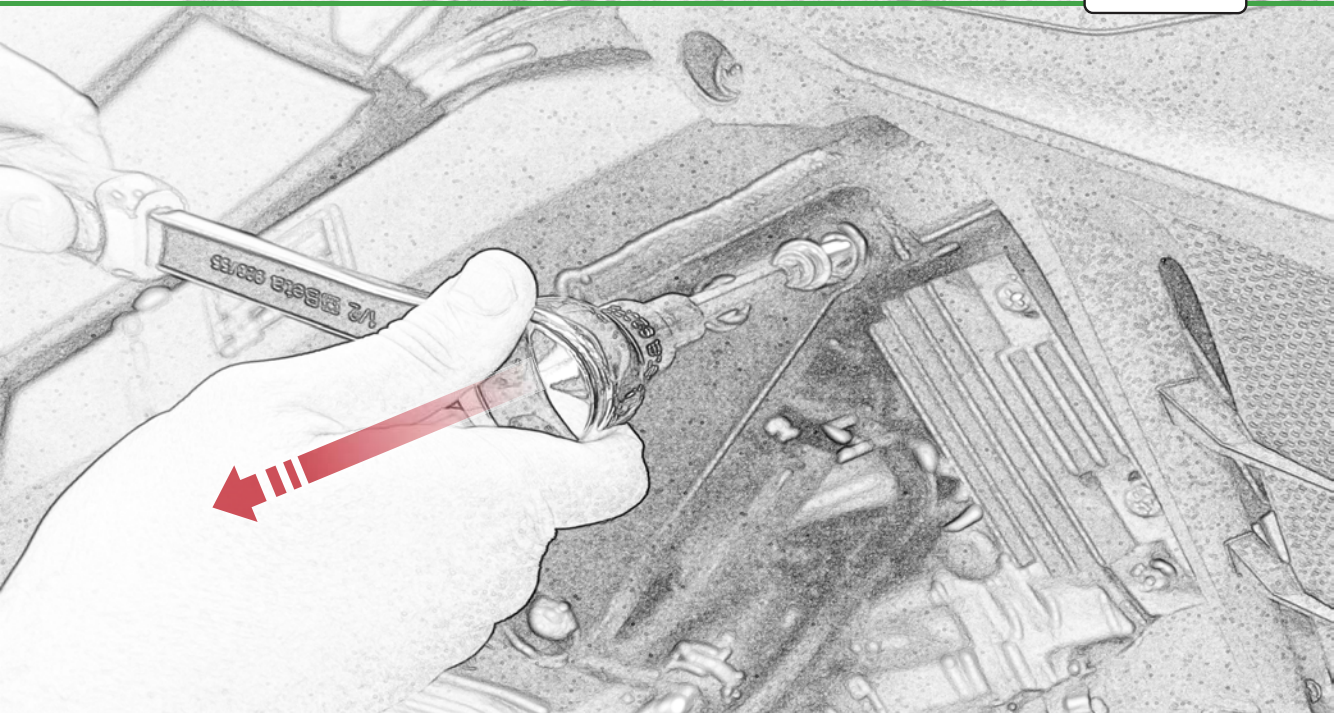


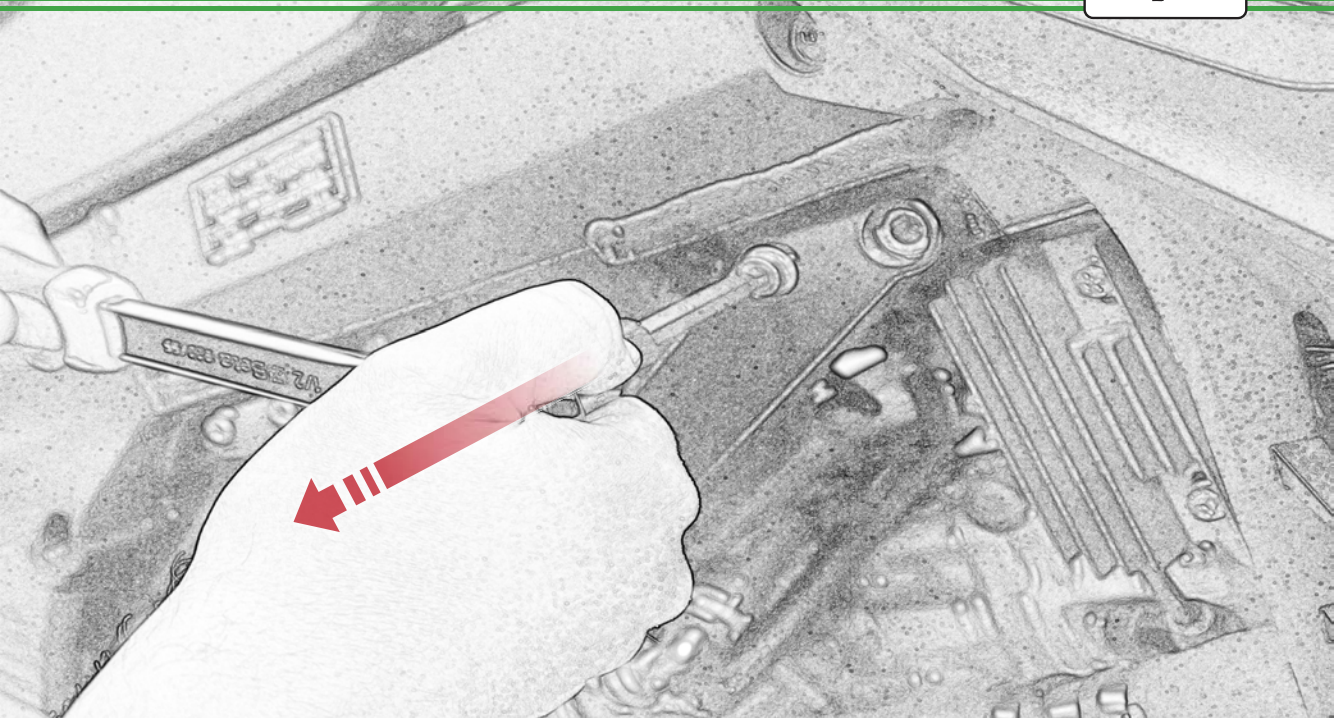

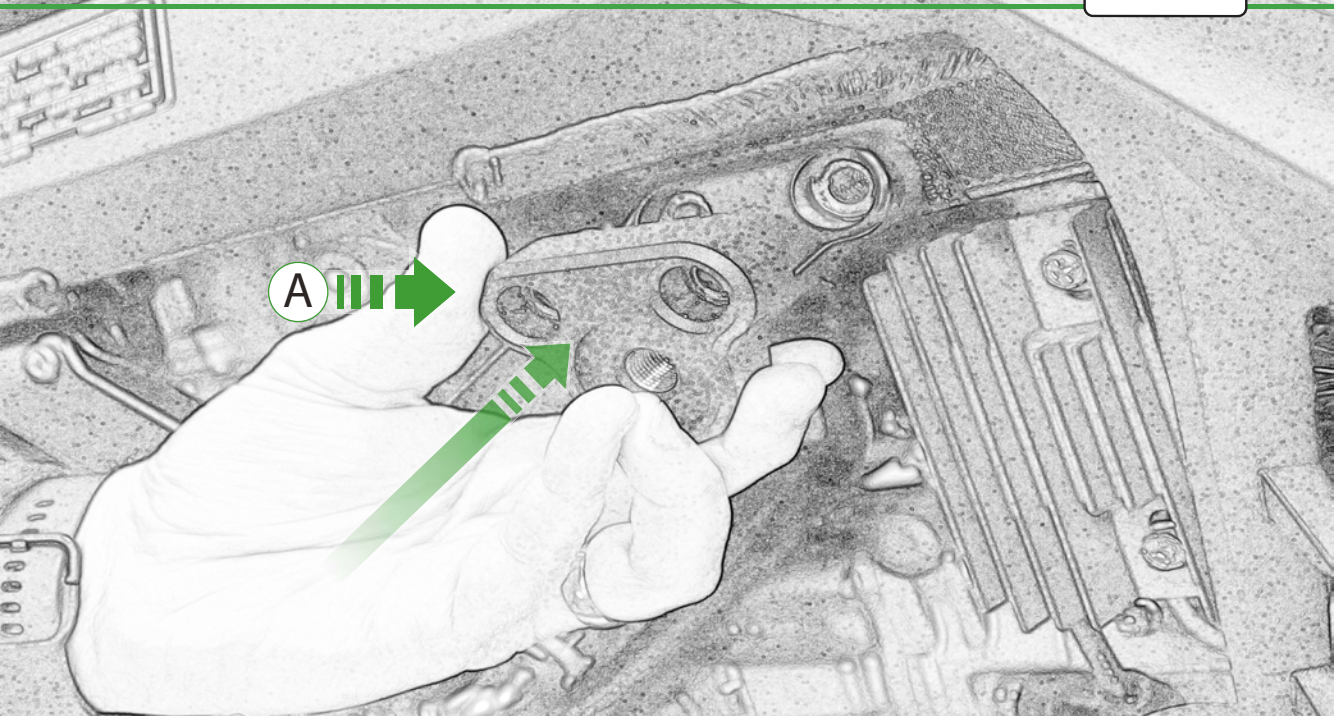

A



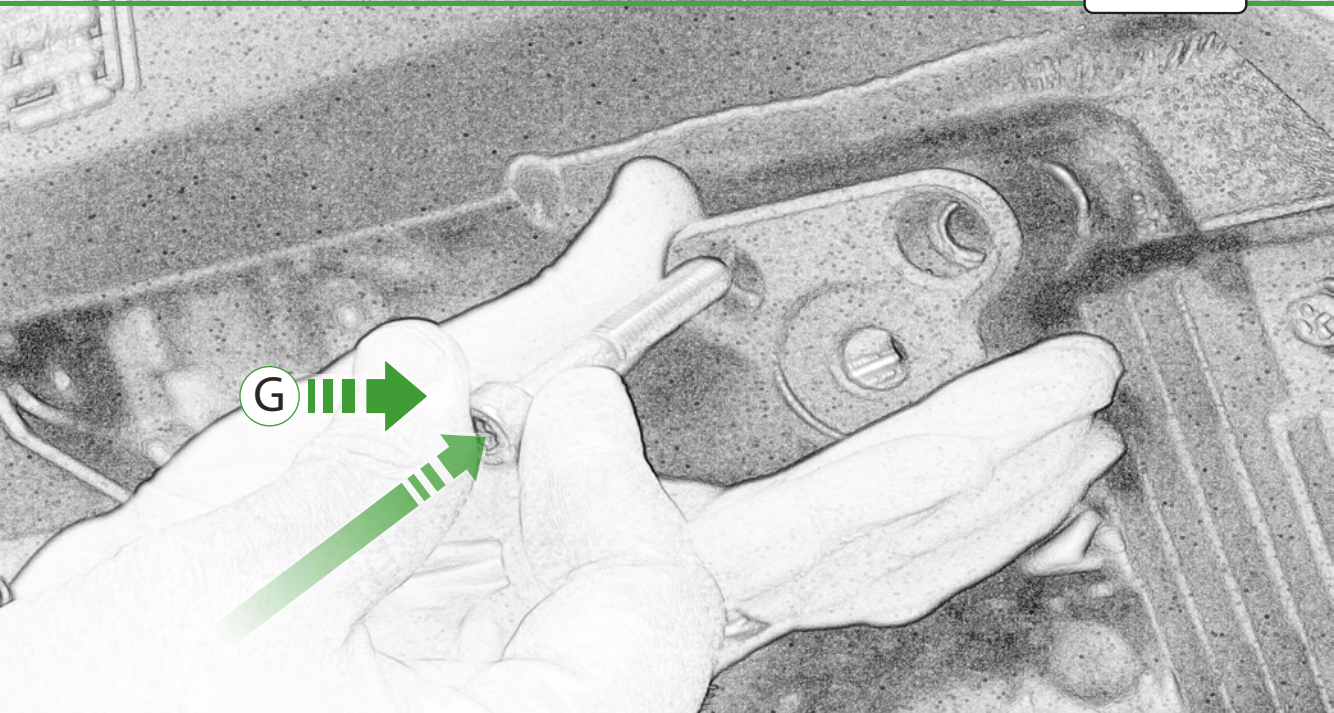






1/2" Beta 920/35





Fully Tighten  
35Nm




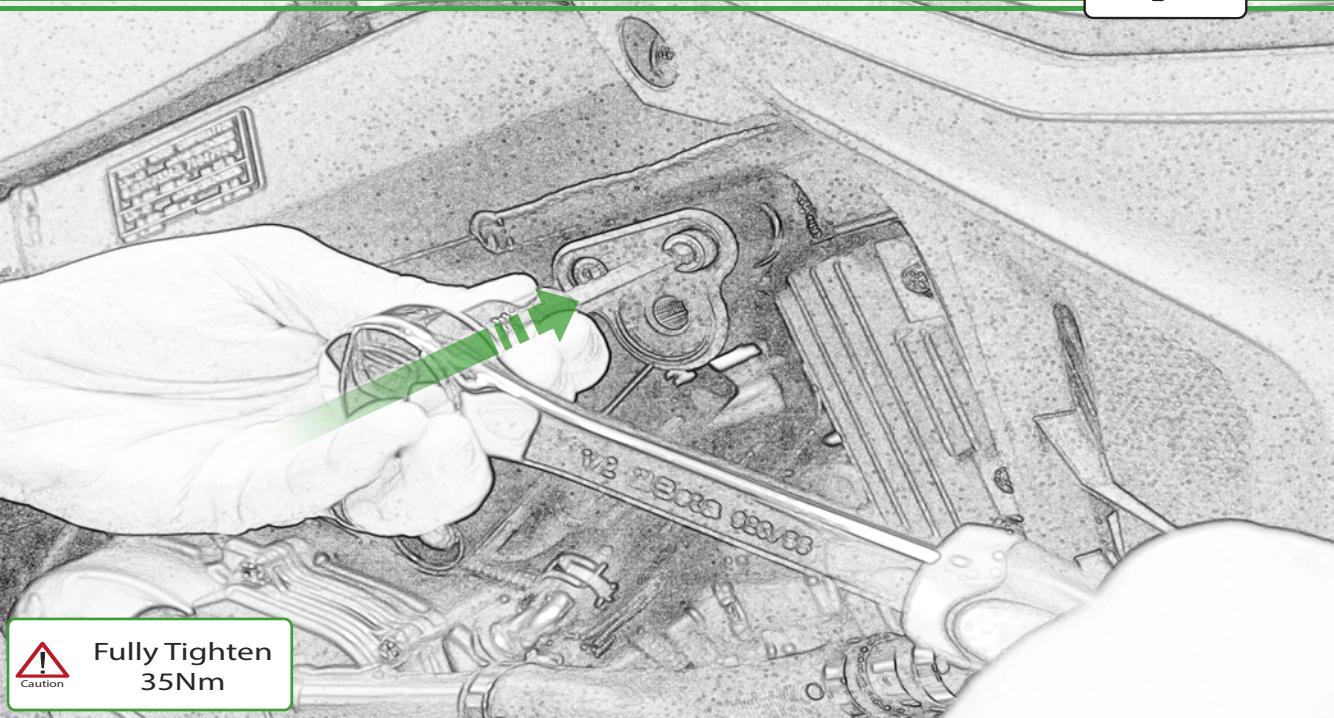


**Fully Tighten**  
**35Nm**

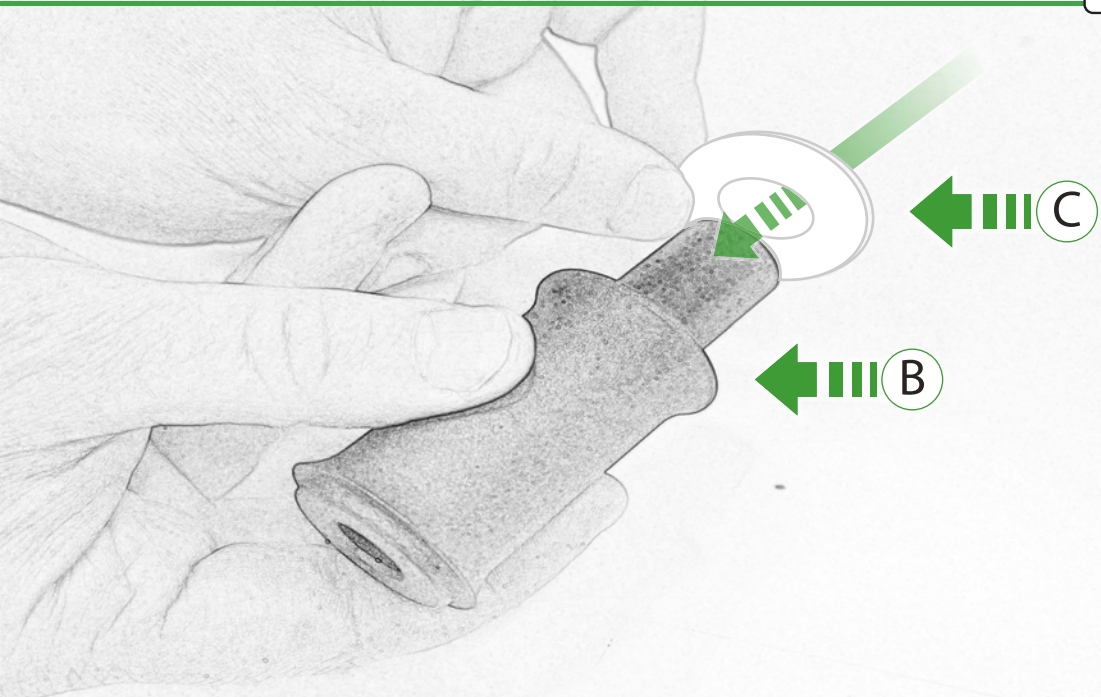


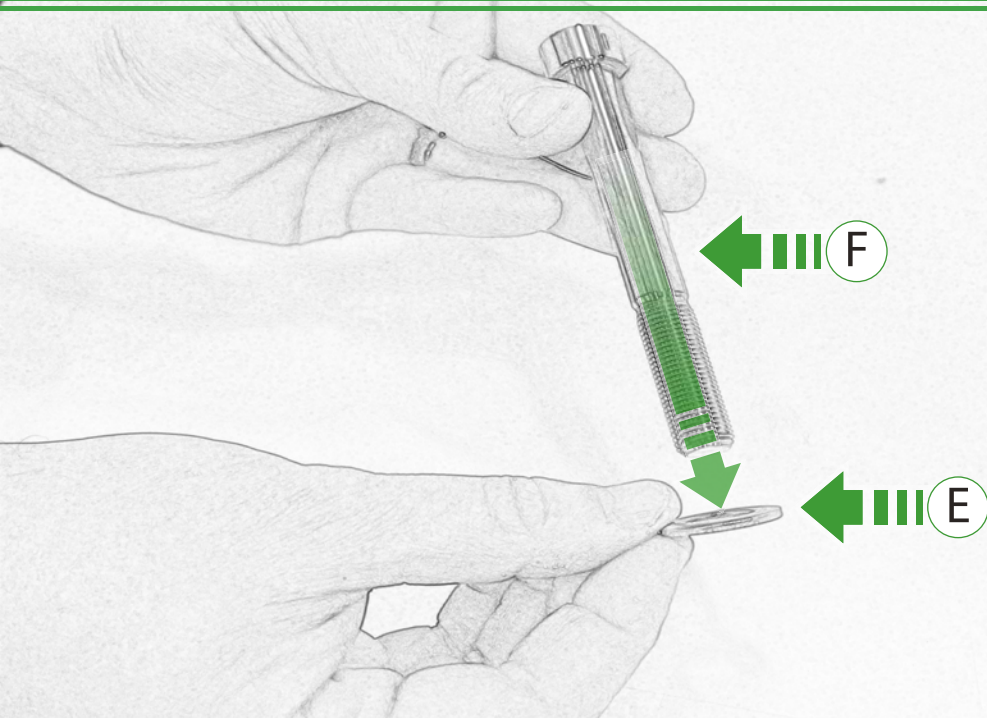


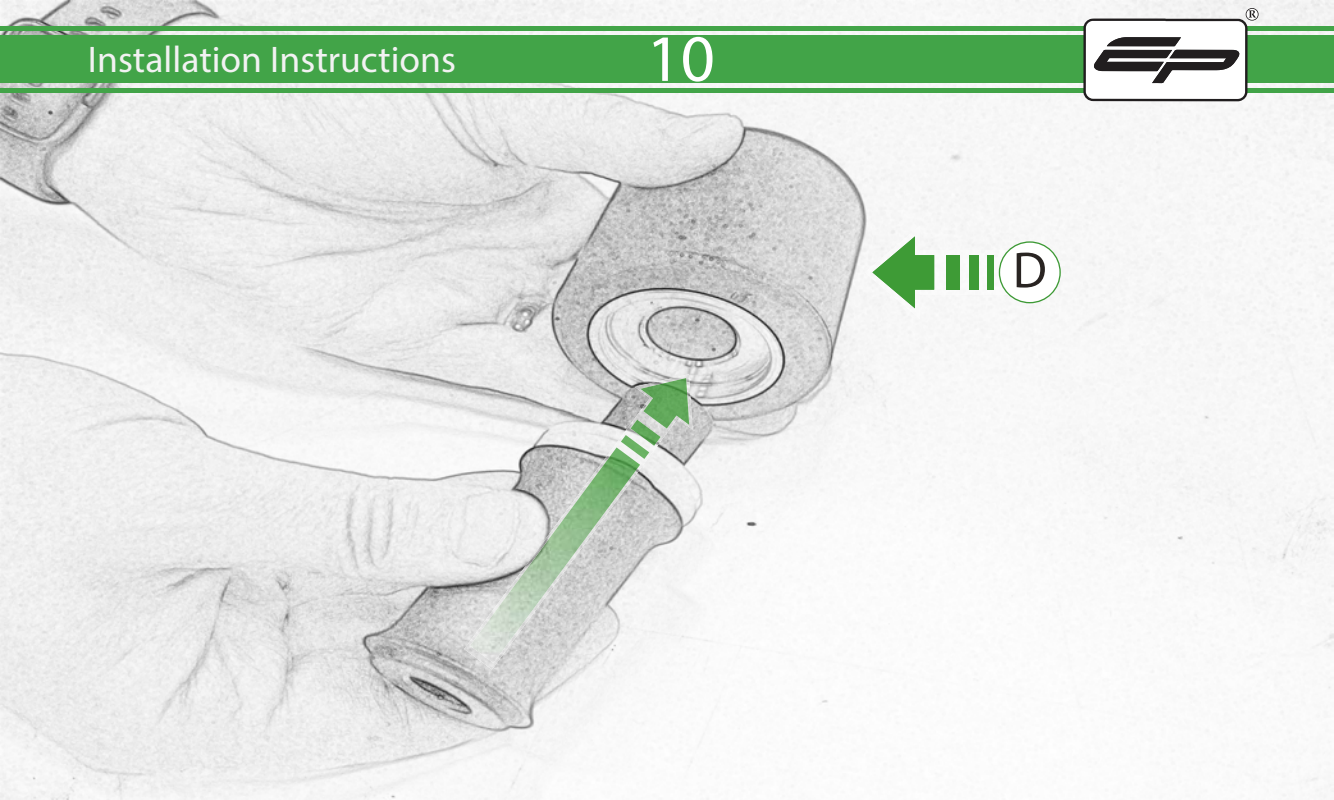



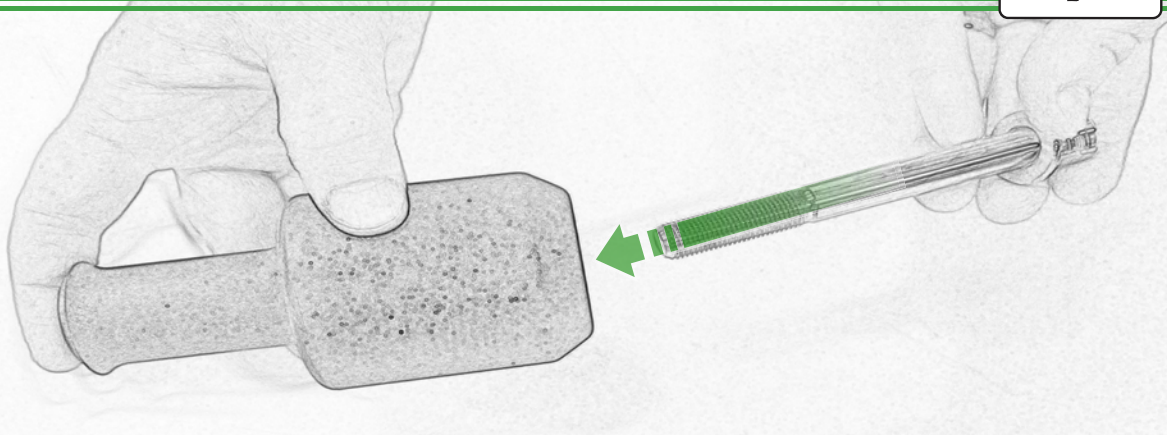

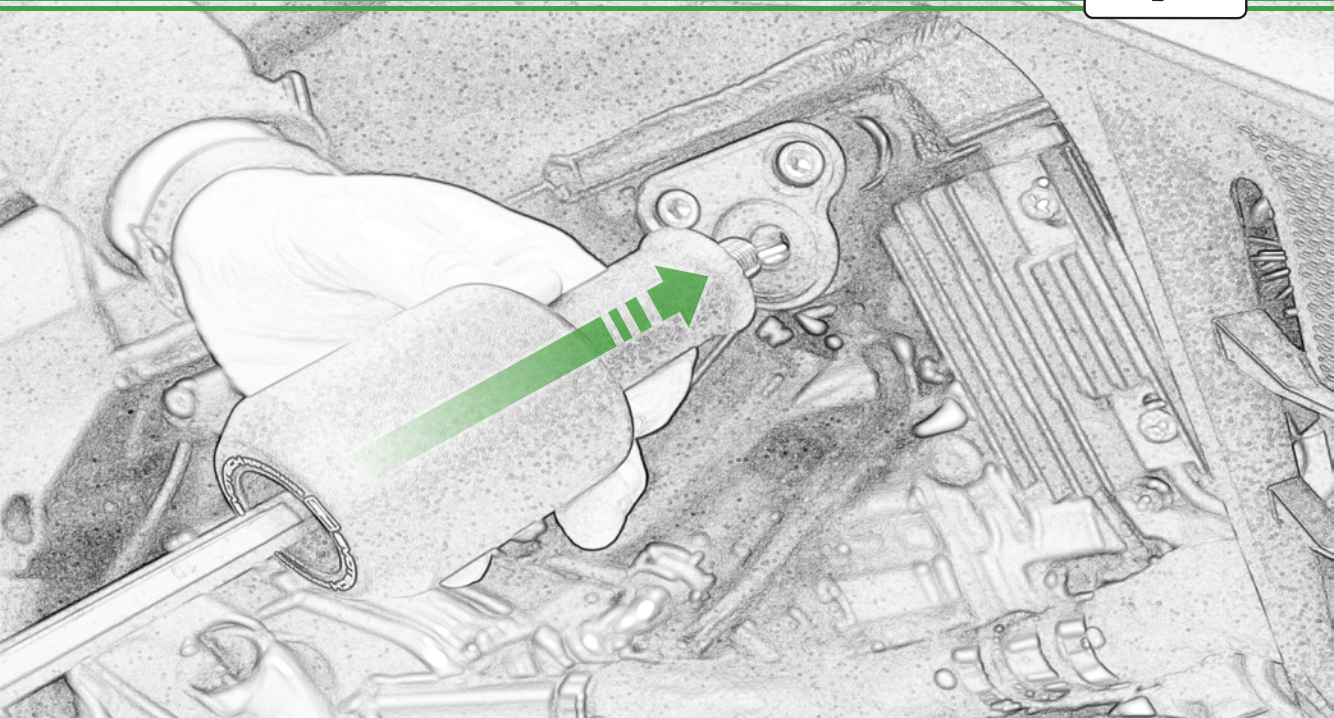

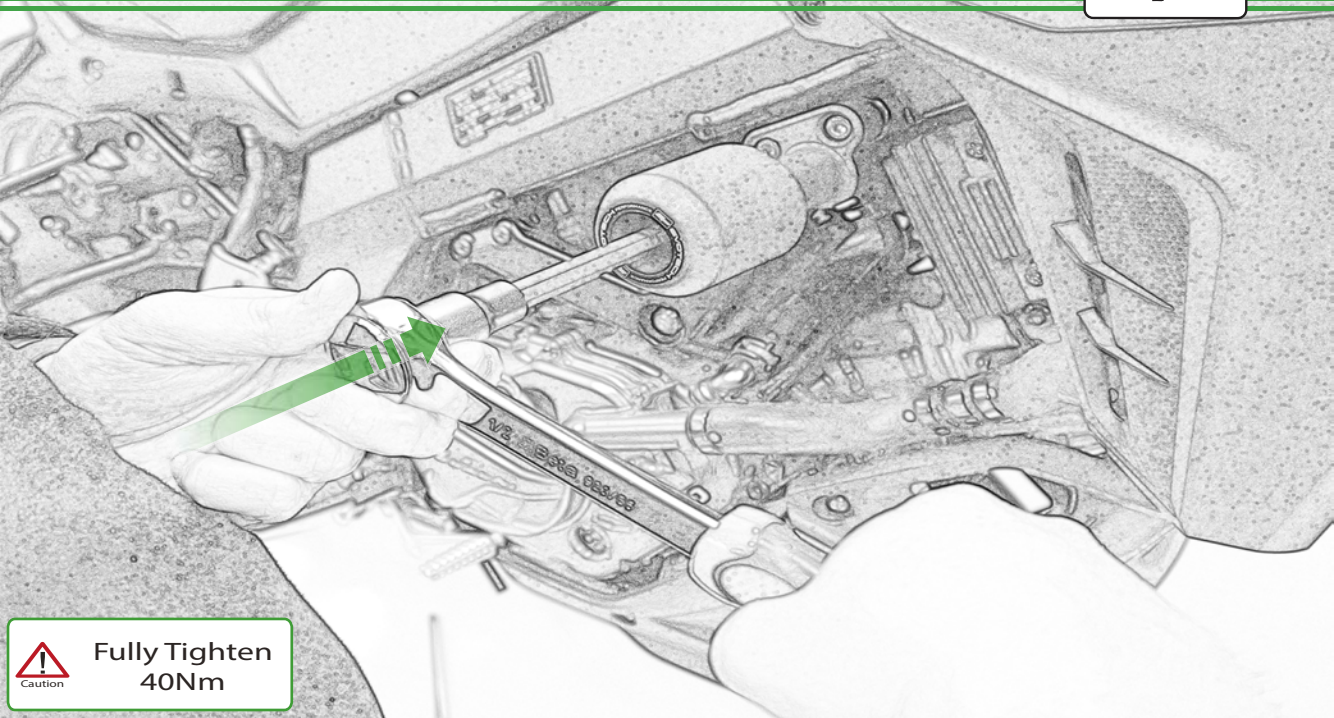

Fully Tighten  
40Nm



Repeat Stages  
1 - 13 For Left  
Hand Side





## ESSENTIAL CHECKS

It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



**EVOTECH**®  
P E R F O R M A N C E

[www.evotech-performance.com](http://www.evotech-performance.com)