

www.evotech-performance.com


Yamaha Tracer 7
Crash Protection


Installation Instructions



Kit Contents PRN015726


- A 2 x Bobbin Spacer
- B 2 x M12 Washer
- © 2 x Poly Washer
- D 2 x Bobbin Head
- © 2 x M12 x 135 x 1.25 Caphead

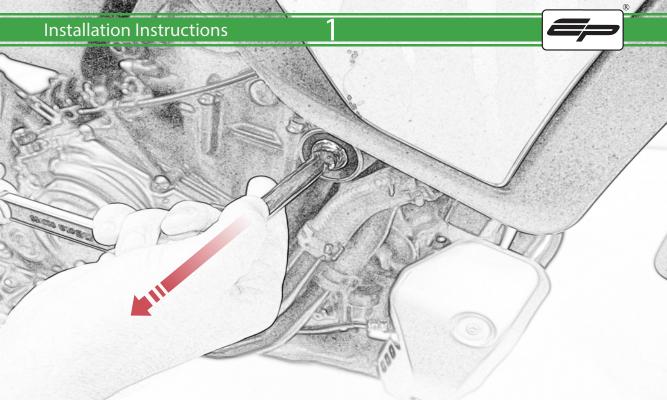

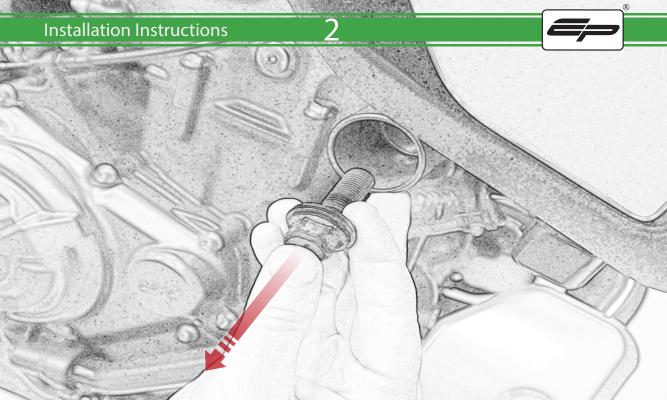






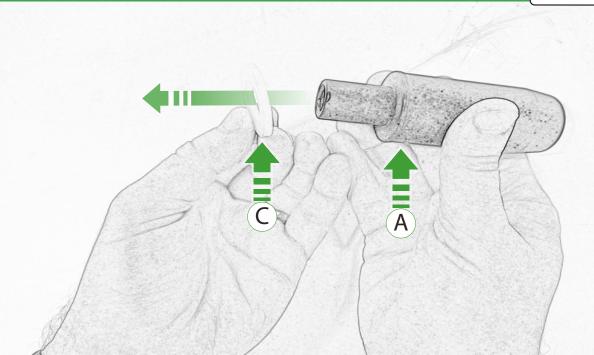






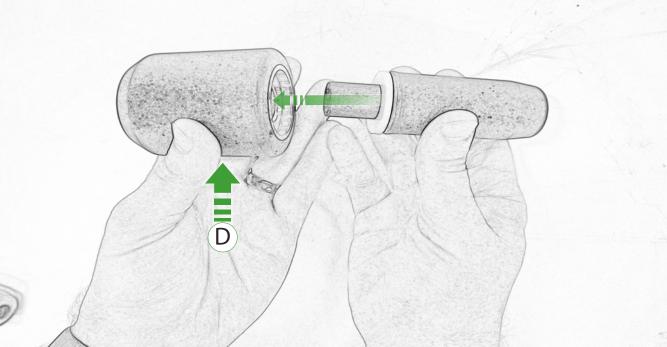







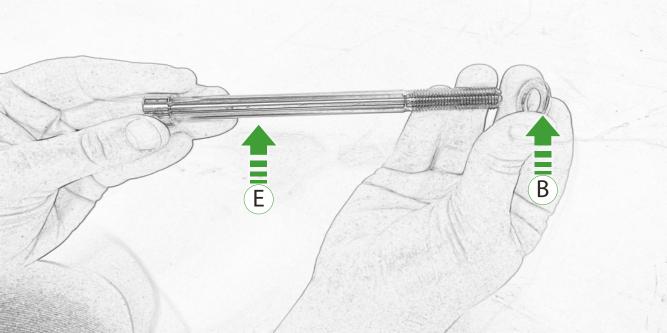







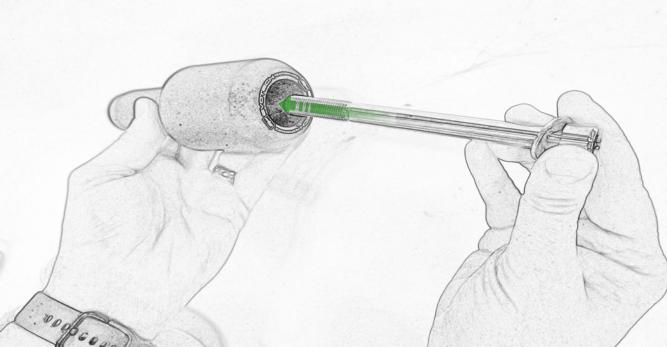

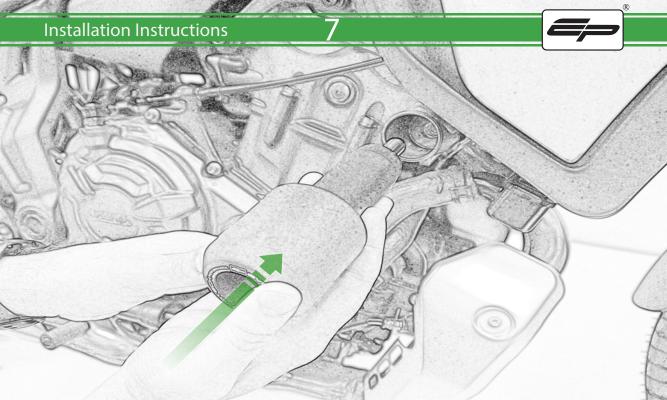

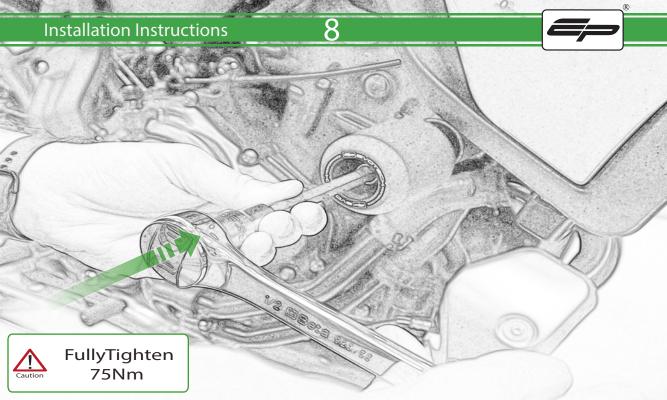



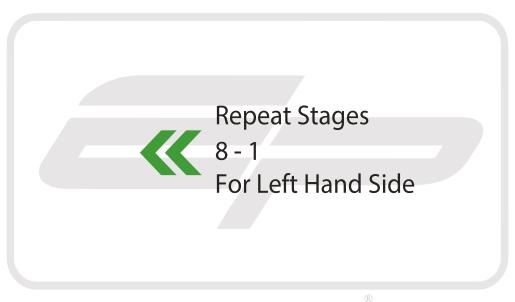







igwedge essential checks igwedge



It is recommended that periodic inspections are made to ensure that all bolts are tightend to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced





www.evotech-performance.com