

EVOTECH®
P E R F O R M A N C E


www.evotech-performance.com

Ducati Streetfighter V4 / S Crash Protection Installation Instructions





Kit Contents PRN014728

- Ⓐ 1 x R/H Bobbin Bracket
- Ⓑ 1 x R/H Frame Spacer (Long)
- Ⓒ 1 x L/H Bobbin Bracket
- Ⓓ 1 x L/H Frame Spacer (Short)
- Ⓔ 1 x M12 x 90 Caphead Bolt (Left Side)
- Ⓕ 1 x M12 x 110 Caphead Bolt (Right Side)
- Ⓖ 2 x Polyurathane Washer
- Ⓗ 2 x M12 Washer
- Ⓘ 2 x M6 x 60 Caphead Bolt
- Ⓝ 2 x M12 x 75 Caphead Bolt
- Ⓚ 2 x Grommet Top Hat Inner
- Ⓛ 2 x Grommet Top Hat Outer
- Ⓜ 2 x Bobbin Spacer
- Ⓝ 2 x Large Bobbin Head

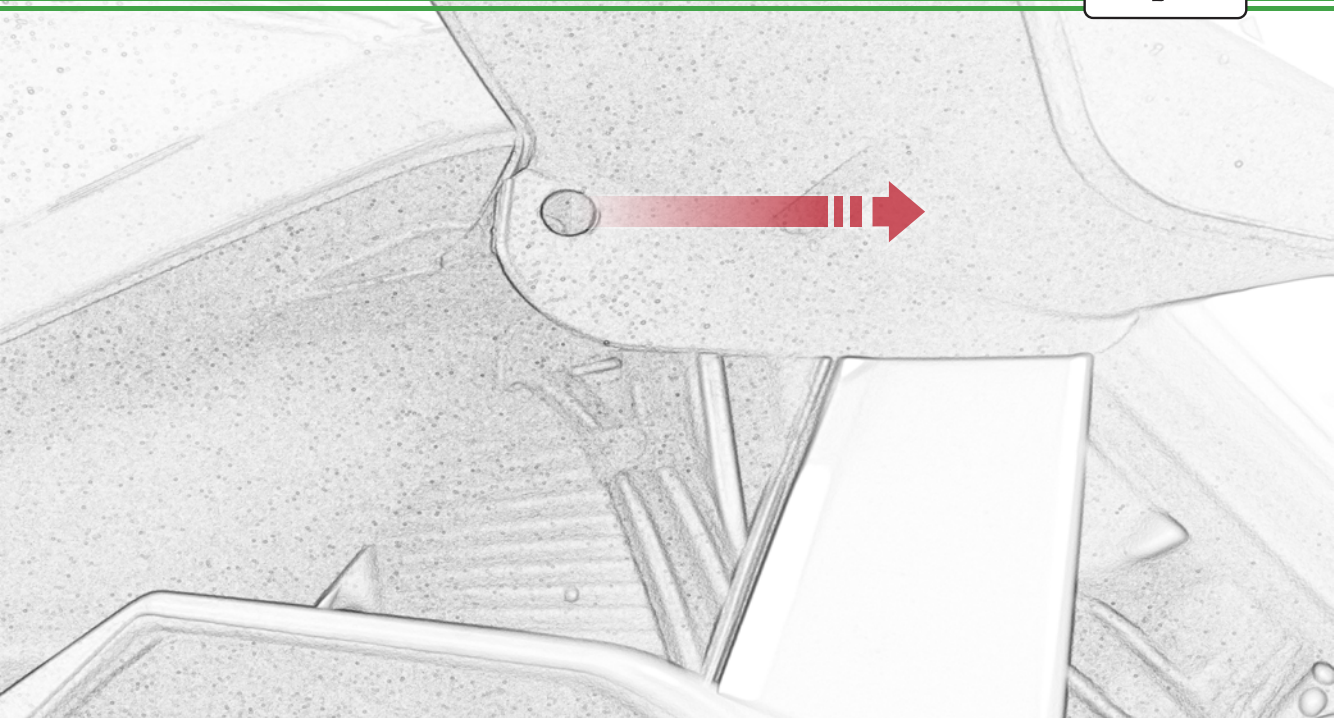




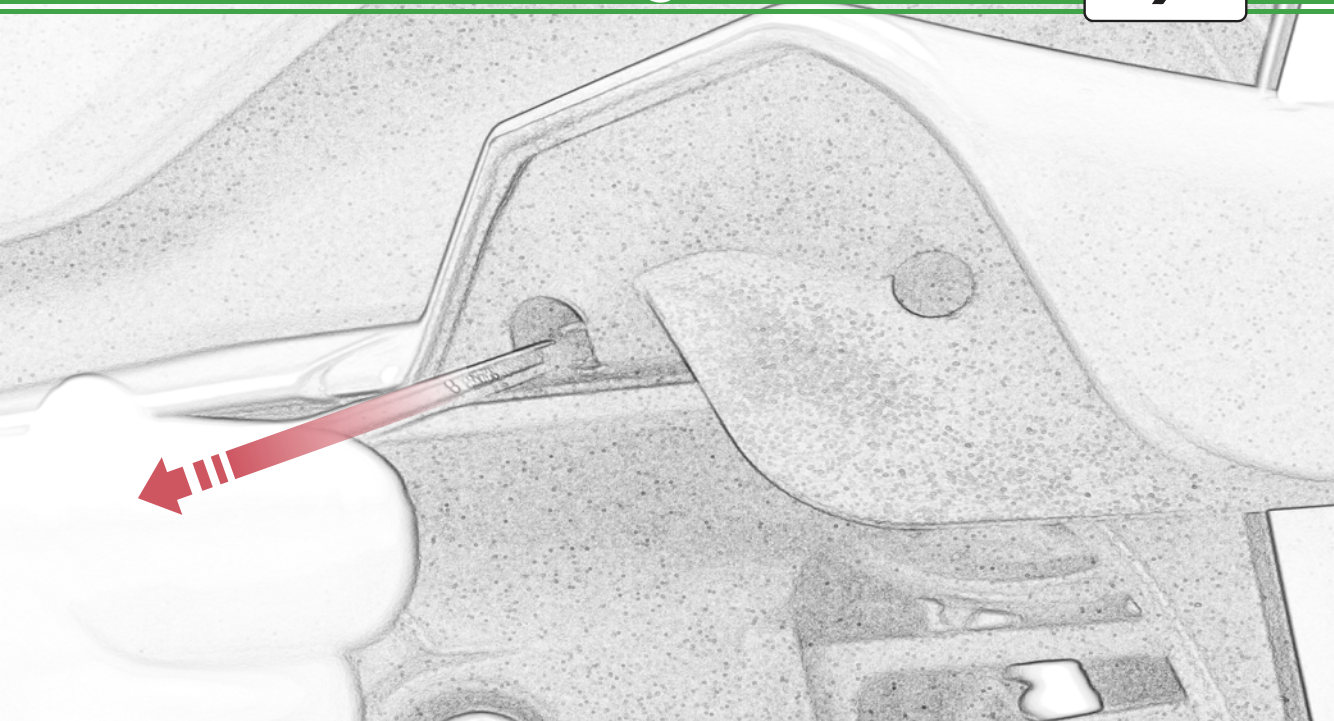

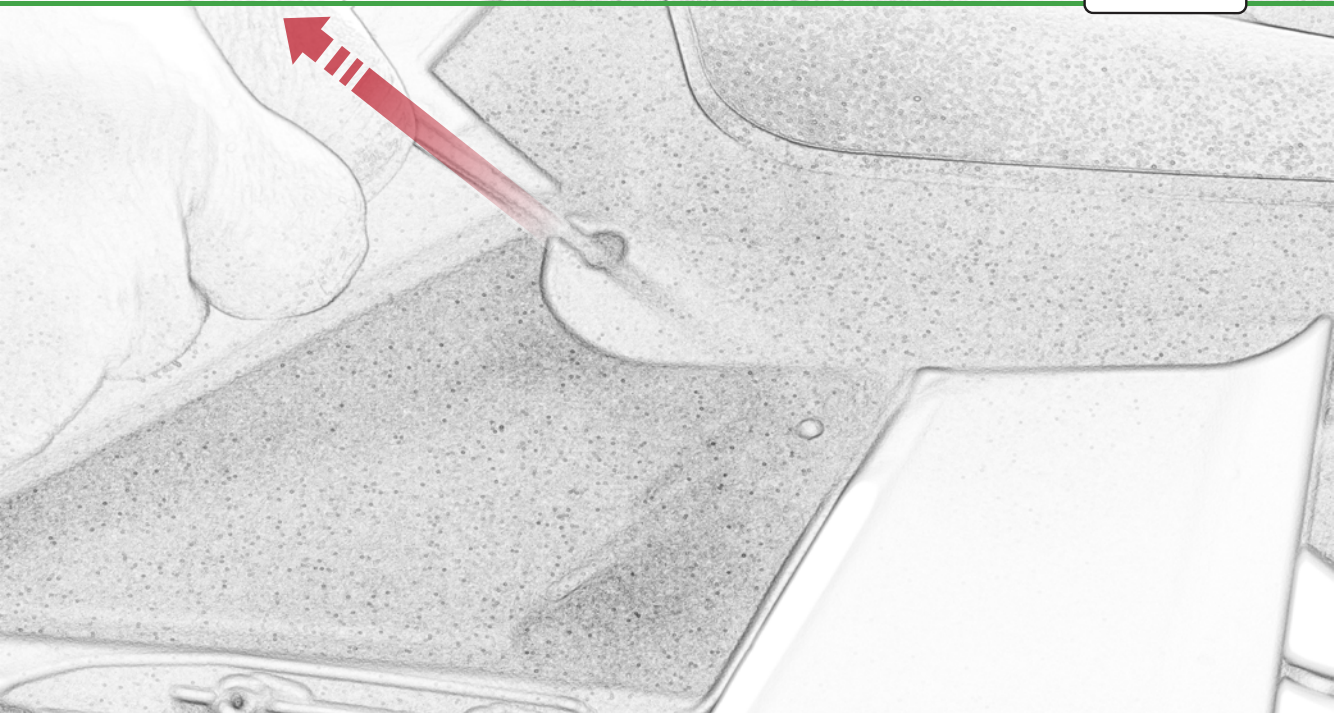




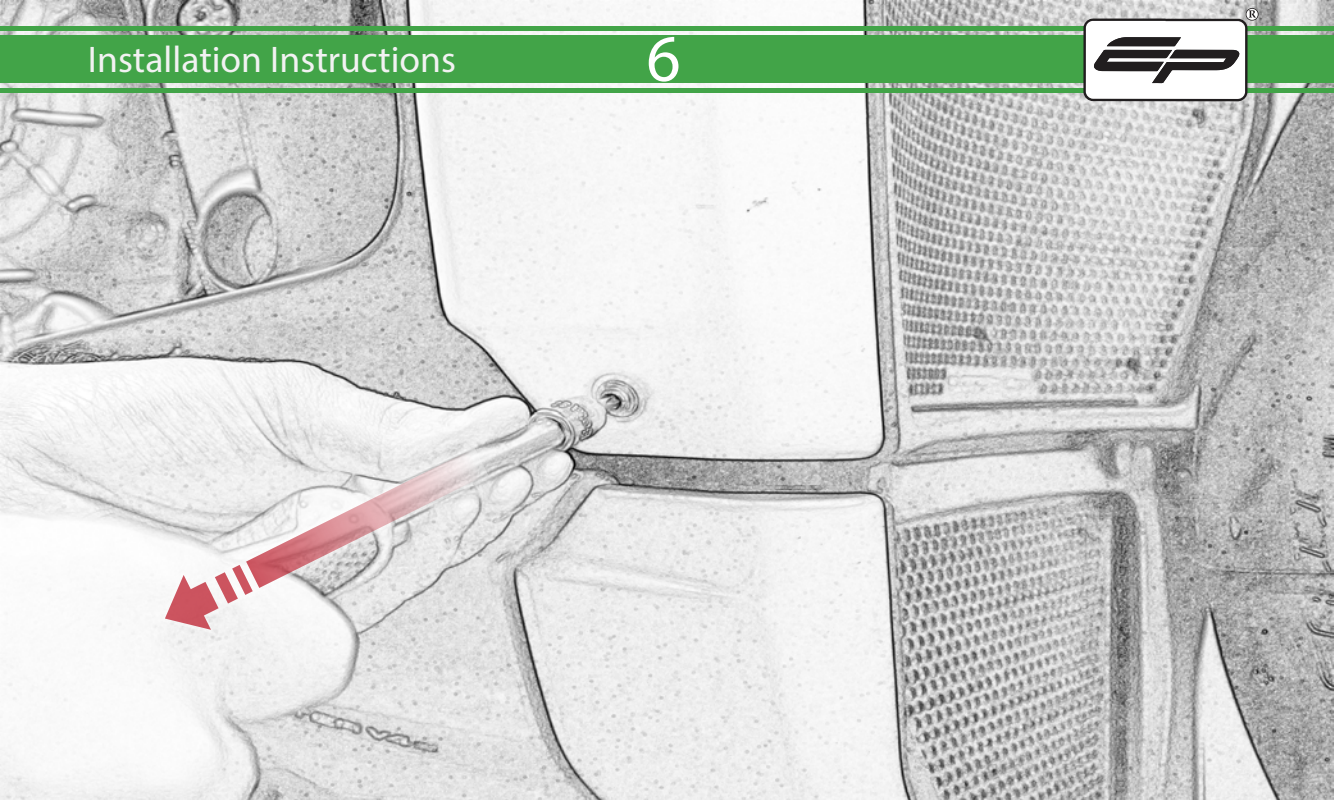











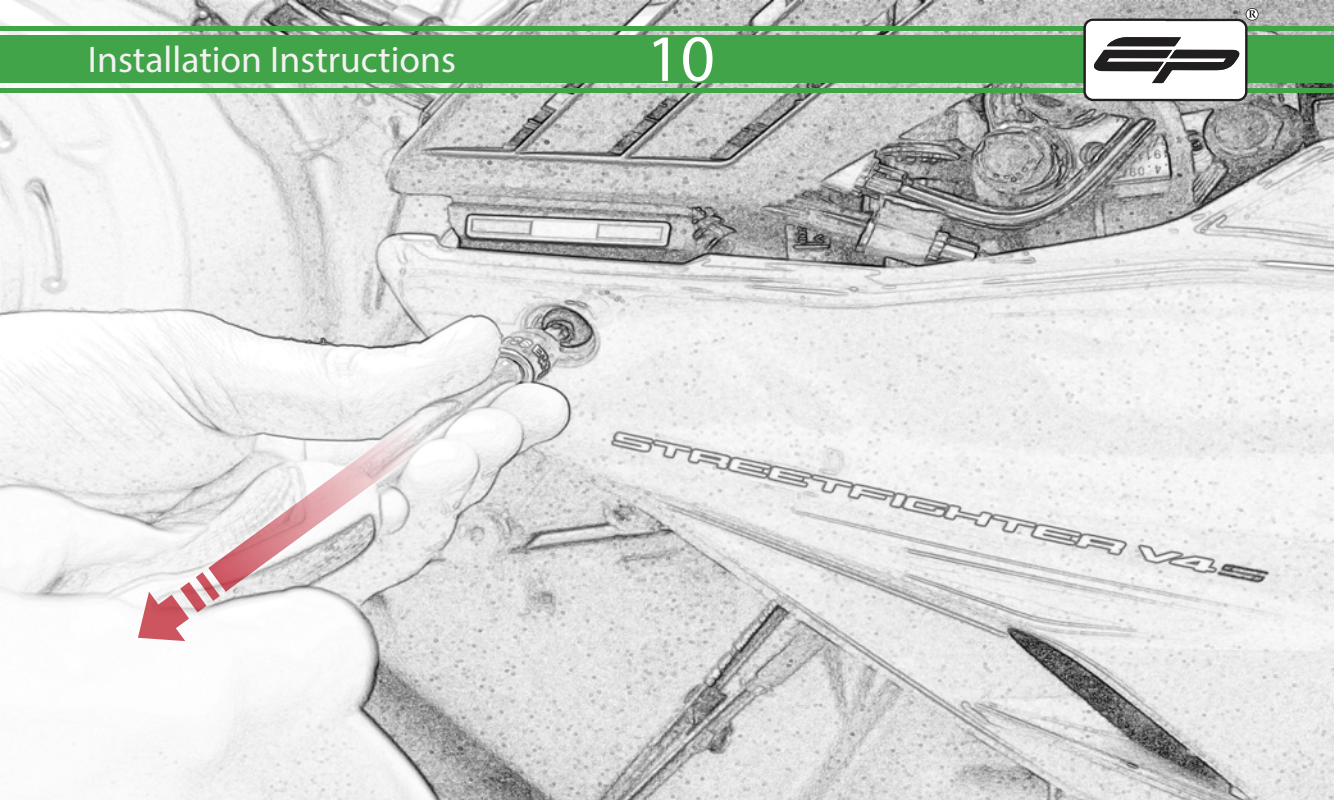


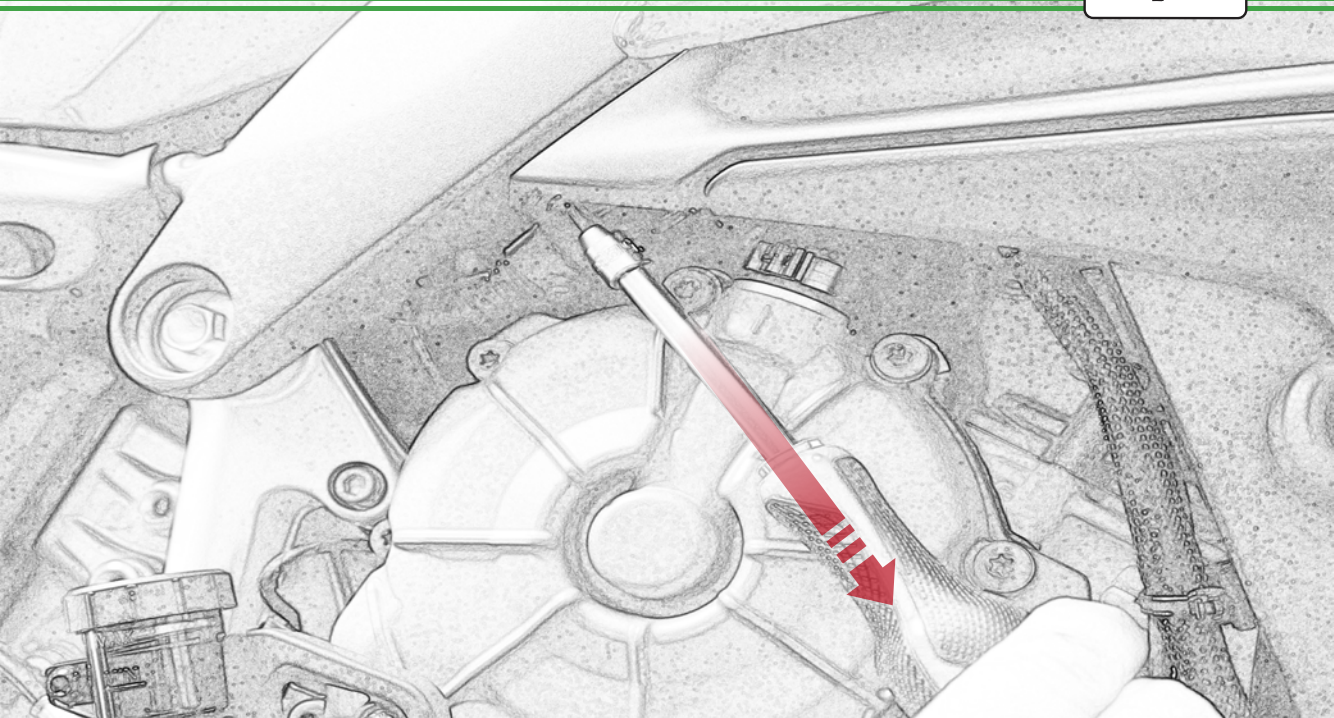

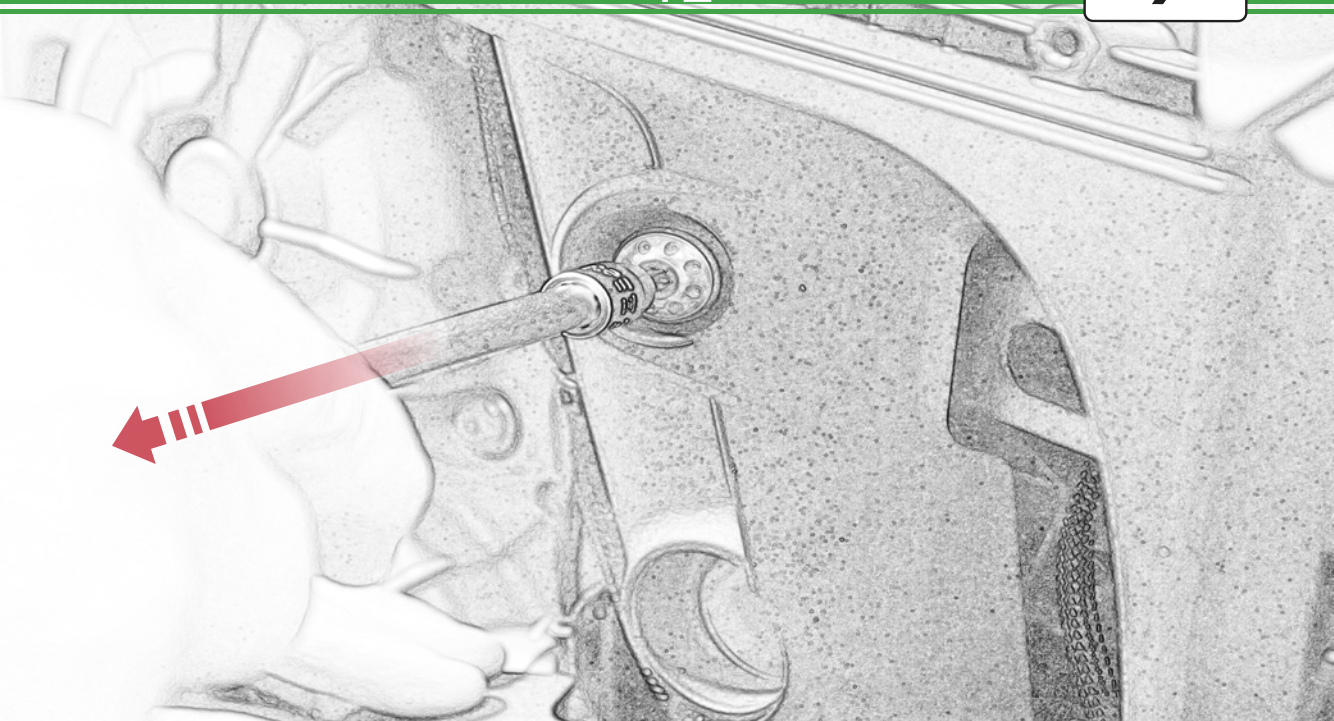


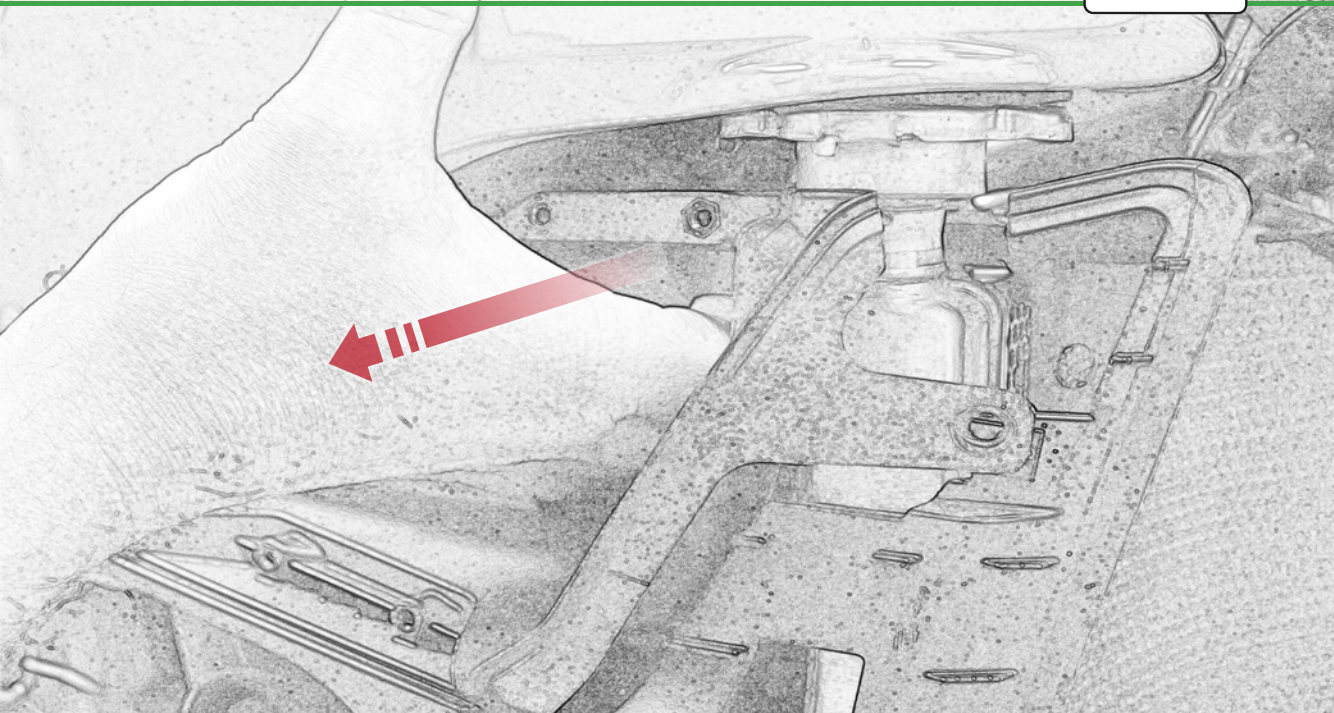


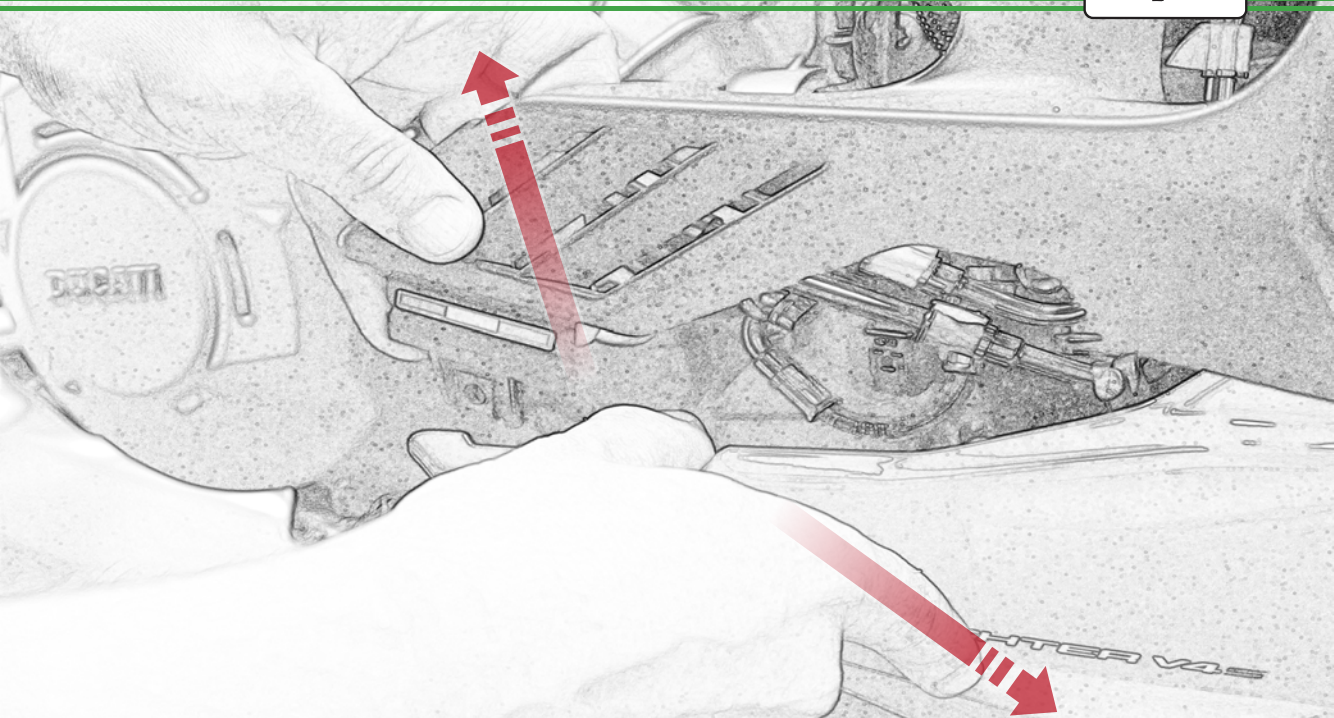


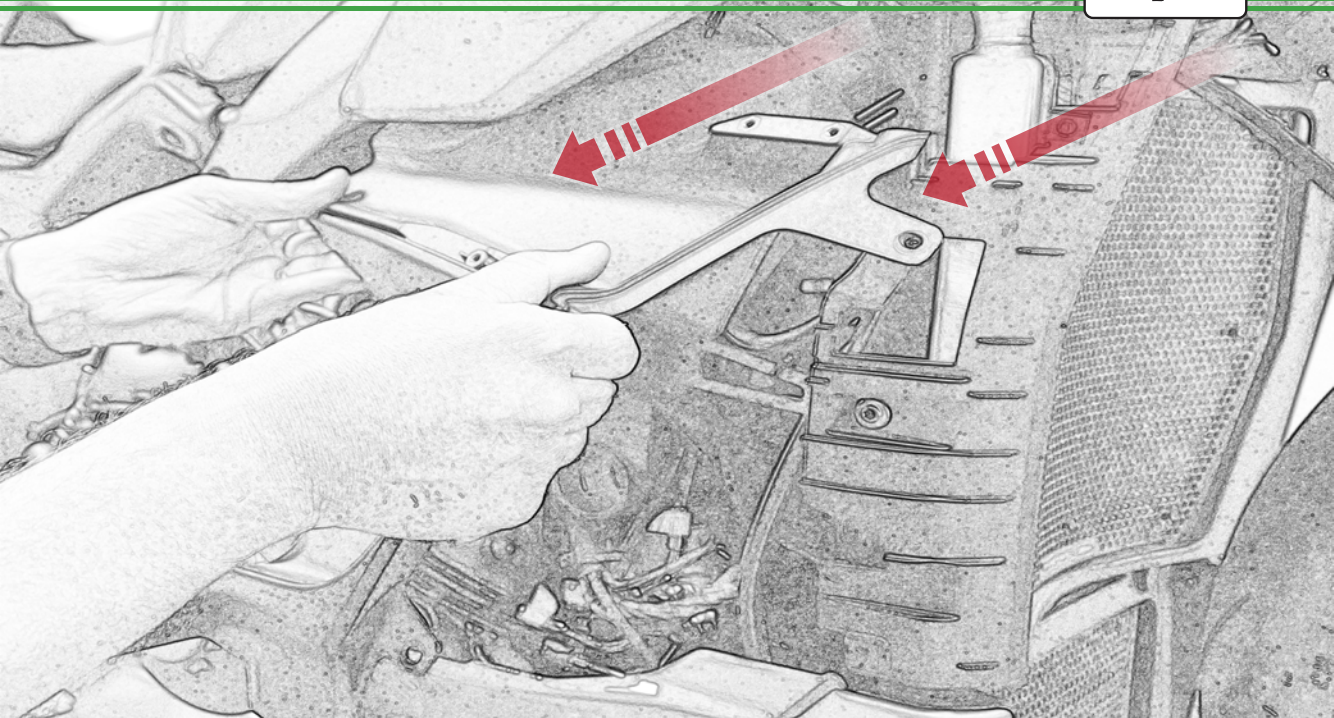





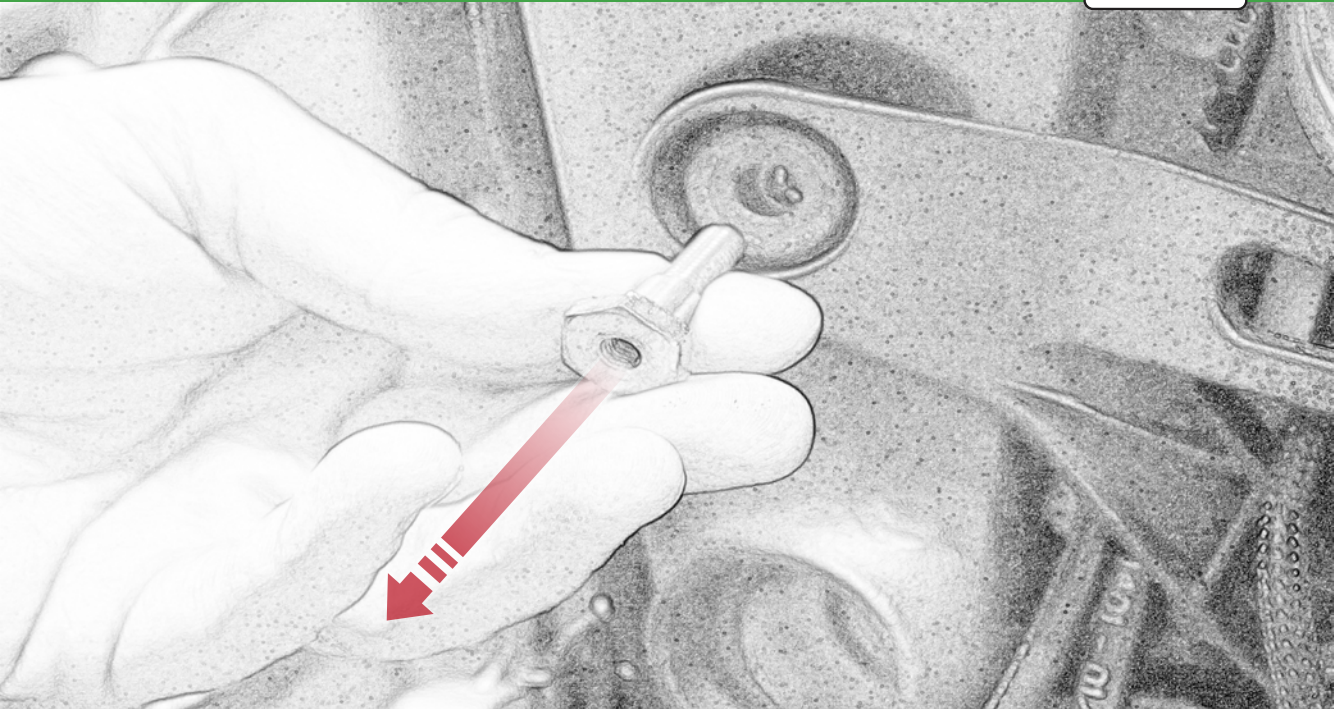

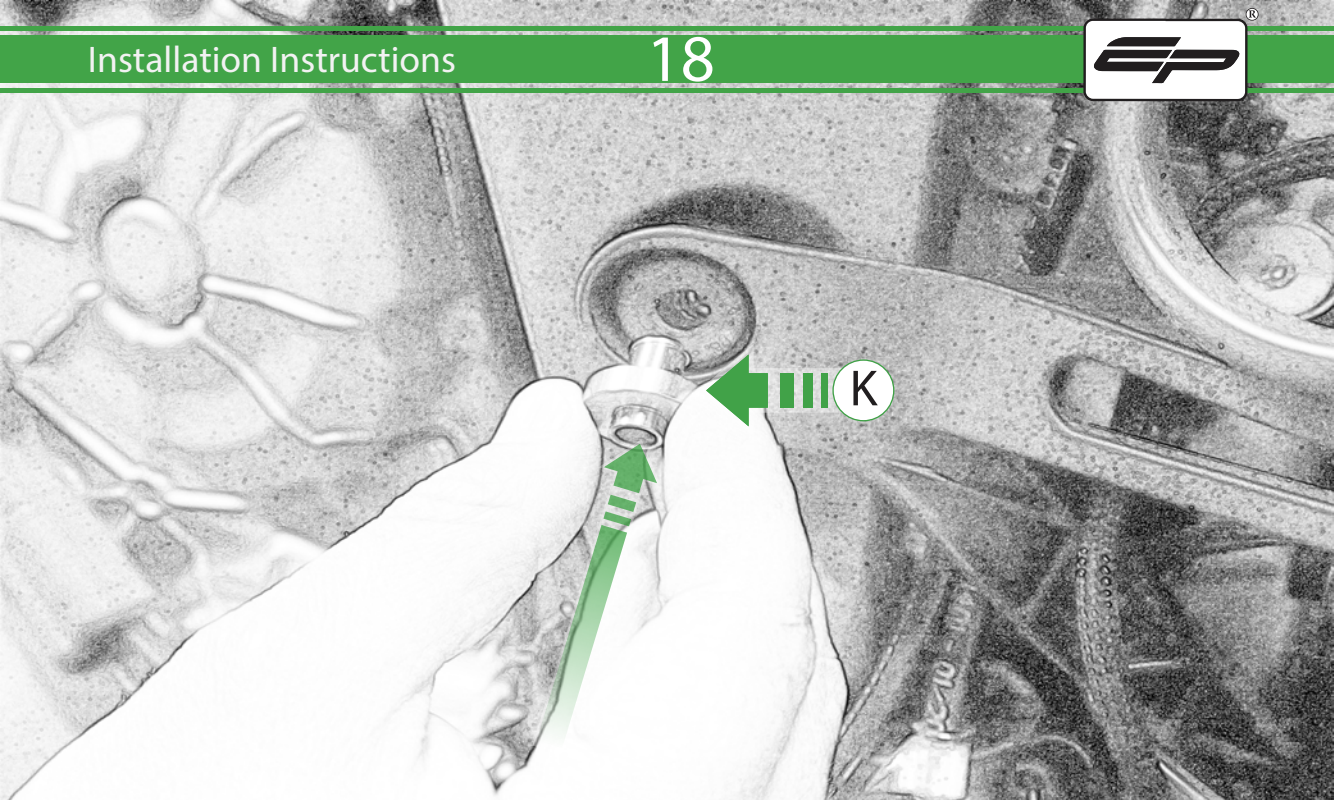


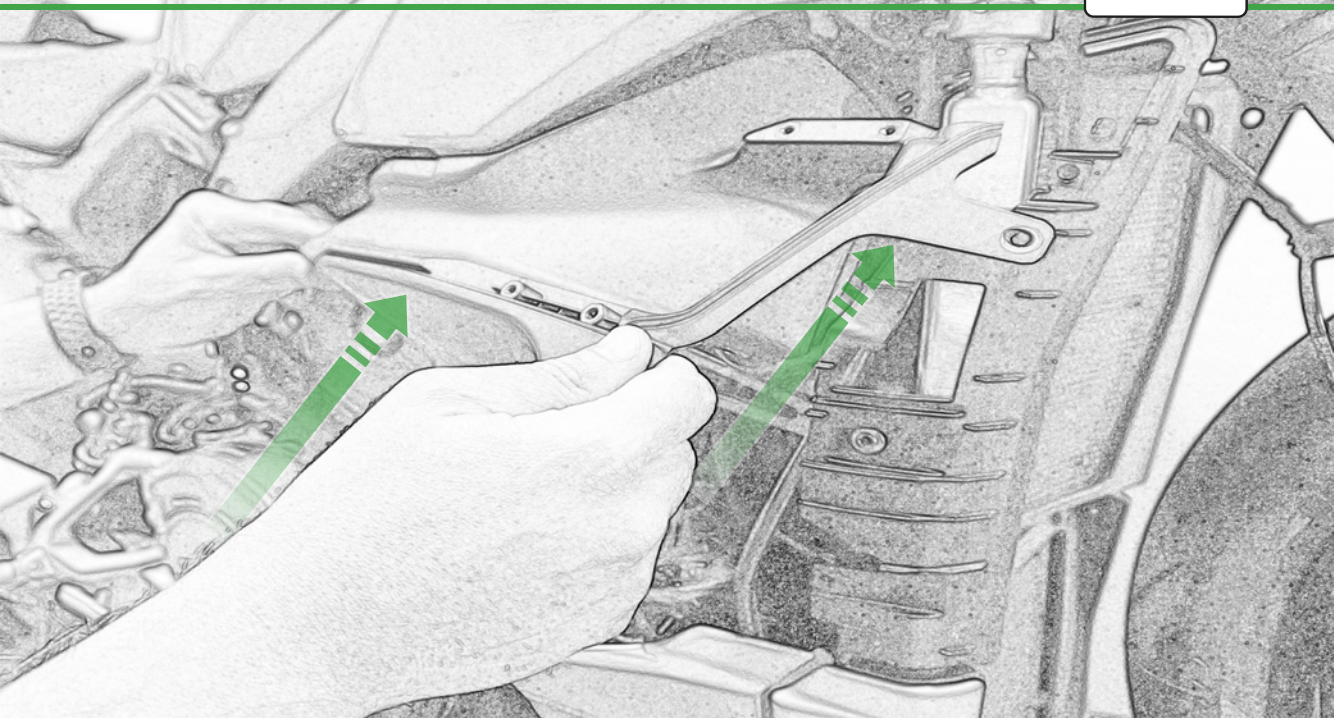

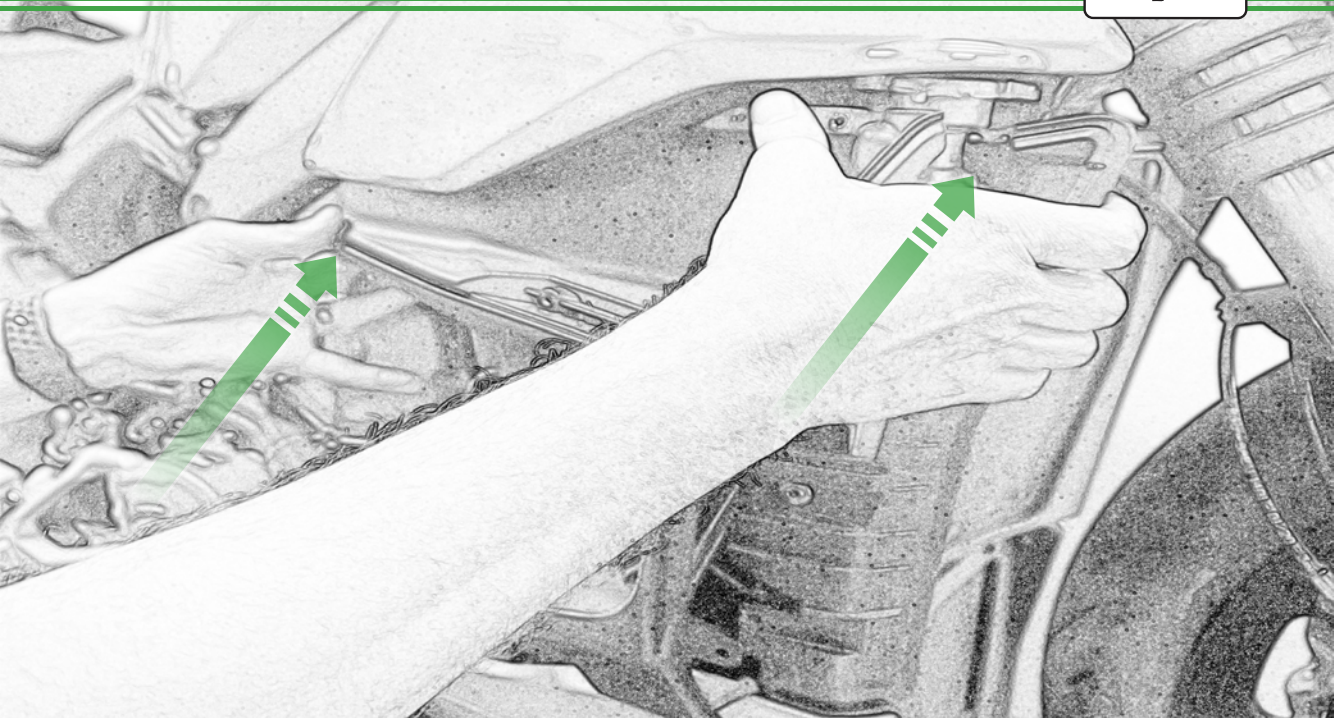


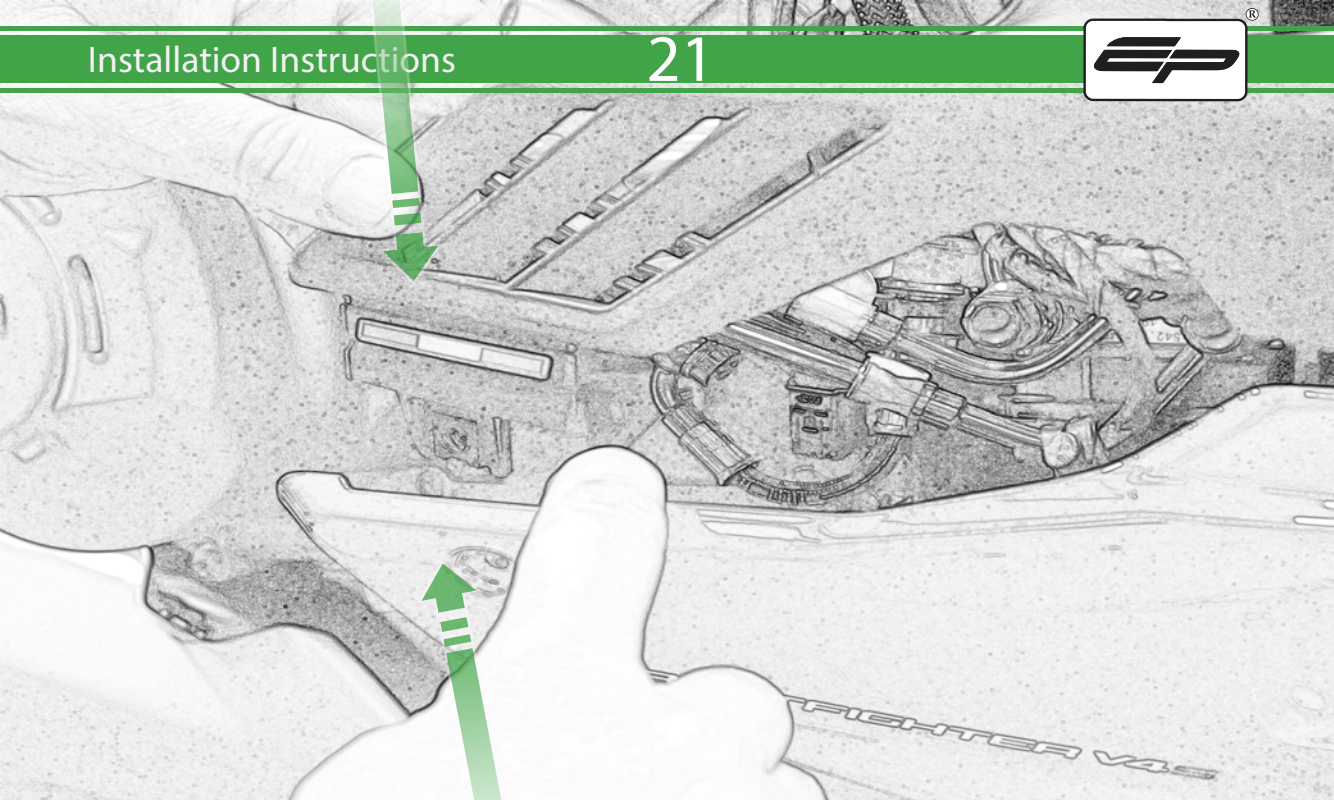




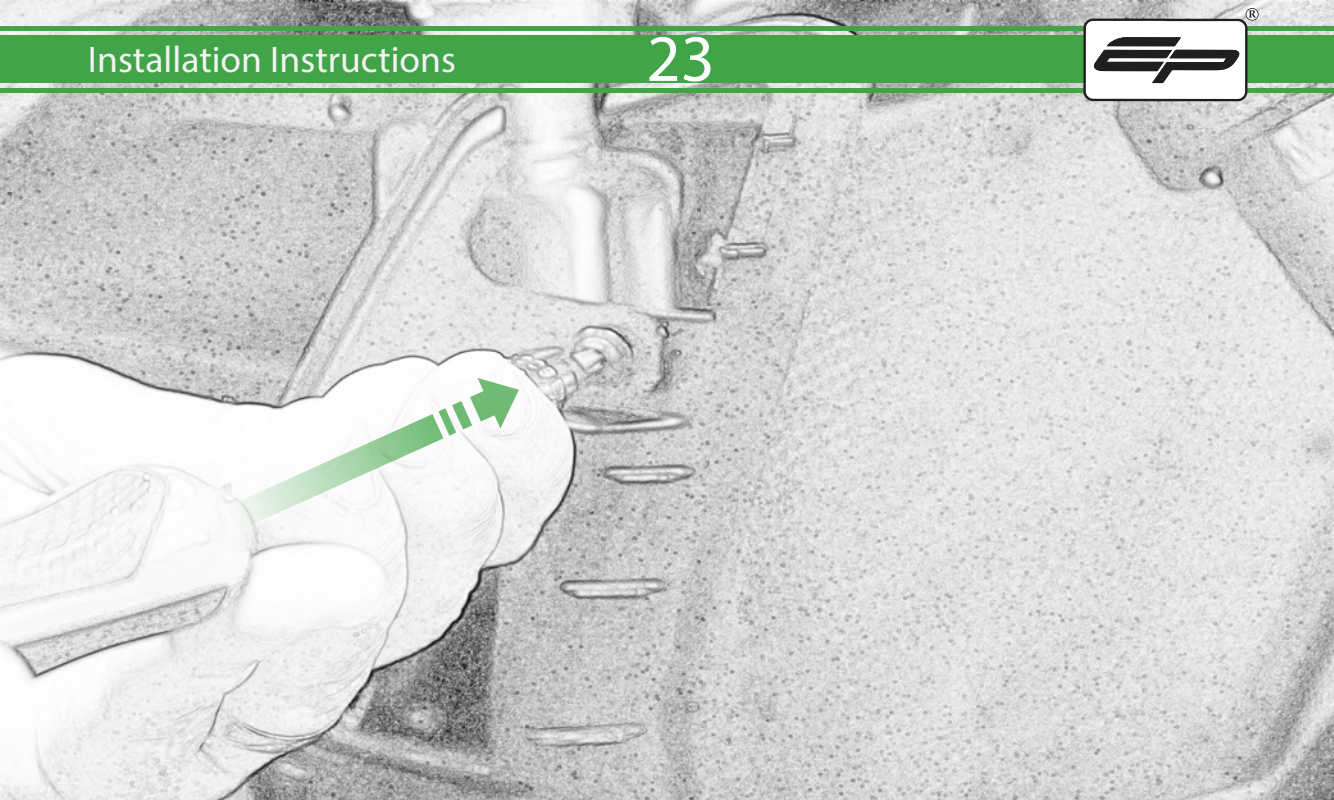




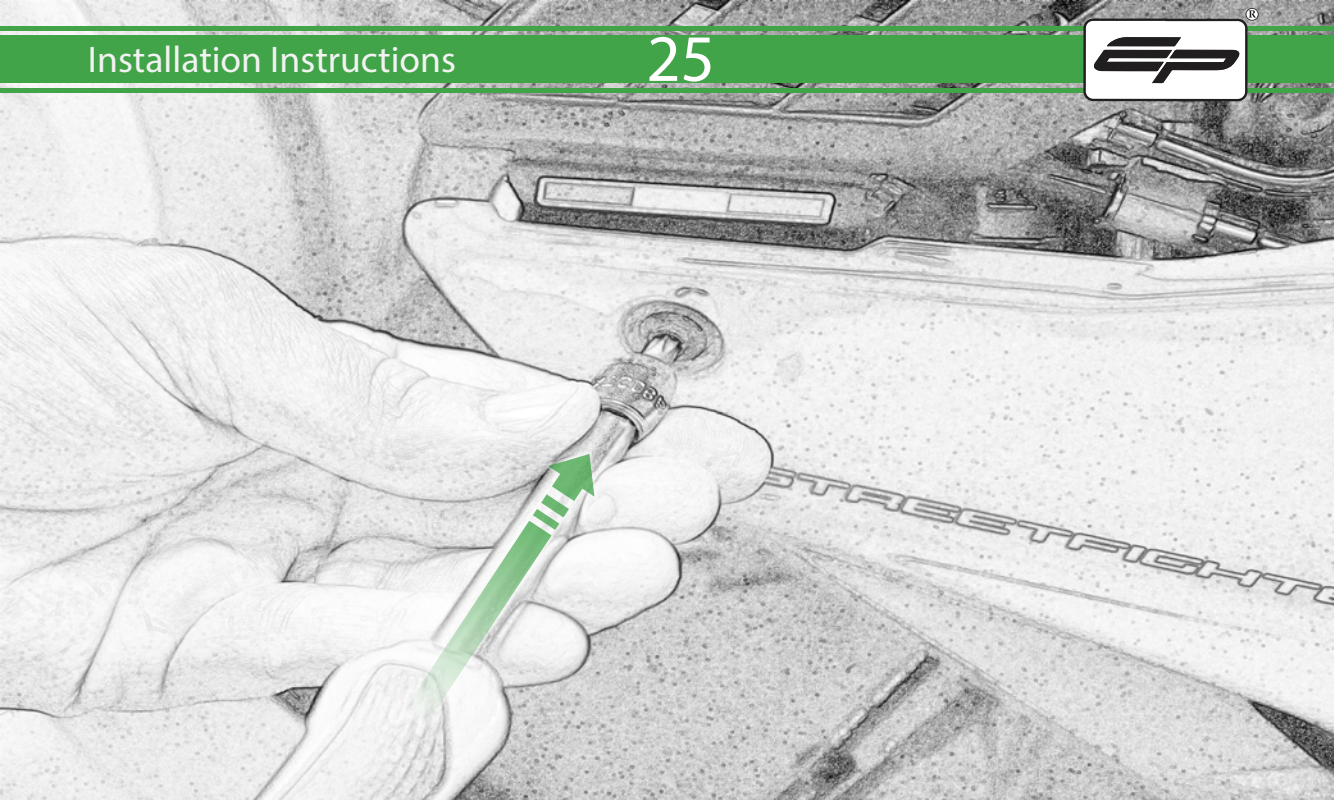





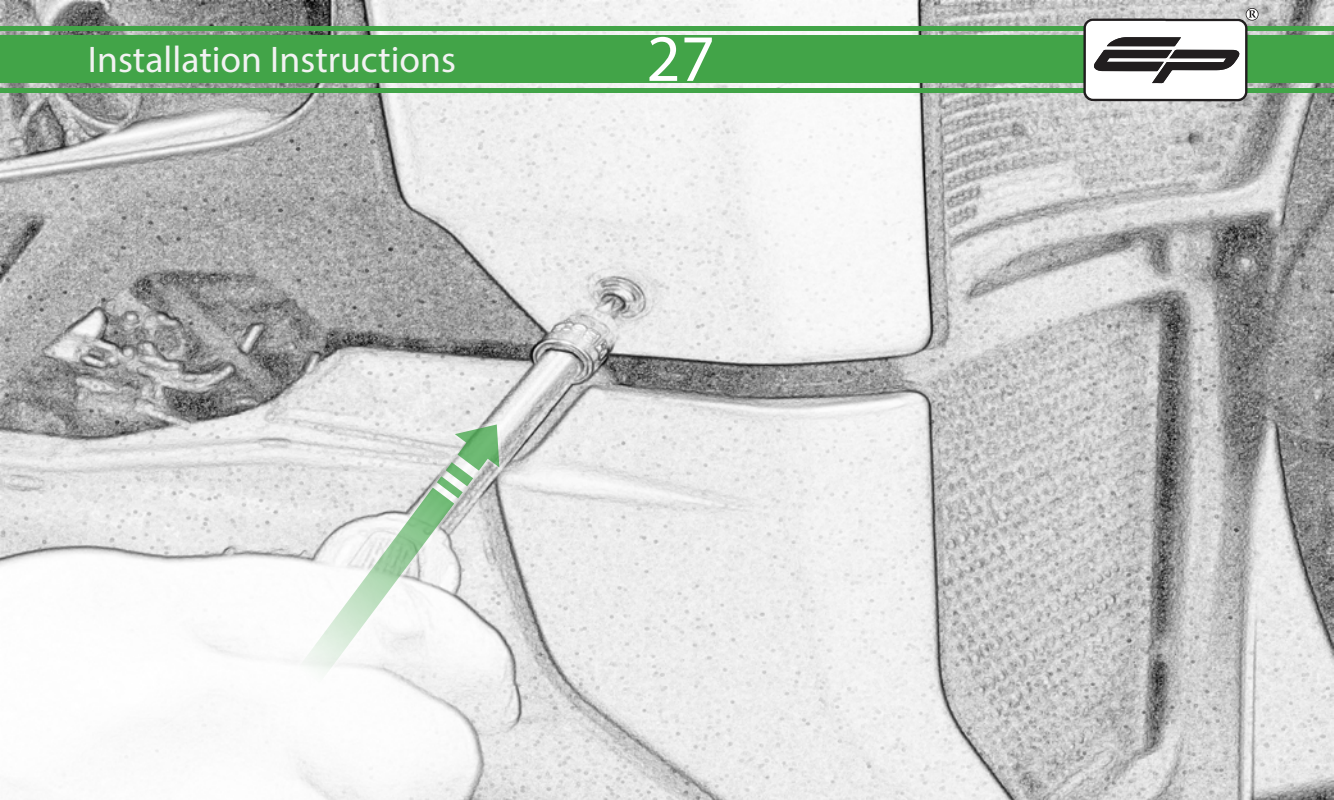


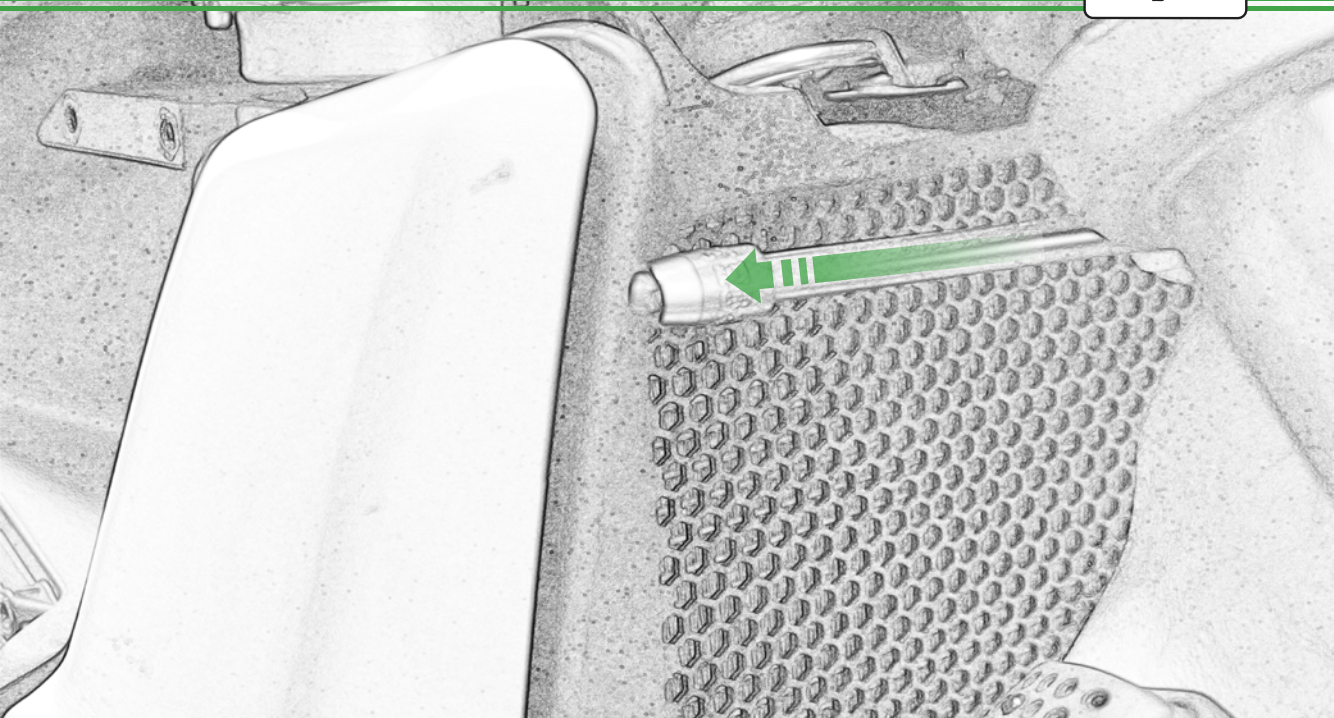





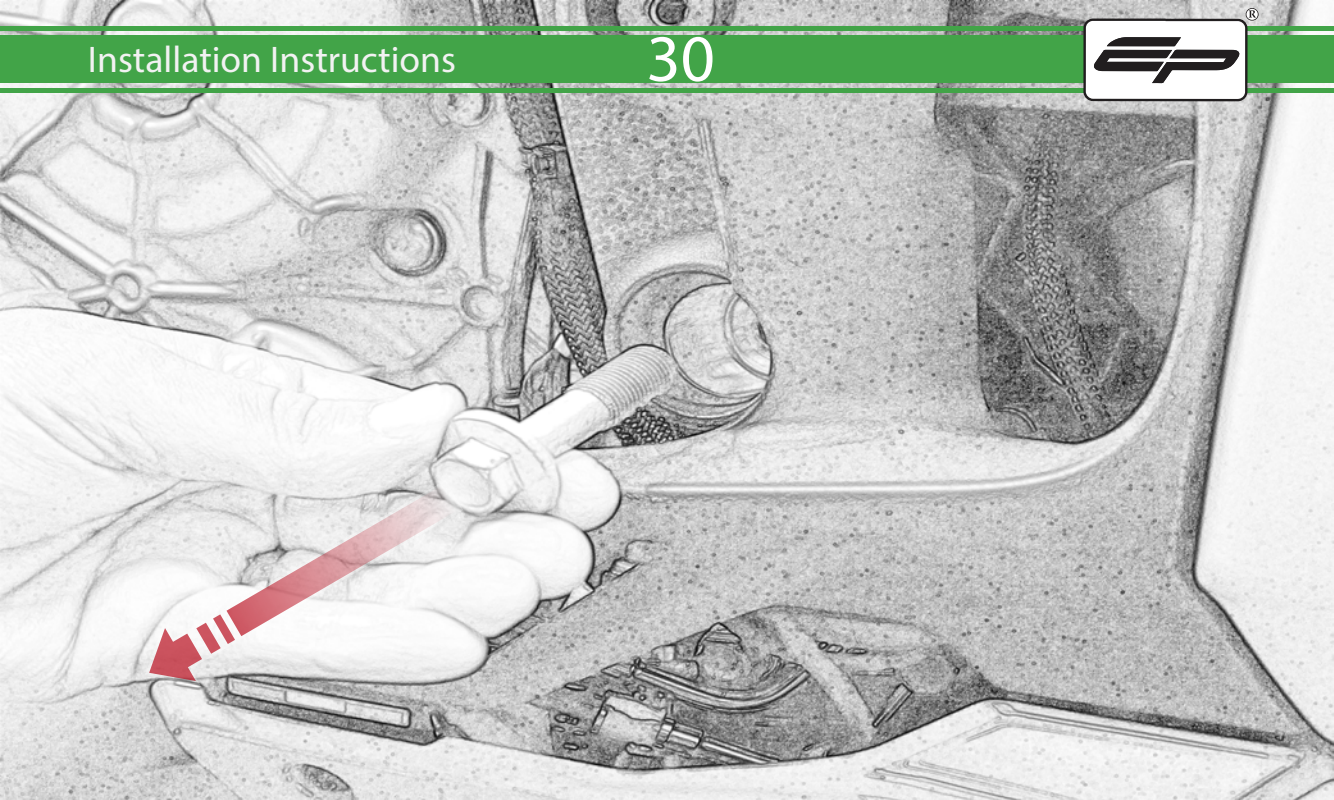

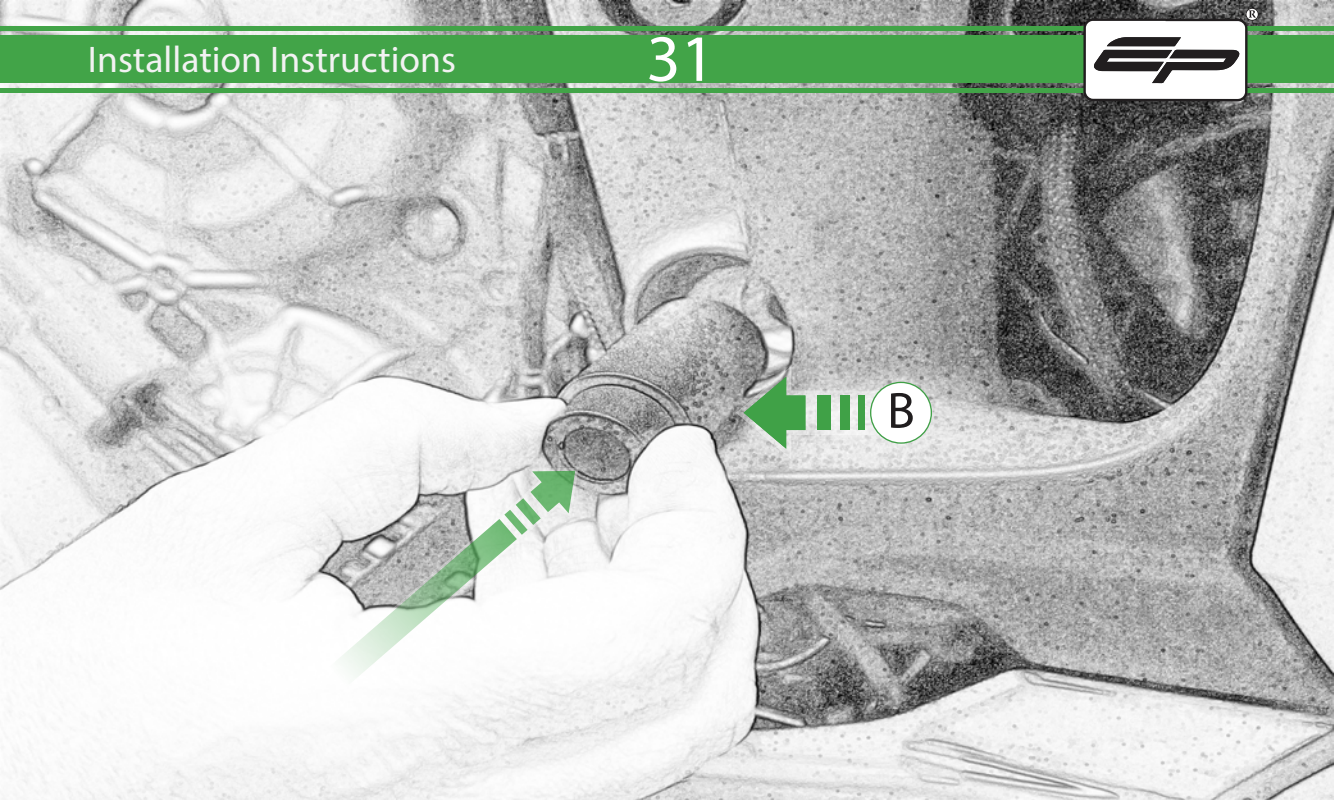

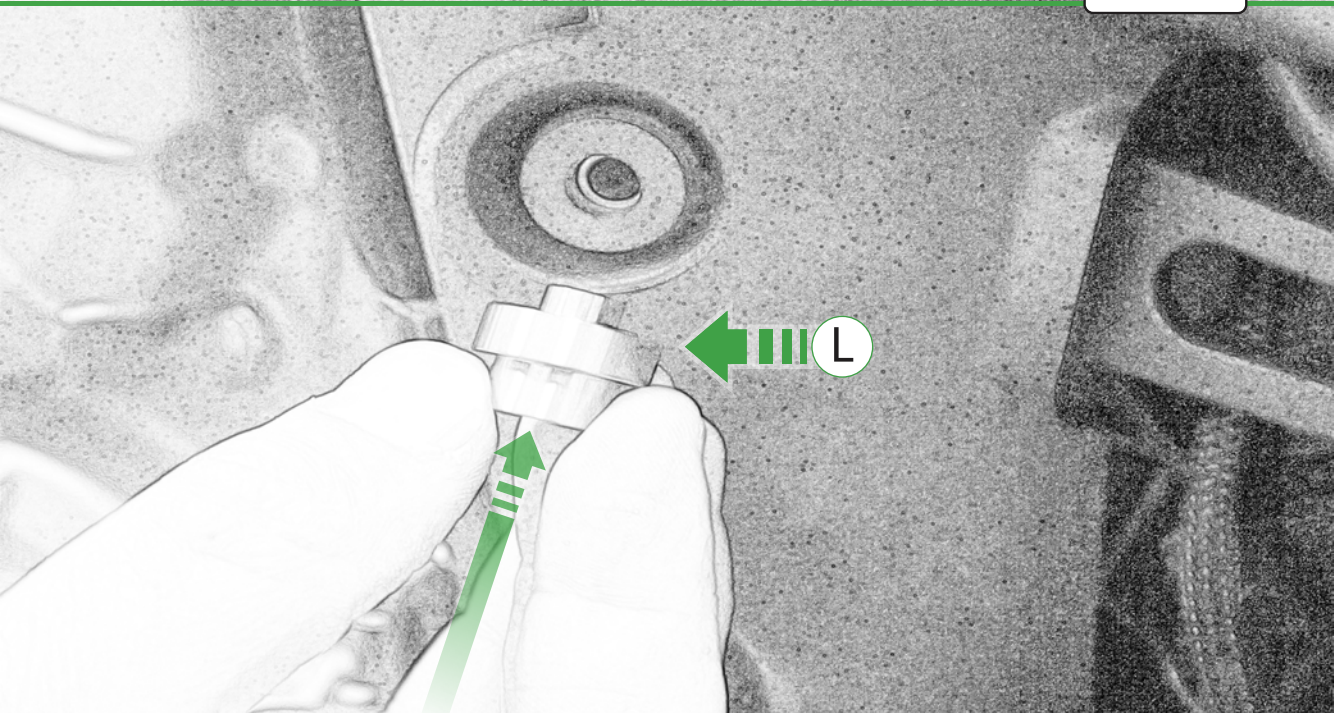


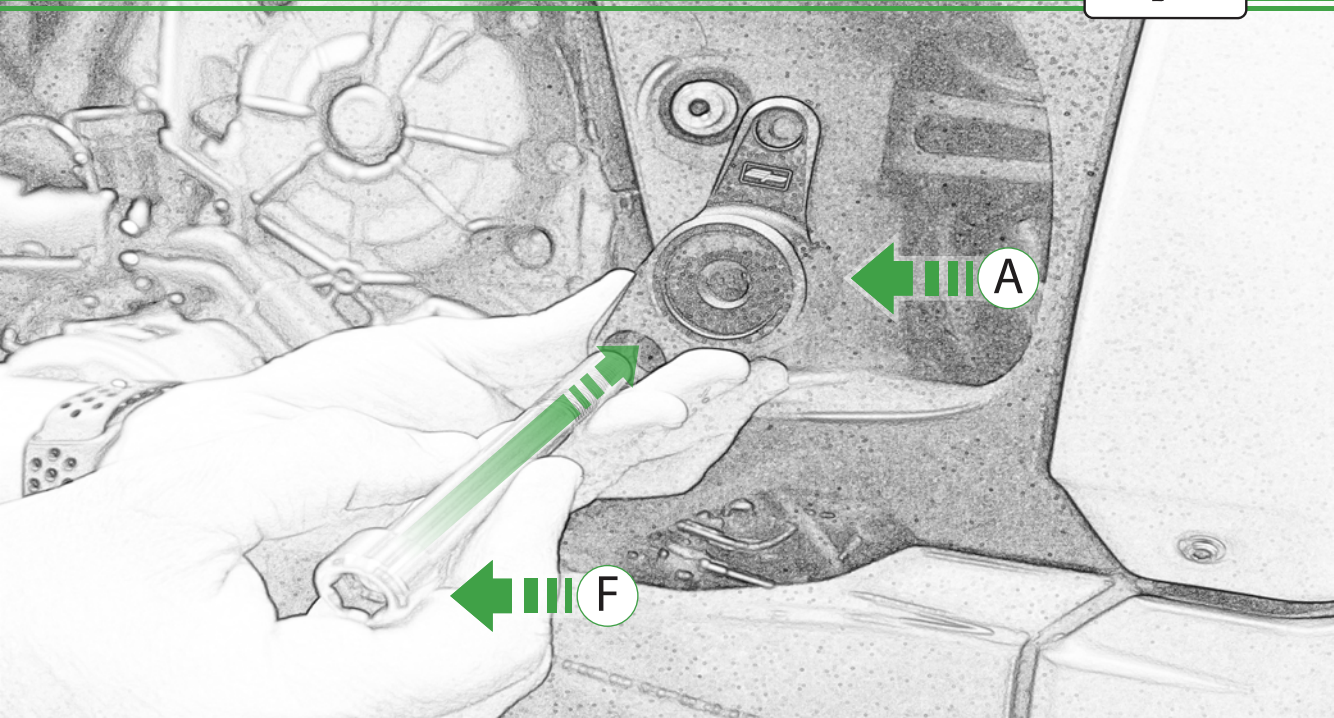

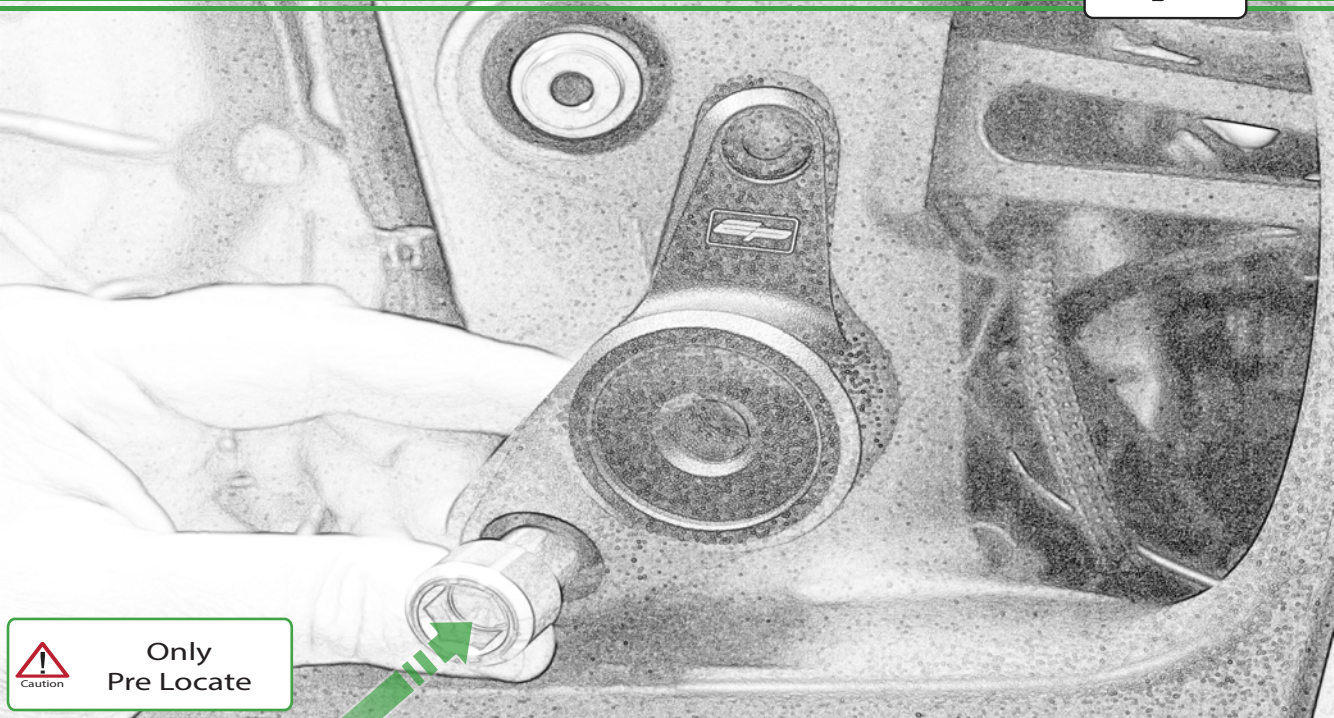


Caution

Only
Pre Locate

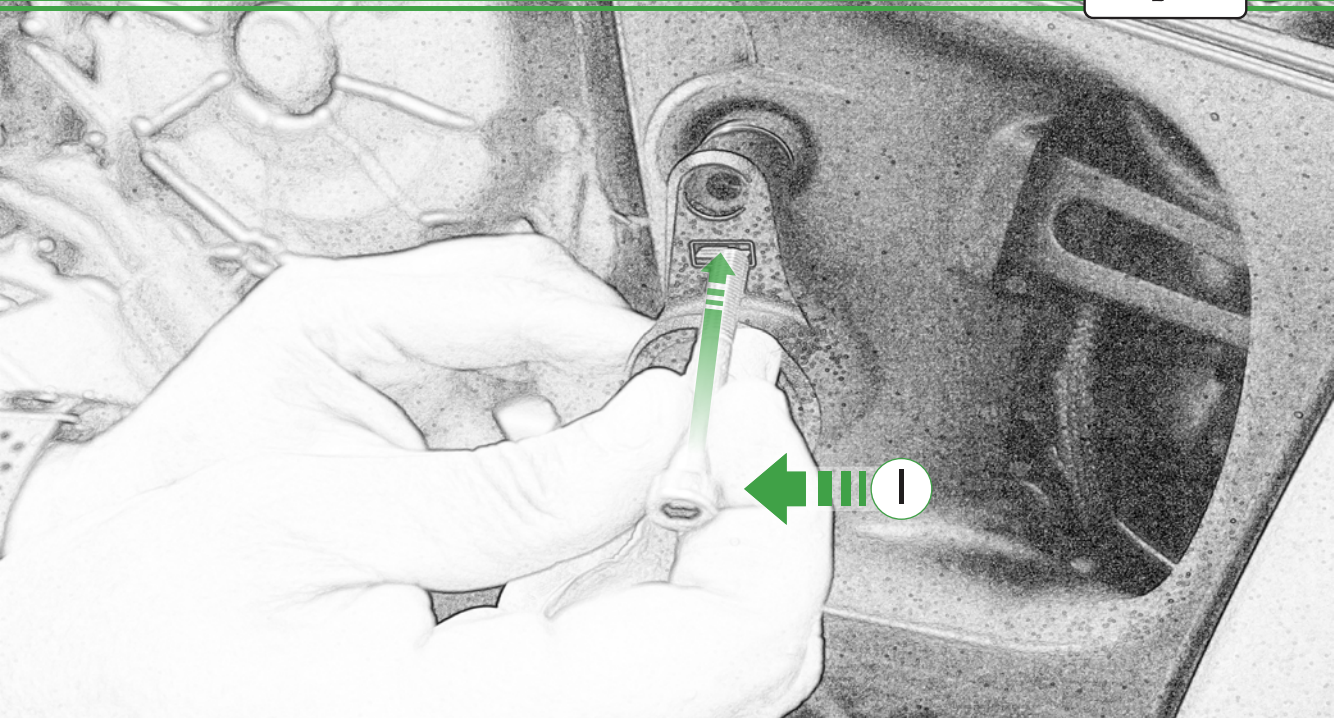





**Do Not Fully
Tighten**

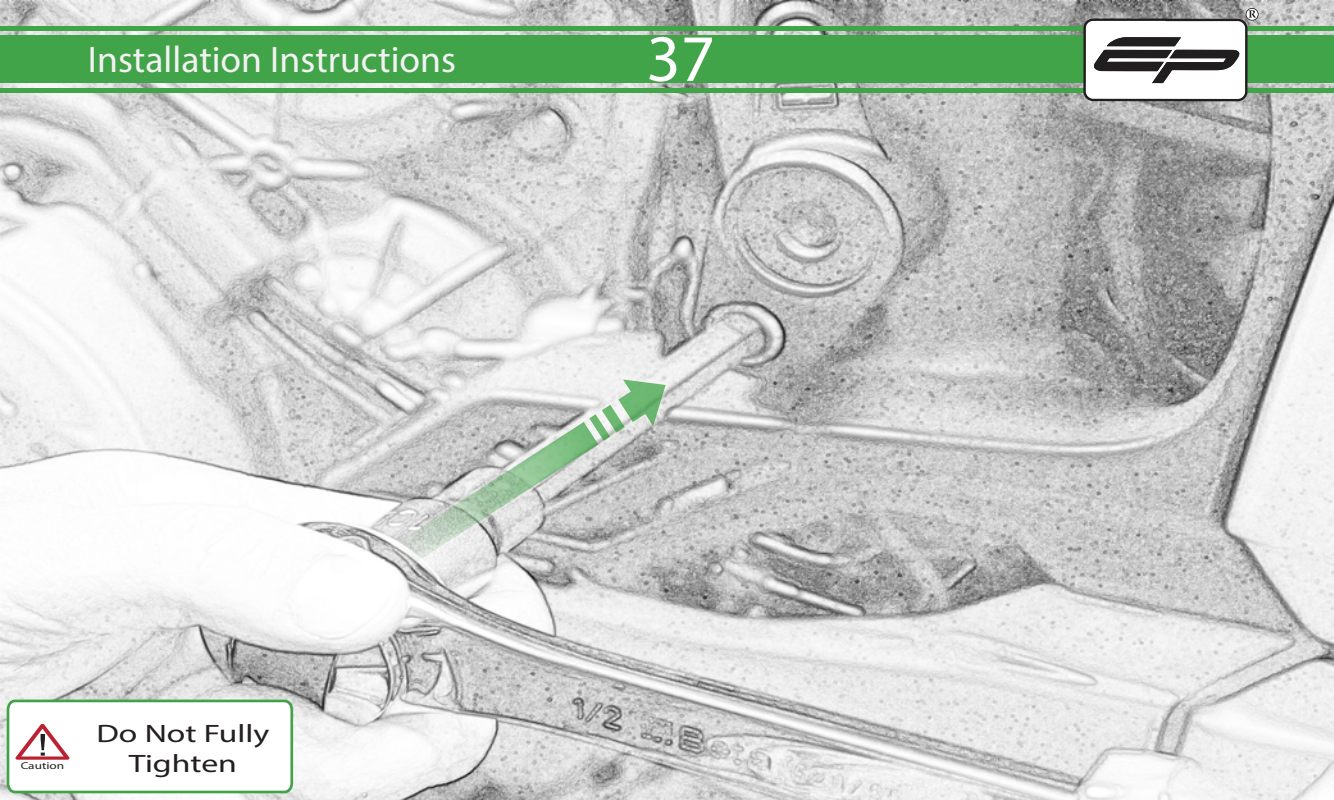


Do Not Fully Tighten

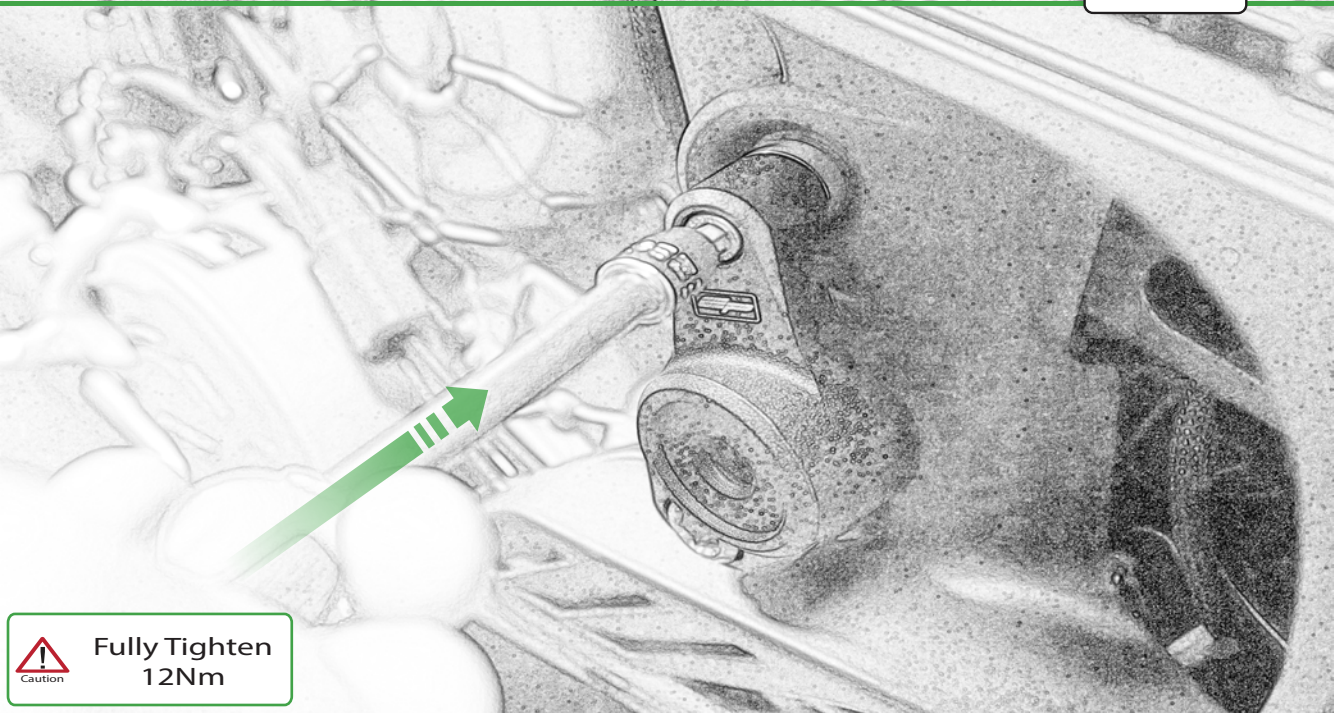



Fully Tighten
12Nm

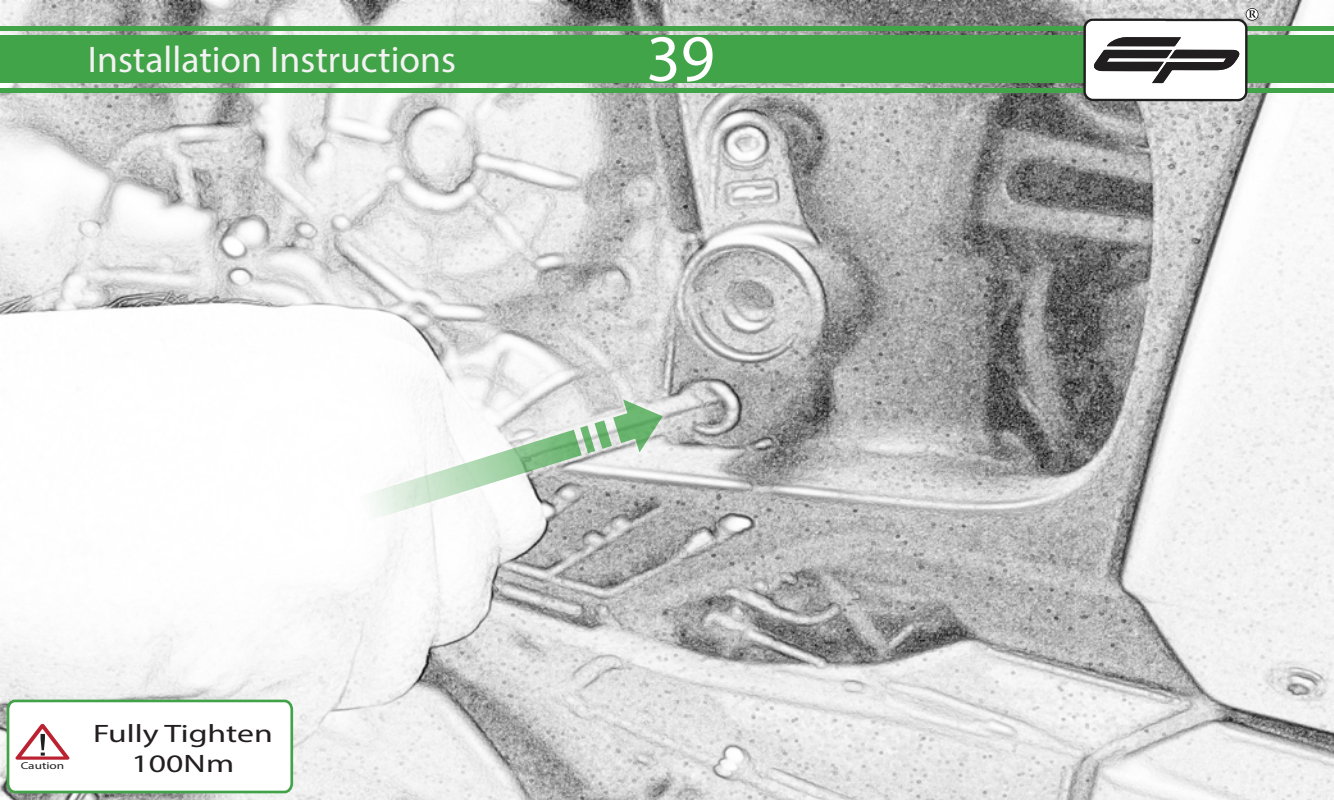



Fully Tighten
100Nm

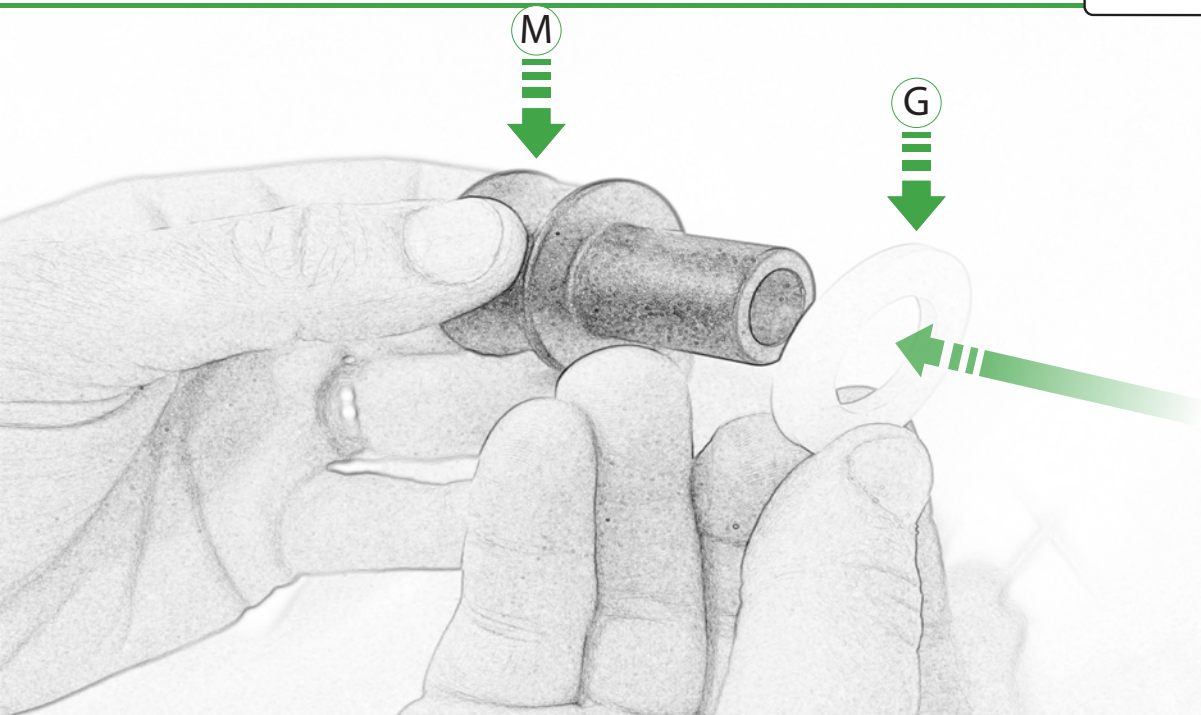


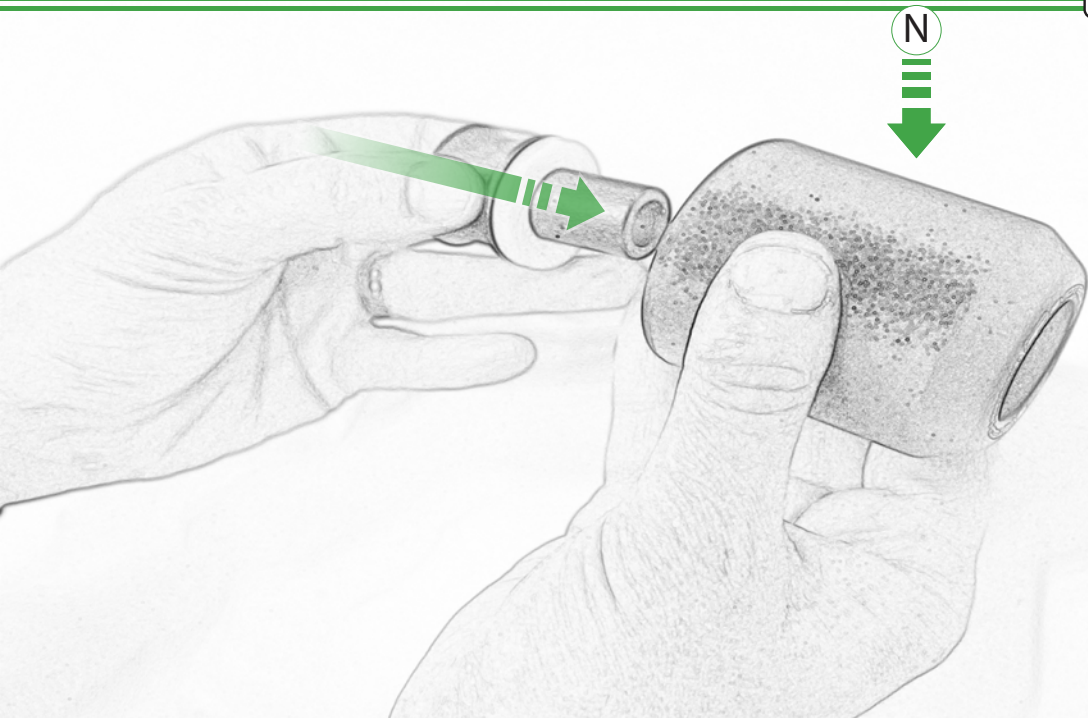

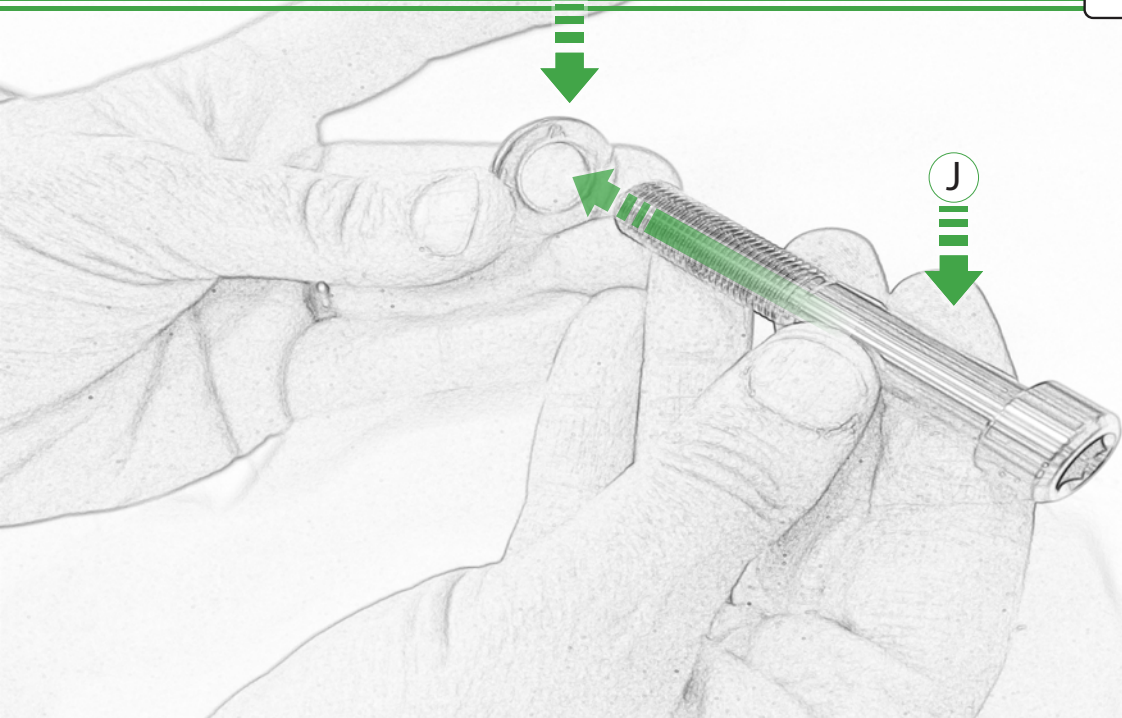

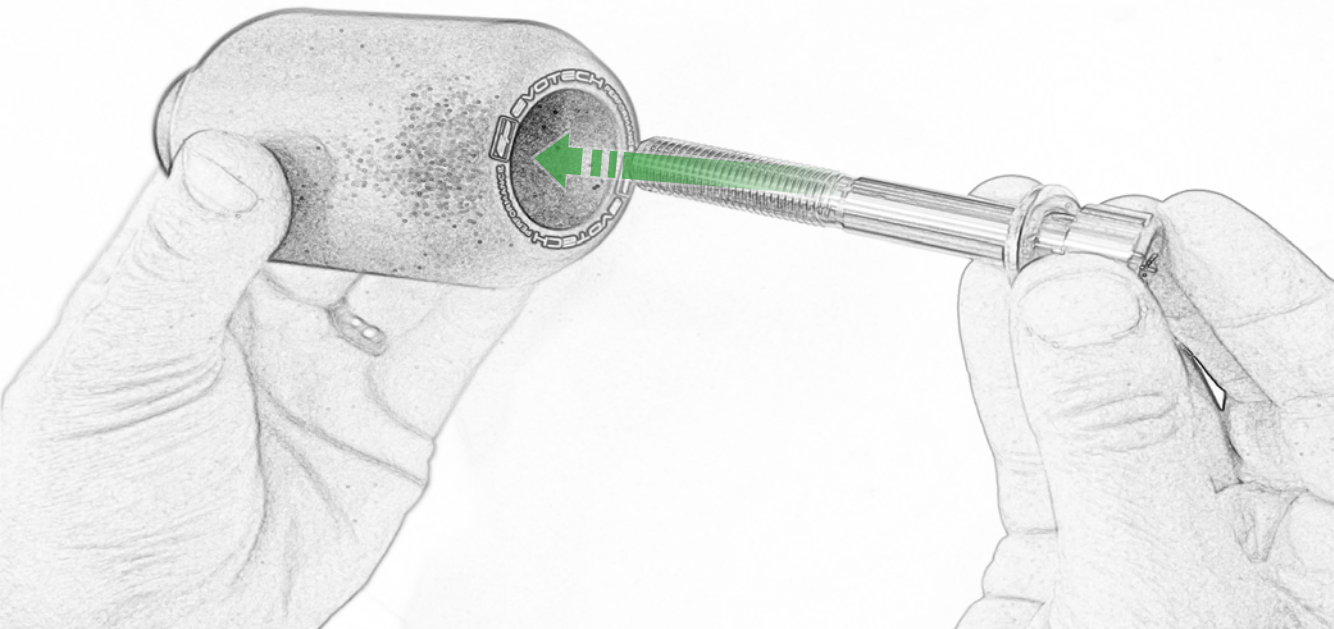

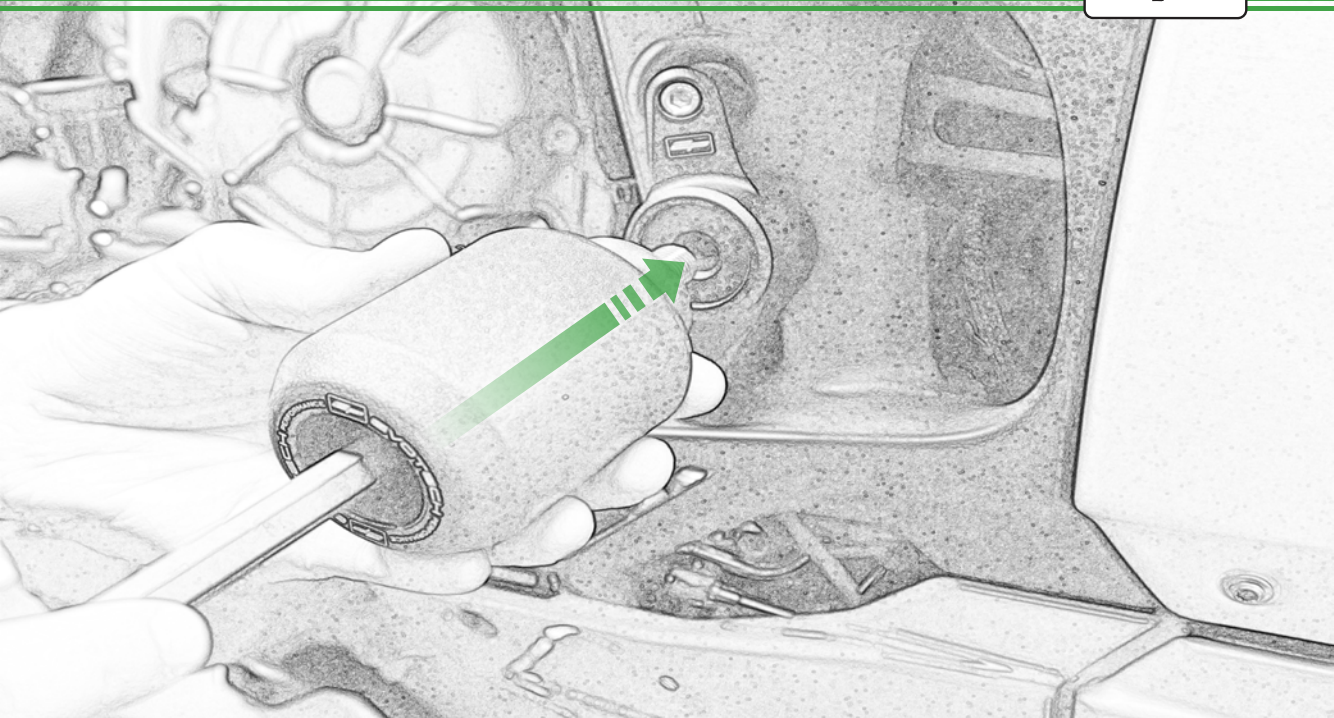

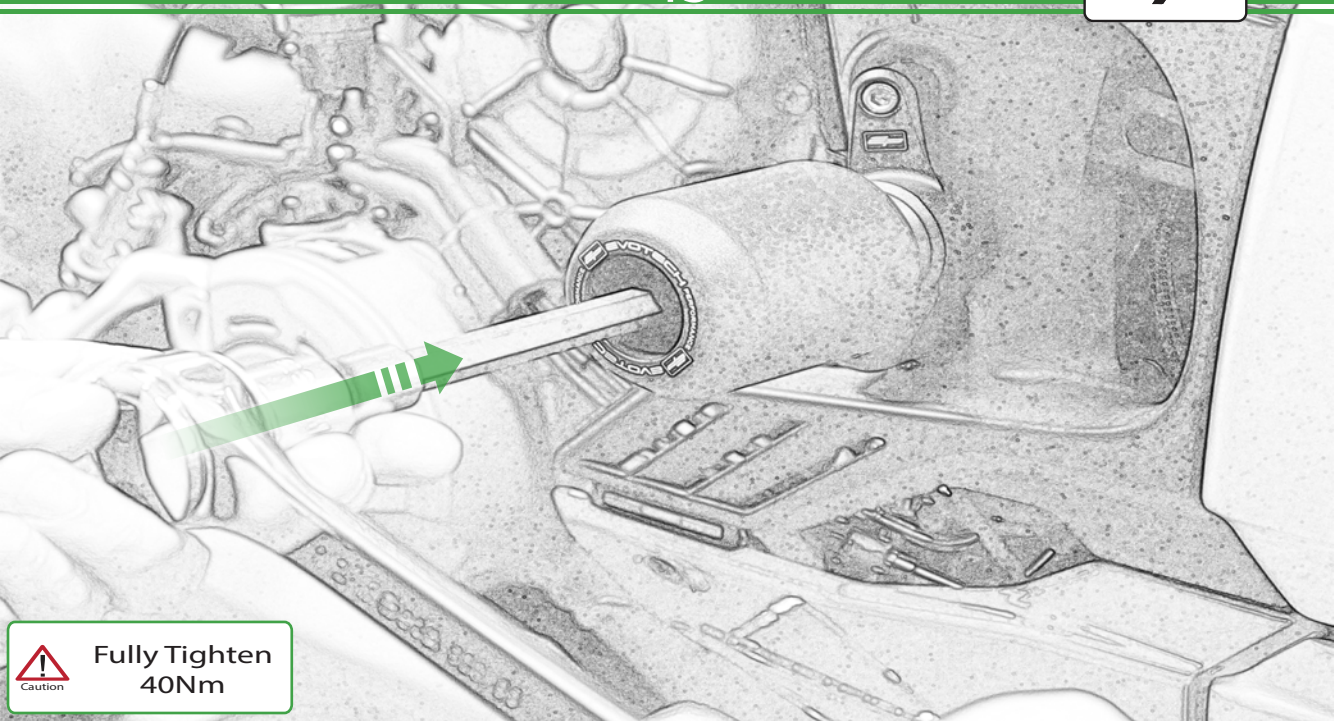

**Fully Tighten
40Nm**



Repeat Stages

1 - 45


For Left Hand Side



ESSENTIAL CHECKS

It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced

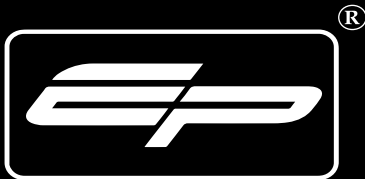

EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com