



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com


Ducati Monster 950 Crash Protection

Installation Instructions





Kit Contents PRN015557


- (A) 1 x Left Hand Bracket
- (B) 1 x Right Hand Bracket
- (C) 1 x Right Frame Spacer (1 Dot)
- (D) 1 x Right Frame Spacer (2 Dot)
- (E) 1 x Left Frame Spacer (3 Dot)
- (F) 1 x Left Frame Spacer (4 Dot)
- (G) 1 x M12 x 100mm x 1.25 Caphead
- (H) 1 x M12 x 115mm x 1.25 Caphead
- (I) 1 x M12 x 135mm x 1.25 Caphead
- (J) 1 x M12 x 105mm x 1.25 Caphead
- (K) 2 x M12 x 95mm x 1.25 Caphead
- (L) 2 x Bobbin Head
- (M) 2 x M12 Washer
- (N) 2 x Poly Washer
- (O) 2 x Bobbin Spacer

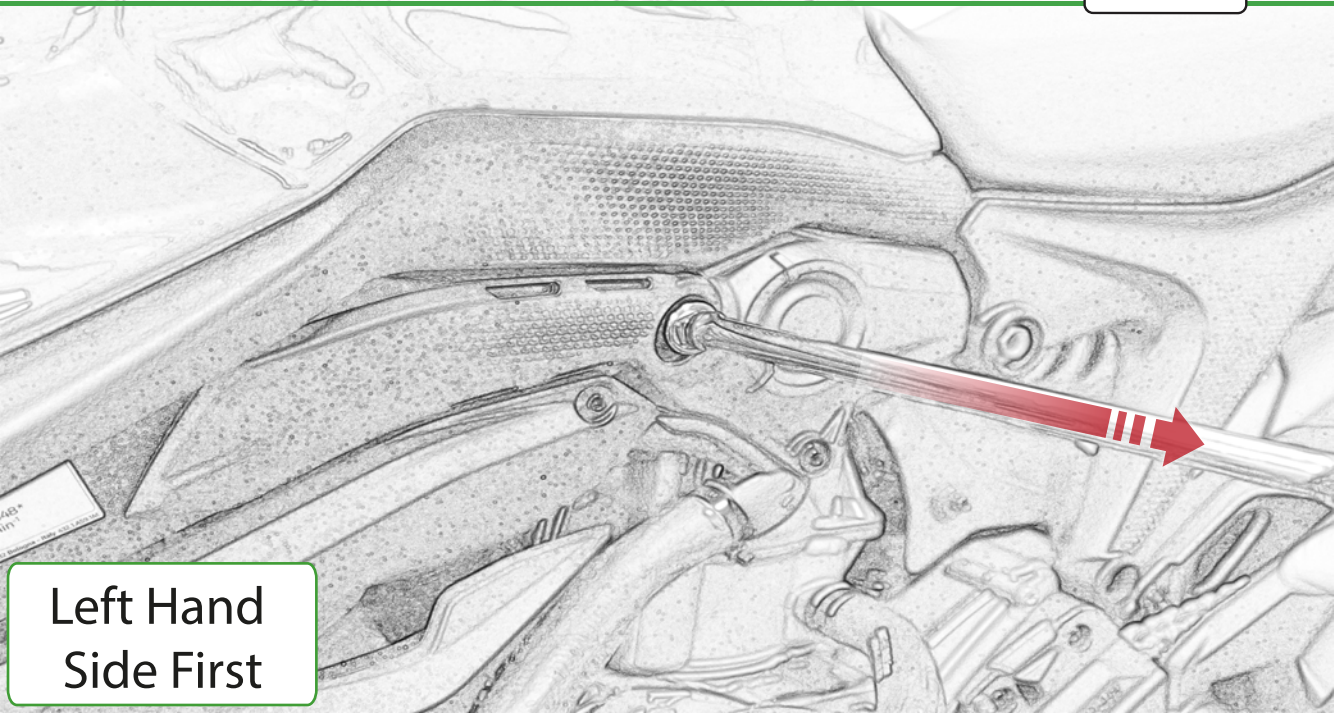

Left Hand
Side First

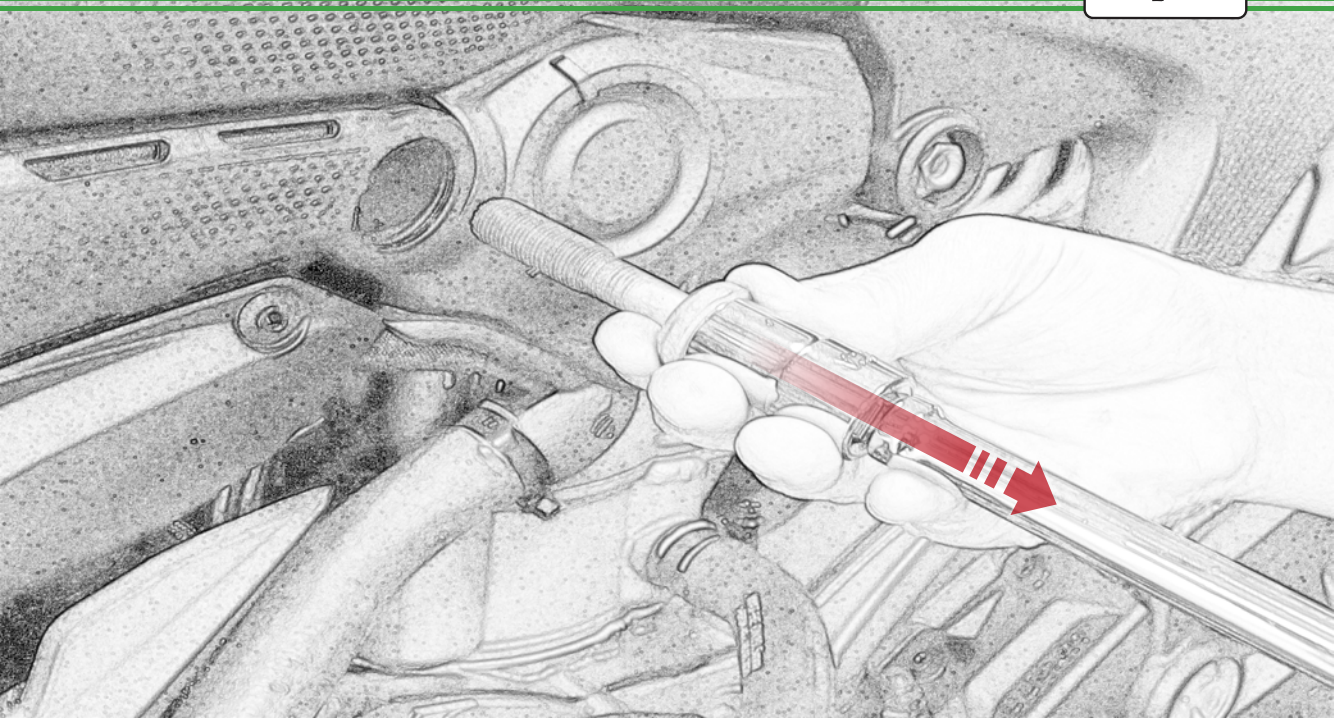


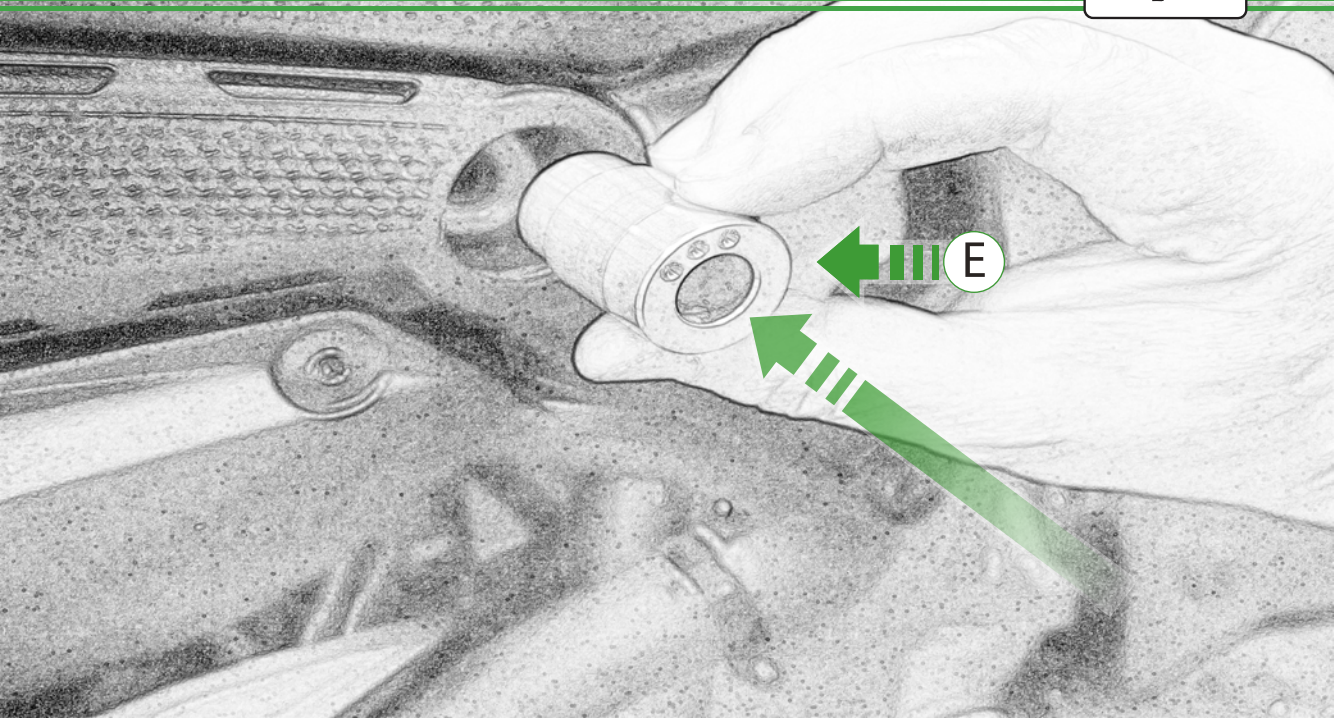


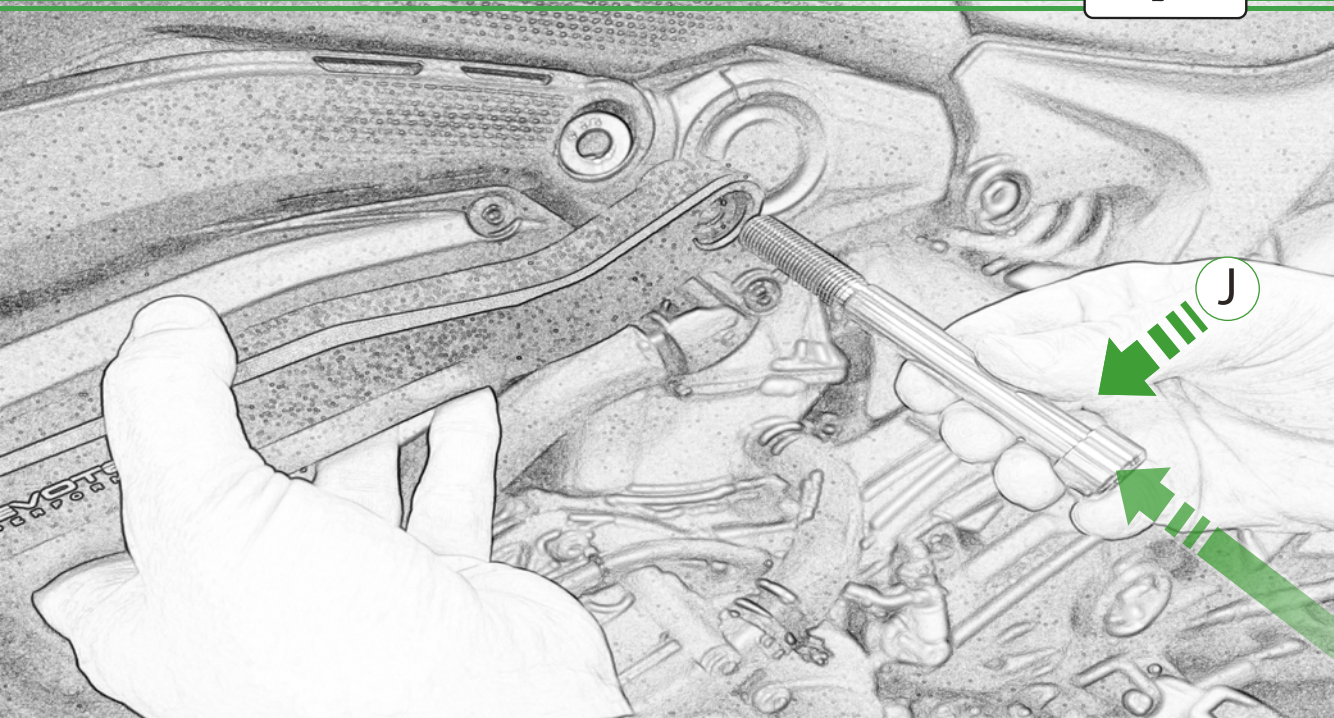




Do Not Fully Tighten

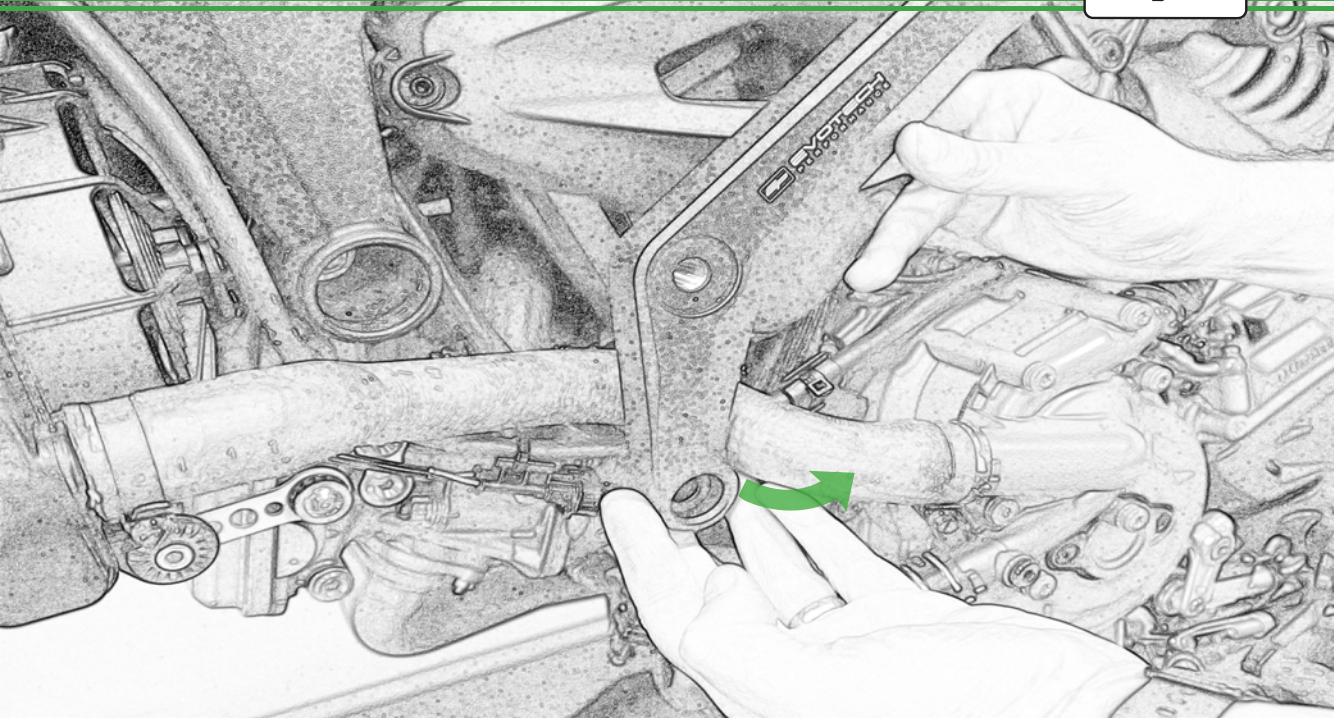


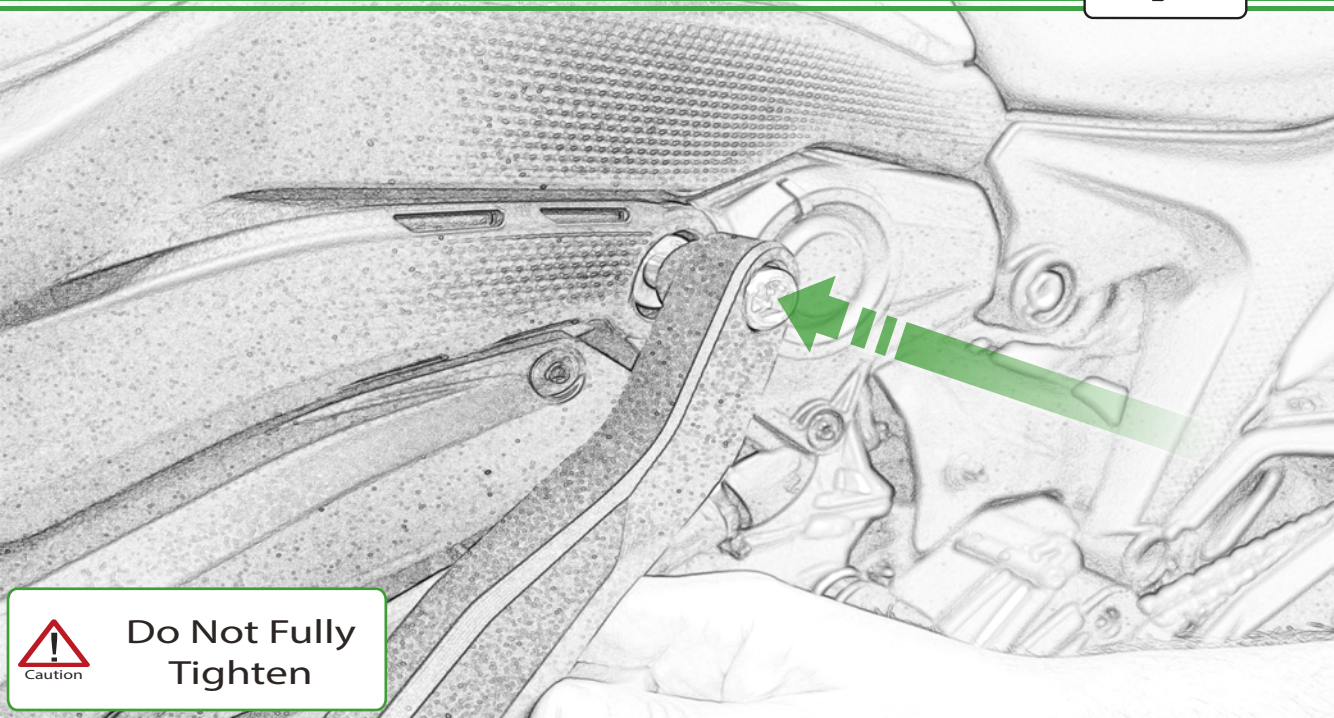



Caution


Do Not Fully Tighten

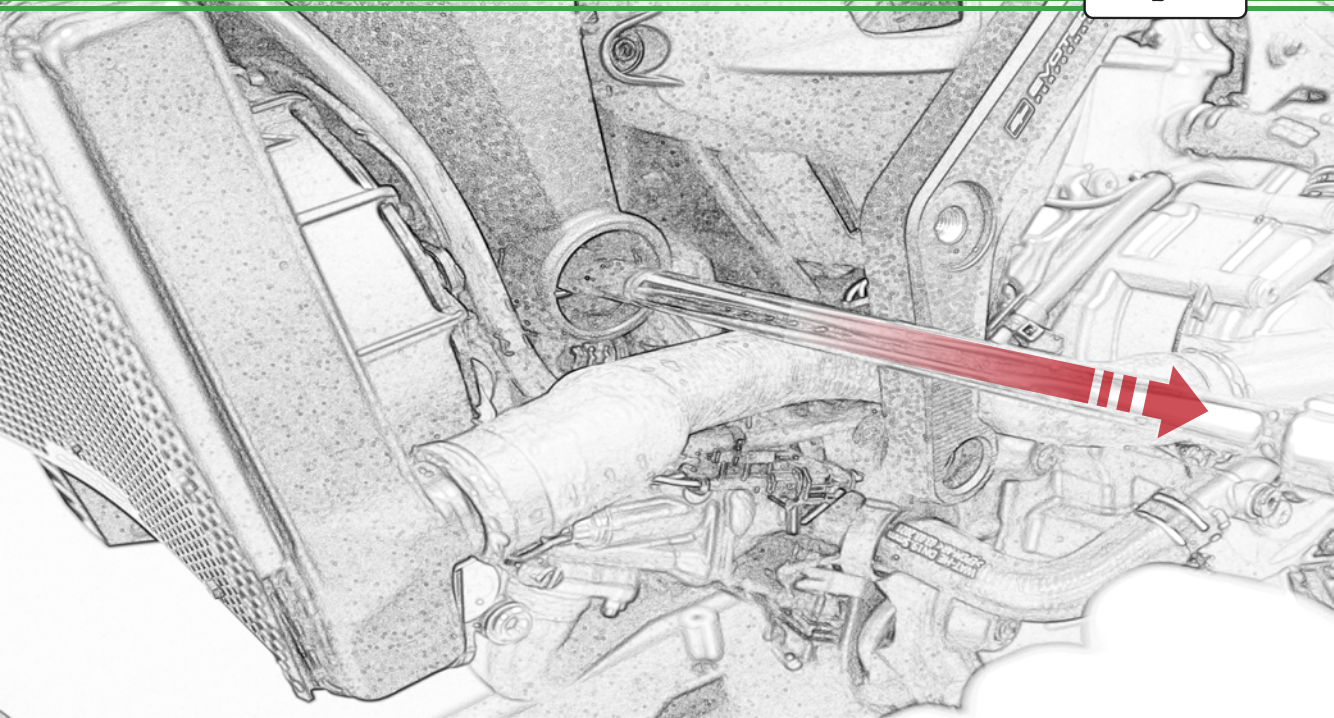


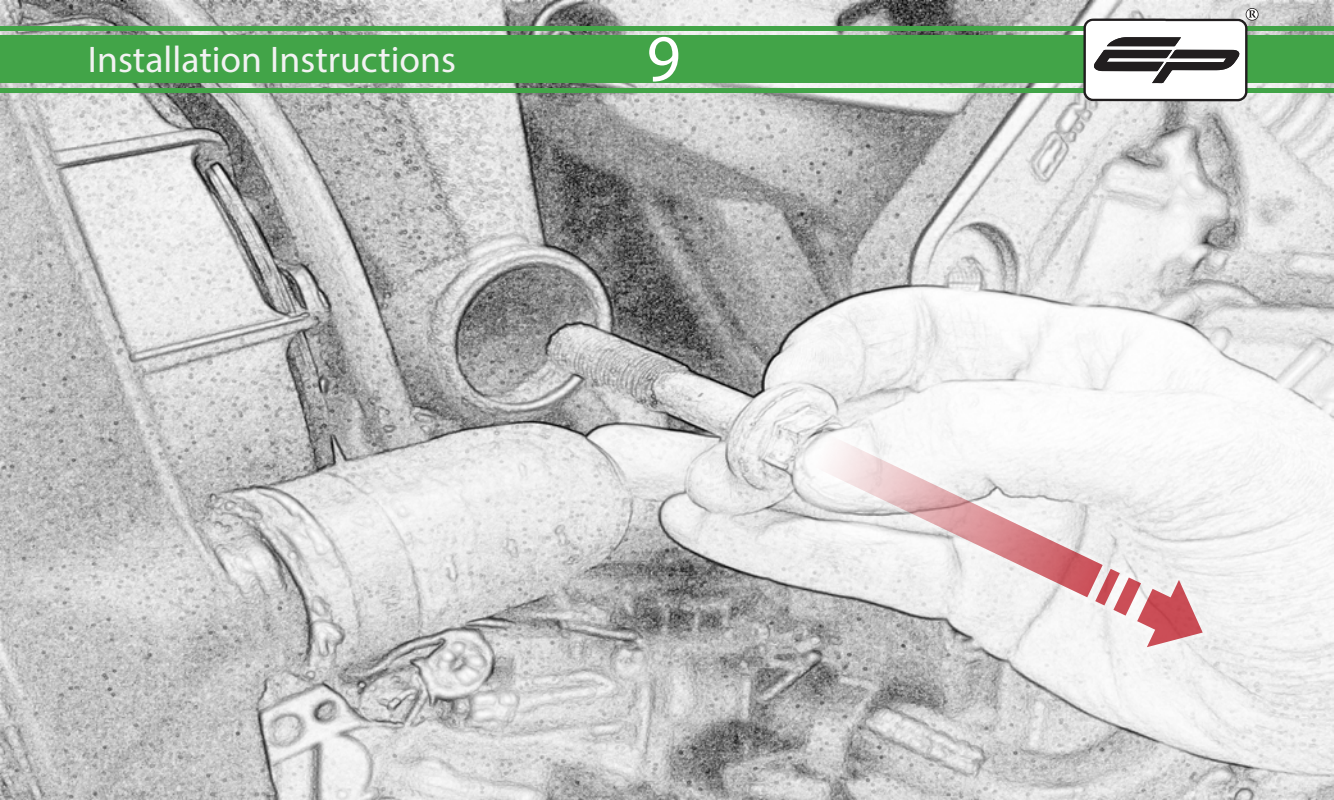

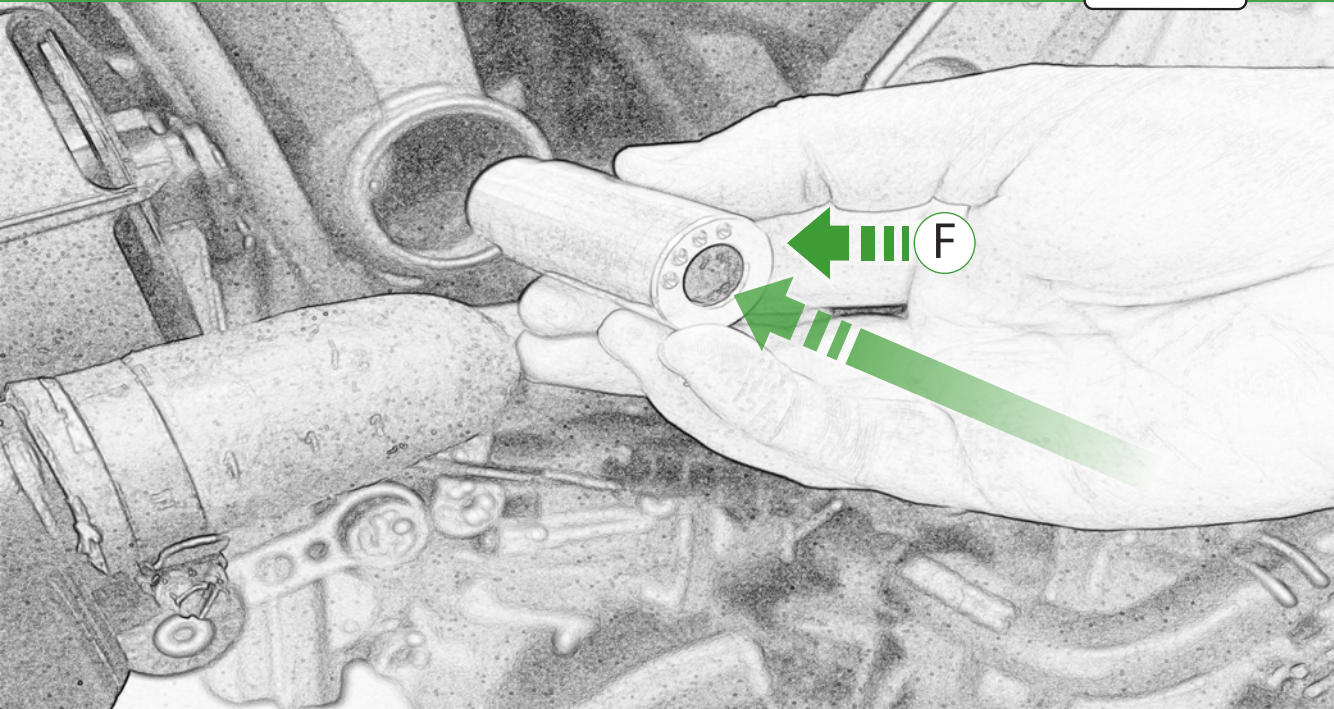

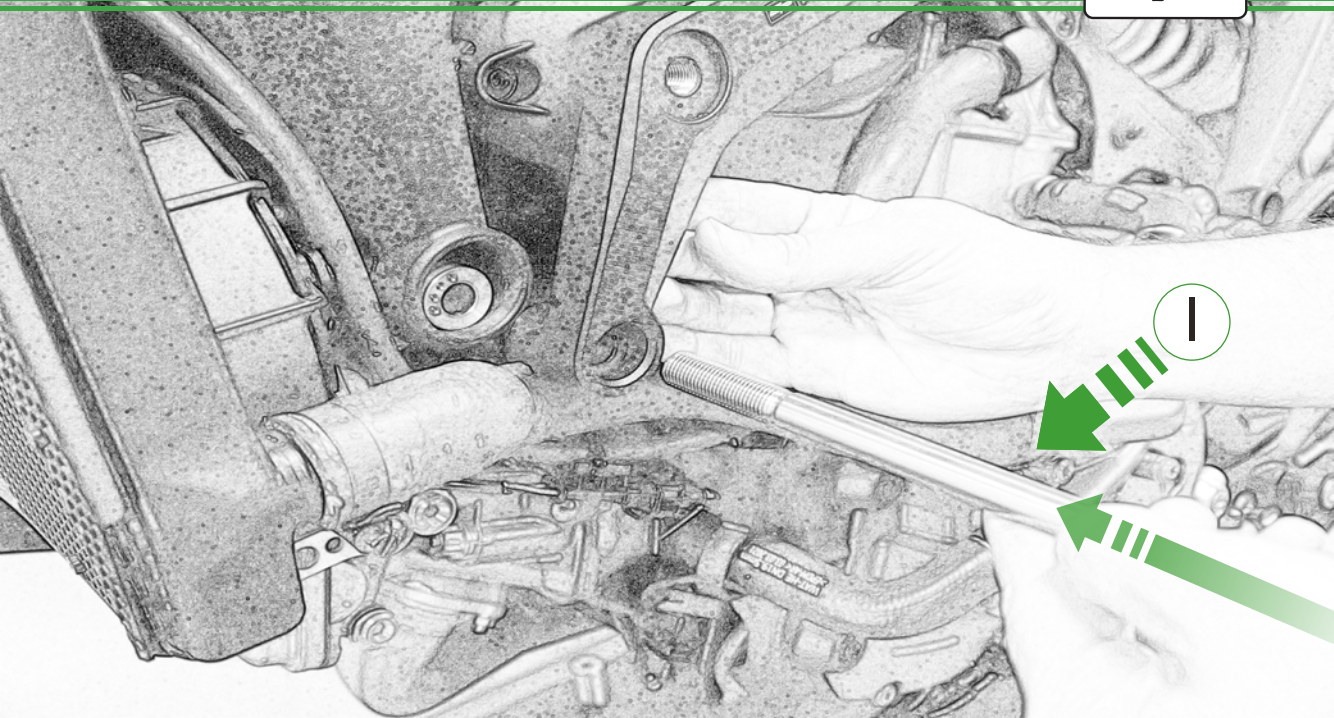


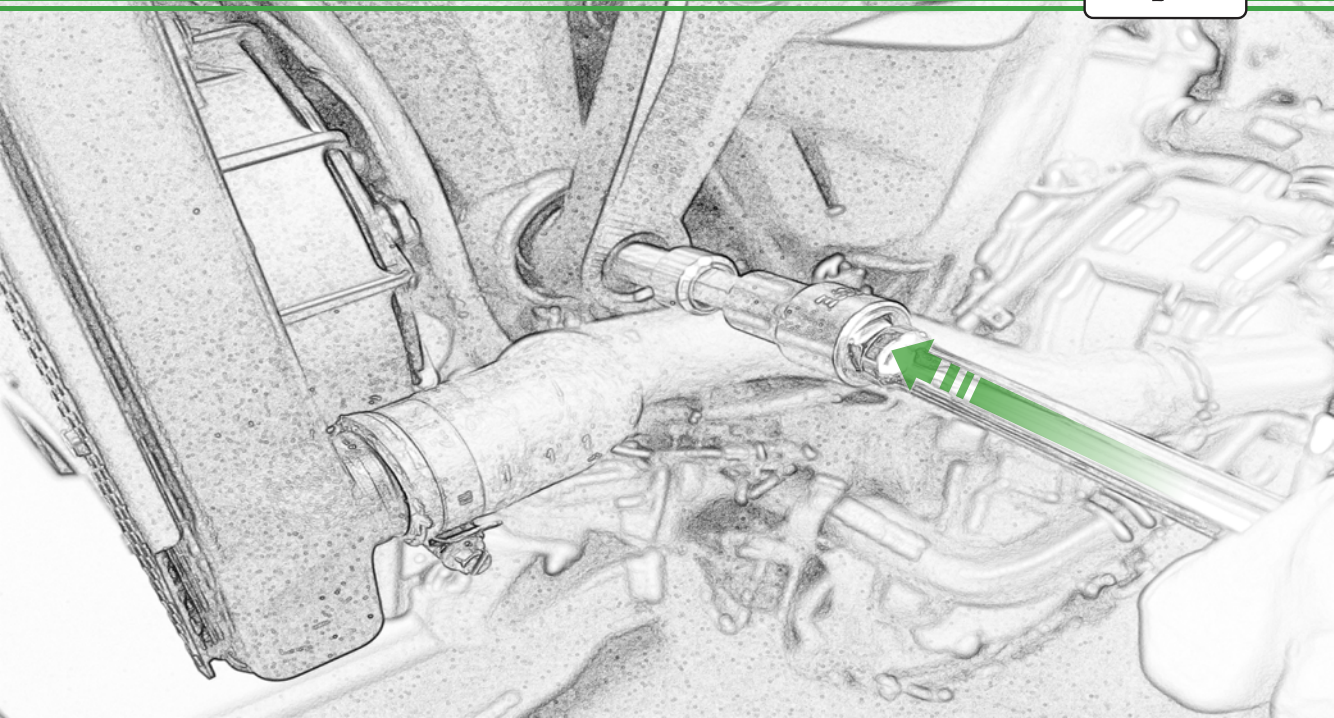

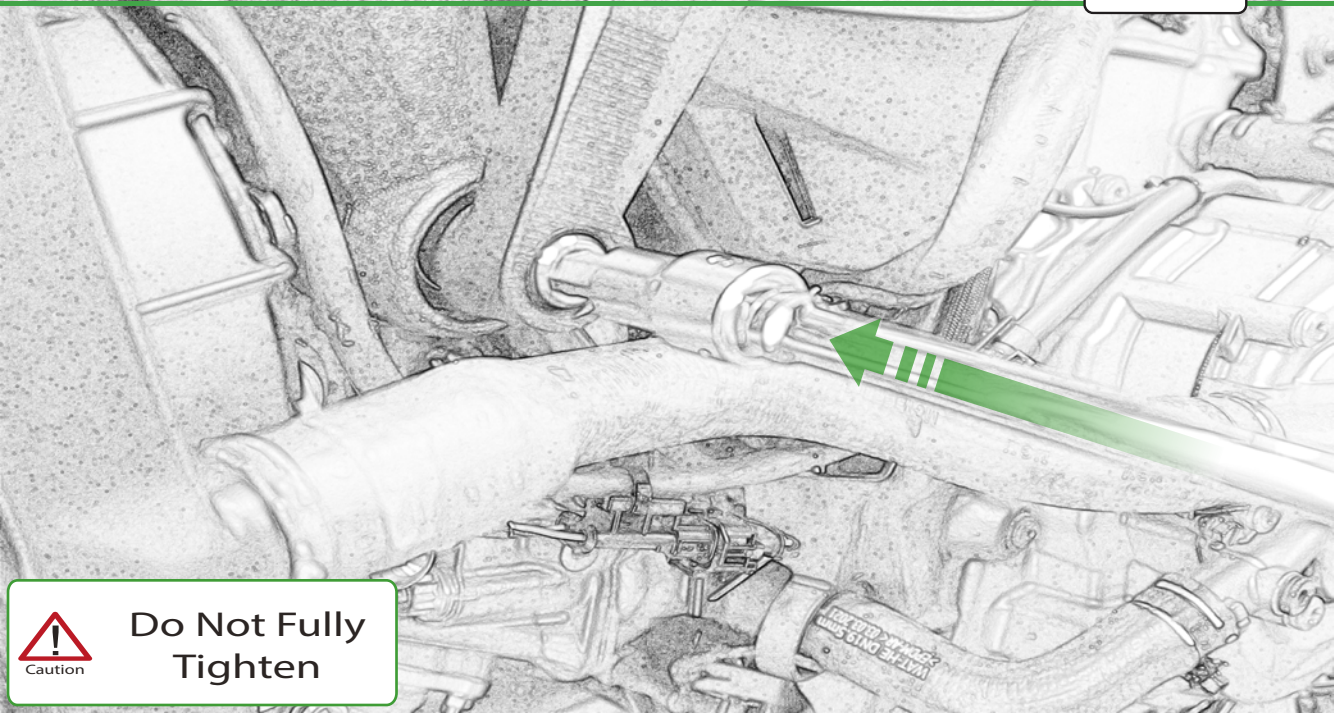


Caution

Do Not Fully Tighten

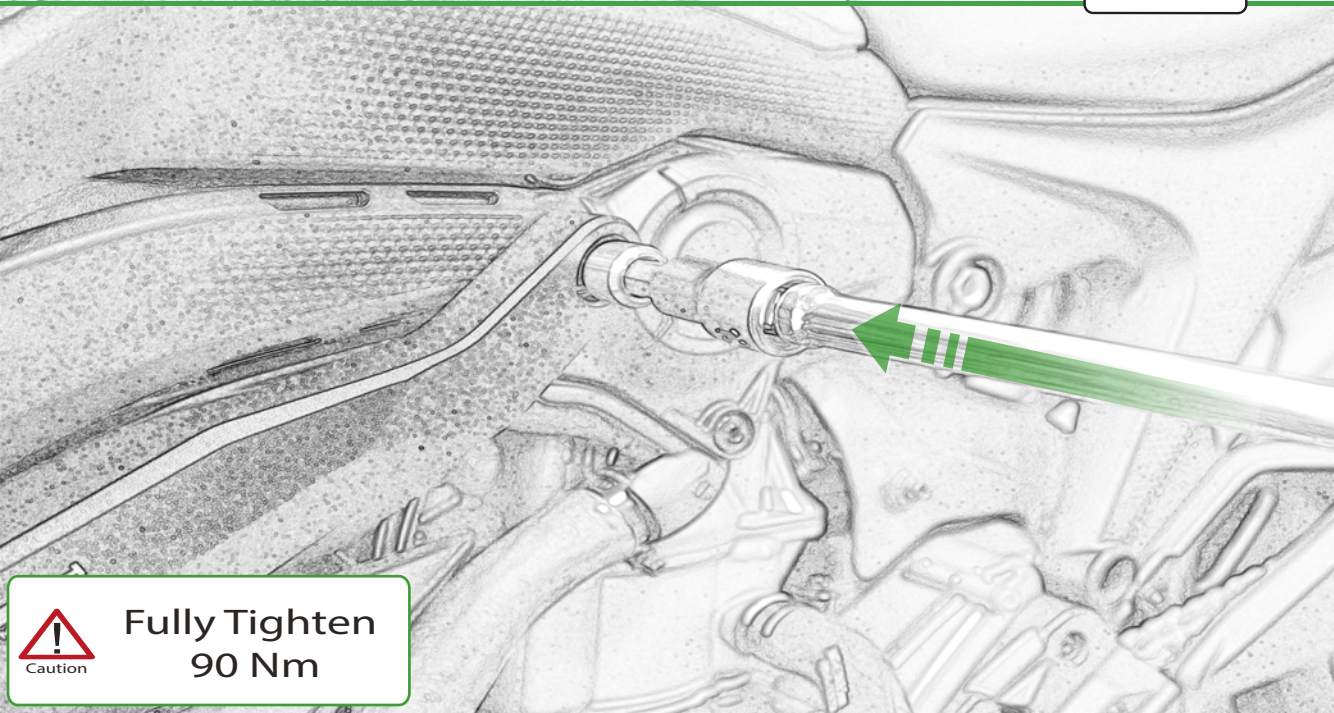


Caution

Fully Tighten
90 Nm

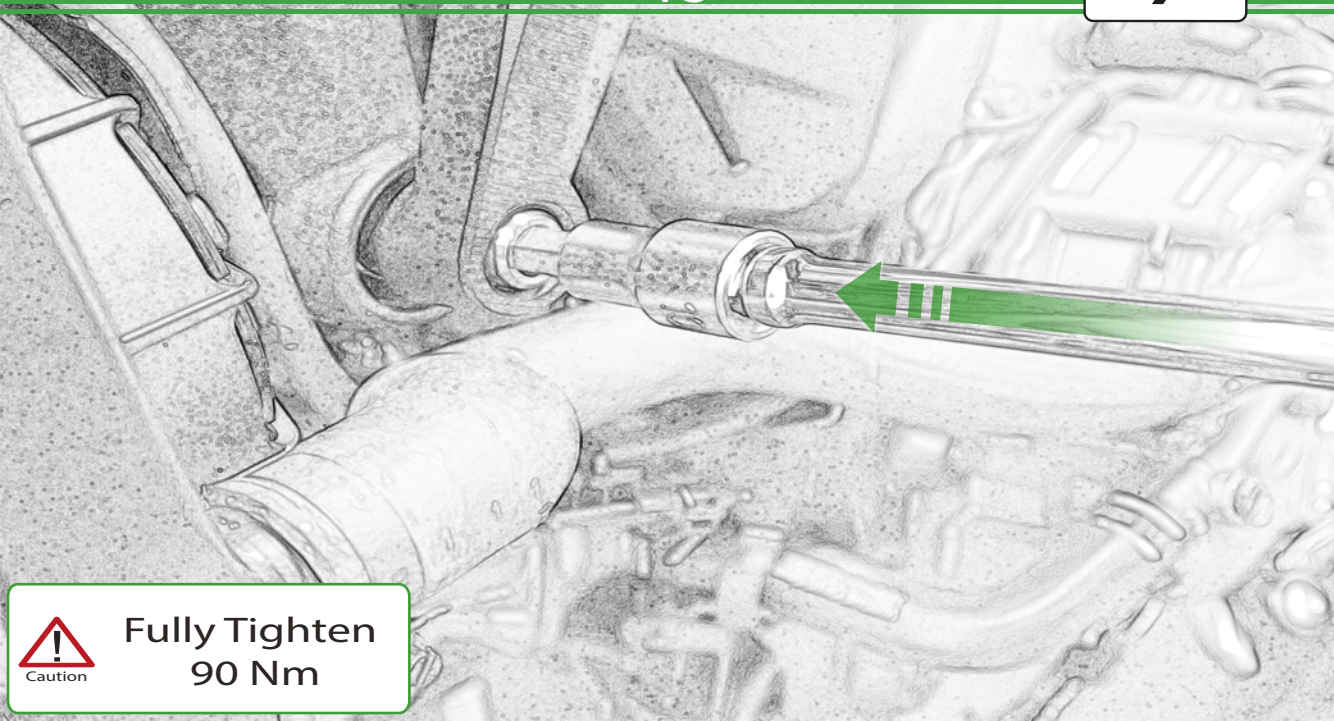



Caution


Fully Tighten
90 Nm

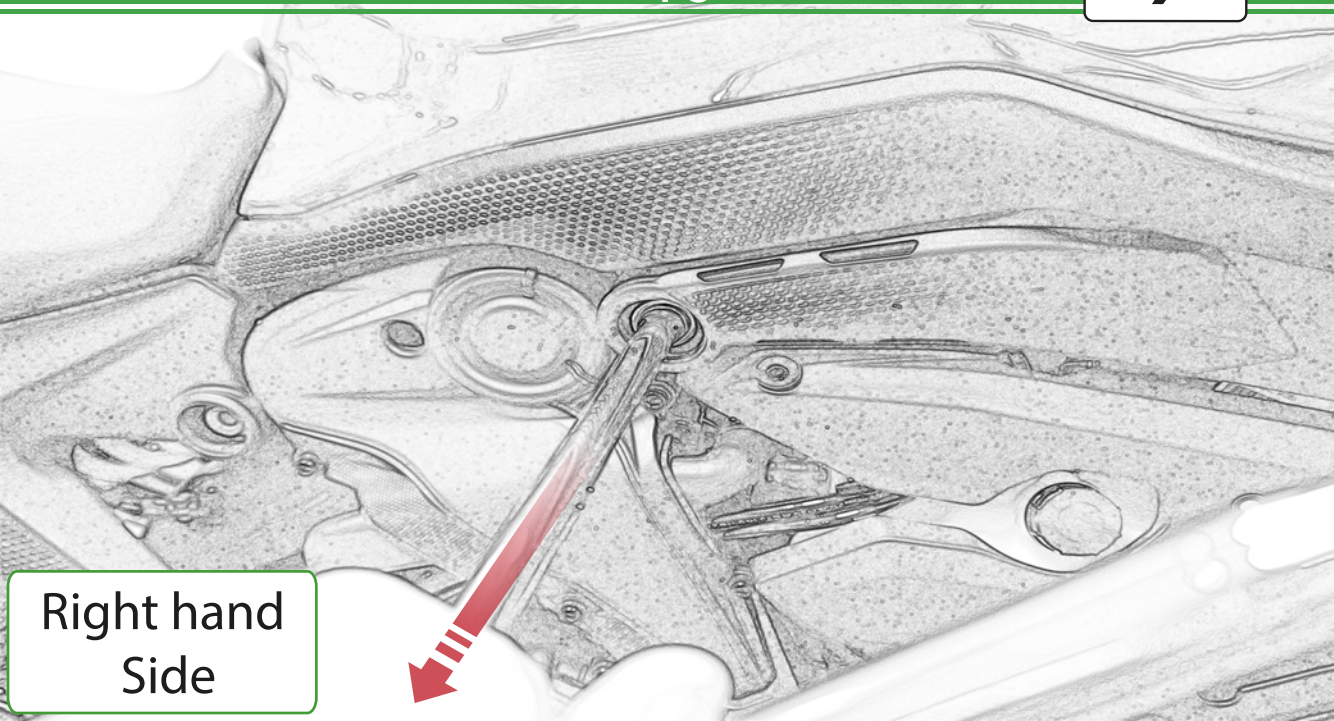



Right hand
Side

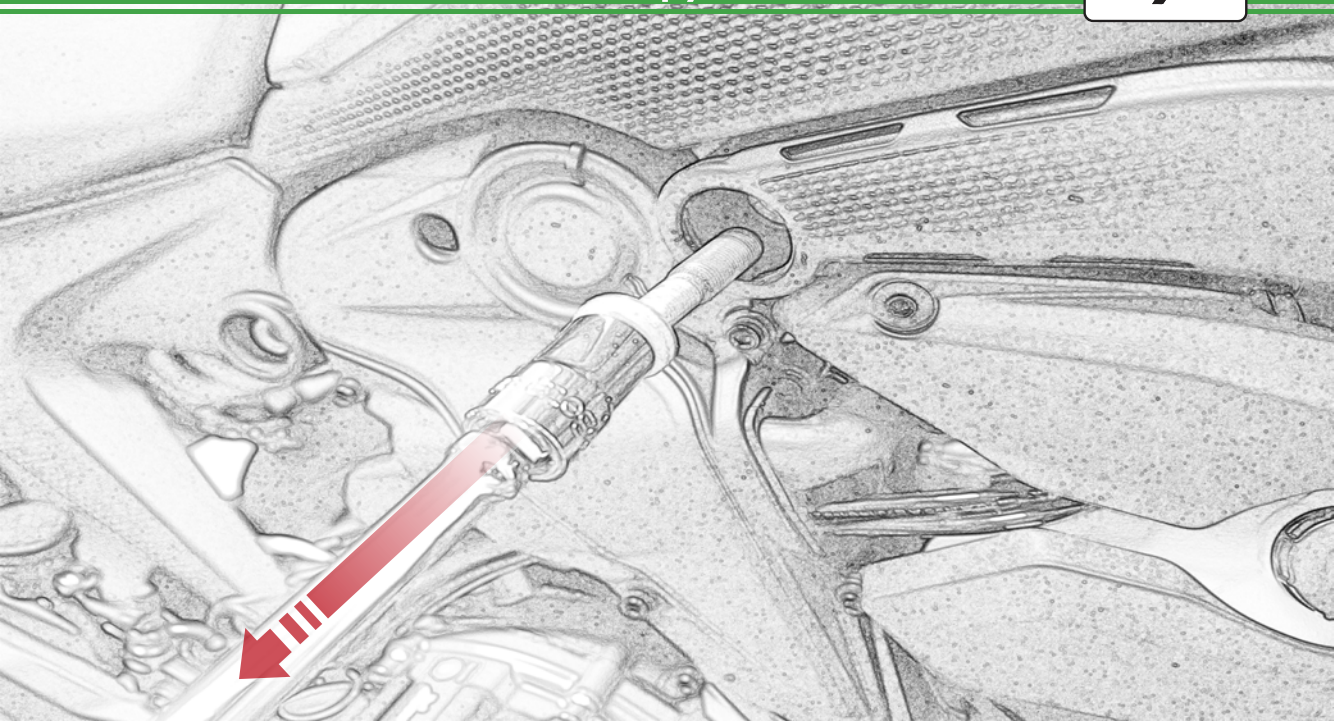

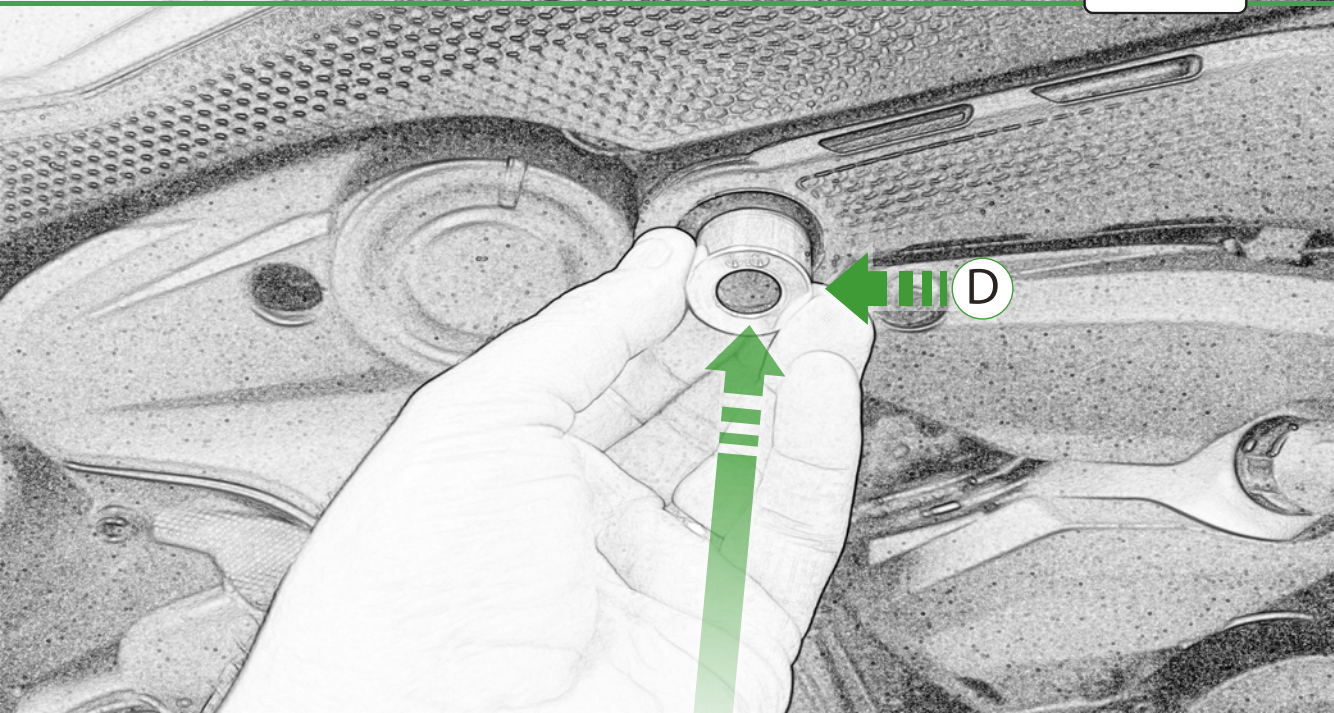

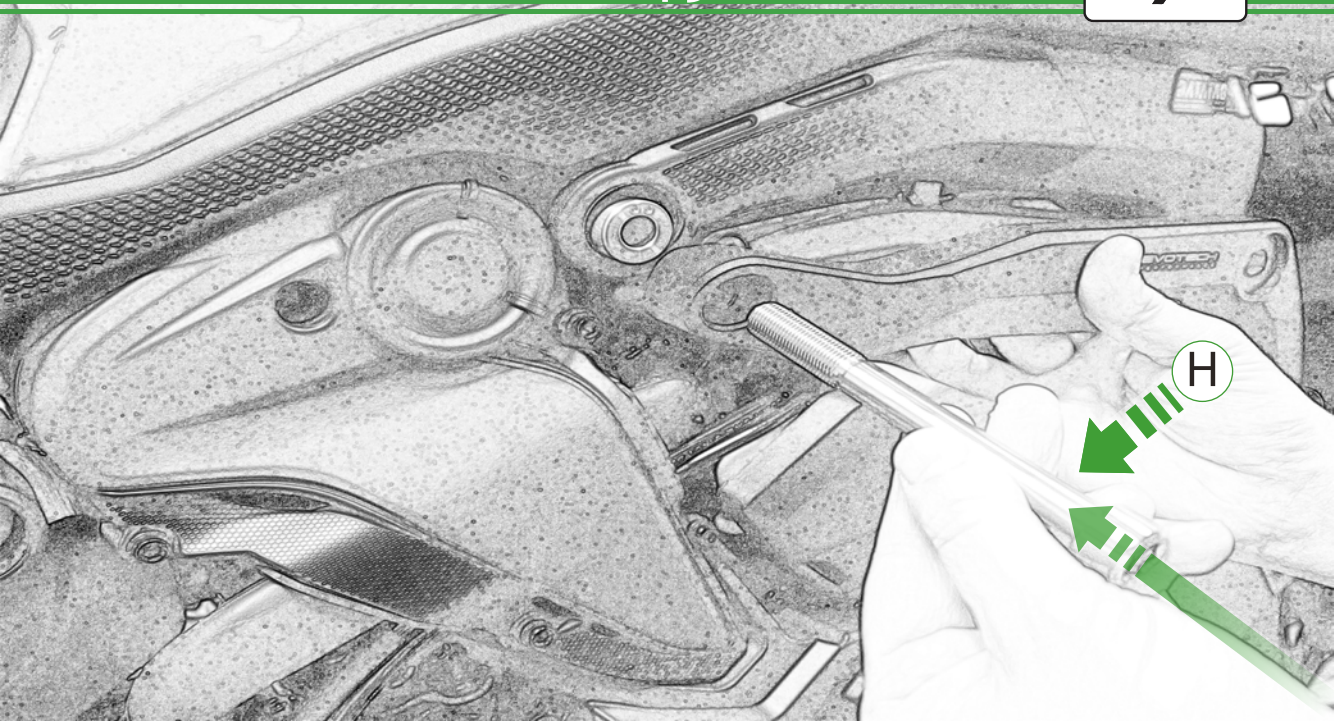


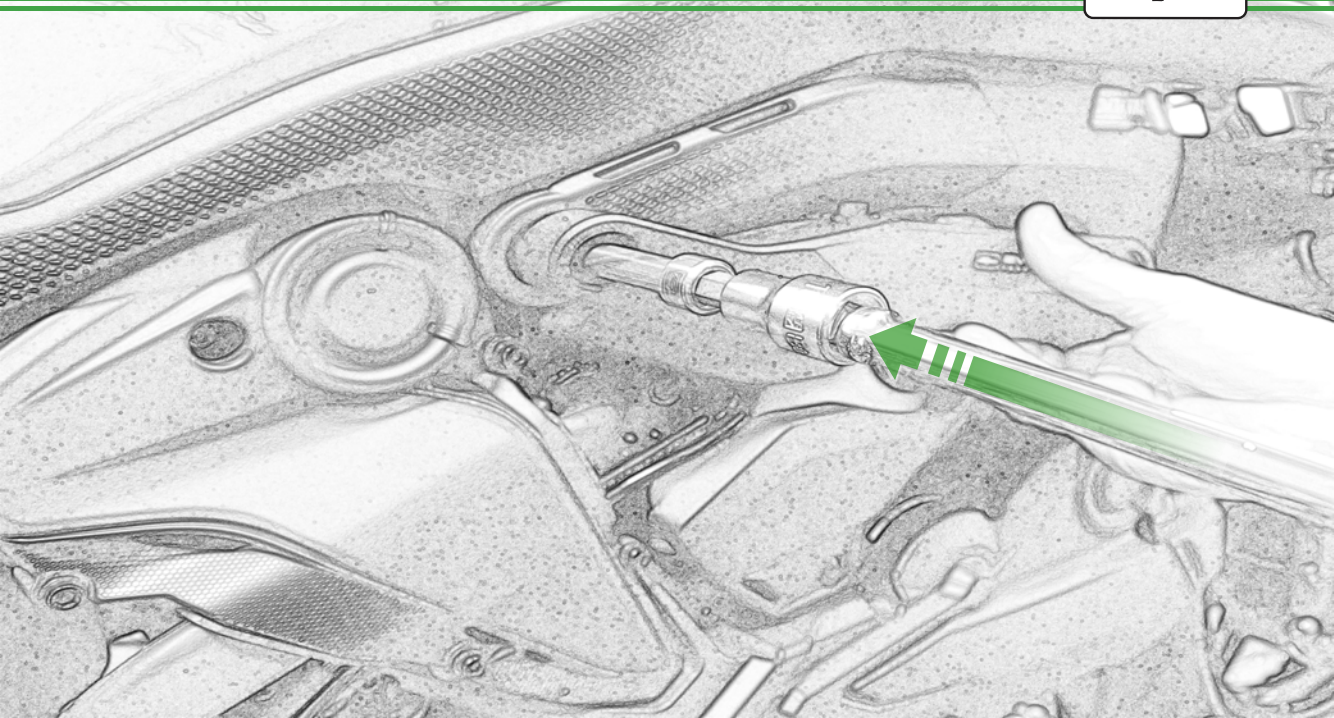


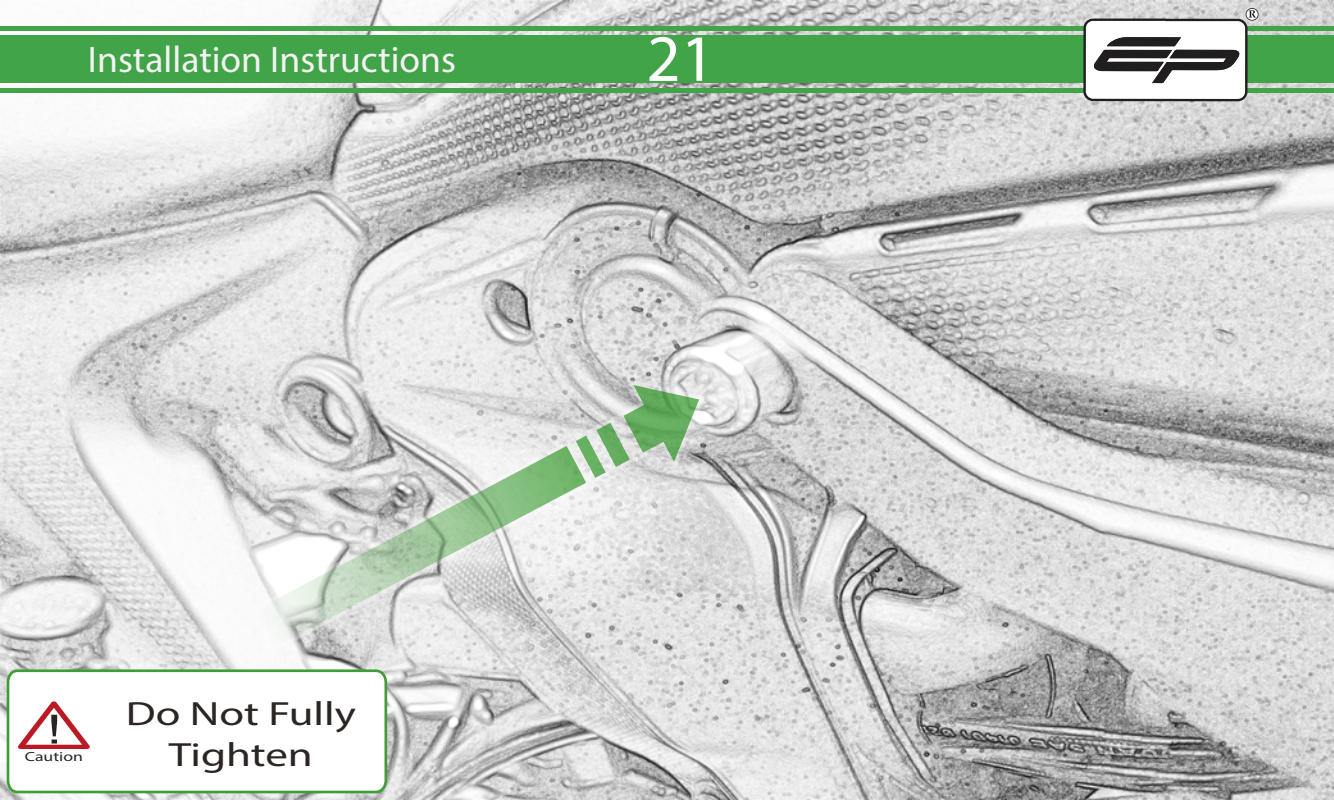



Caution

Do Not Fully
Tighten

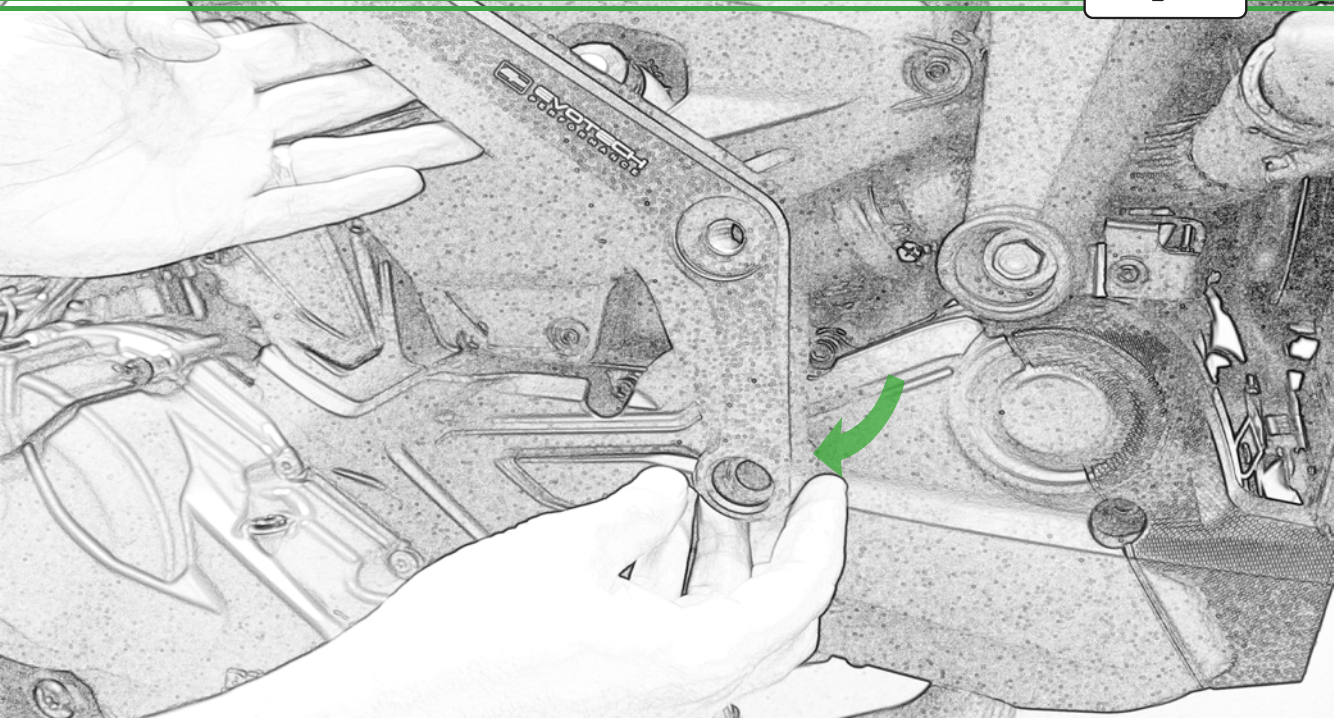


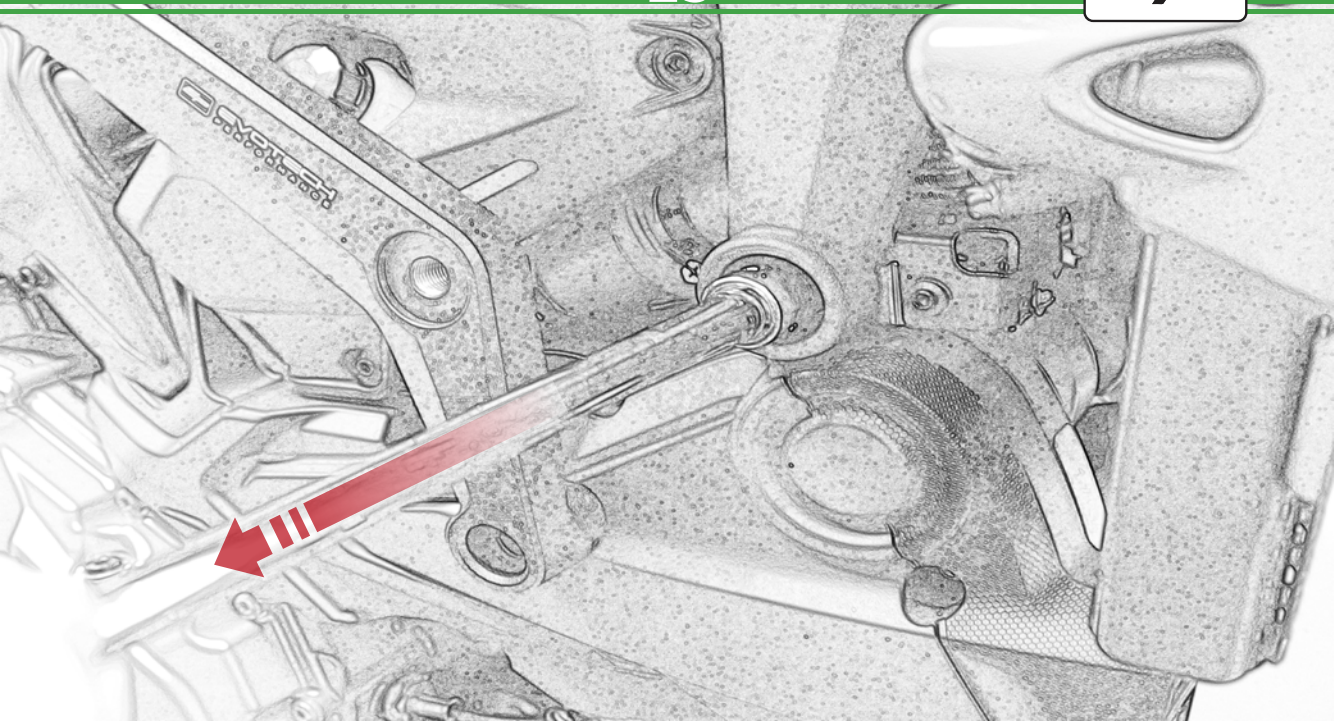


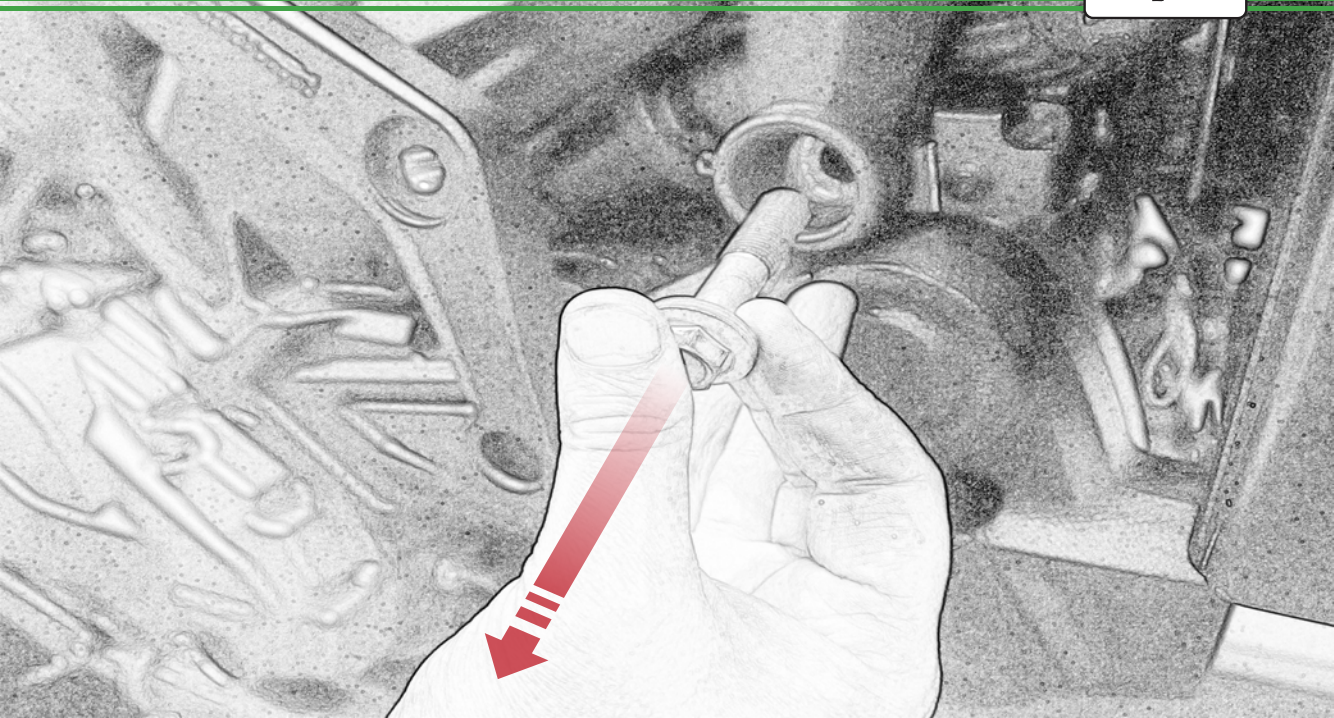

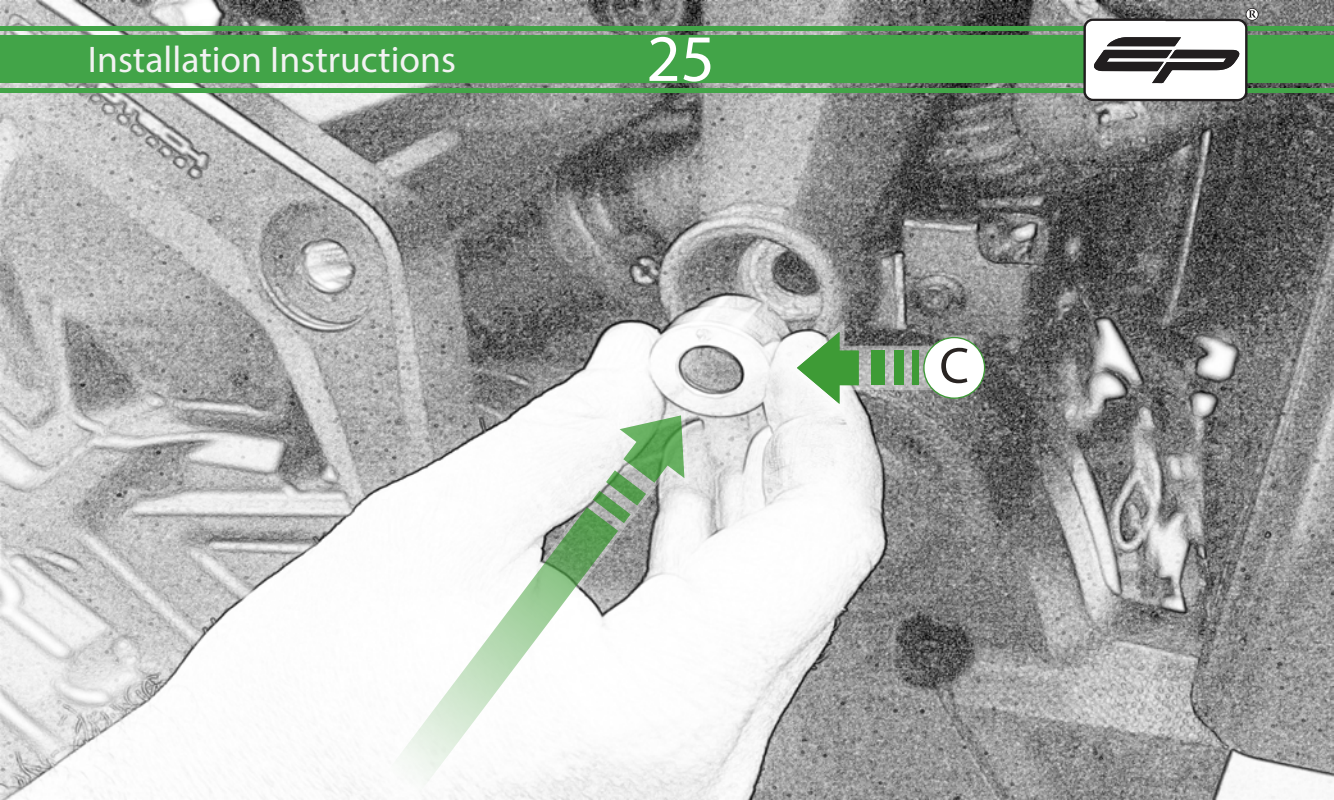




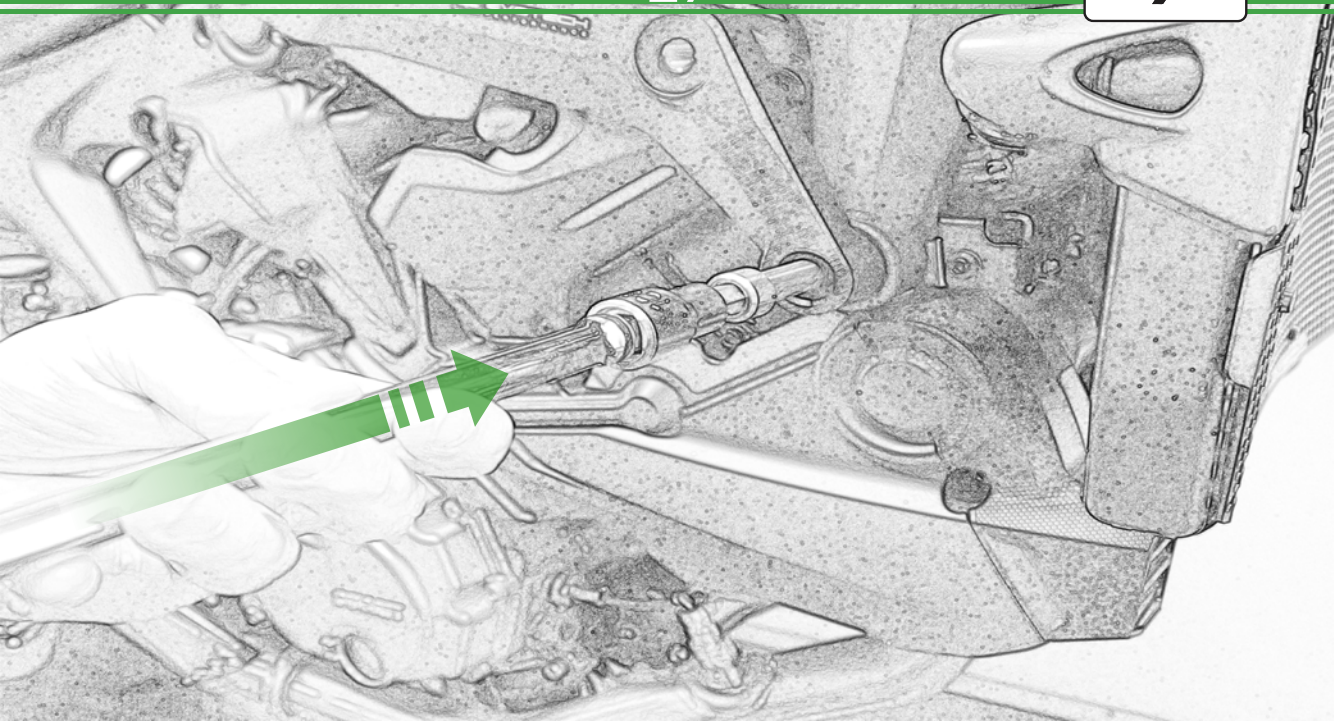

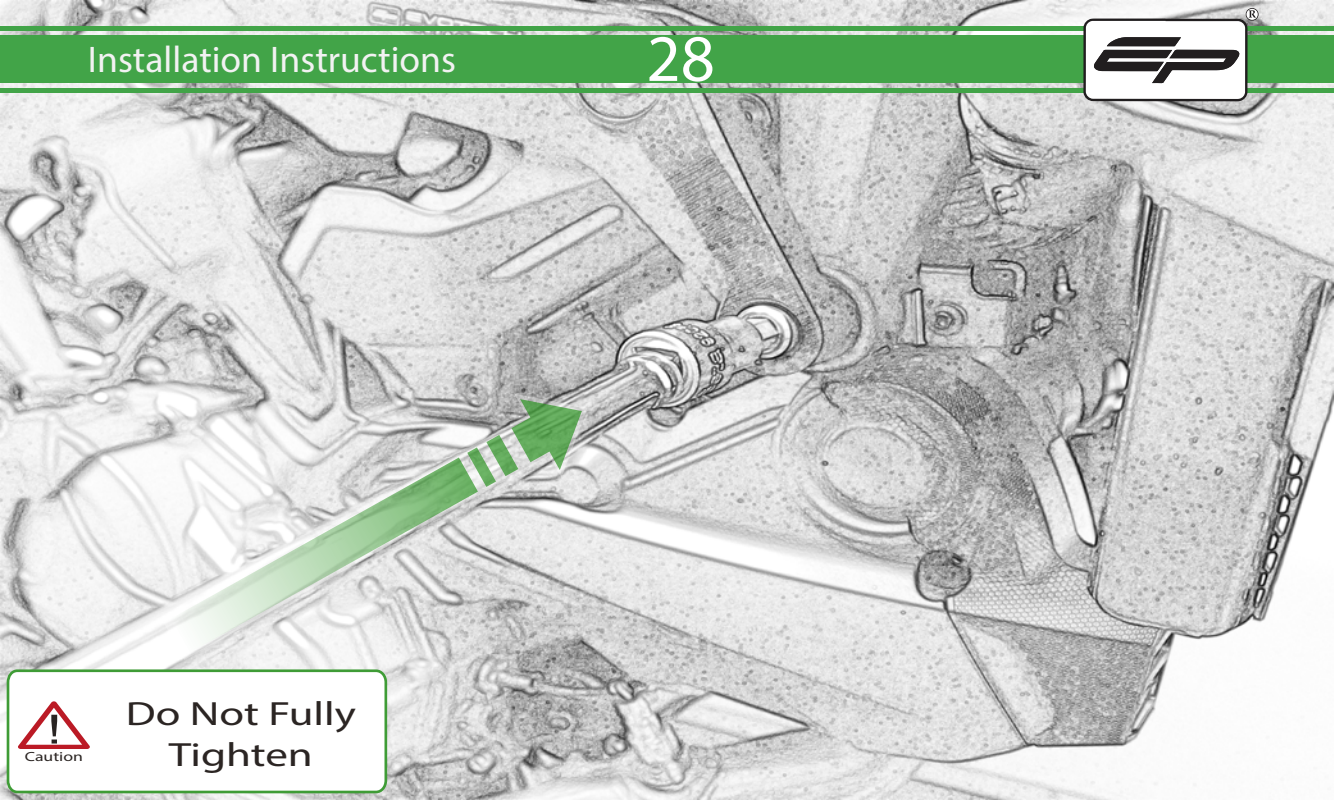


Do Not Fully
Tighten

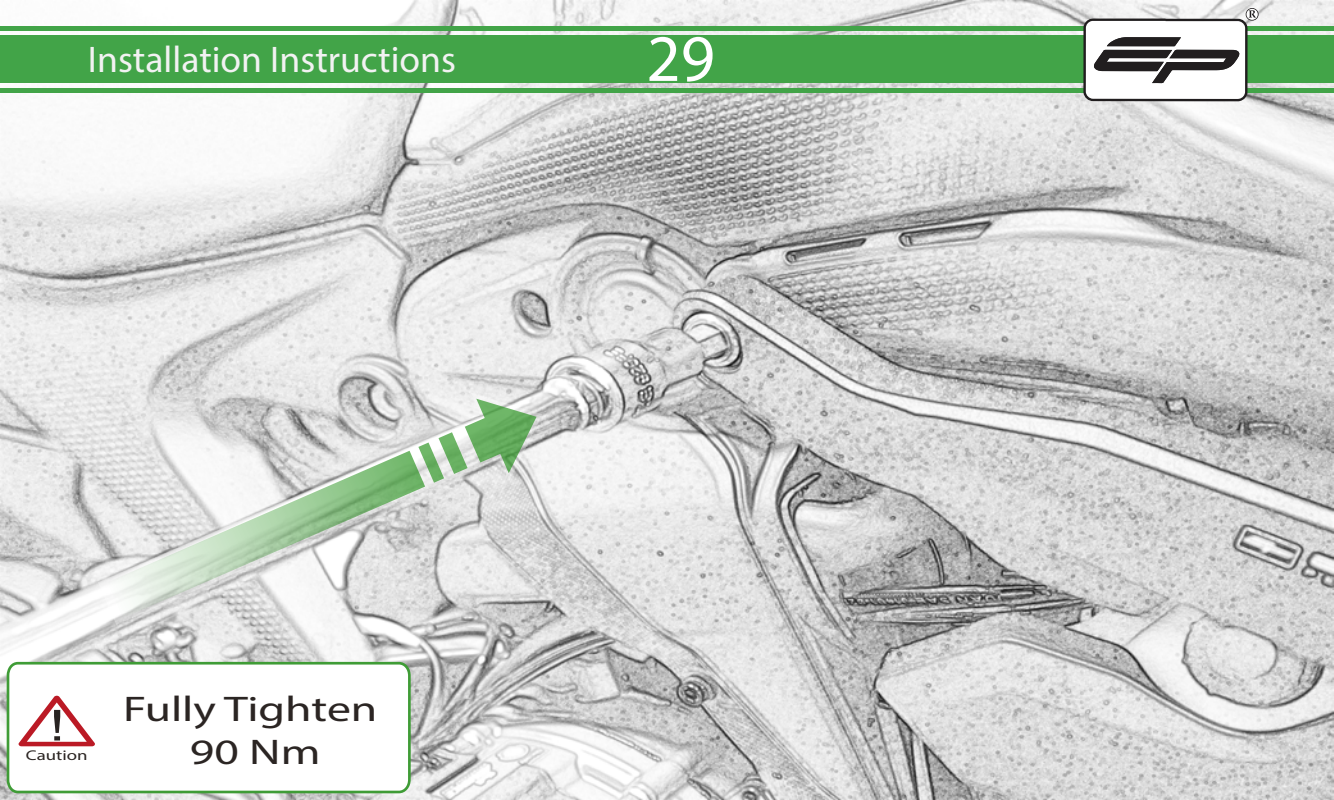


Caution


Fully Tighten
90 Nm

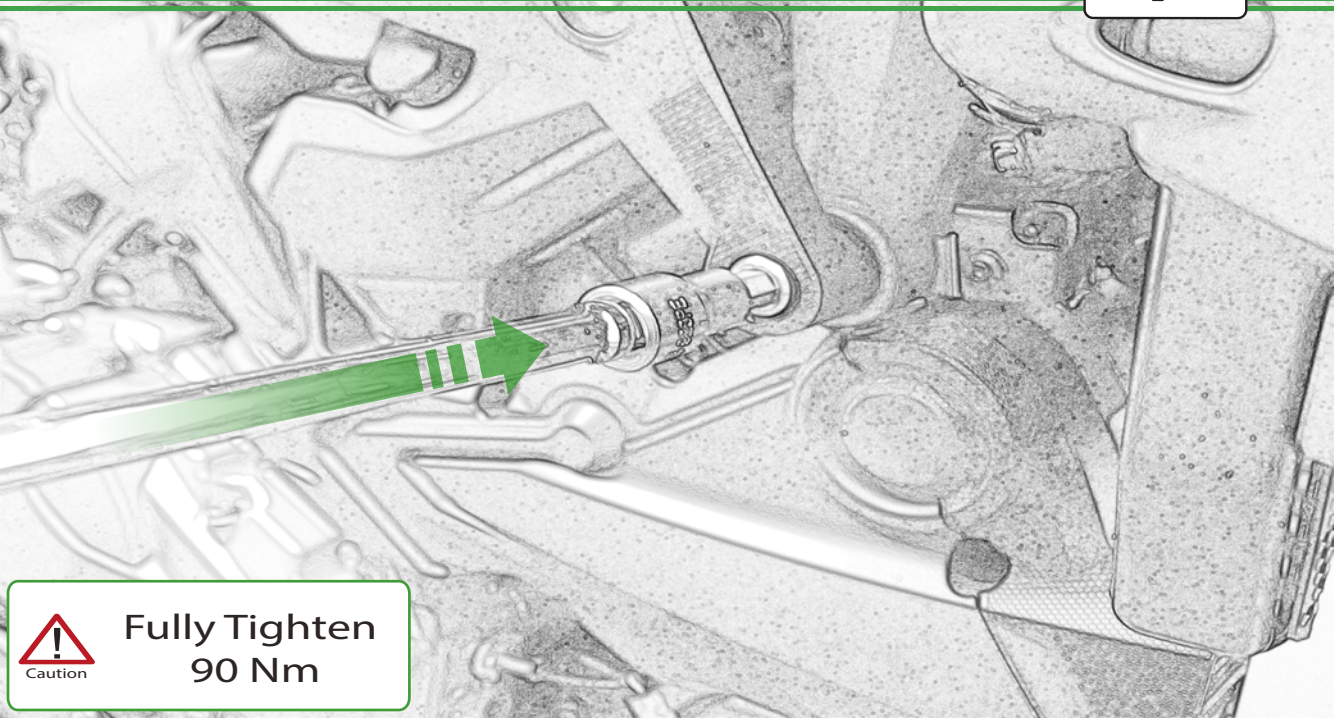



Caution

Fully Tighten
90 Nm

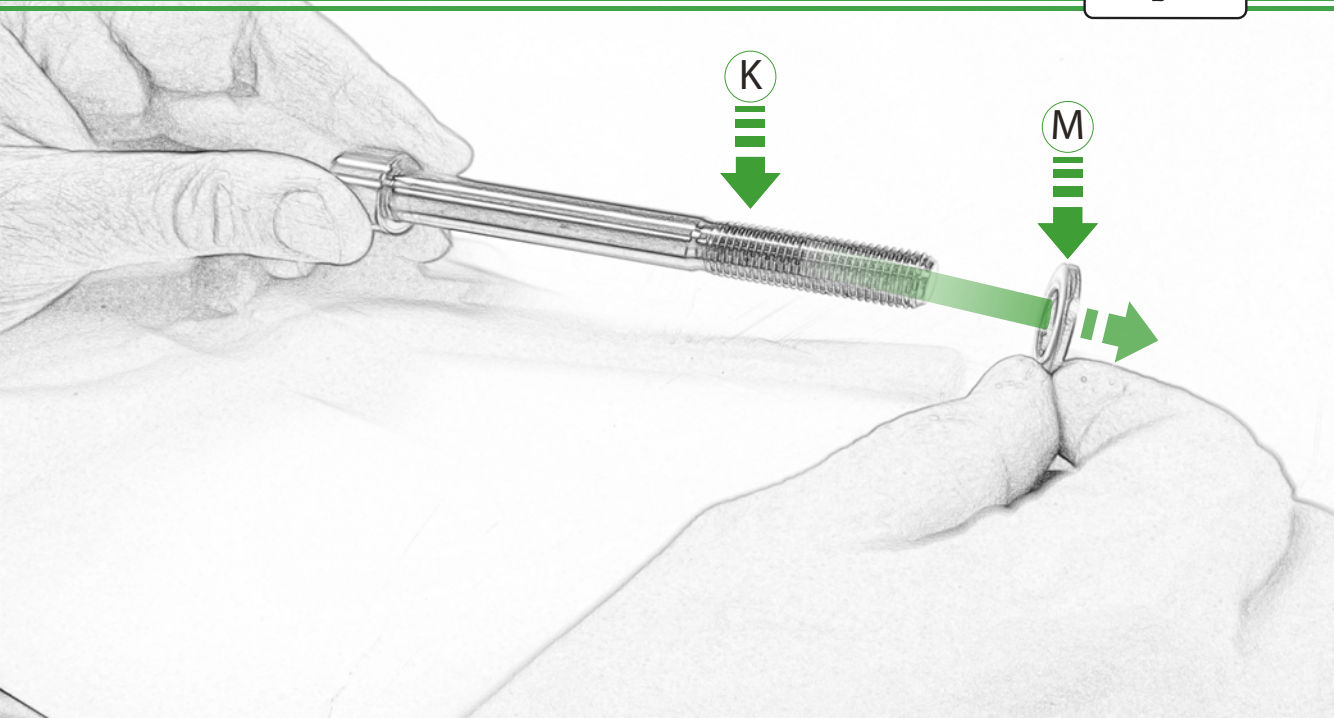

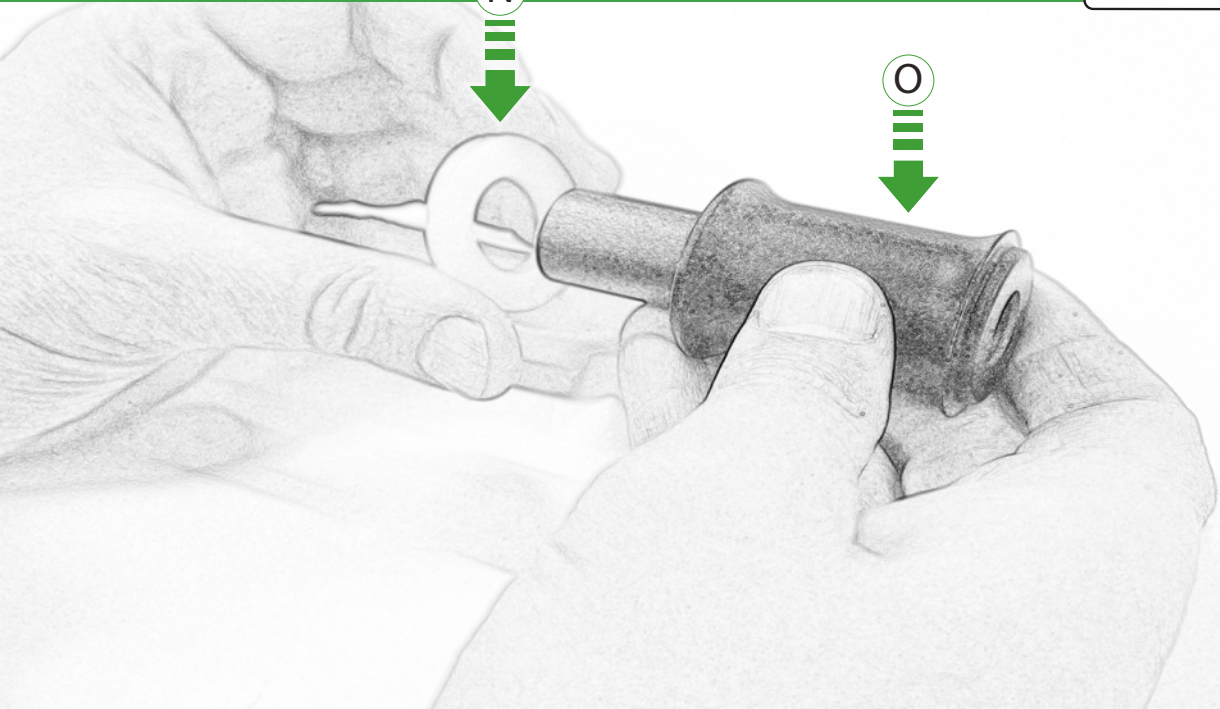


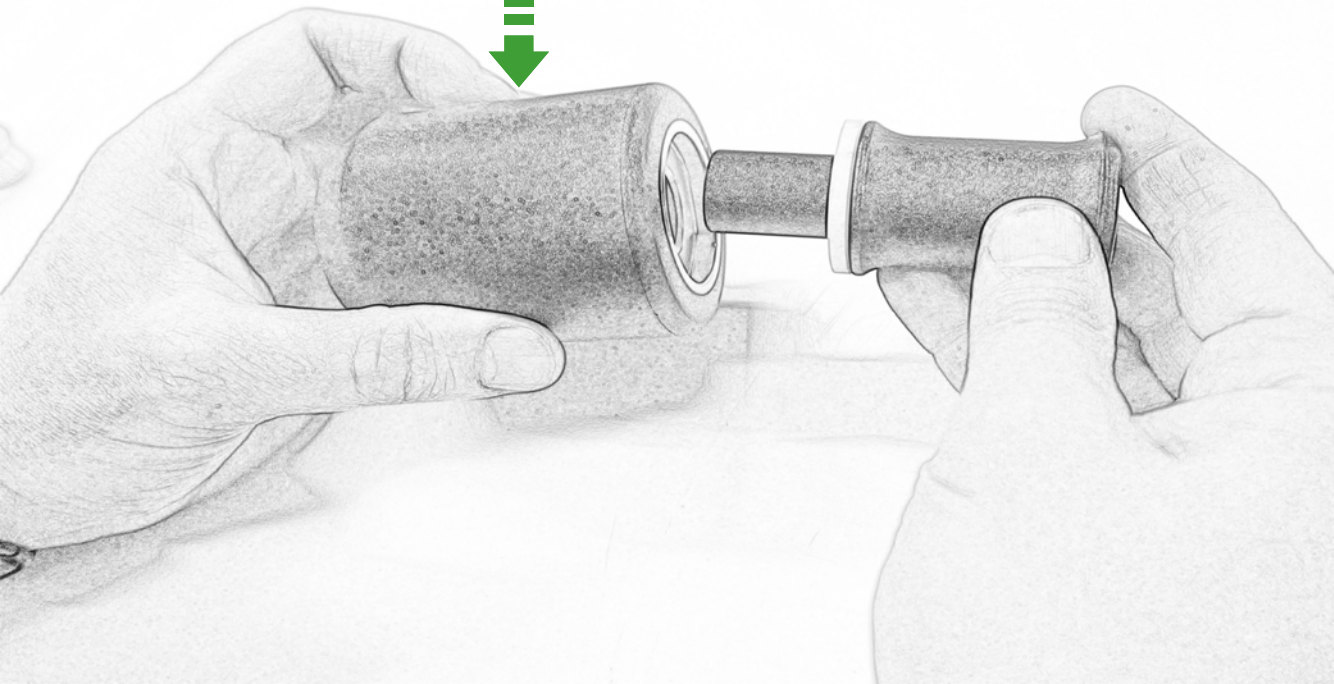

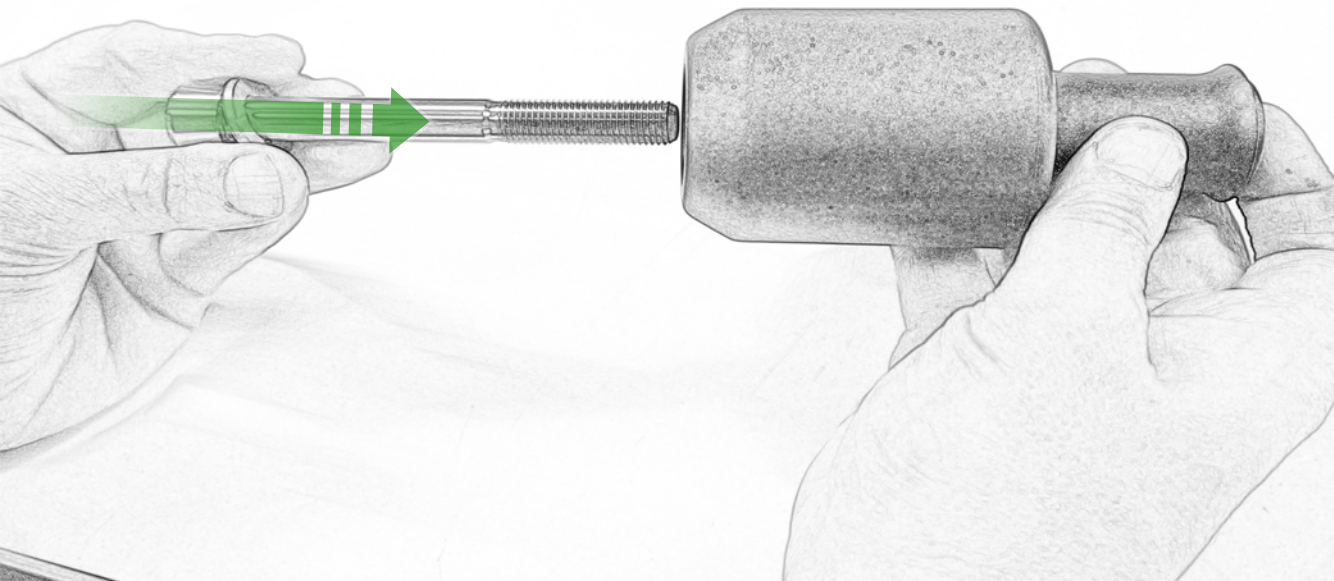



Repeat
Both Sides

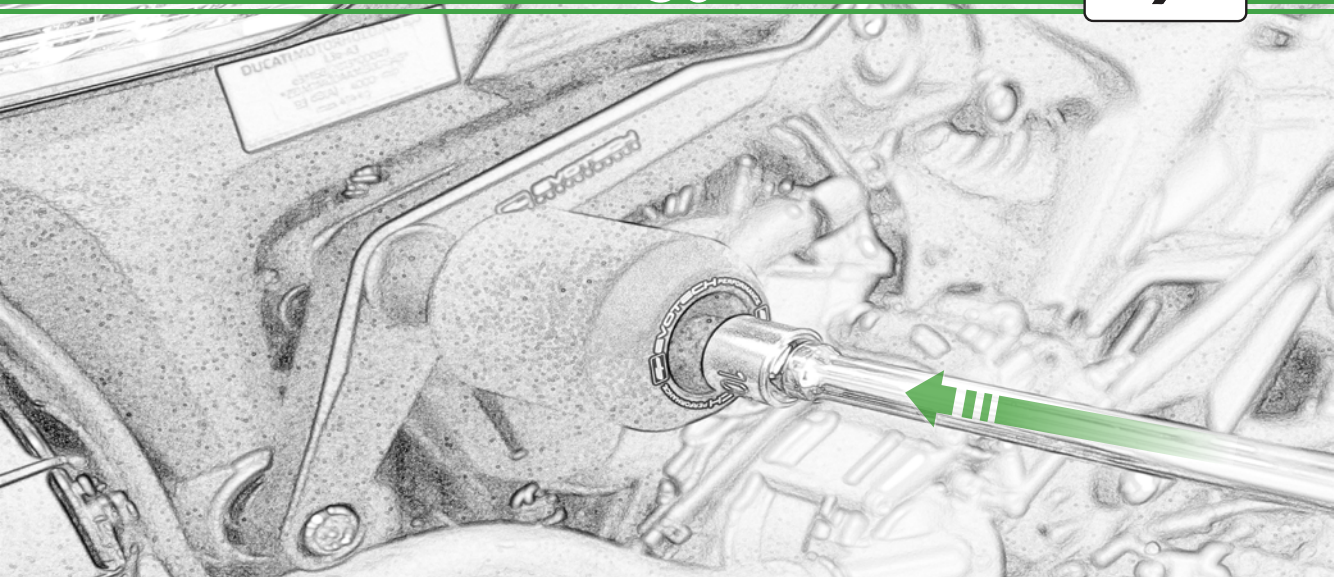

Fully Tighten
40 Nm

Repeat
Both Sides



ESSENTIAL CHECKS



It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com