



EVOTECH®
P E R F O R M A N C E

Installation Instructions




BMW R1200 GS and RS ENGINE GUARD

Product Reference - 13056

Kit Contents

- Ⓐ 1 x Engine Guard
- Ⓑ 1 x Neoprene
- Ⓒ 2 x Mounting Spacers
- Ⓓ 2 x M6 - 40 Socket Button Head Screw
- Ⓔ 2 x M6 Washer

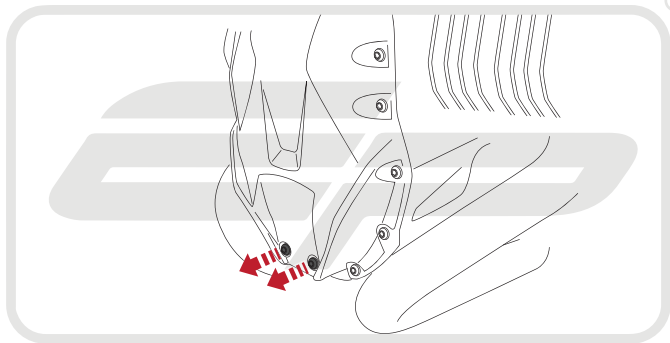


EVOTECH[®]
P E R F O R M A N C E


Peel backing paper from neoprene
and stick to reverse of guard


(B)




(A)

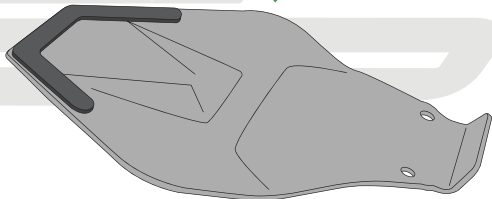

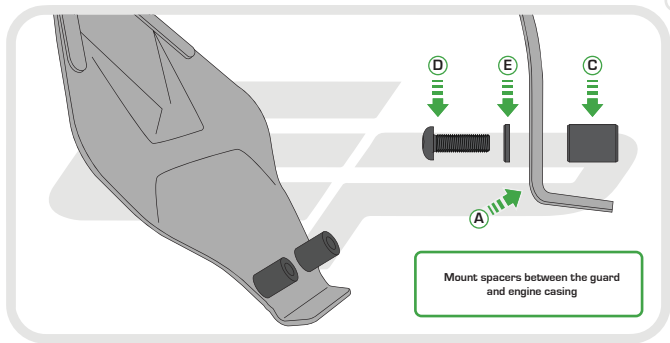

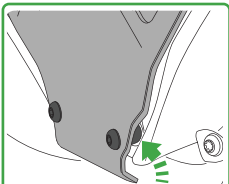

Ensure spacers sit neatly in the counterbores of the engine casing

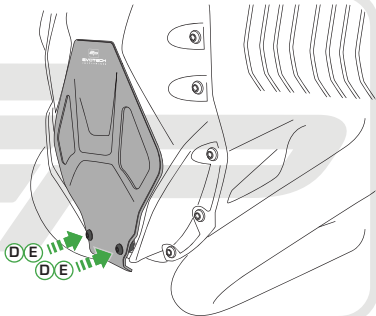



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com