



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com




Triumph Tiger 900 Radiator Guard

Installation Instructions




Kit Contents PRN014936

- (A) 2 x M5 x 12mm Black Button Head Bolts
- (B) 2 x M5 Lugnuts
- (C) 4 x M4 x 10mm Black Button Head Bolts
- (D) 4 x M5 x 10mm Black Button Head Bolts
- (E) 4 x M5 Washers
- (F) 8 x Rubber Bungs

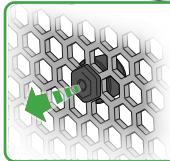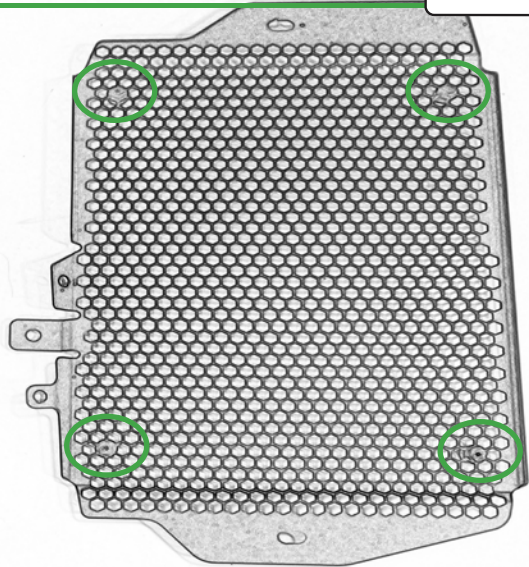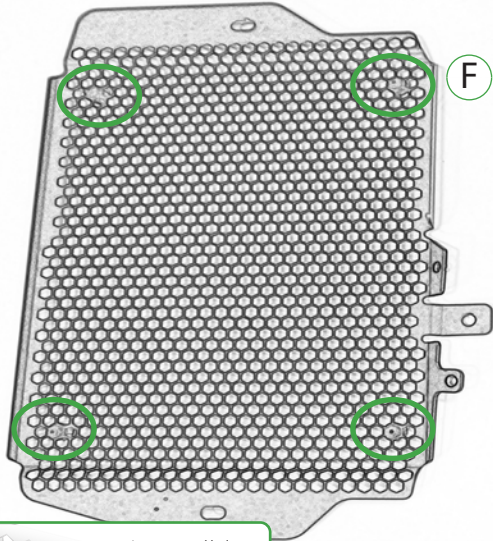


Locate round holes amongst hexagons.


Push Rubber Spacer through from the back of the guard so Hexagonal shape sits on the front face

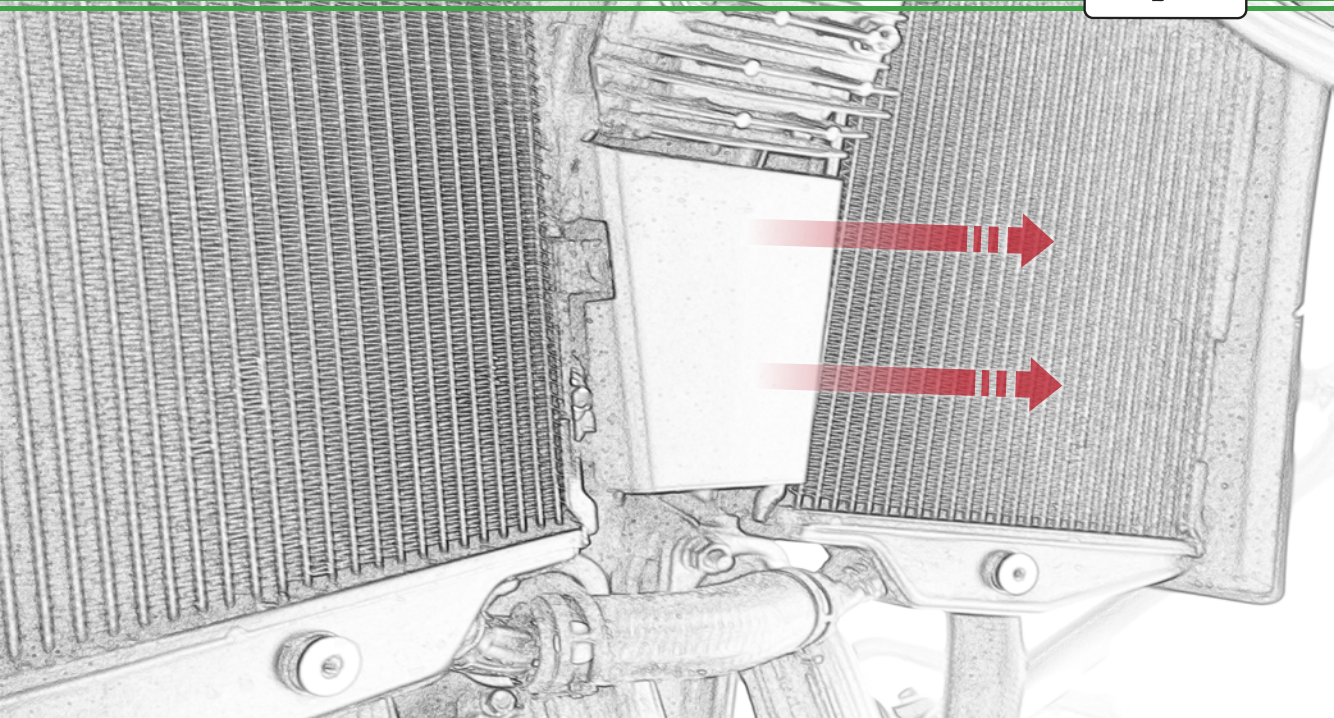








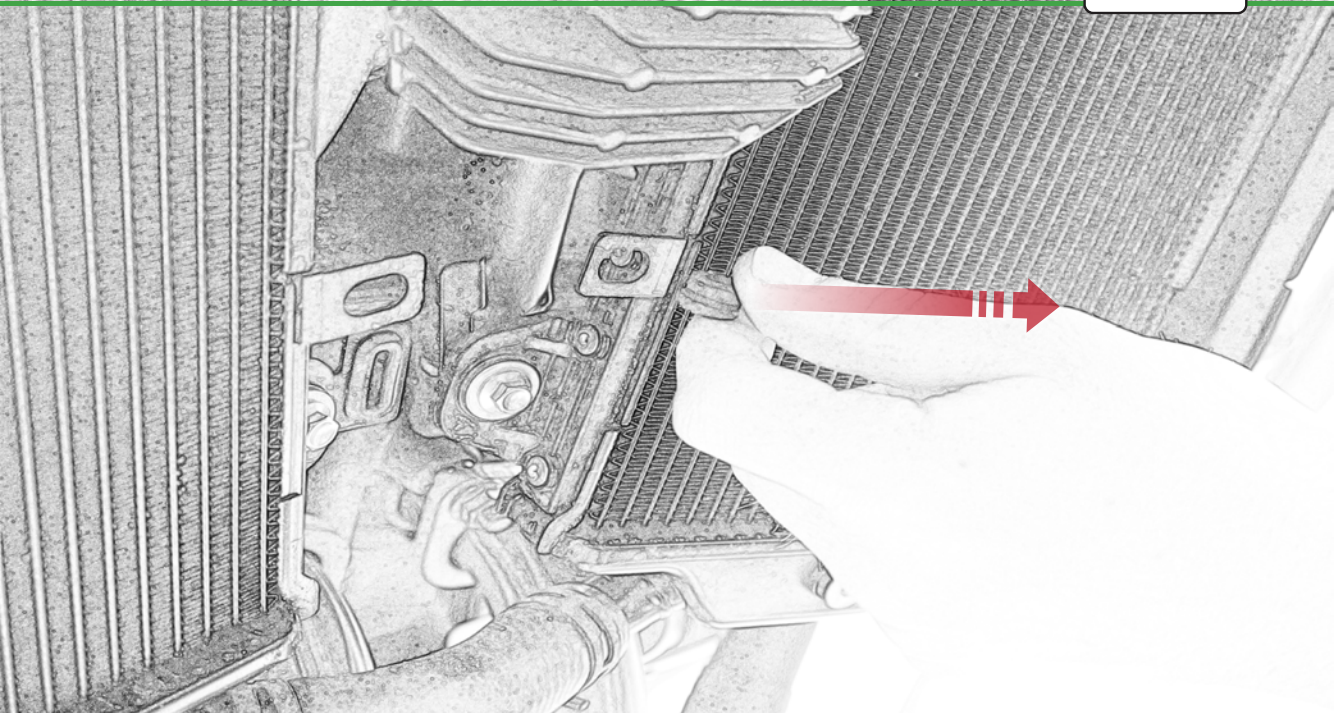

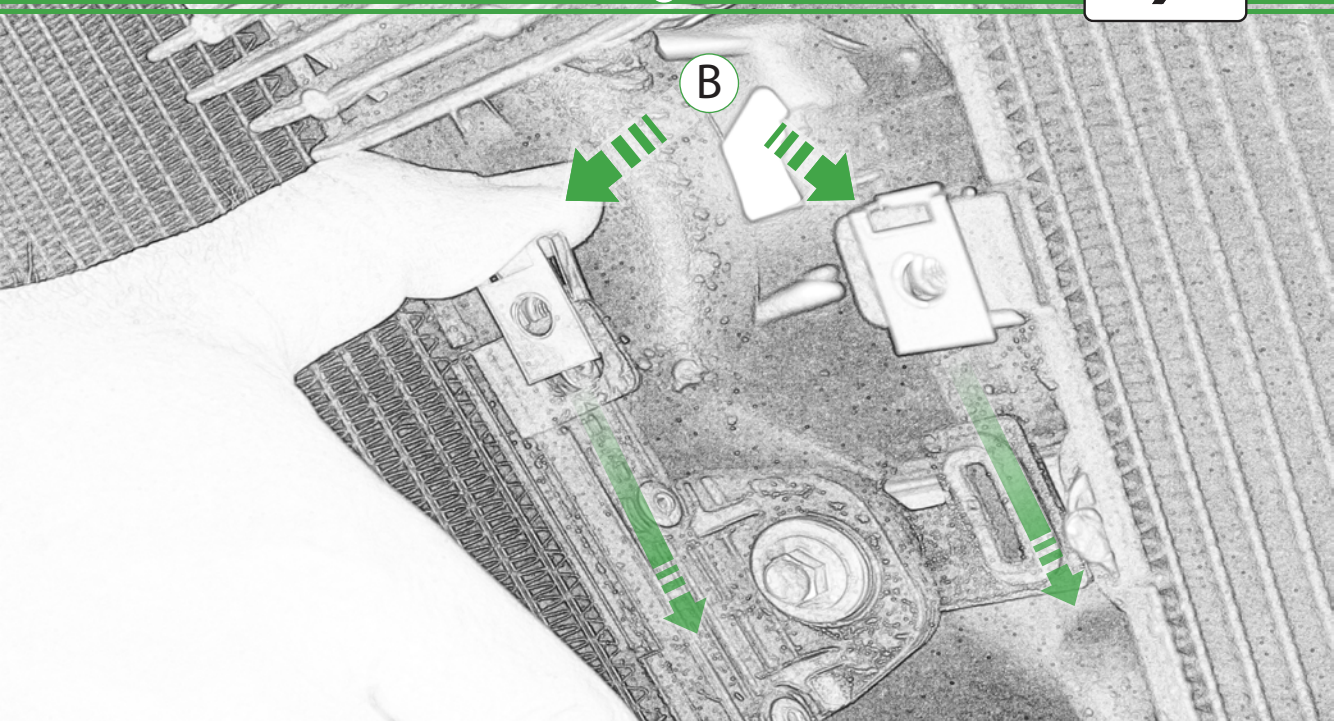


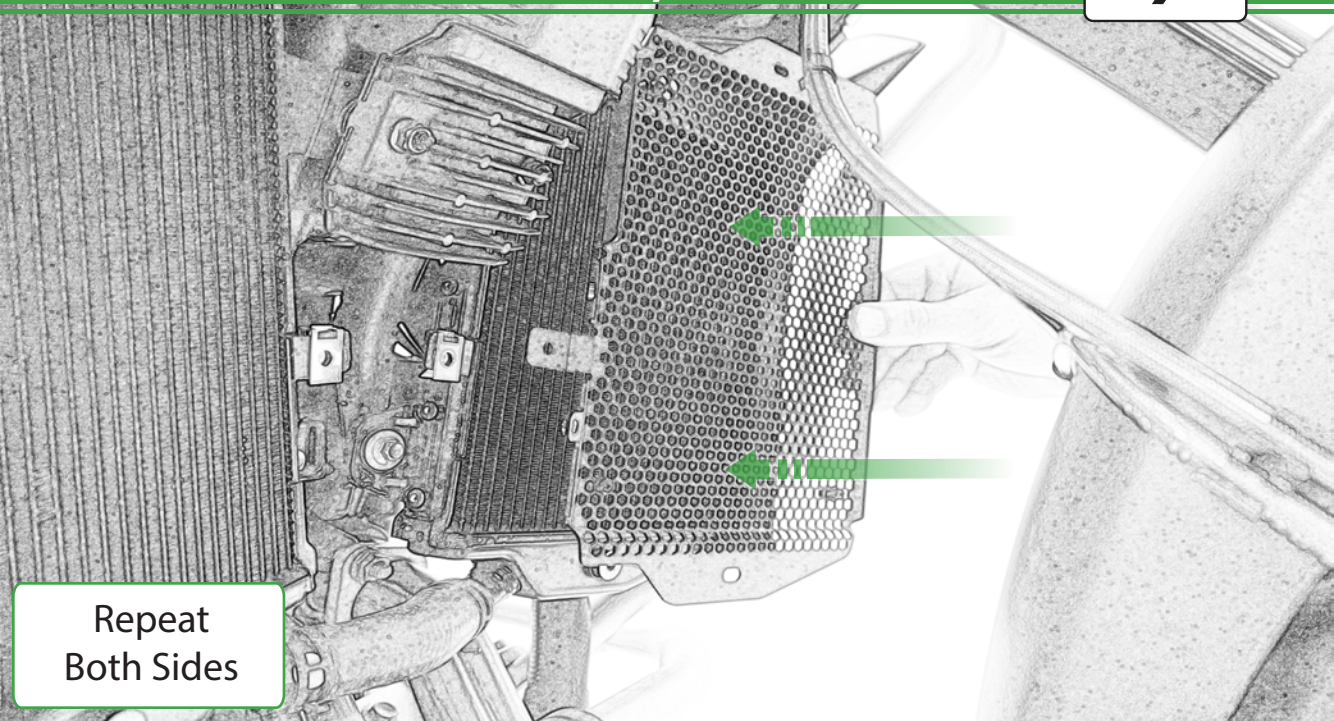


Repeat
Both Sides

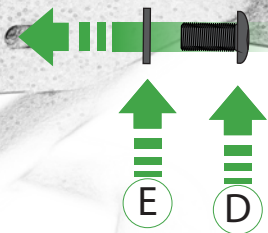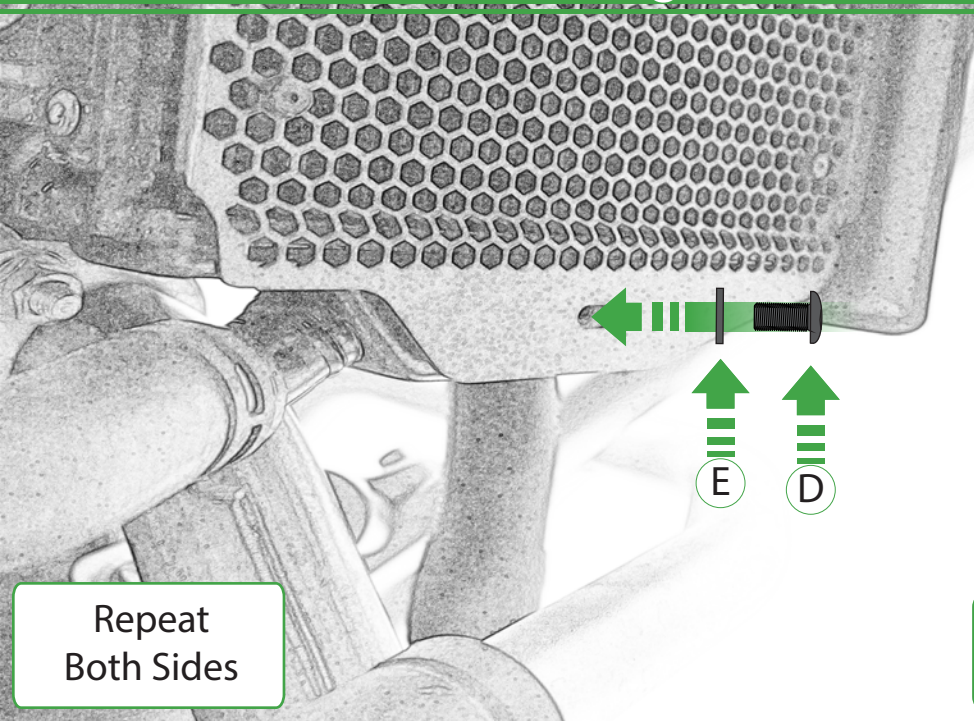


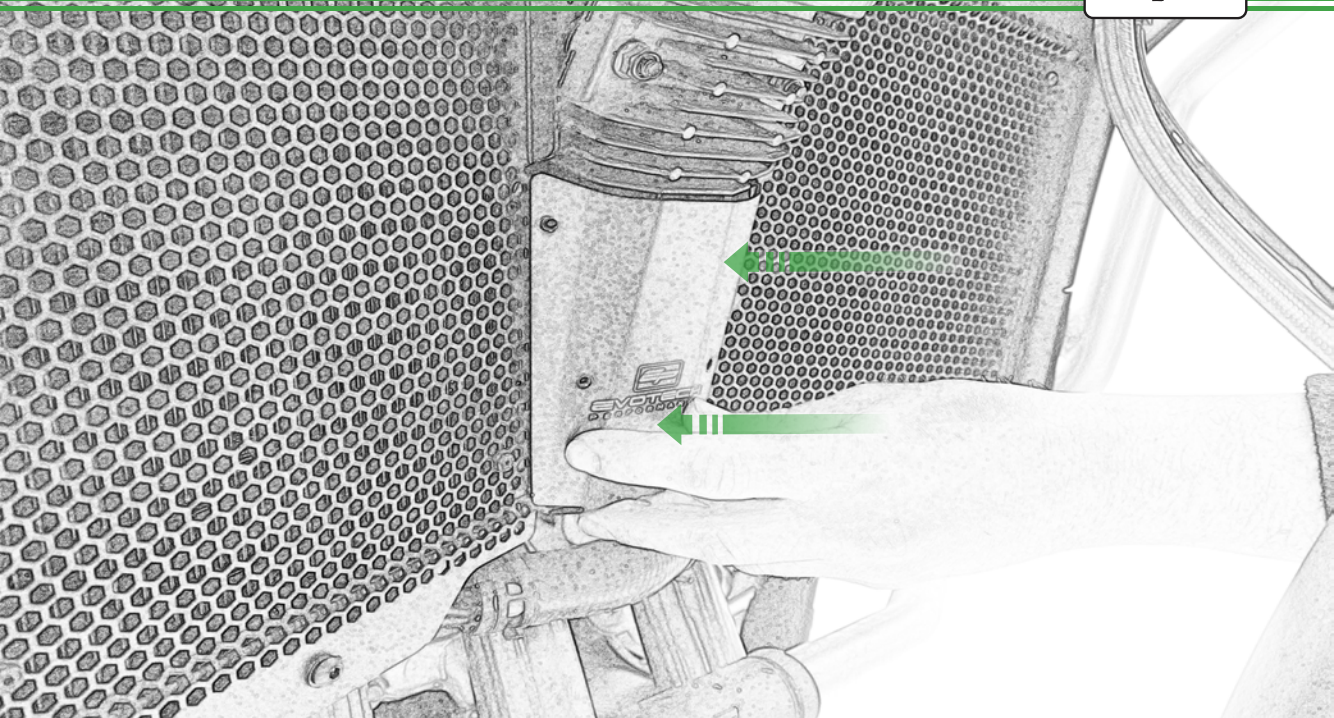
Repeat
Both Sides


 Do Not Fully
Tighten

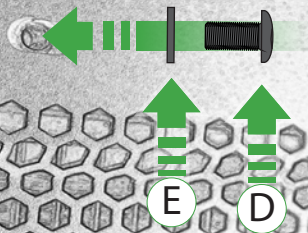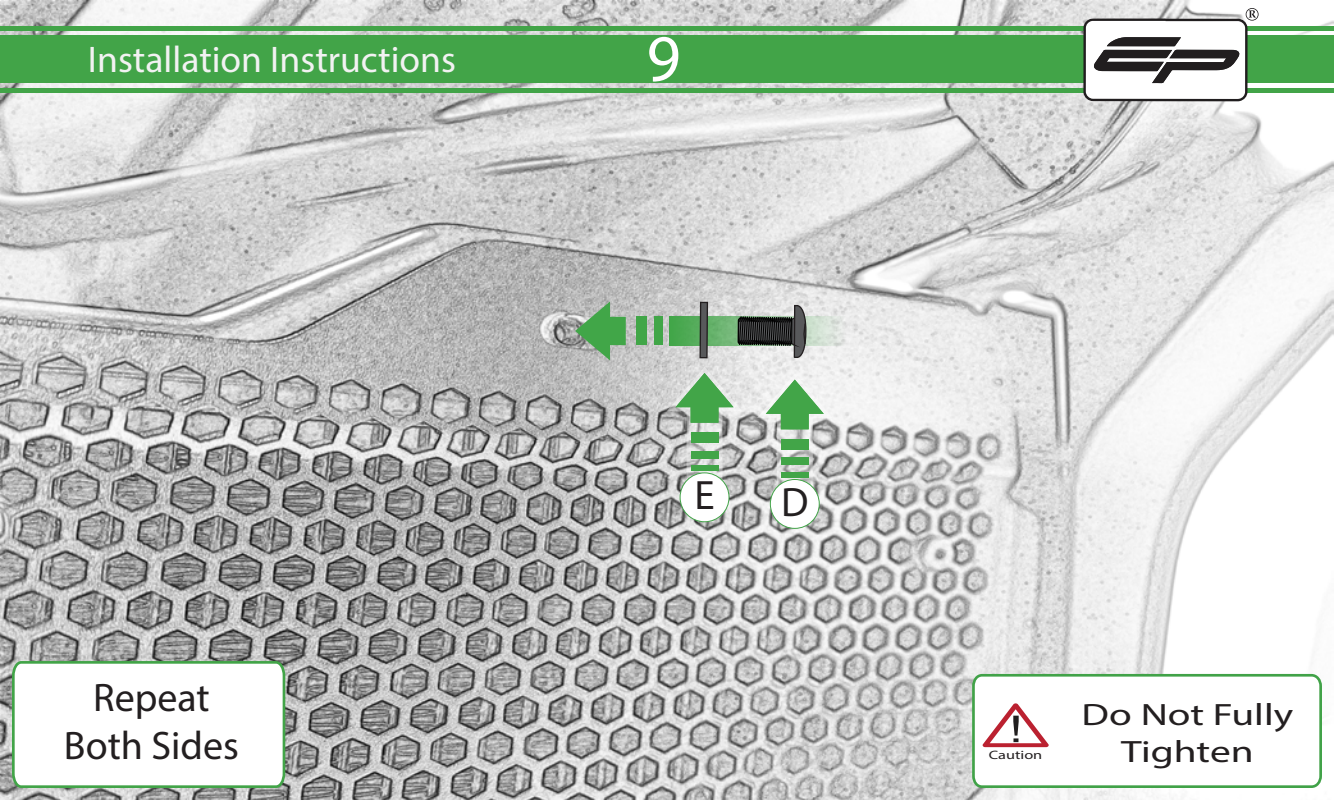

Repeat
Both Sides


 Do Not Fully
Tighten



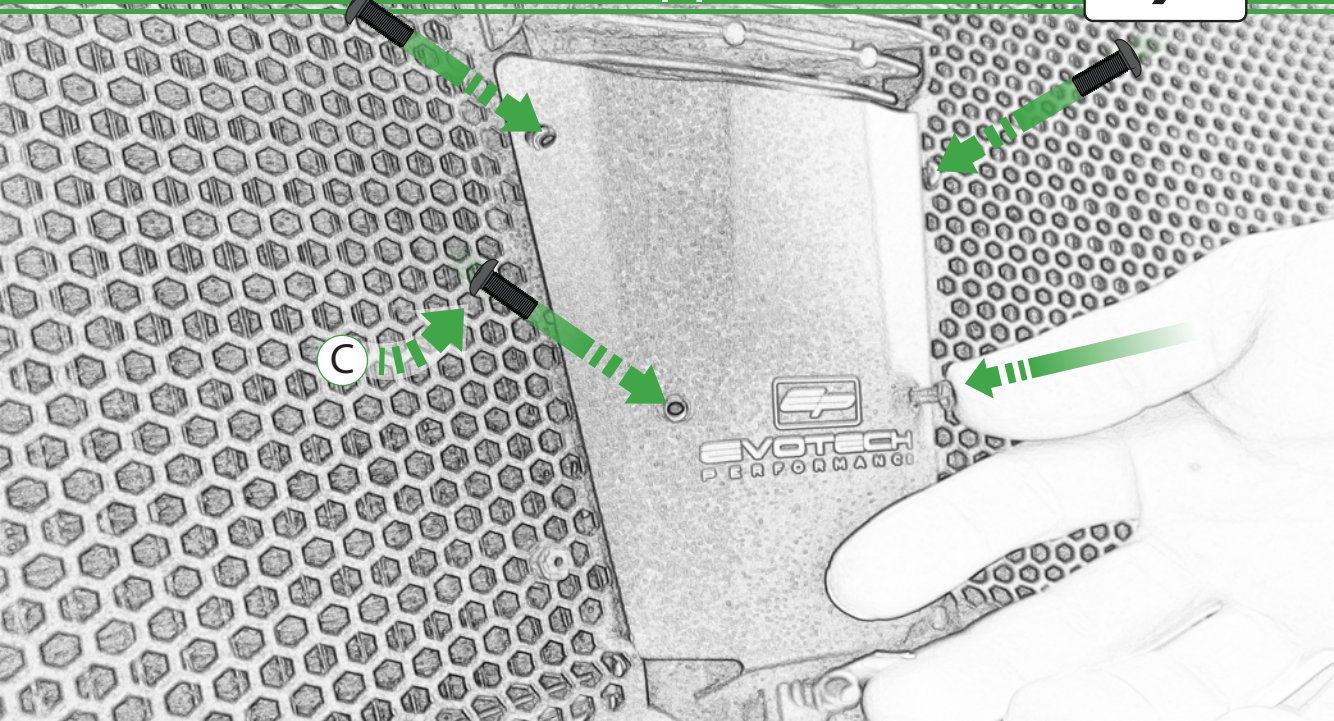


C

EVOTECH
PERFORMANCE

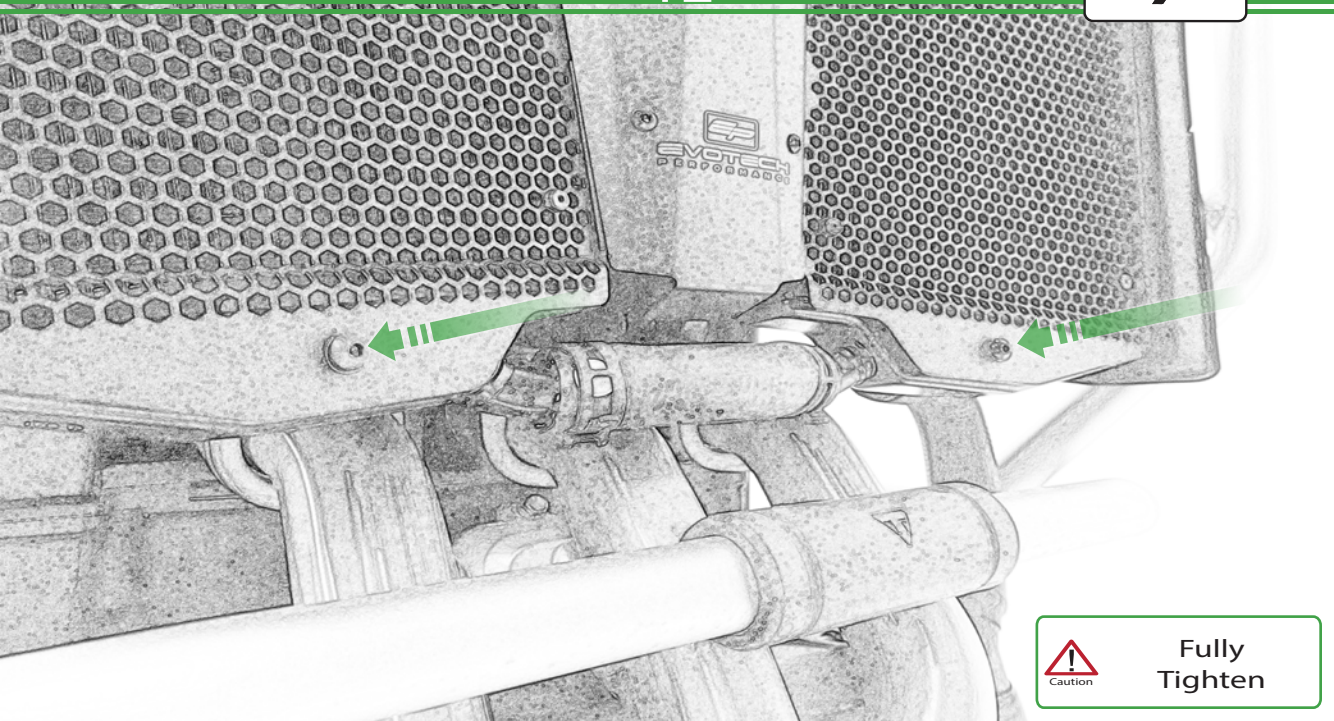


Fully
Tighten

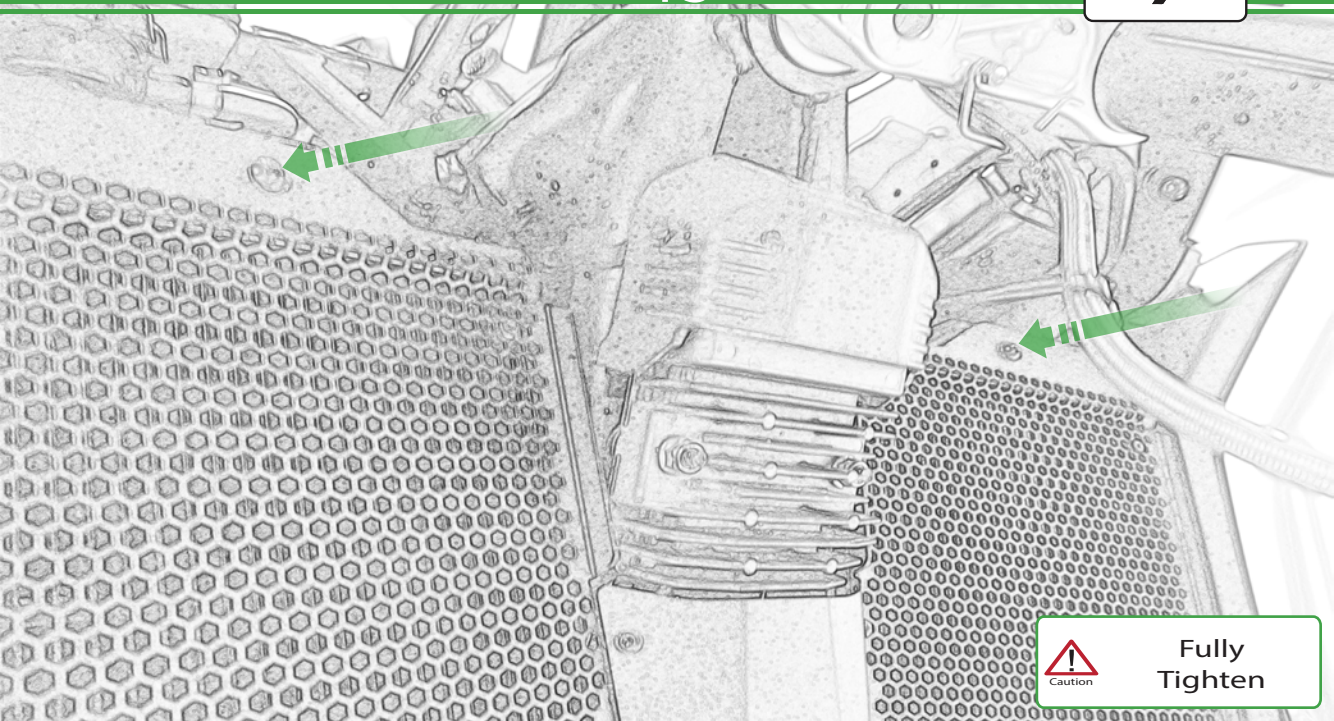



Caution

Fully Tighten

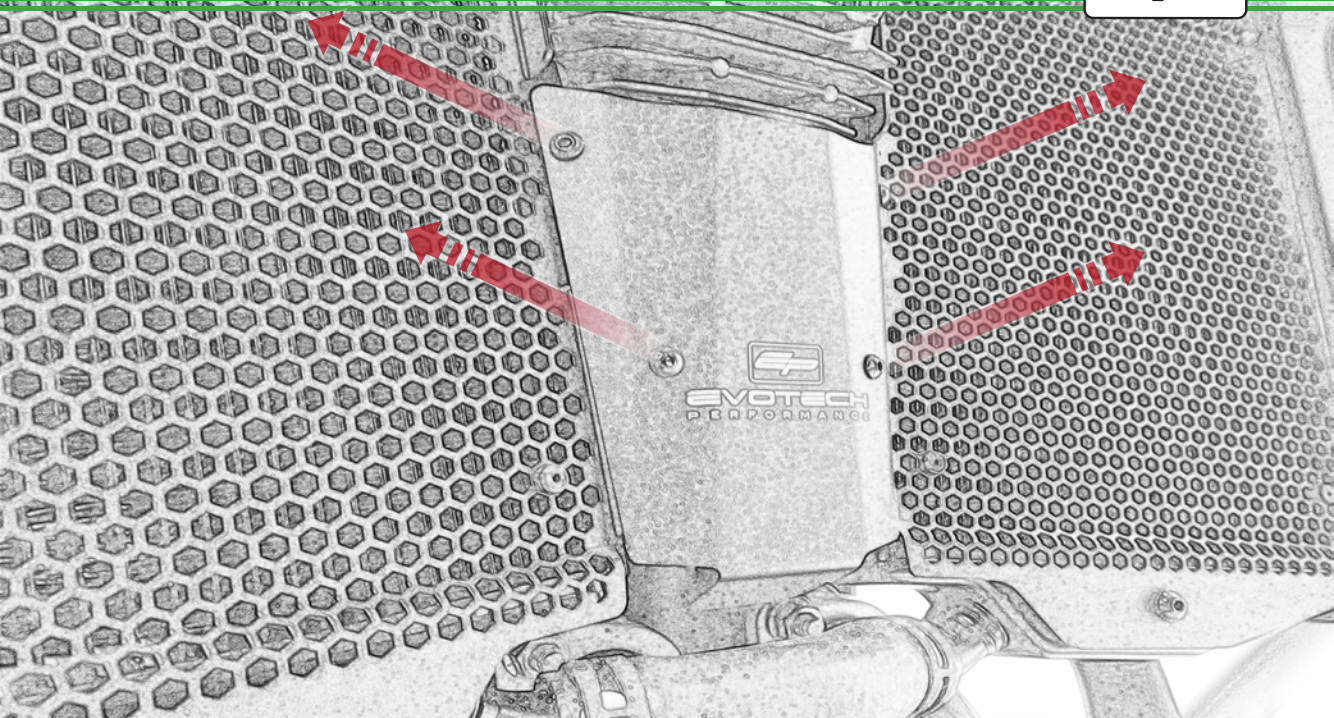




EVOTECH
PERFORMANCE

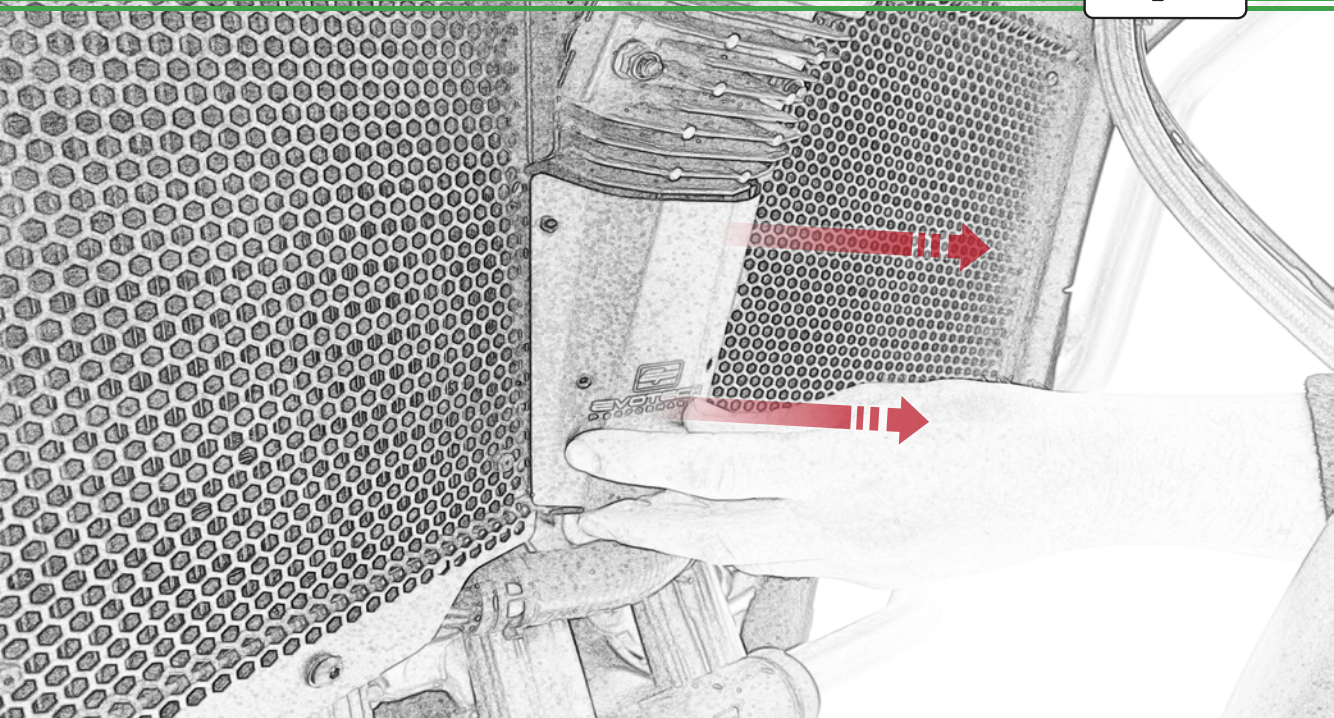


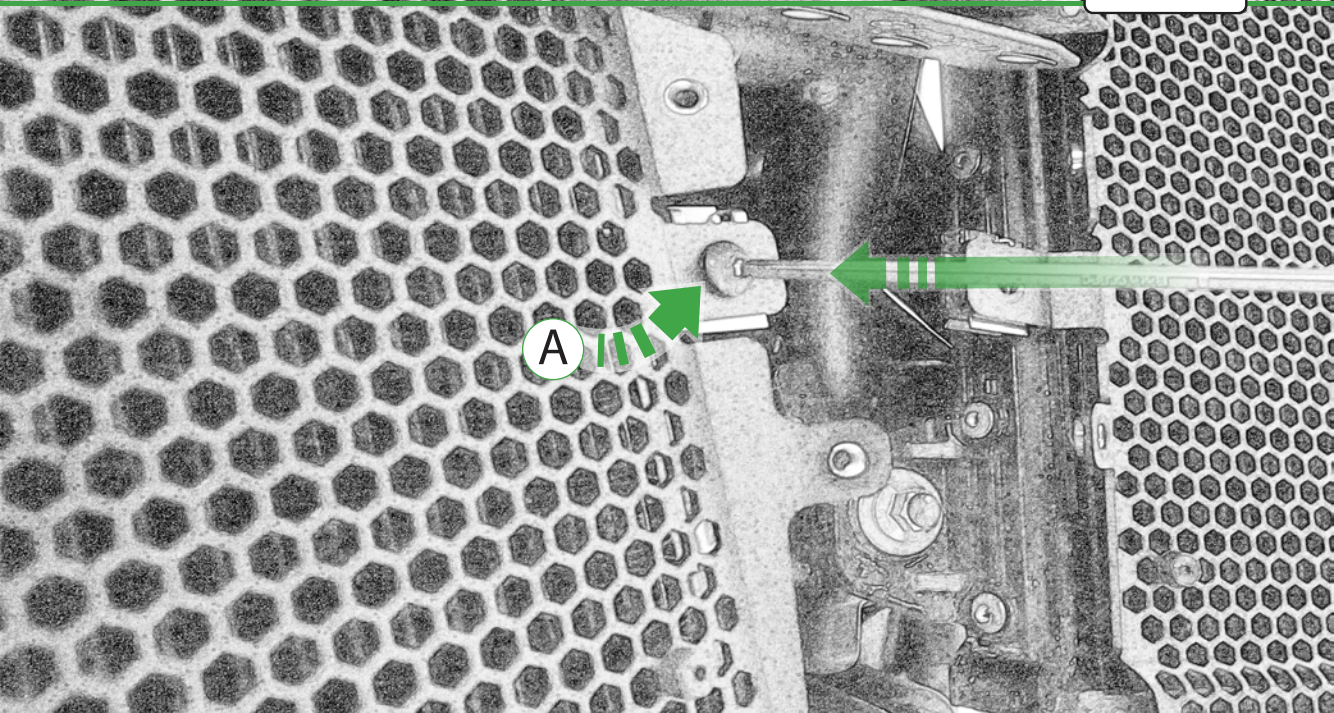

A

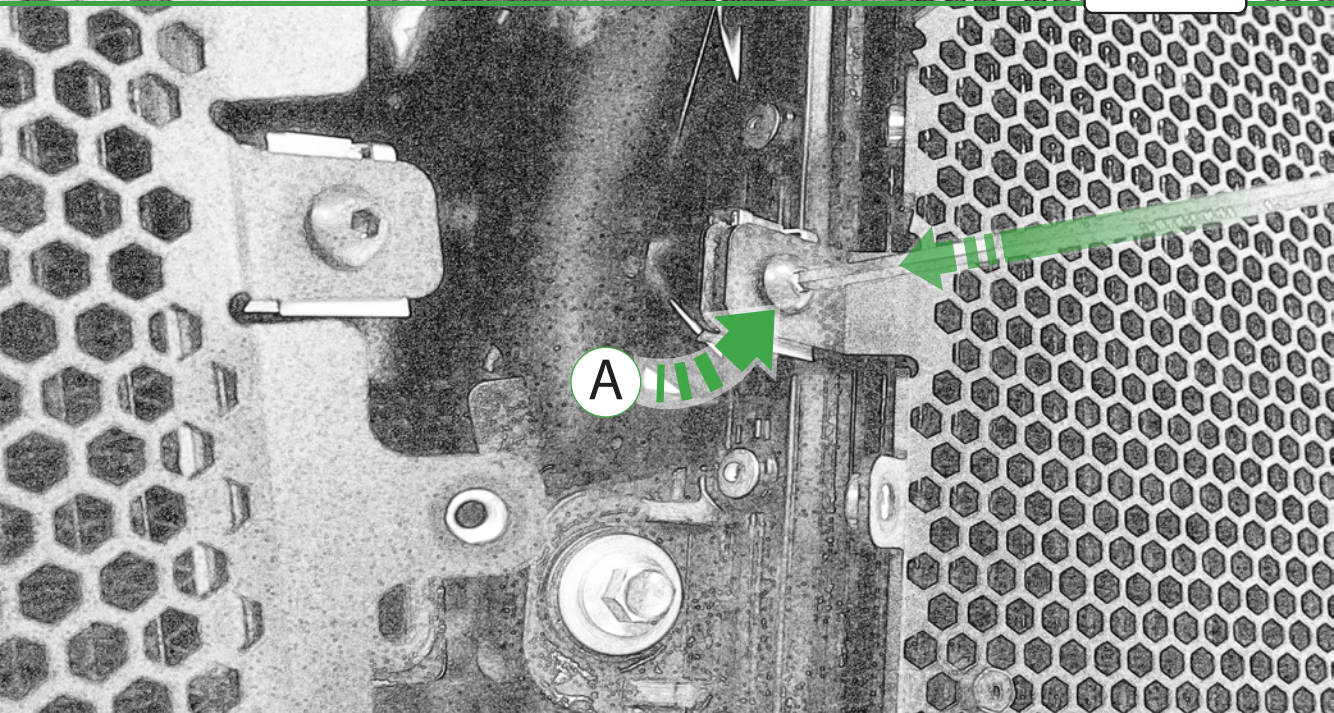

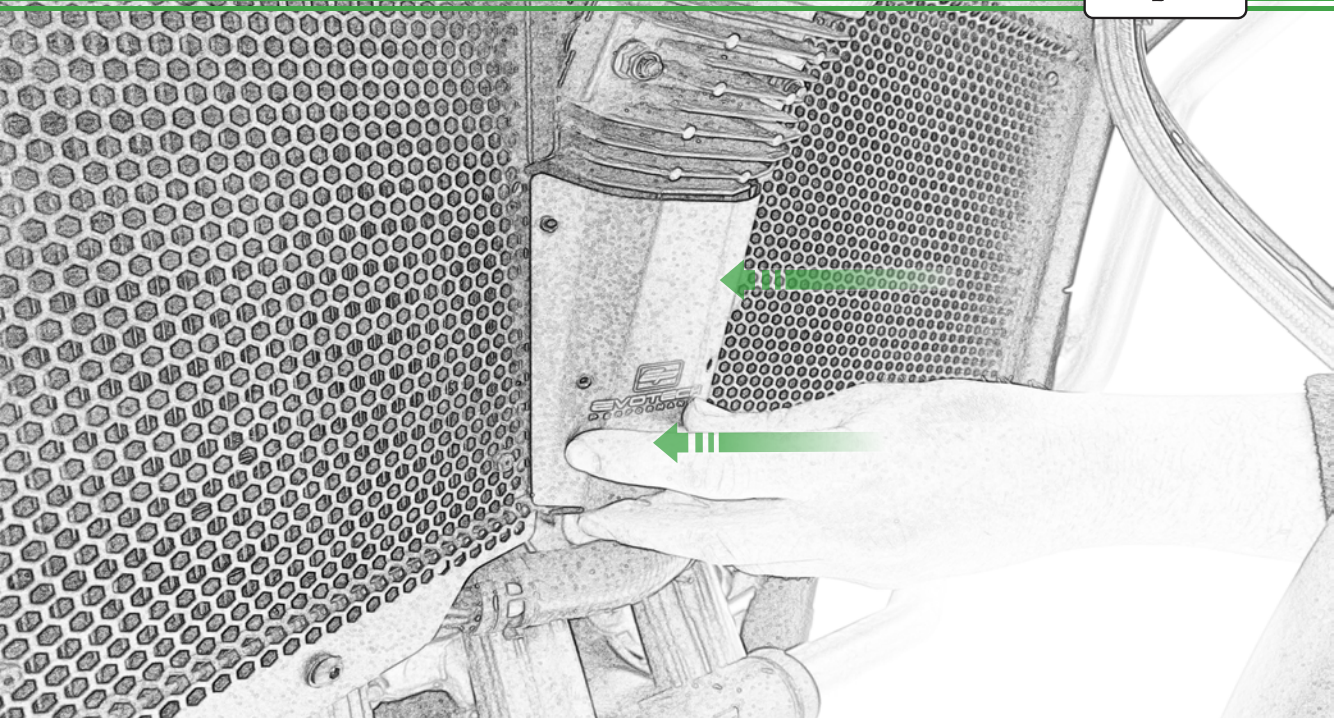

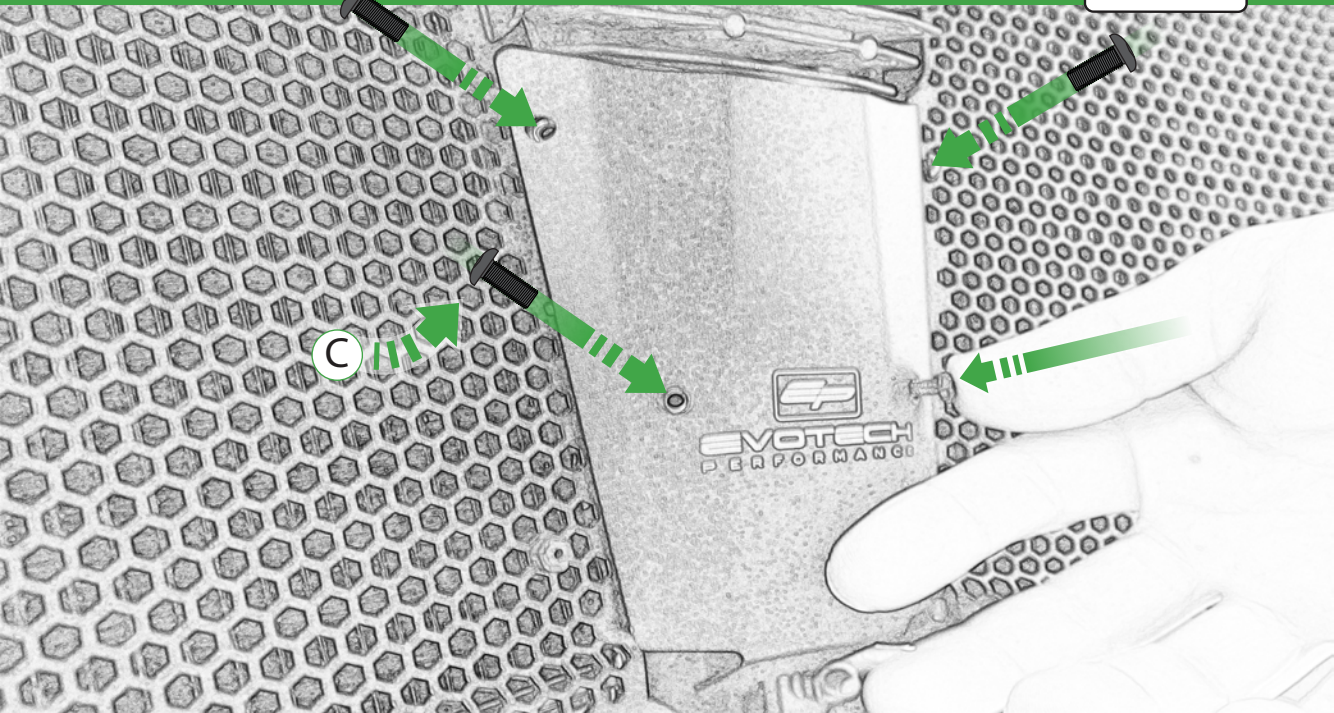

C

EVOTECH
PERFORMANCE



ESSENTIAL CHECKS

It is recommended that periodic inspections are made to ensure that dirt and debris have not become trapped between the guard and the radiator/oil cooler. Such dirt and debris would reduce the cooling efficiency of the radiator/oil cooler.

It is recommended that periodic inspections are made to ensure that all fixings are fully tightened.



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com