



**EVOTECH**®  
P E R F O R M A N C E


Honda CBR650/CB650  
Radiator Guard

Installation Instructions



## Kit Contents PRN014416


- (A) 4 x M4 x 6mm Black Button Heads
- (B) 4 x Special Washer
- (C) 6 x Rubber Bungs
- (D) 10 x Nitrile Rubber Pads

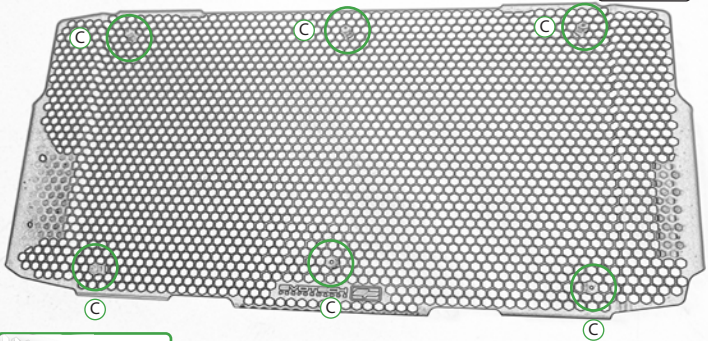


Locate round holes amongst hexagons.

Push Rubber Spacer through from the back of the guard so Hexagonal shape sits on the front face


The inset diagram shows a close-up of the hexagonal mesh. A black rubber spacer is being pushed through a hole from the back side. A green arrow points to the left, indicating the direction of the spacer's movement. The spacer is a small, cylindrical component with a hexagonal shape on its front face.

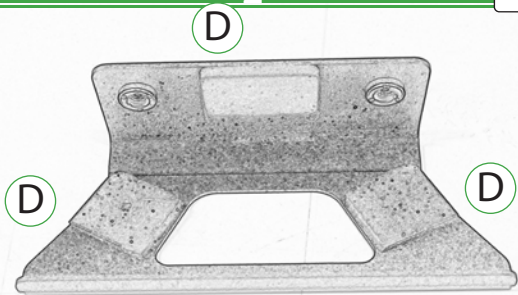



Repeat  
Both Sides

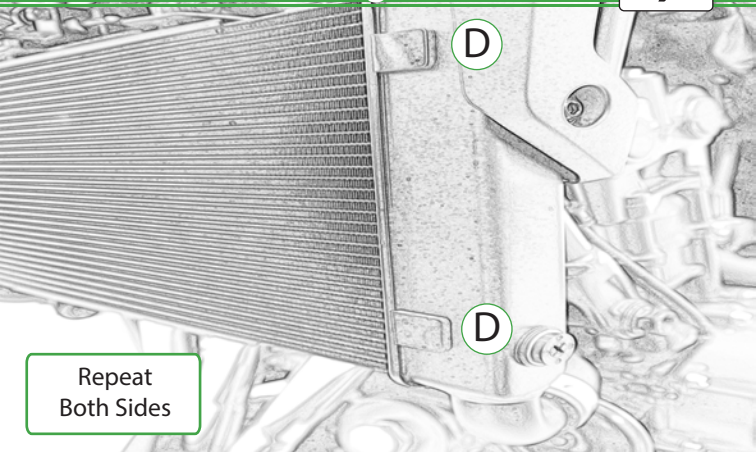


Repeat  
Both Sides

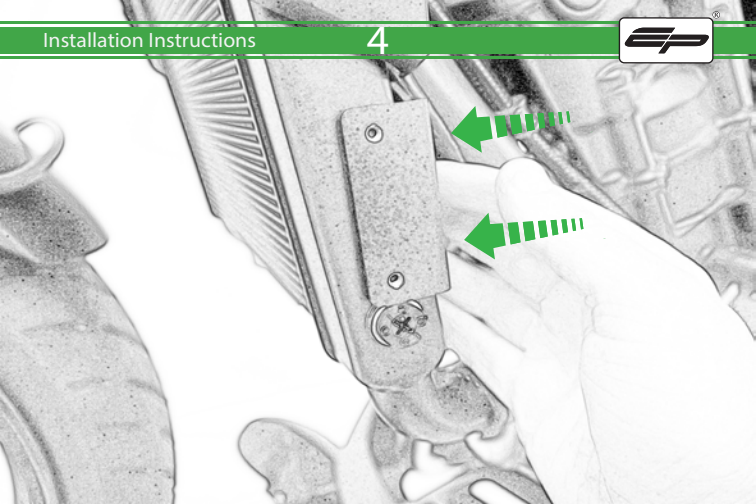


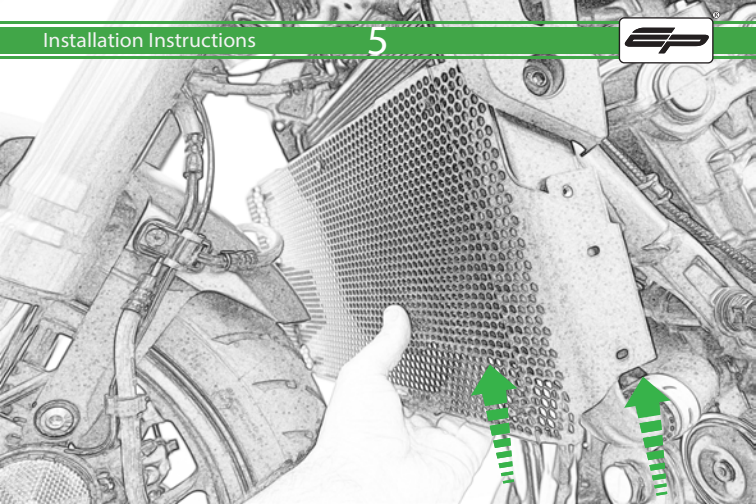

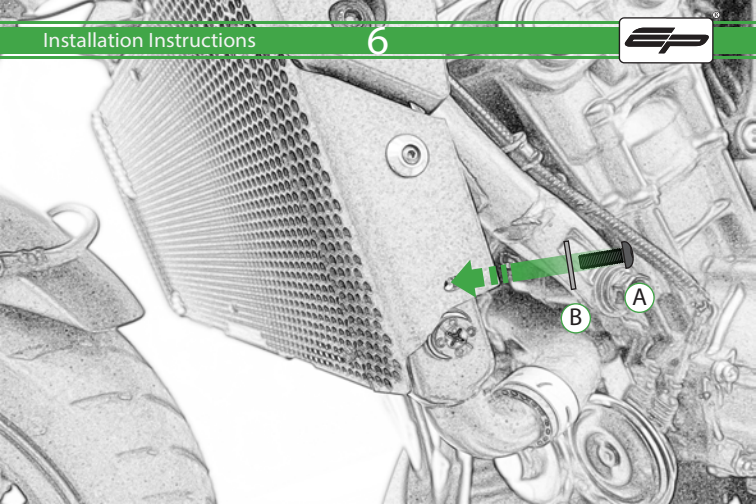



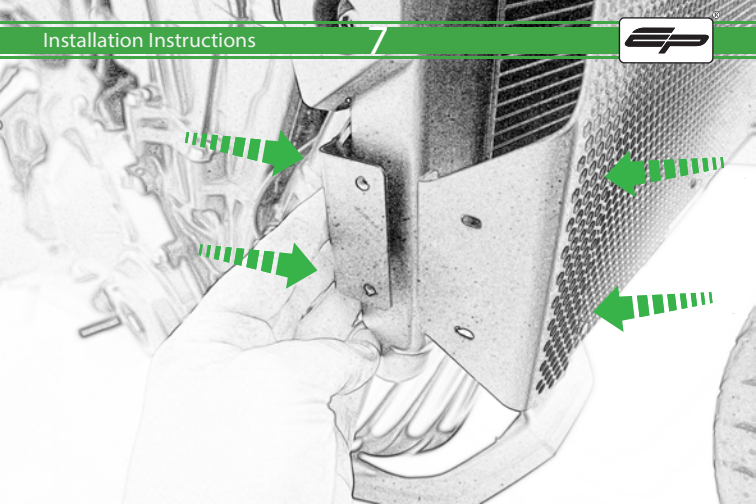

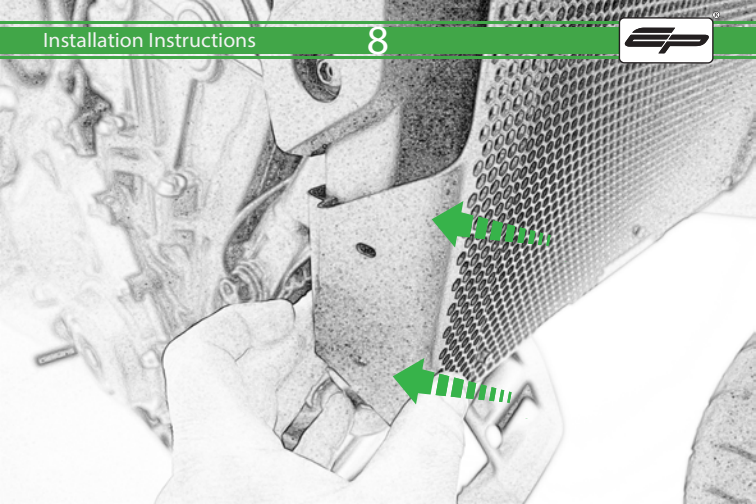





## ESSENTIAL CHECKS



It is recommended that periodic inspections are made to ensure that dirt and debris have not become trapped between the guard and the radiator/oil cooler. Such dirt and debris would reduce the cooling efficiency of the radiator/oil cooler.

It is recommended that periodic inspections are made to ensure that all fixings are fully tightend.



**EVOTECH**®  
P E R F O R M A N C E

[www.evotech-performance.com](http://www.evotech-performance.com)