



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com



BMW F 900 XR / XR TE

Installation Instructions



Kit Contents PRN014919


- (A) 2 x M4 x 12 Button Head Bolts
- (B) 2 x Cable Ties
- (C) 4 x Rubber Bungs

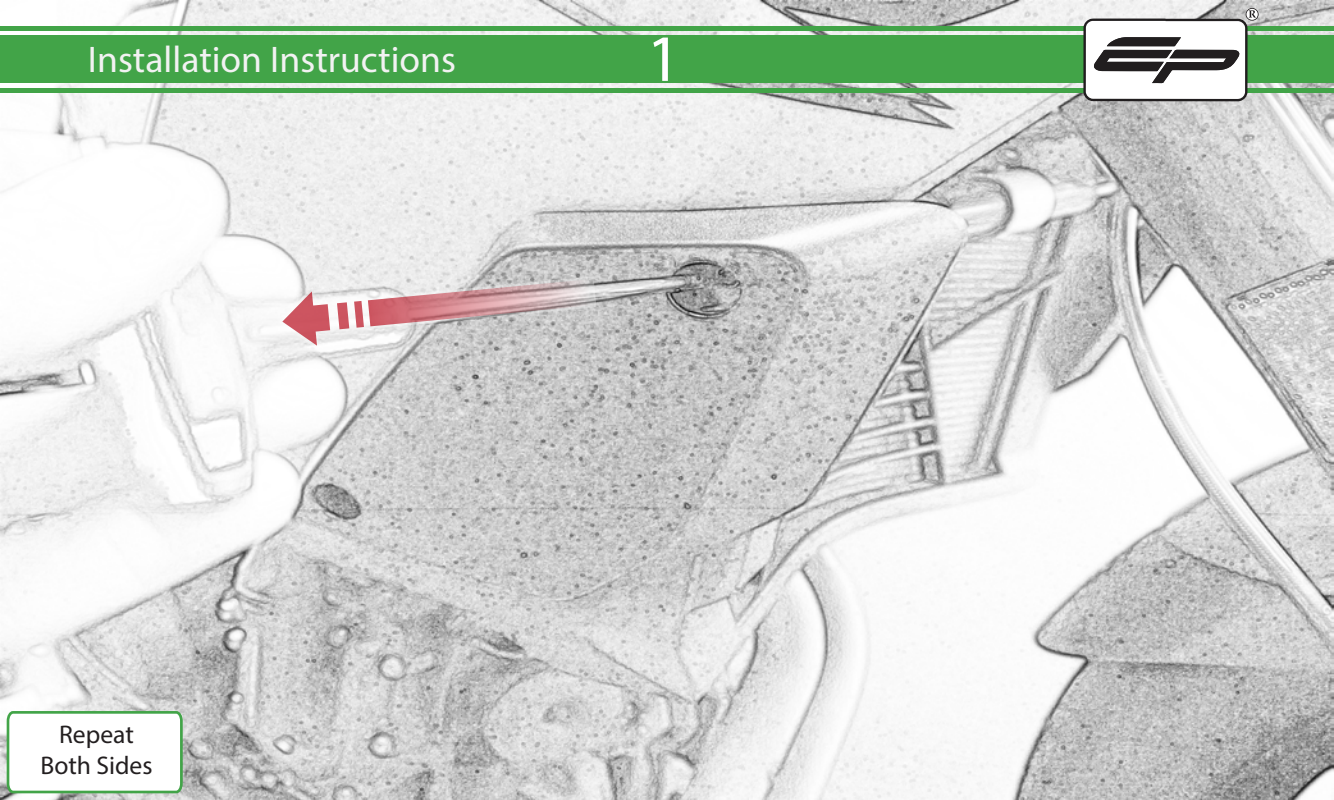


Repeat
Both Sides




Repeat
Both Sides

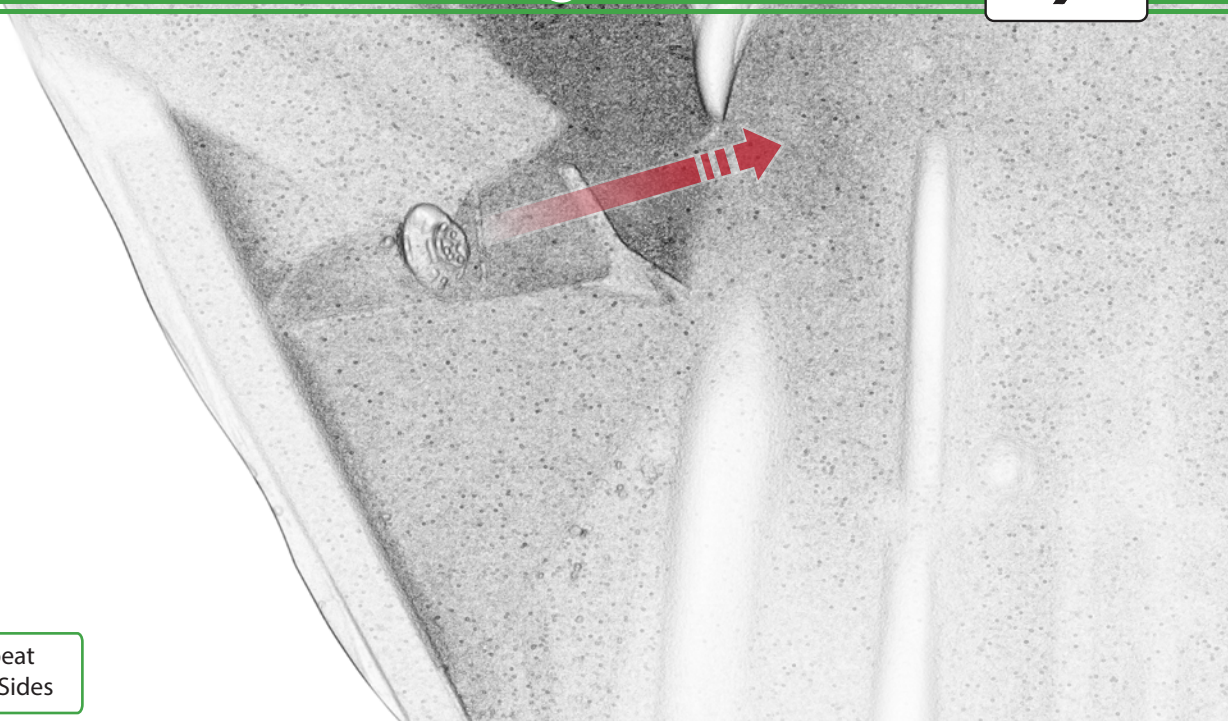


Repeat
Both Sides

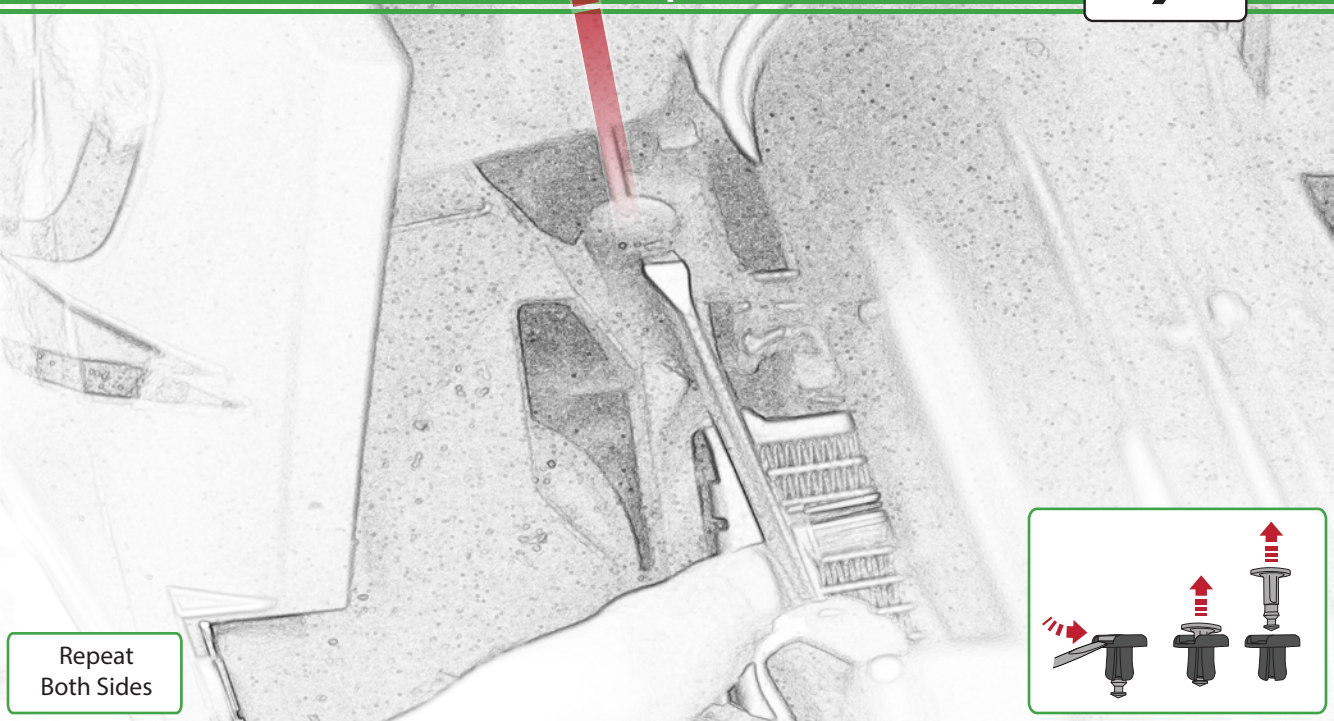


Repeat
Both Sides

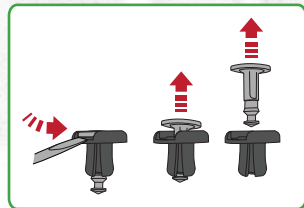

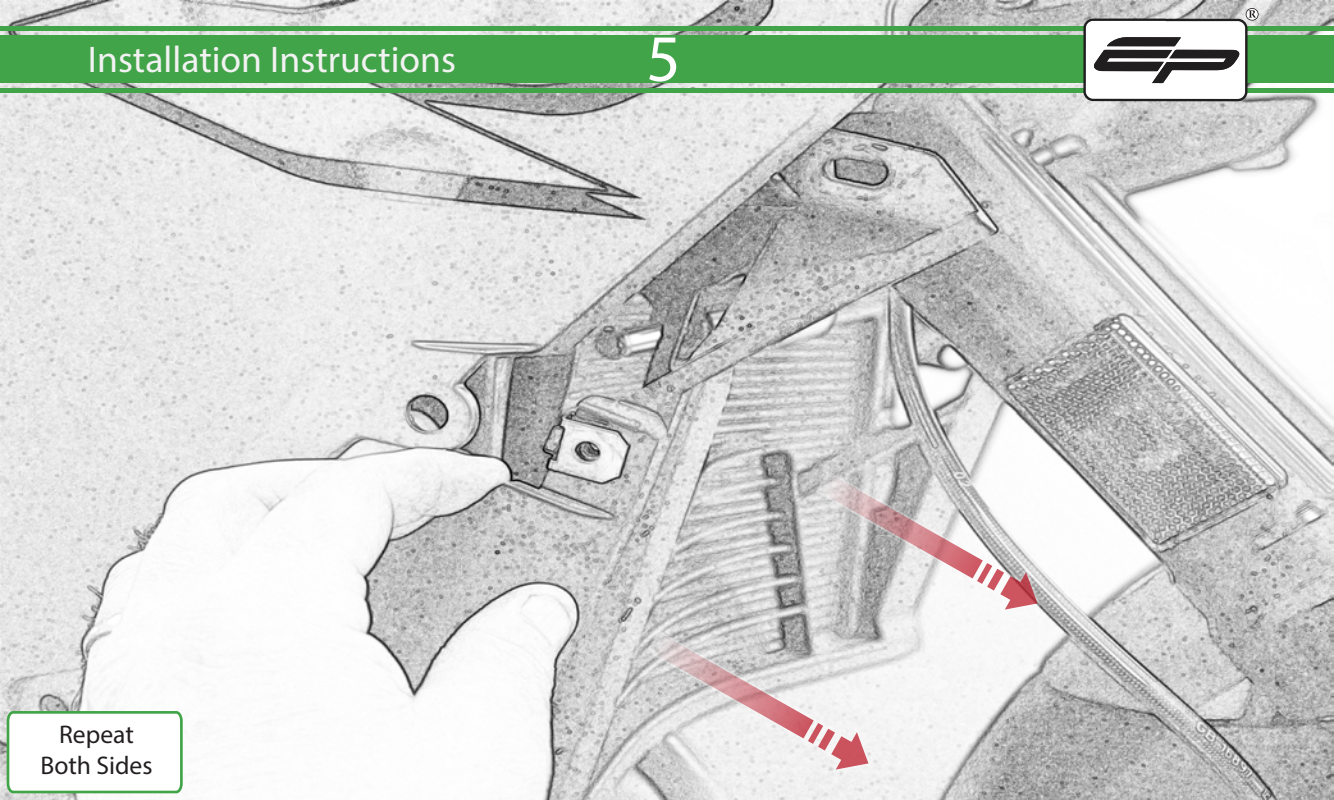



Repeat
Both Sides

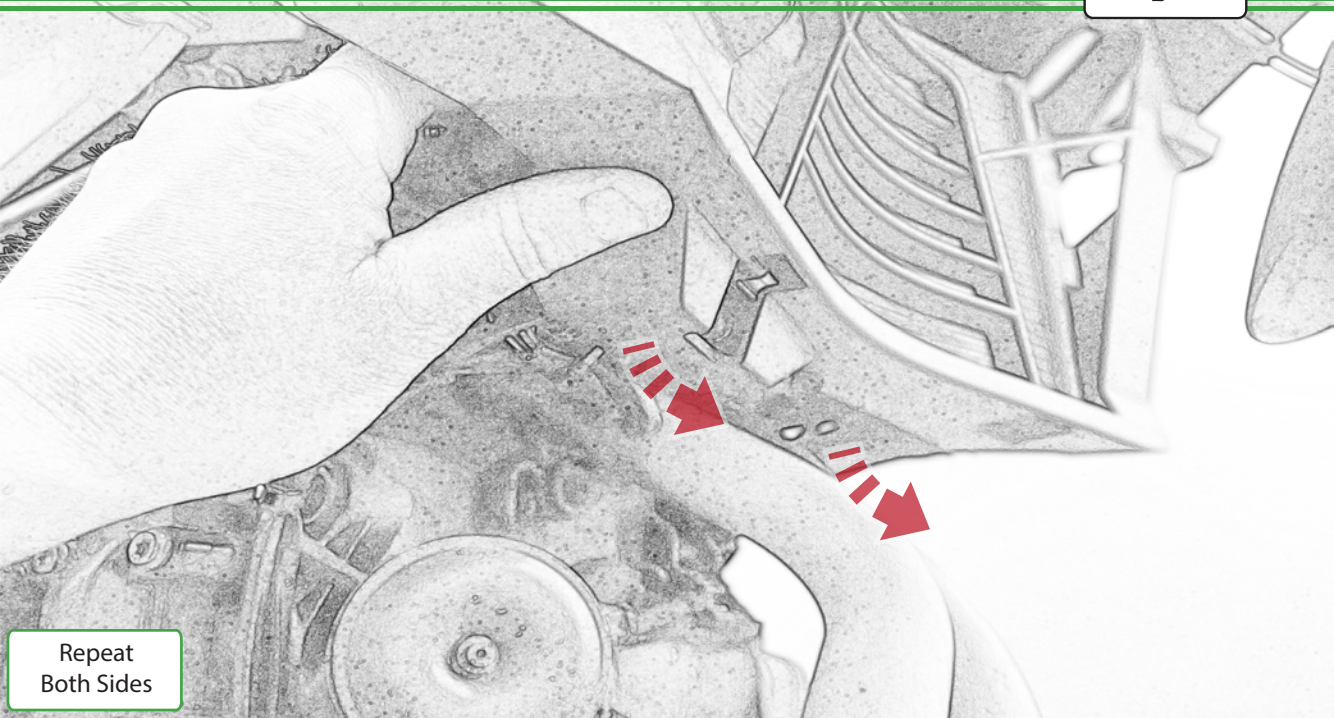
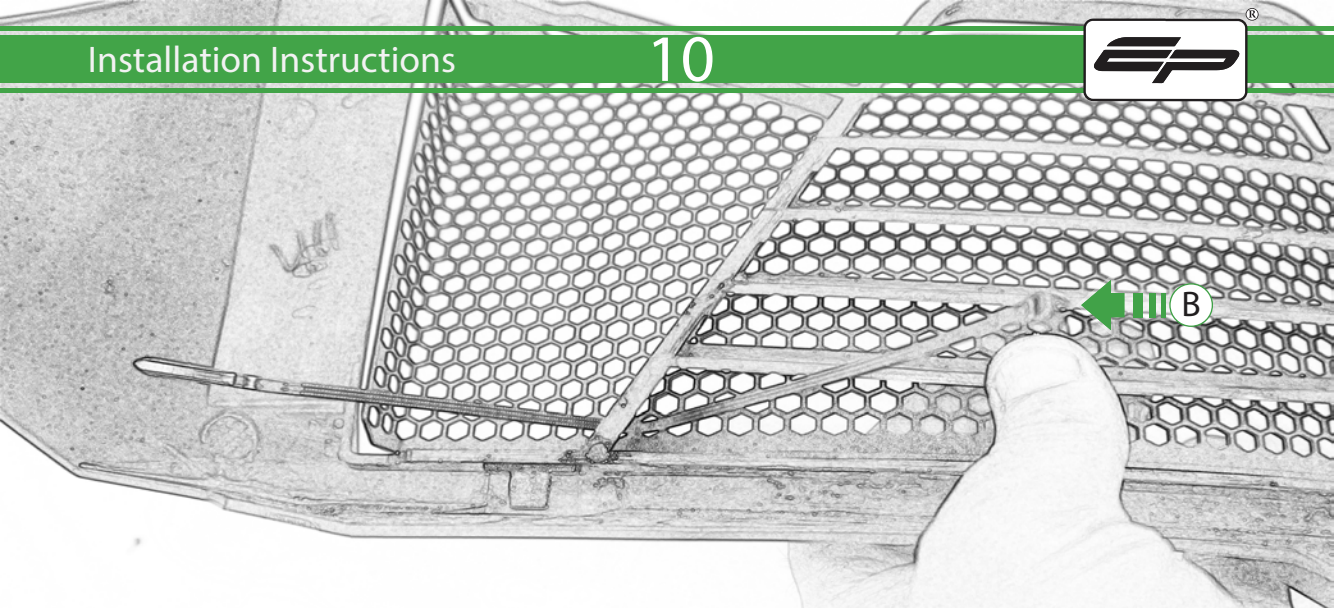


Repeat
Both Sides



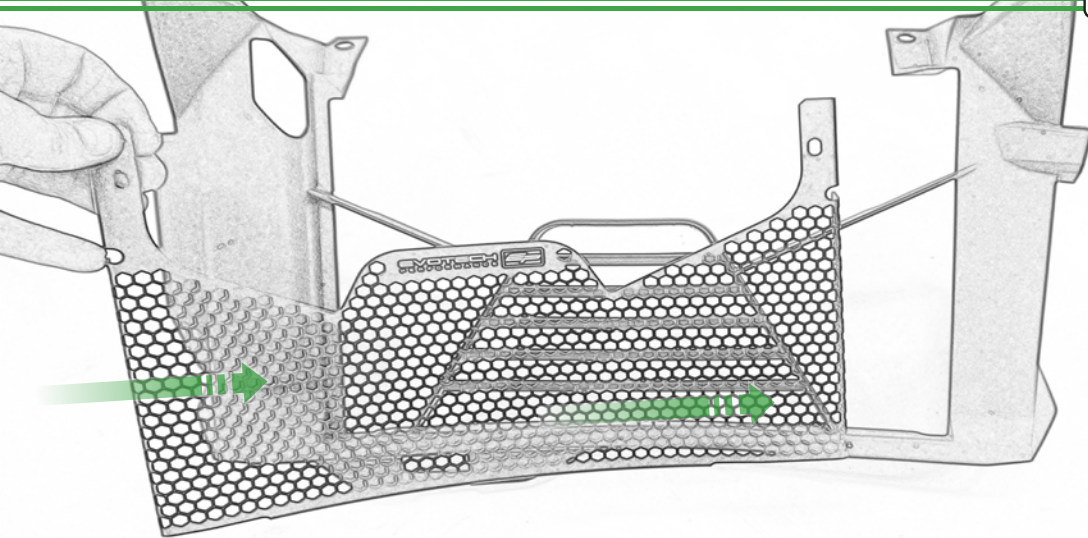

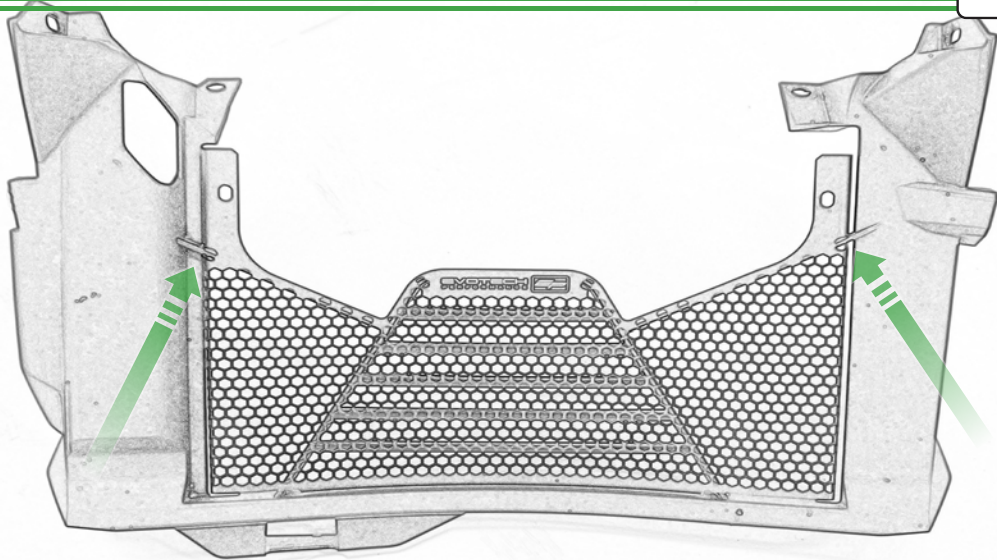


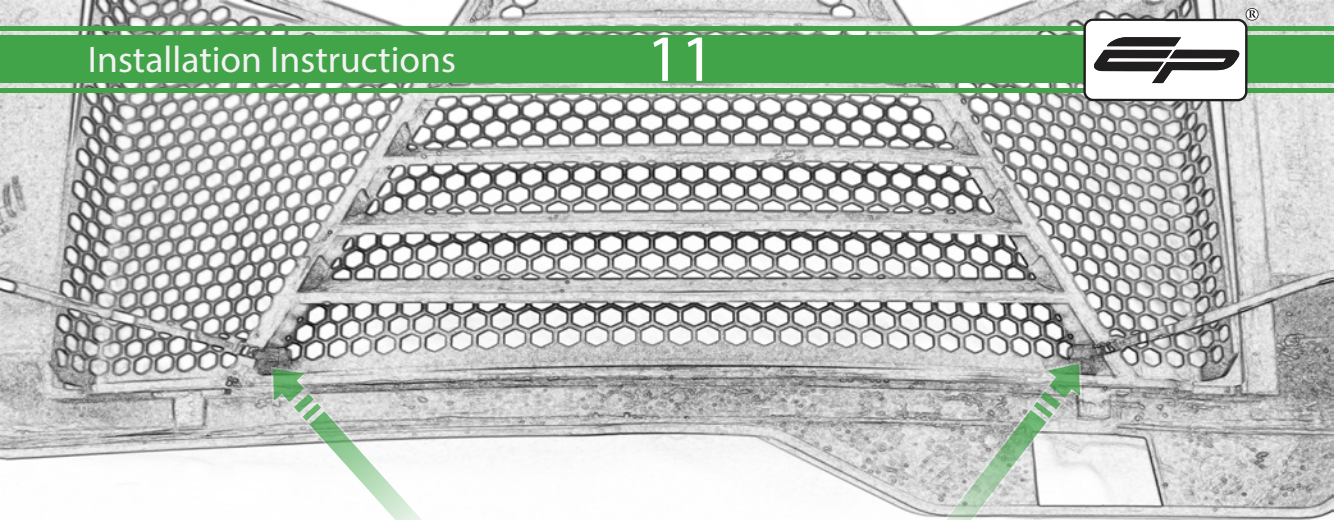


Loop cable ties through to secure guard in position




Caution


The bottom right section contains a diagram and a warning. The diagram shows a black cable tie being inserted into a hole in a metal frame, with a green arrow pointing to the left. To the right of the diagram is the text "Loop cable ties through to secure guard in position". Below this text is a red triangular warning symbol with a black exclamation mark inside, and the word "Caution" written below it.




Repeat
Both Sides

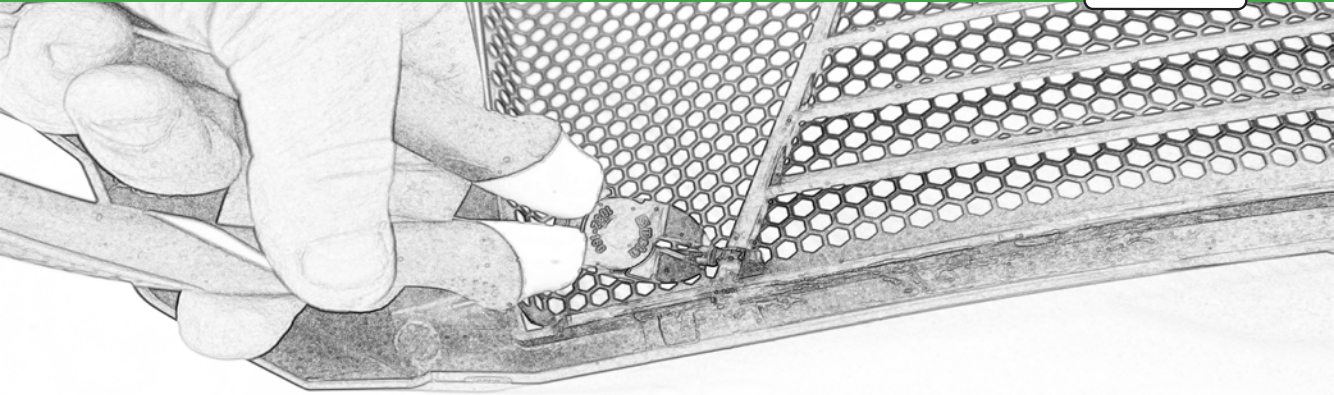


Repeat
Both Sides

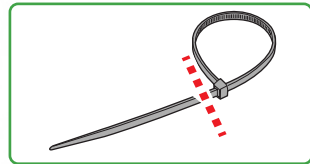


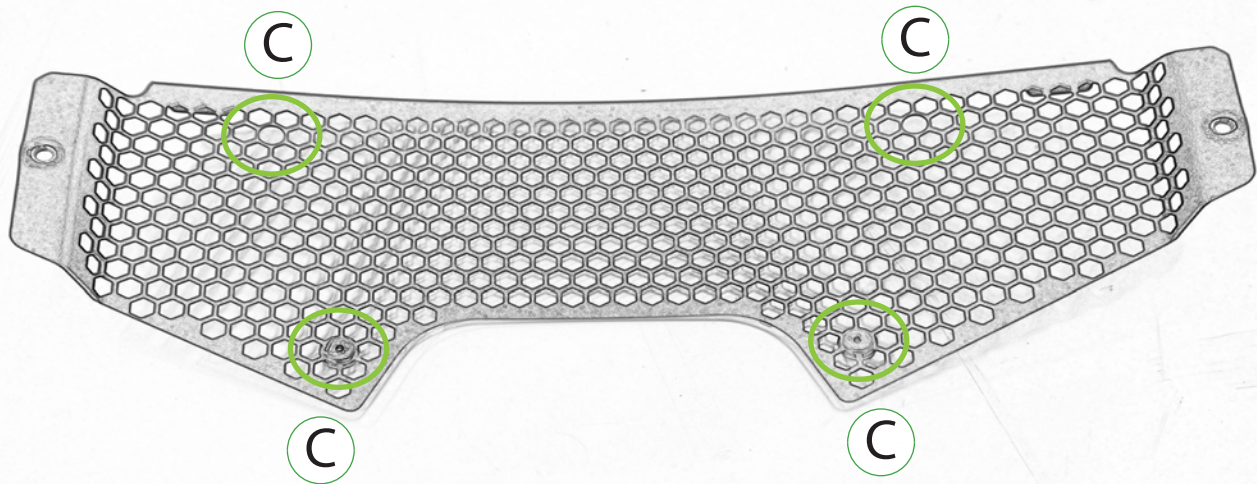


Locate round holes amongst hexagons.

Push Rubber Spacer through from the back of the guard so Hexagonal shape sits on the front face

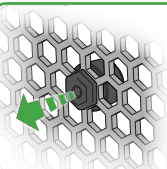

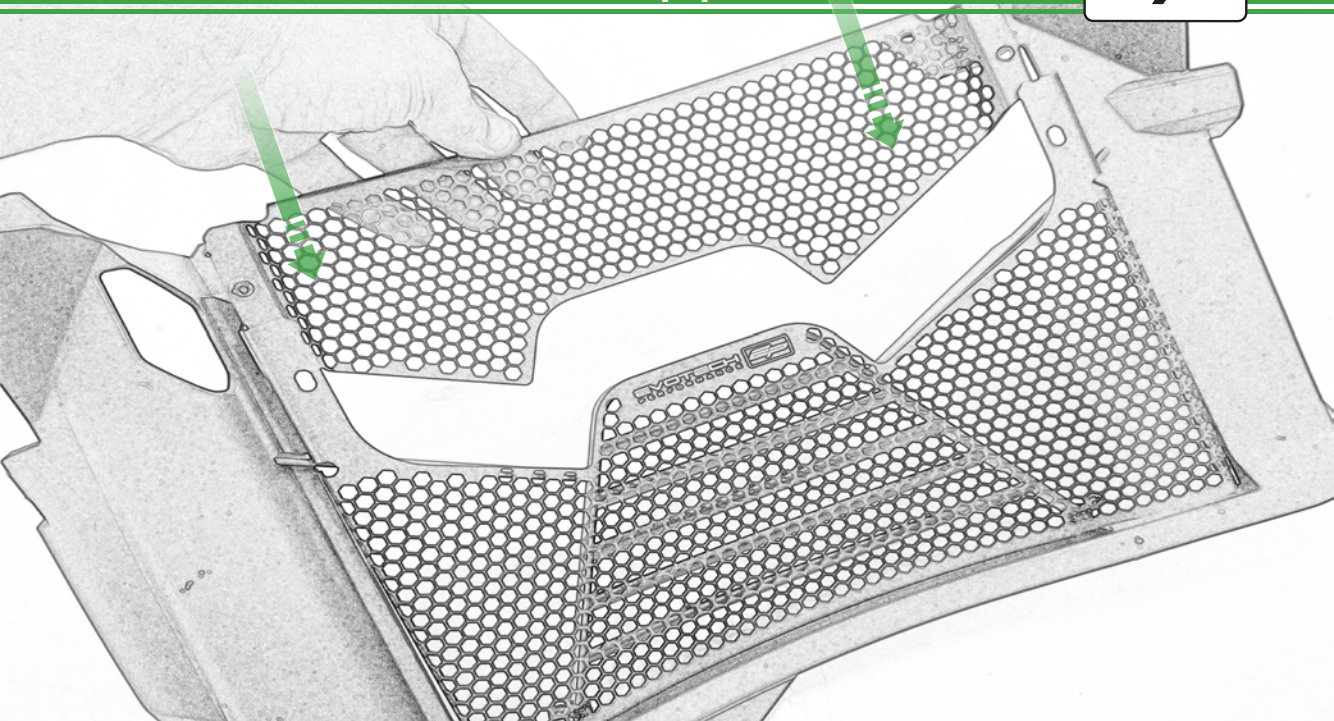

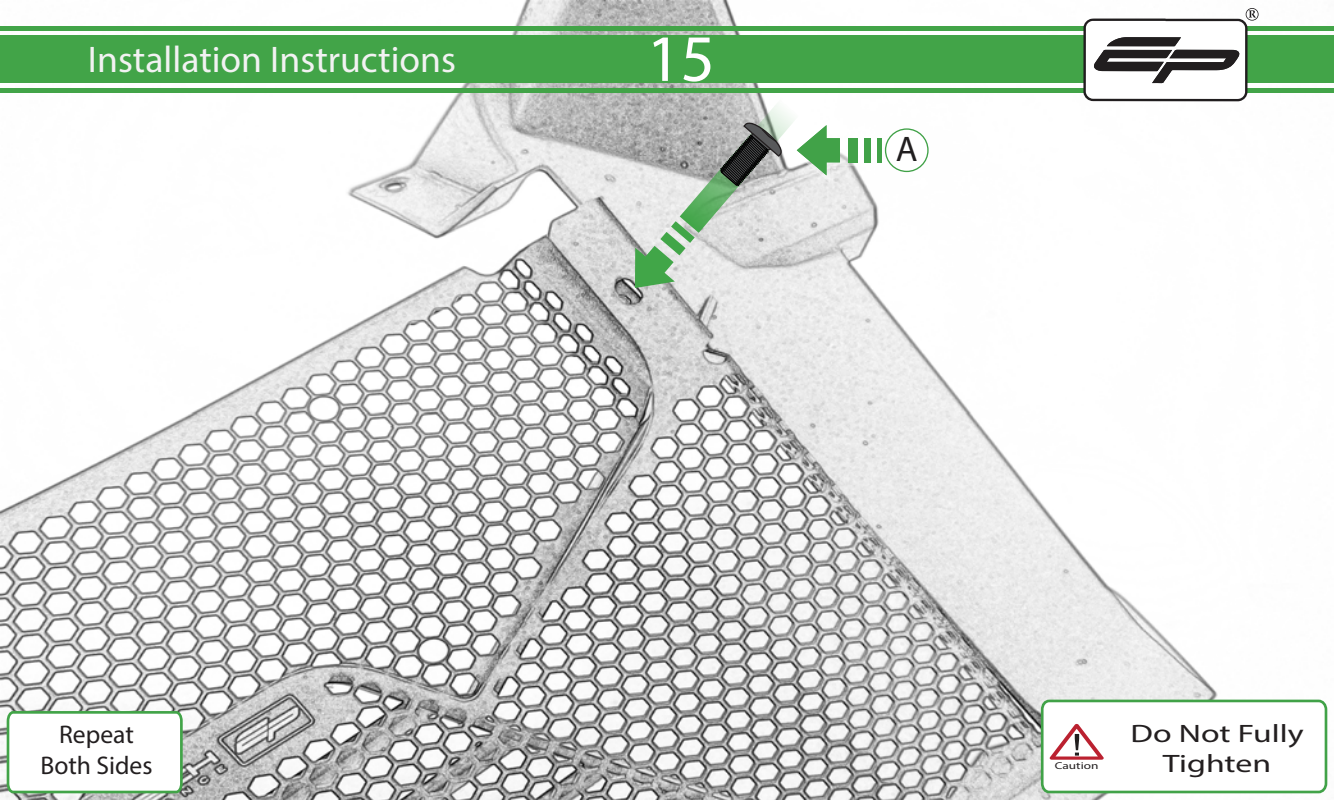


A

Repeat
Both Sides




Do Not Fully
Tighten




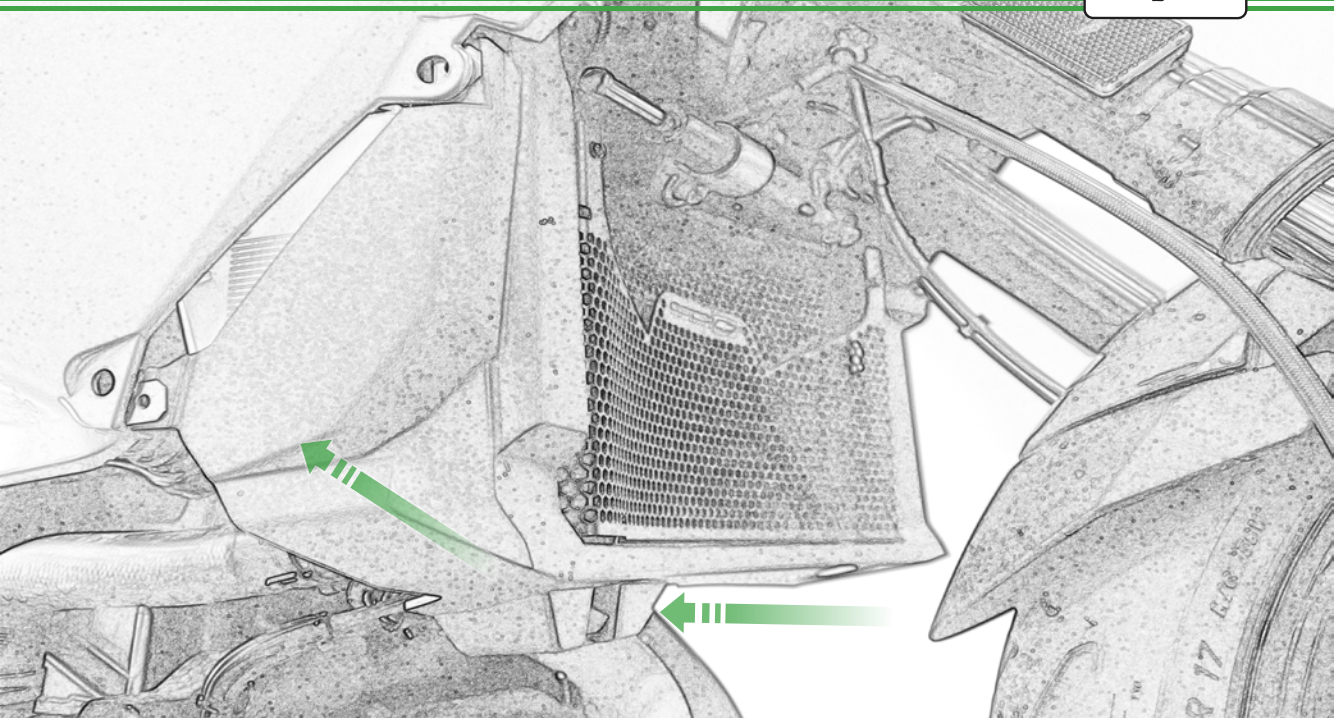



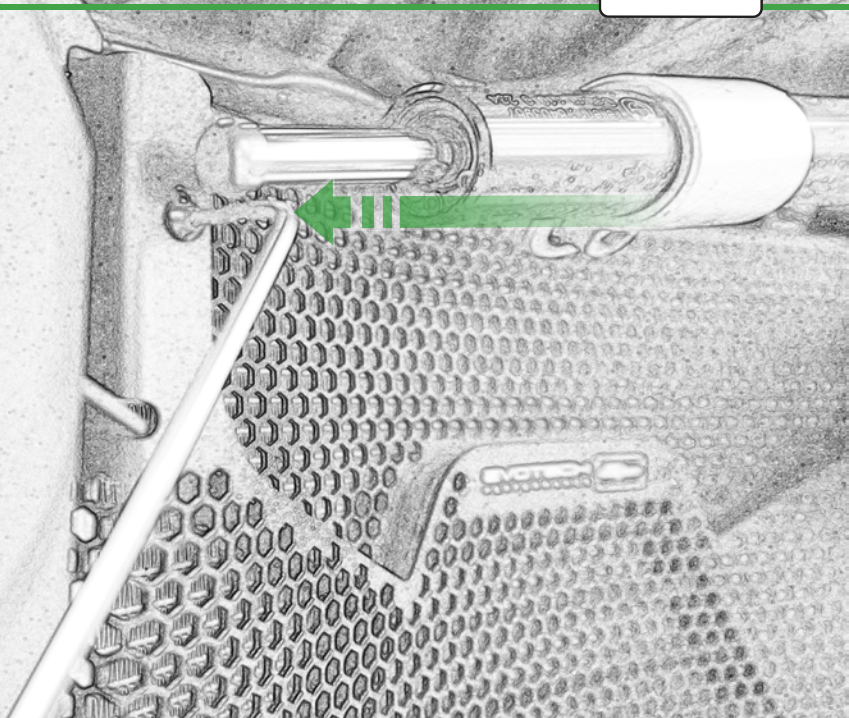

Repeat
Both Sides

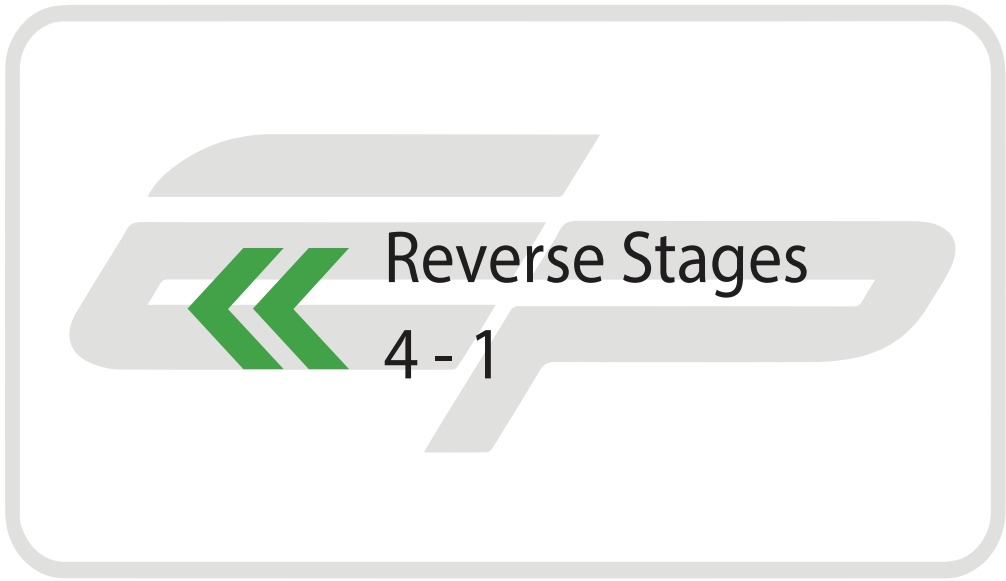



ESSENTIAL CHECKS

It is recommended that periodic inspections are made to ensure that dirt and debris have not become trapped between the guard and the radiator/oil cooler. Such dirt and debris would reduce the cooling efficiency of the radiator/oil cooler.

It is recommended that periodic inspections are made to ensure that all fixings are fully tightened.



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com