



KTM 390


Rectifier Guard


Installation Instructions





Kit Contents PRN013779


- A 1 x Rectifier Guard
- B 4 x M8 x 10 Black Button Head Bolts
- C 4 x M8 Black Washers

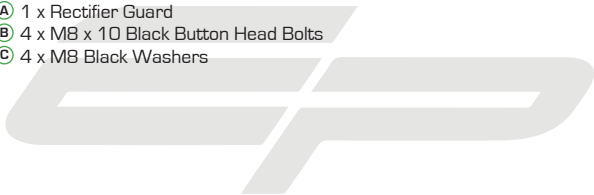

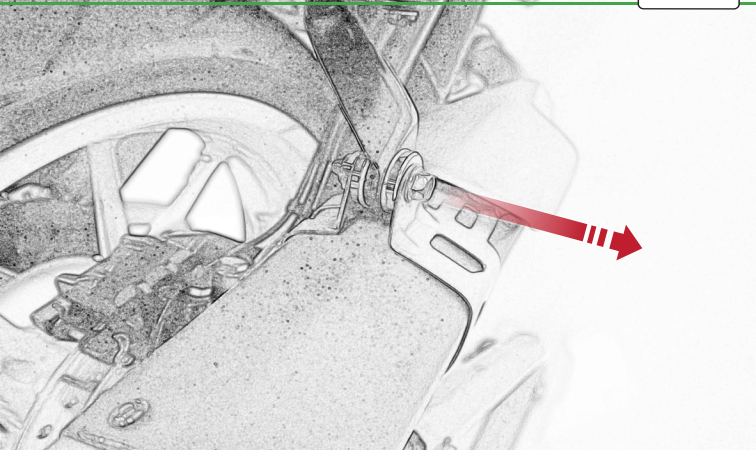

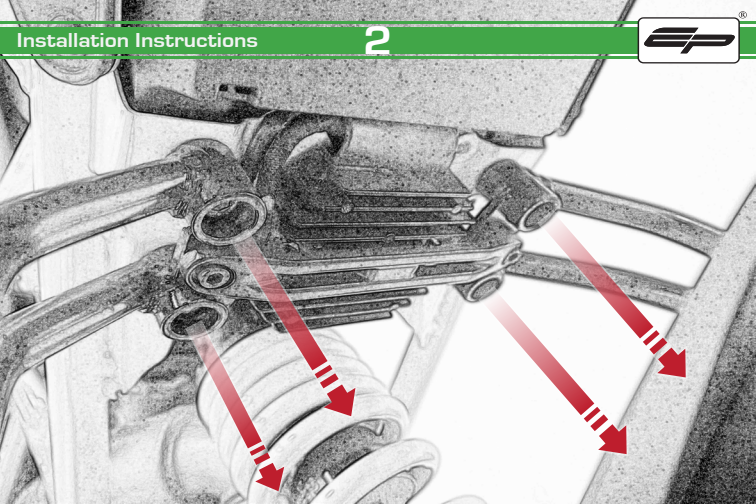

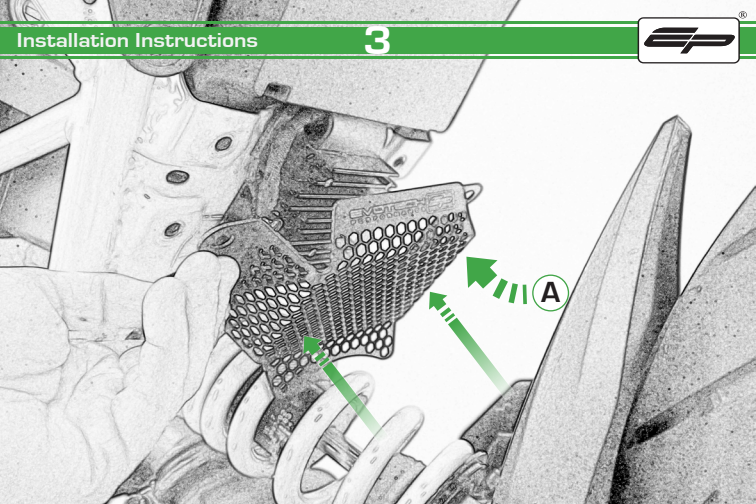

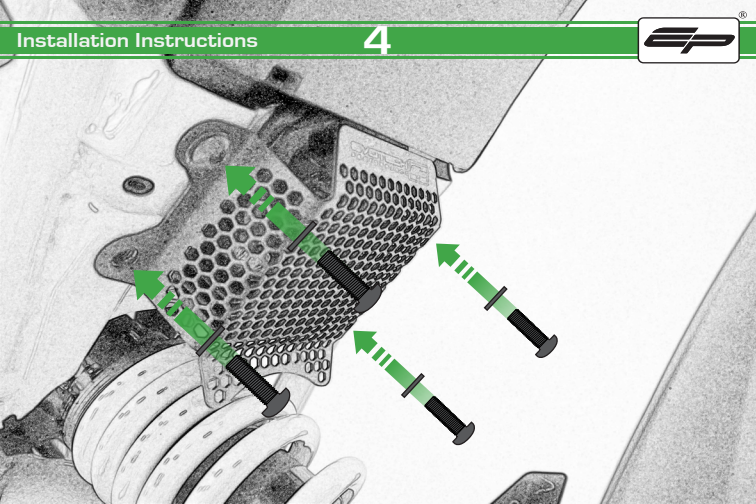

ESSENTIAL CHECKS

It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com