




KTM 790  
Exhaust Hanger


Installation Instructions



## Kit Contents PRN014016

- Ⓐ 1 x M8 Nut
- Ⓑ 1 x M8 x 20mm Caphead
- Ⓒ 1 x M8 x 40mm Caphead

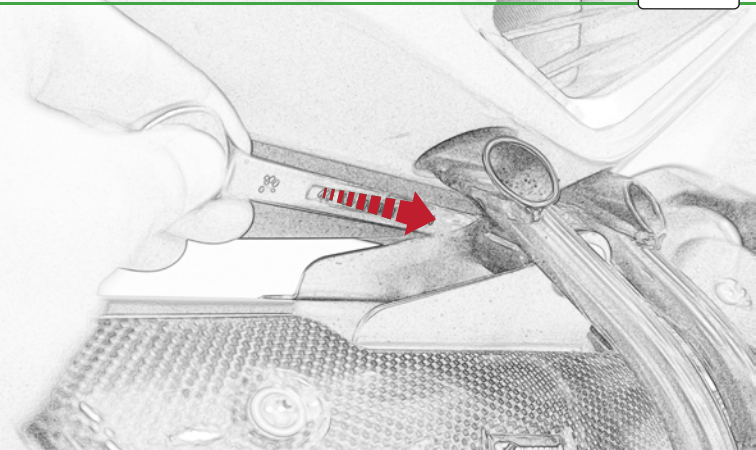

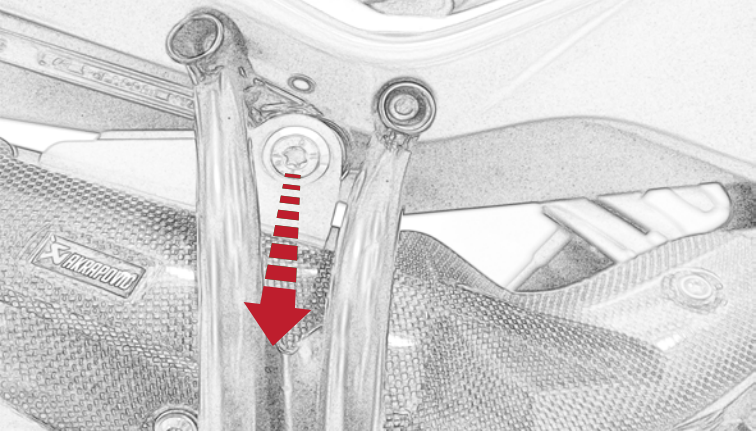





Repeat  
Both Sides





Repeat  
Both Sides

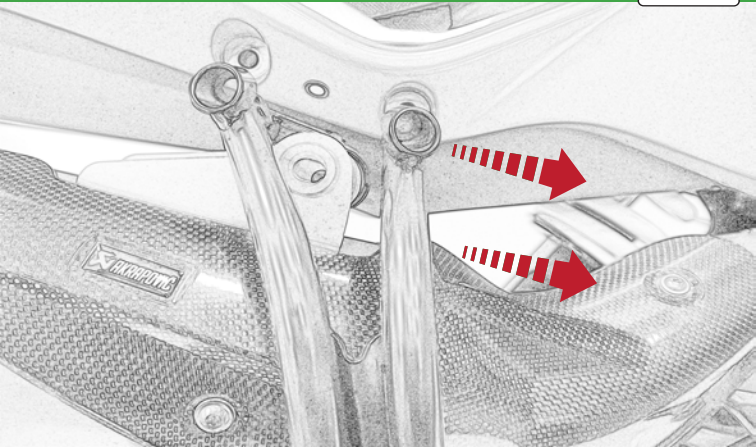


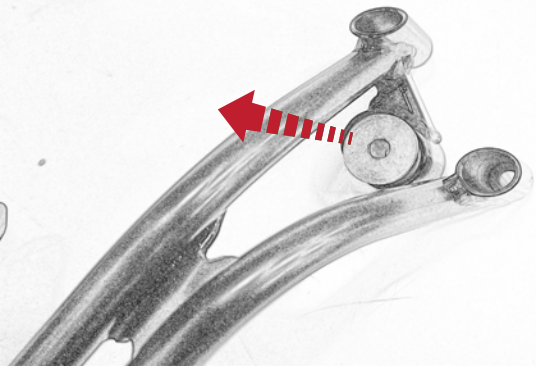




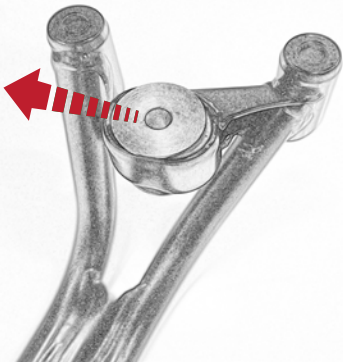

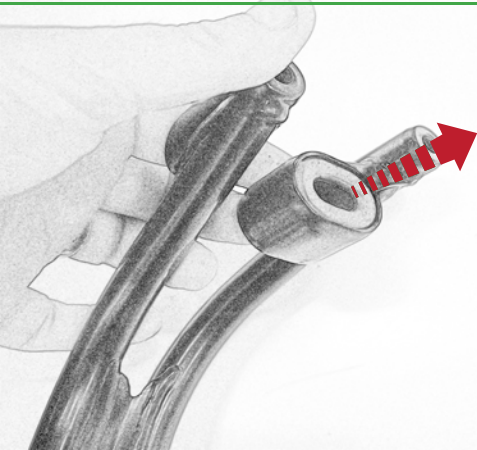


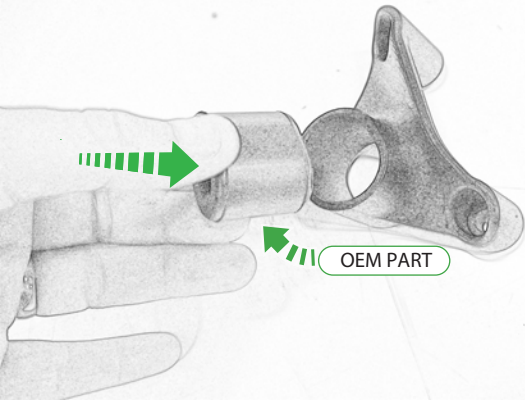


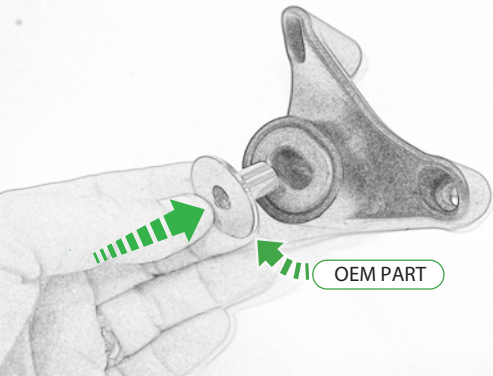


OEM PART

OEM PART

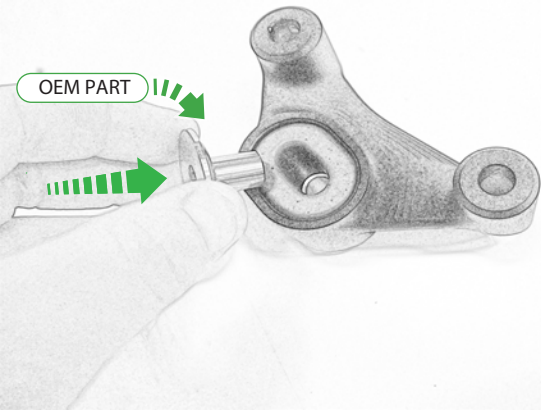

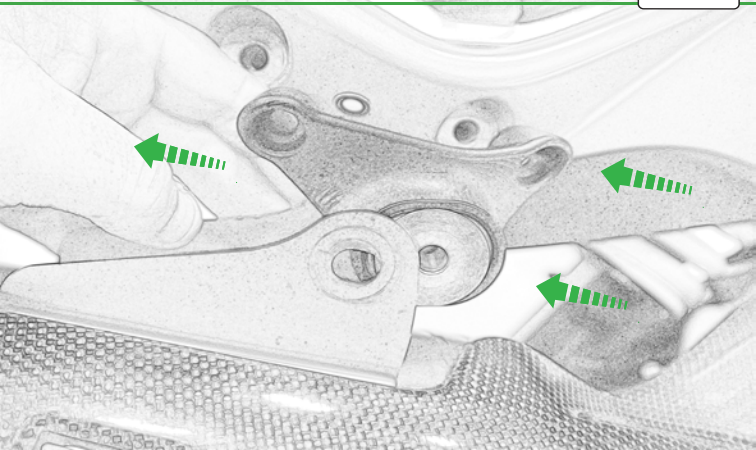


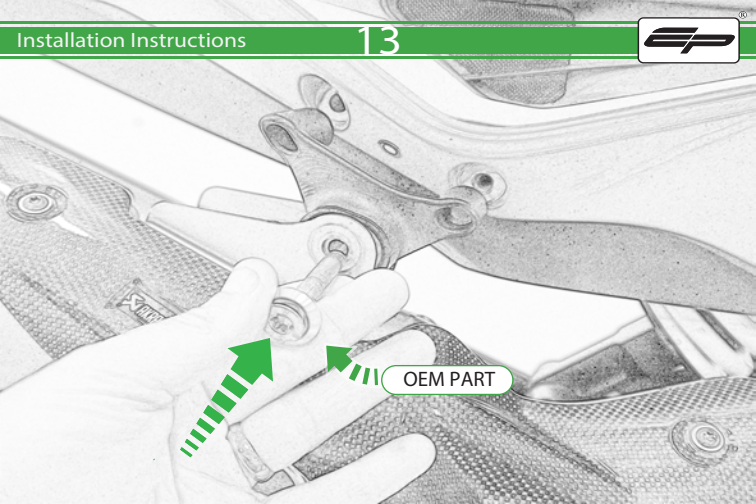


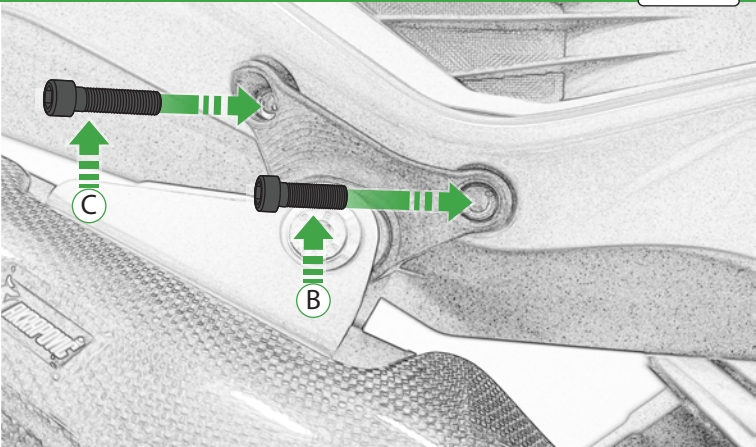
OEM PART







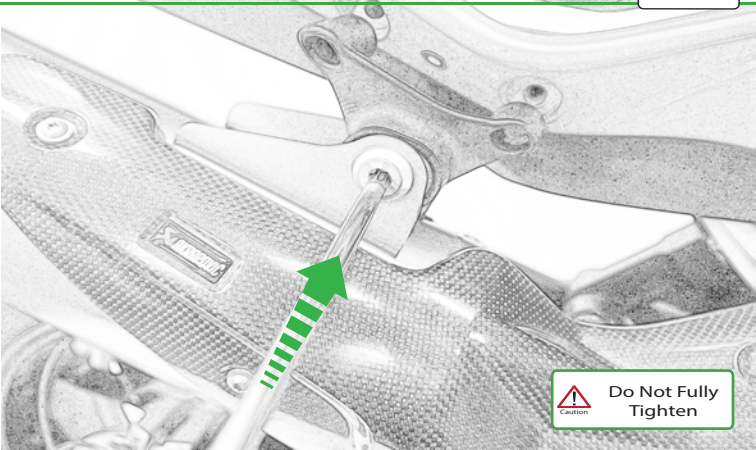

 **Do Not Fully Tighten**




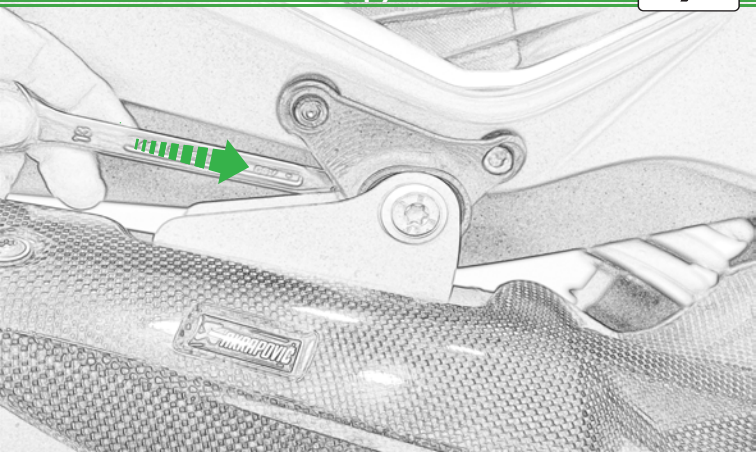

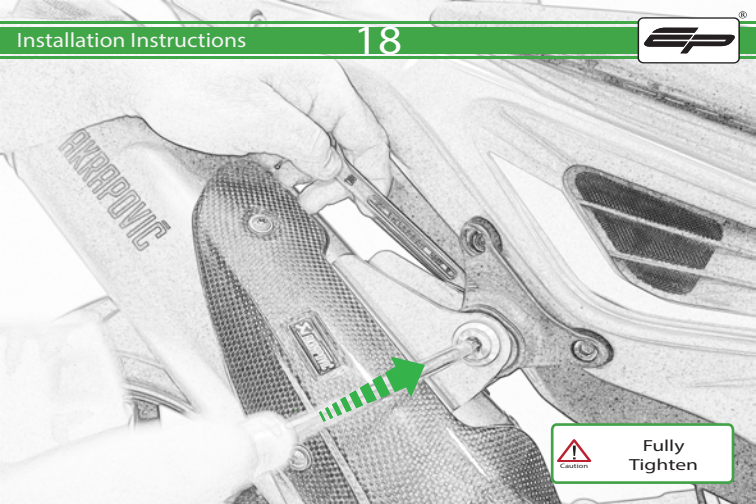

 **Caution**

**Fully Tighten**

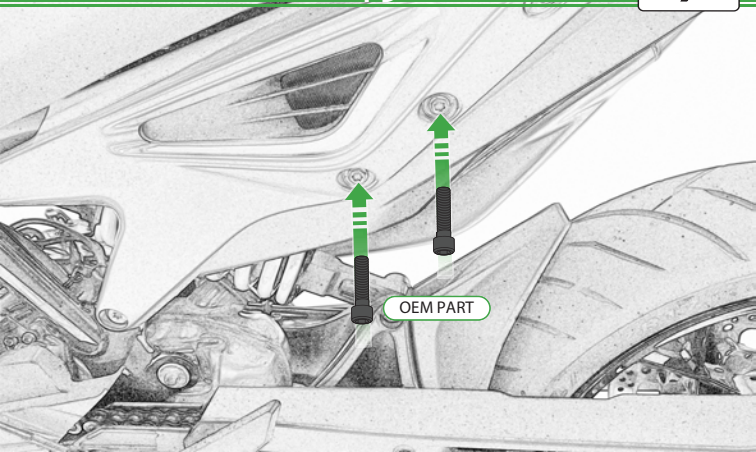

OEM PART



 **ESSENTIAL CHECKS** 

It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



**EVOTECH**®  
P E R F O R M A N C E

[www.evotech-performance.com](http://www.evotech-performance.com)