



EVOTECH®
P E R F O R M A N C E


www.evotech-performance.com

Triumph Speed Triple Exhaust Hanger Installation Instructions





Kit Contents PRN015510 / PRN015514


- (A) 1 x M8 x 25mm Button Head Silver
- (B) 1 x Exhaust Washer
- (C) 1 x M8 Flange Nut
- (D) 1 x Grommet
- (E) 1 x Tophat Washer
- (F) 2 x Pillion Washer
- (G) 2 x M8 x 30mm Button Head Silver
- (H) 2 x M8 x 20mm Button Head Silver

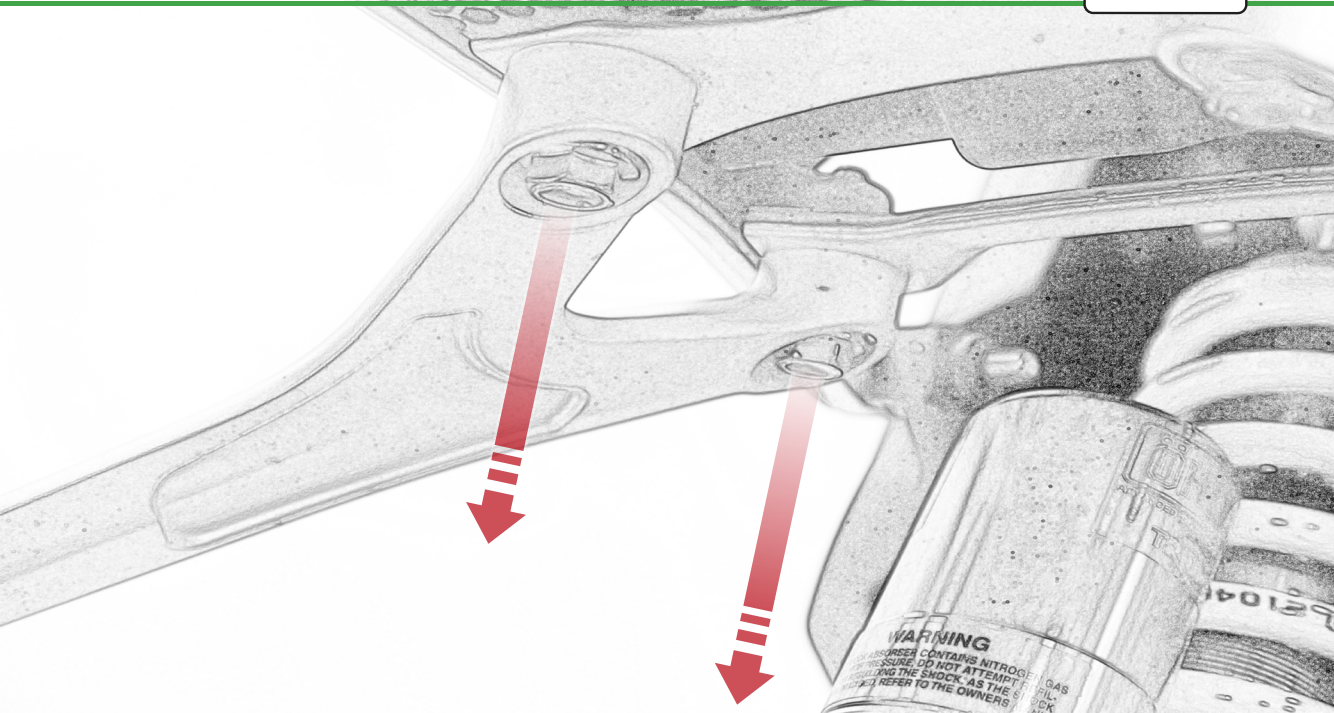



WARNING
THIS SHOCK ABSORBER CONTAINS NITROGEN GAS AT HIGH PRESSURE. DO NOT ATTEMPT TO DISASSEMBLE OR REPAIR THE SHOCK, AS THE SHOCK COULD EXPLODE. REFER TO THE OWNERS MANUAL FOR MORE INFORMATION.
GAS
FIL-
CK

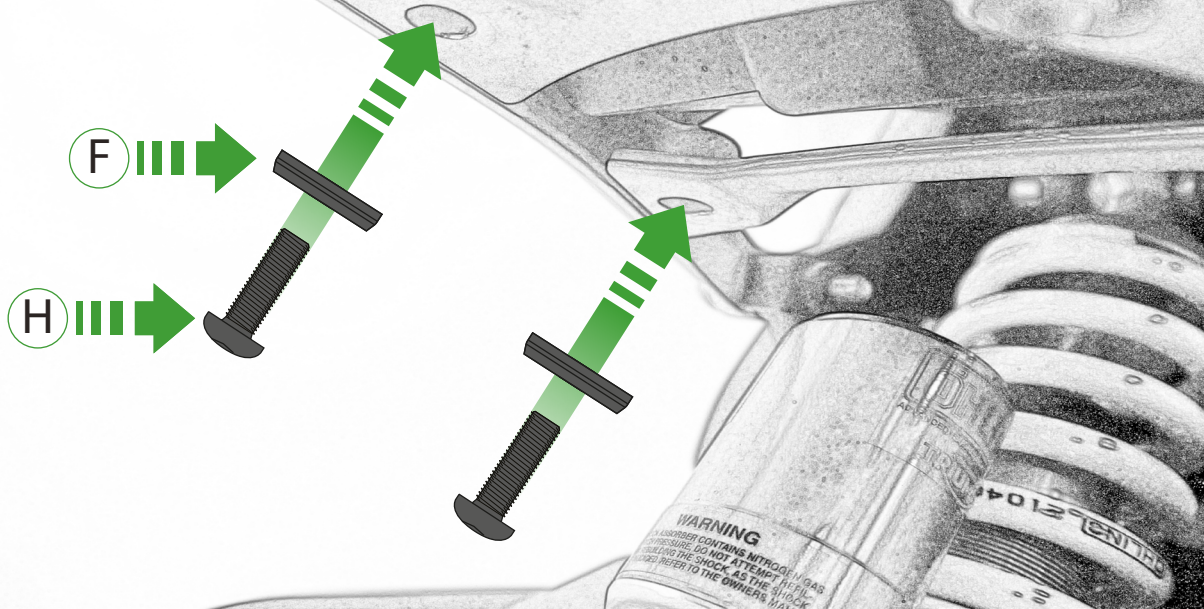

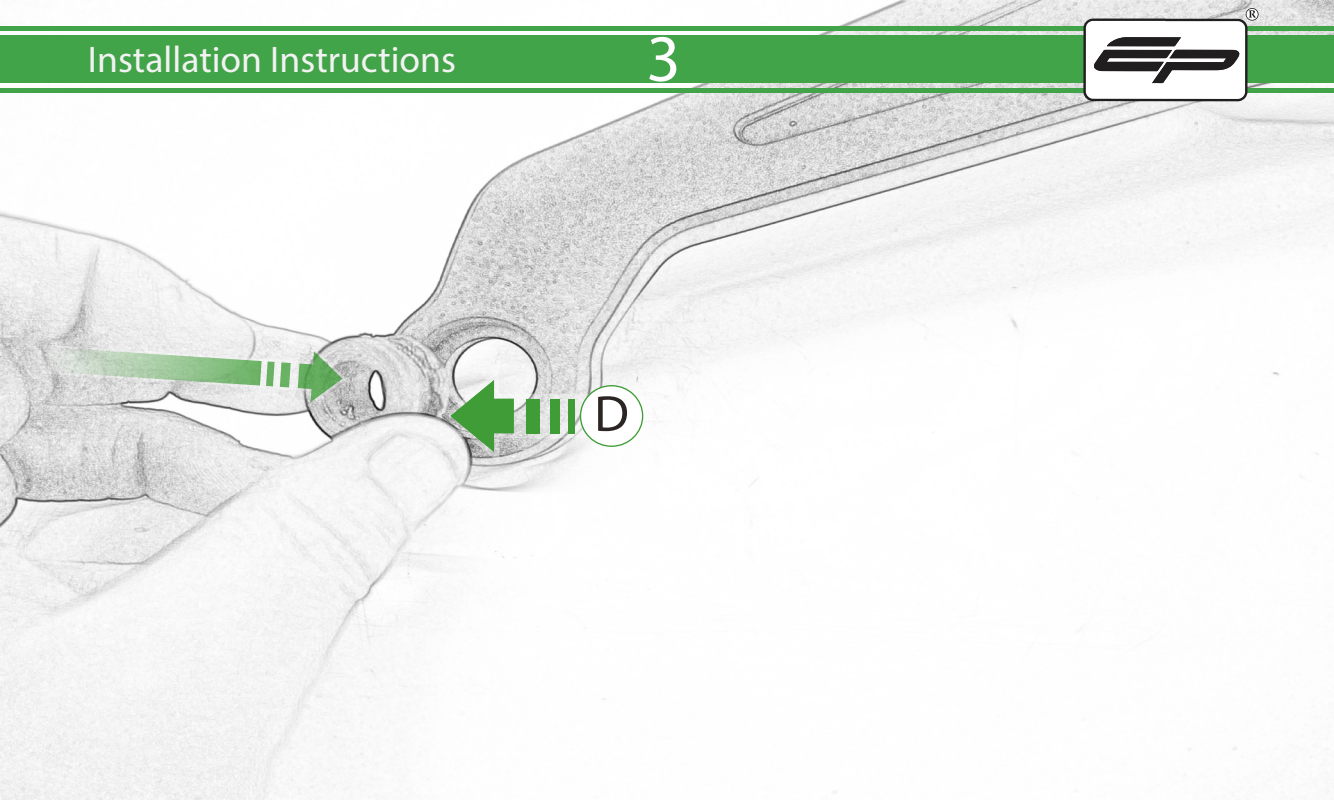

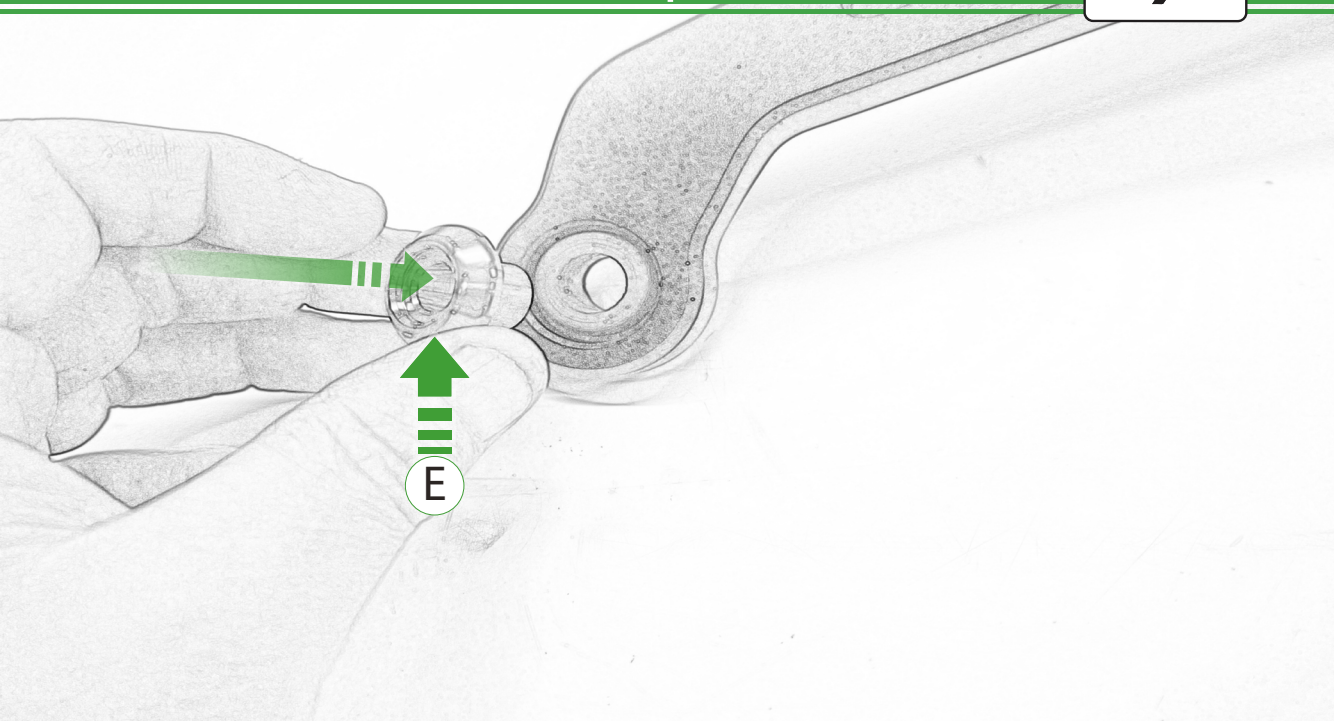

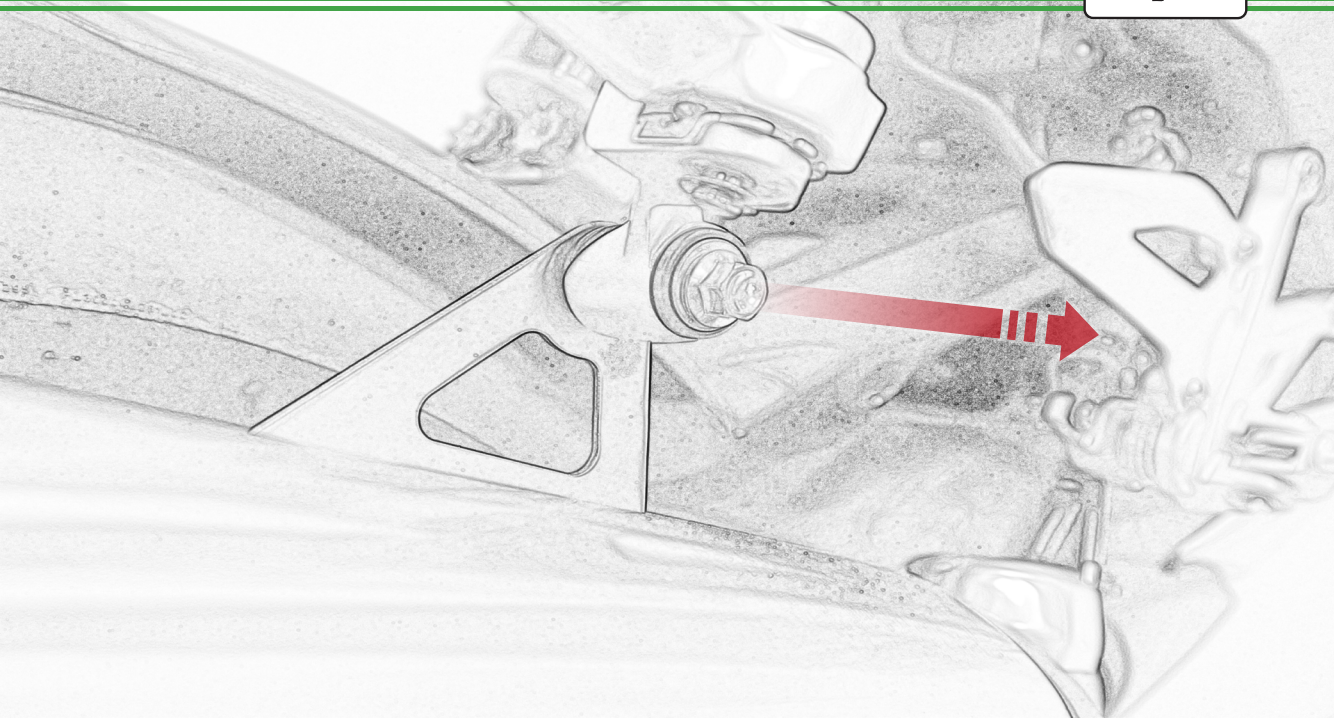


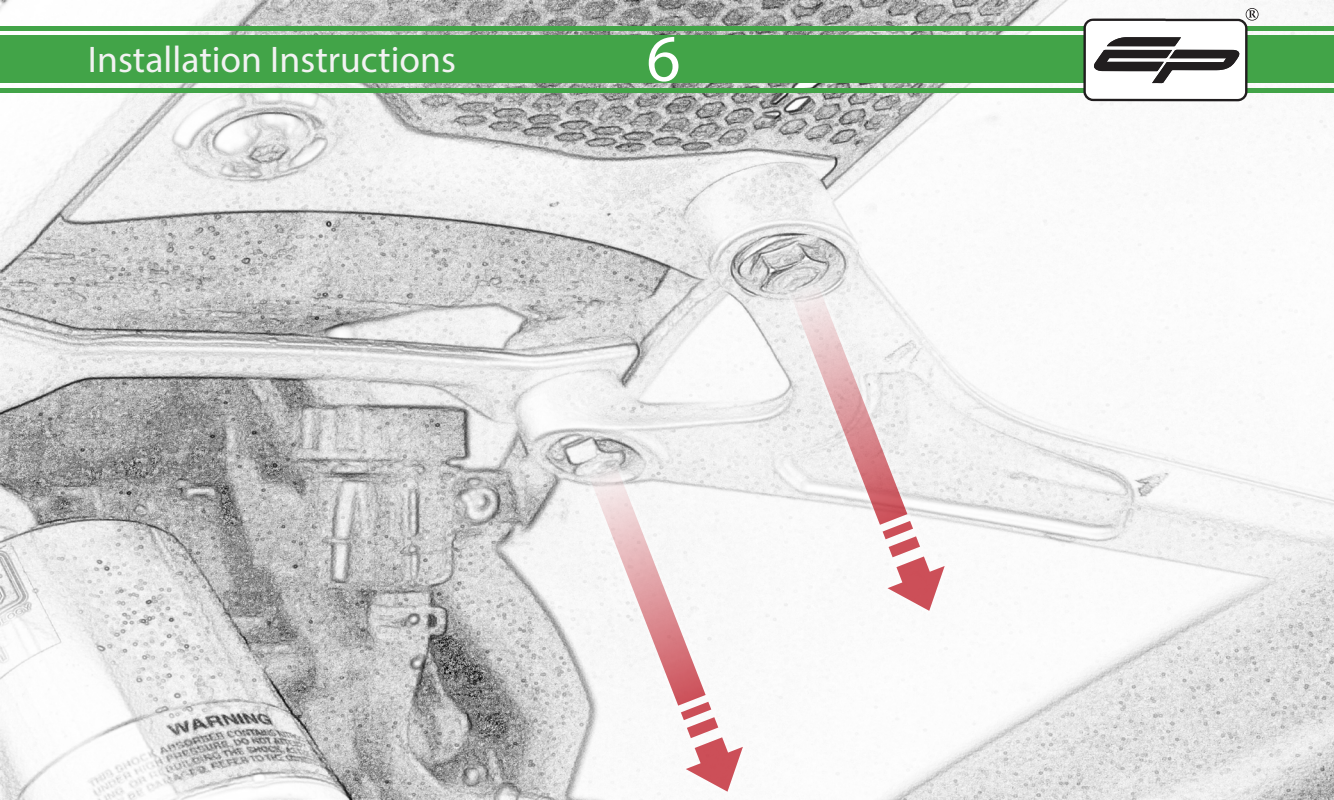



WARNING


ANSI/SAE COMPATIBLE
THIS DEVICE IS NOT TO BE USED FOR
LOADS OR IMPACTS EXCEEDING THE
RATED CAPACITY. FOR MORE
INFORMATION, REFER TO THE
INSTALLATION MANUAL.



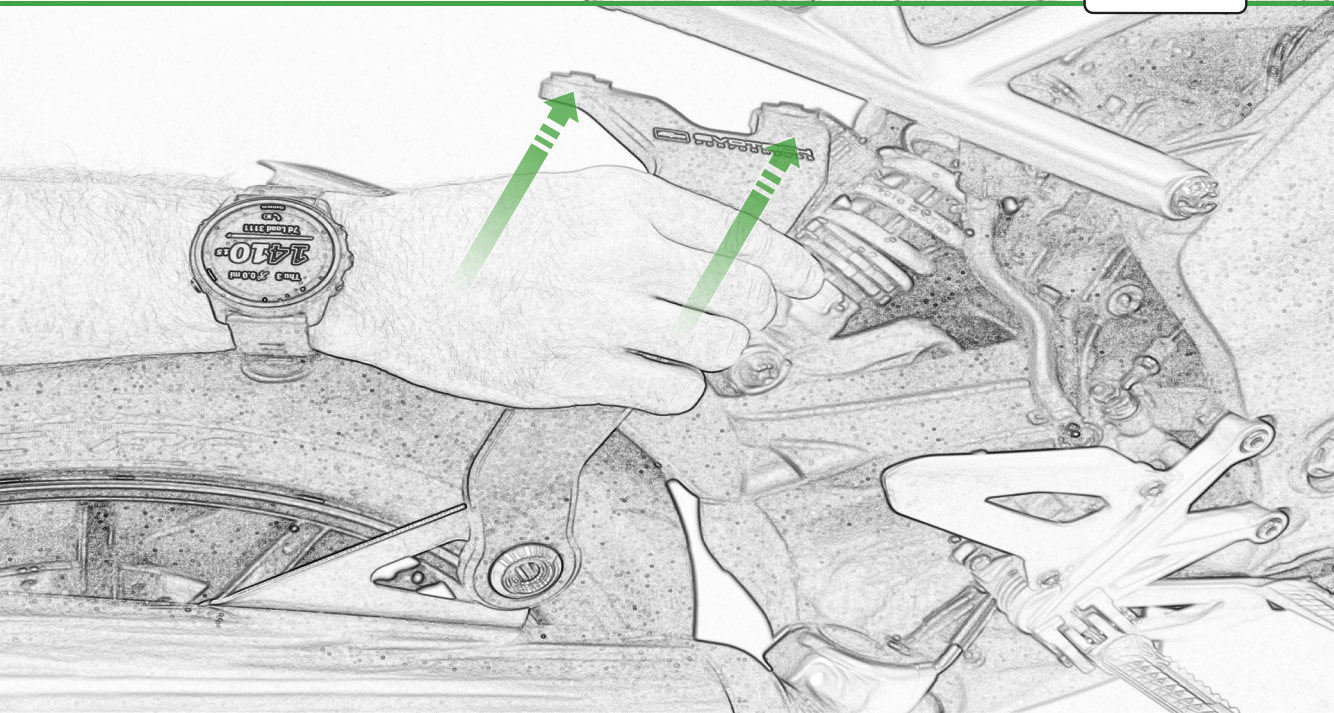

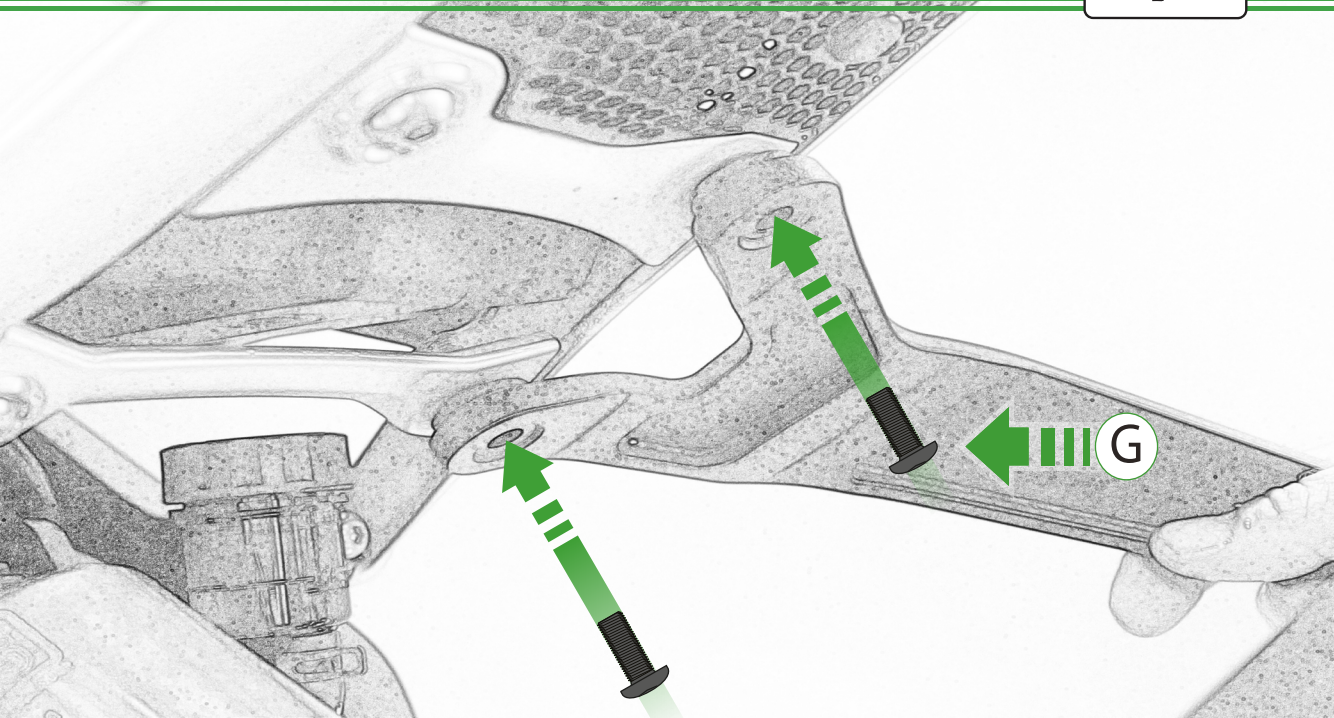

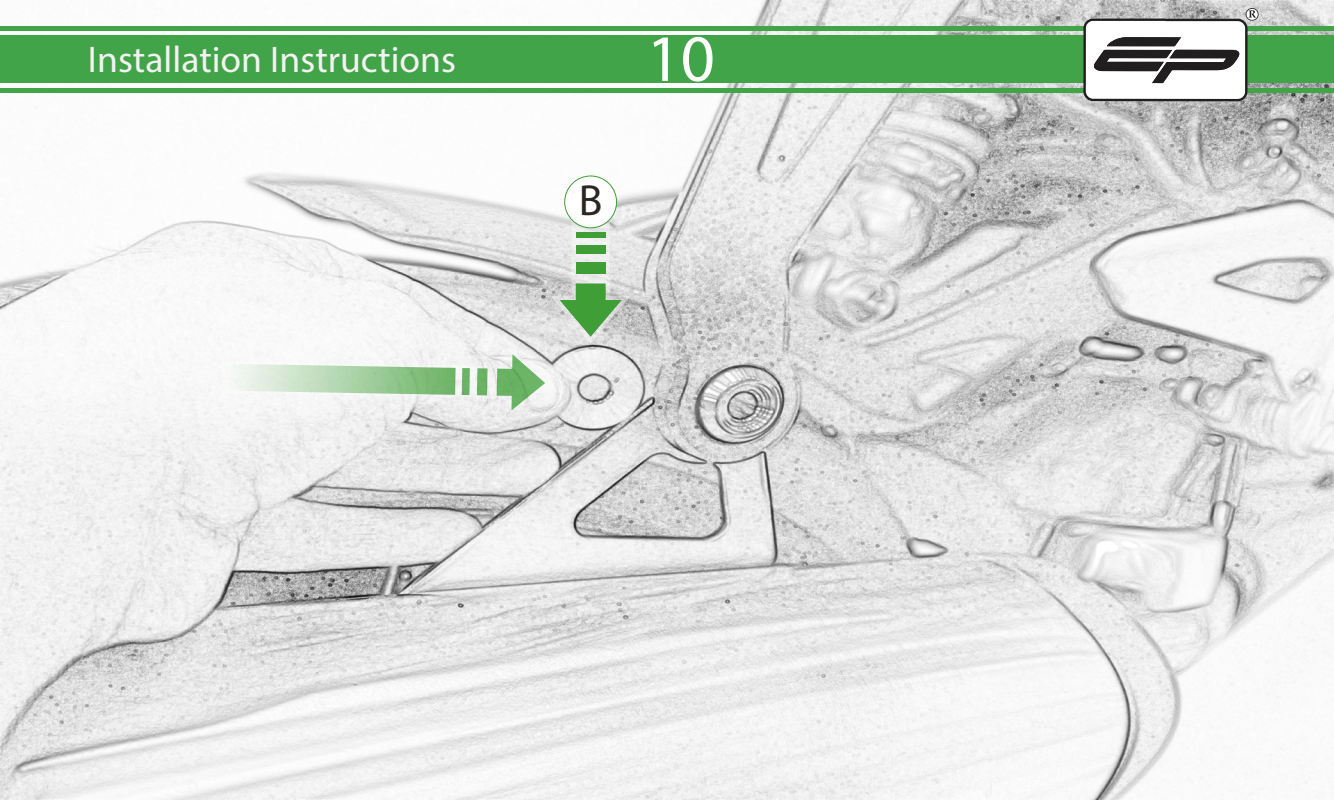

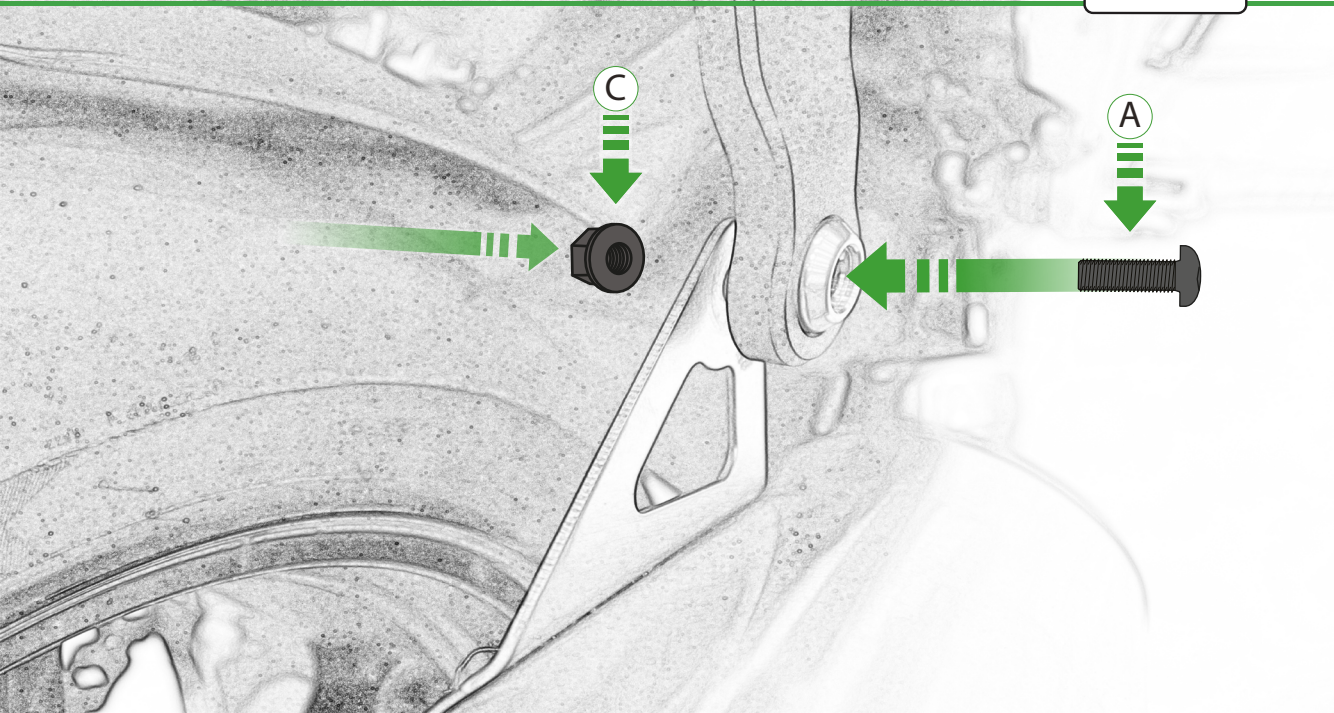



ESSENTIAL CHECKS

It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com