




Kawasaki ZX6R
Blanking Plate


Installation Instructions



Kit Contents PRN008394

- Ⓐ 2 x M8 x 16mm Black Button Head Bolt
- Ⓑ 2 x M8 Black Washer

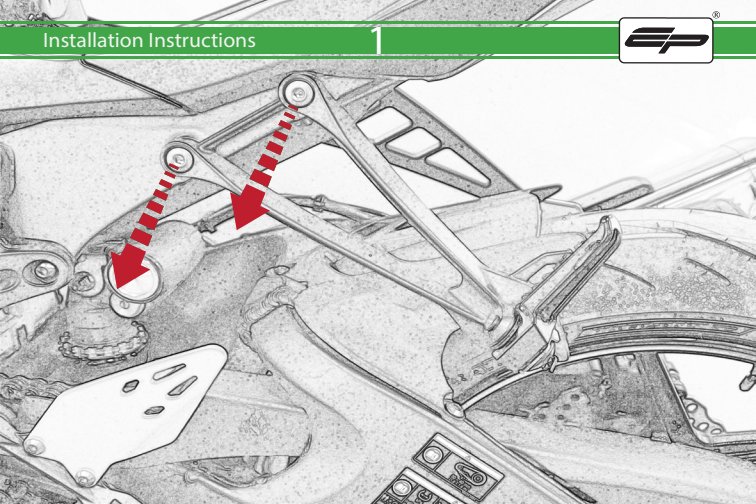

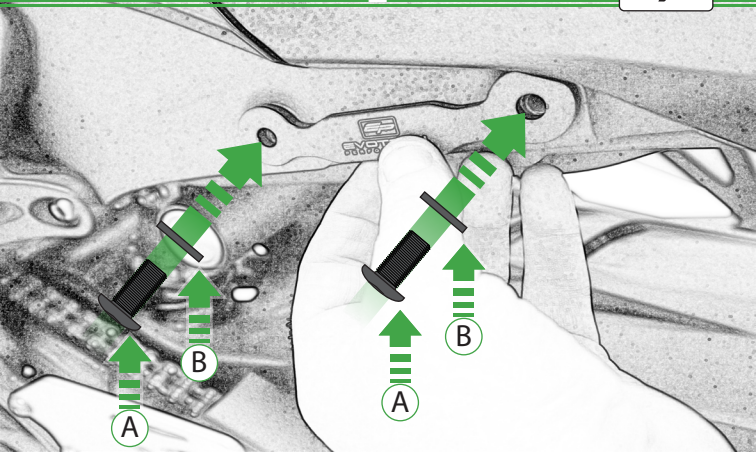



 **ESSENTIAL CHECKS** 

It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com