





Ducati Multistrada 1260
SP Connect Sat Nav Mount


Installation Instructions


Kit Contents PRN014359-014677


- | | |
|-----------------------------------|-------------------------------------|
| (A) 1 x M6 x 16 Countersunk Screw | (L) 2 x M4 x 5mm Button Head Bolts |
| (B) 1 x Pivot Plate | |
| (C) 1 x SP Connect Plate | Sub Kit |
| (D) 2 x M5 x 10mm Caphead Bolts | (M) 1 x Rubber Pad |
| (E) 2 x P-clips (No.1) | (N) 1 x Screen Mounting Bracket |
| (F) 2 x P-clips (No.2) | (O) 1 x Main Plate |
| (G) 2 x P-clips (No.3) | (P) 2 x M5 x 12mm Button head Bolts |
| (H) 2 x P-clips (No.4) | |
| (I) 2 x Lobe Screw | |
| (J) 2 x Locking Washer | |
| (K) 2 x M5 Black Washer | |

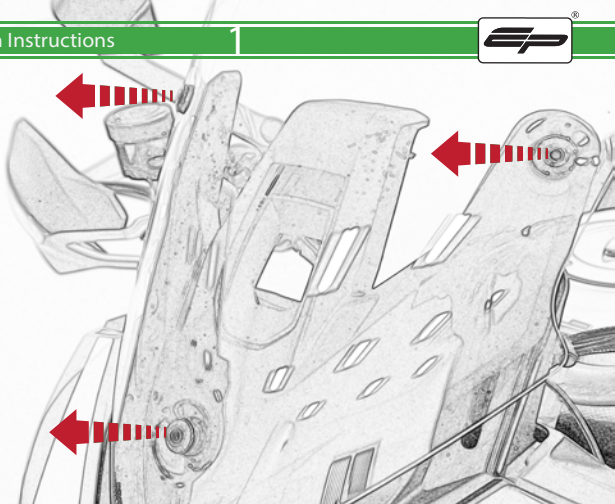


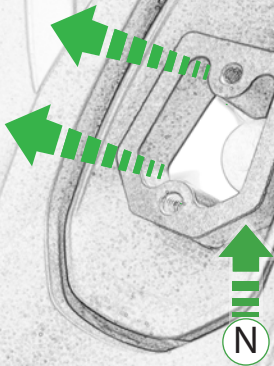


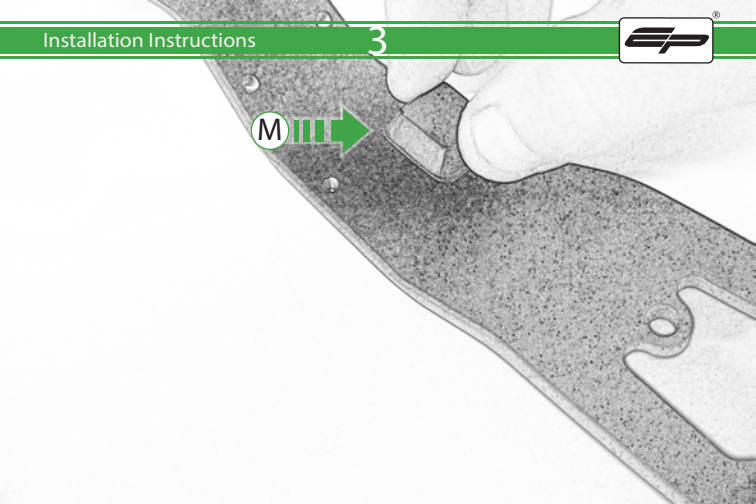


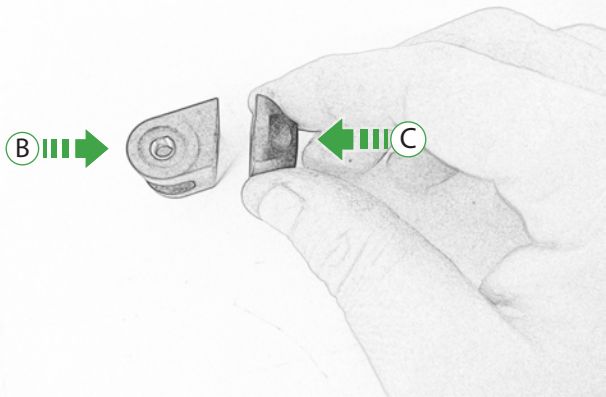


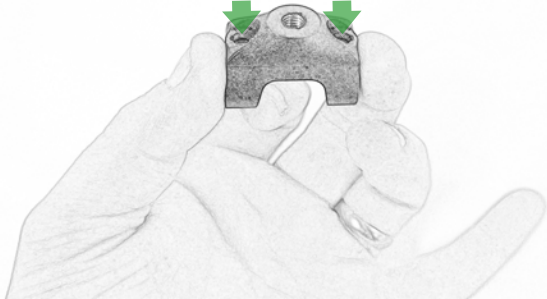

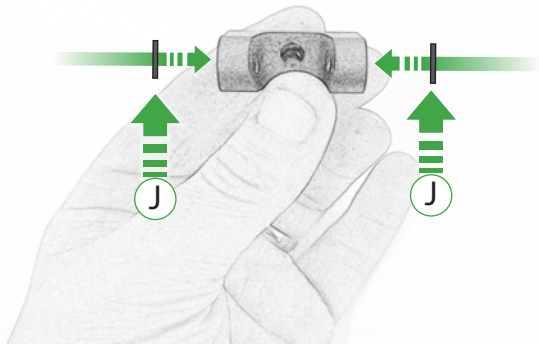


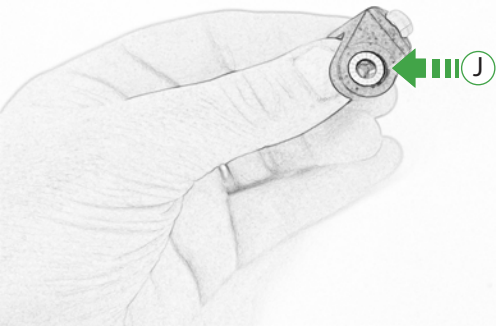


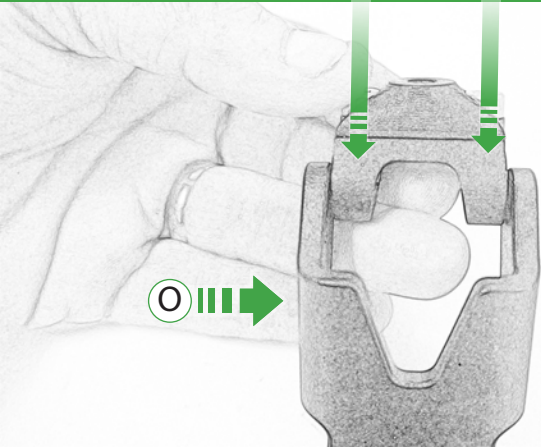


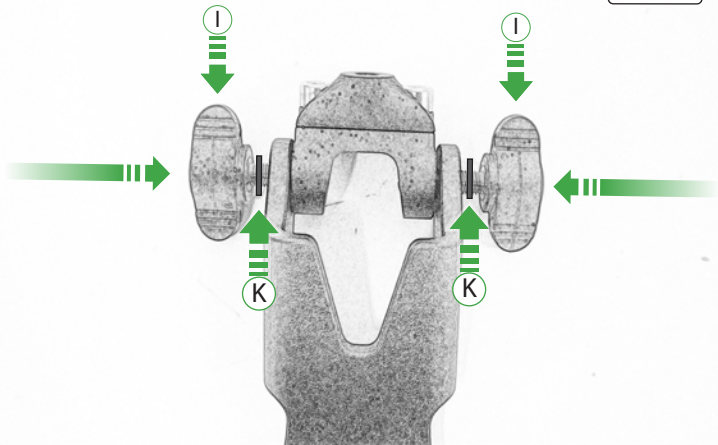




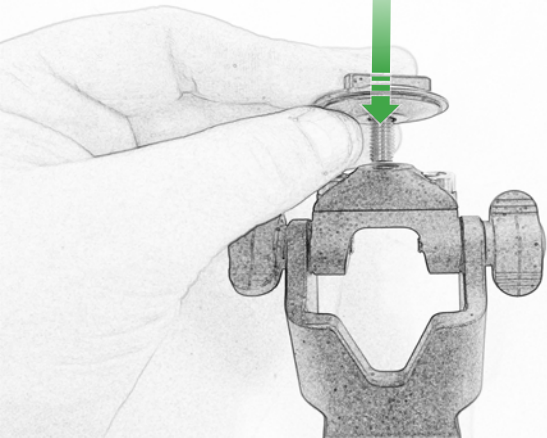

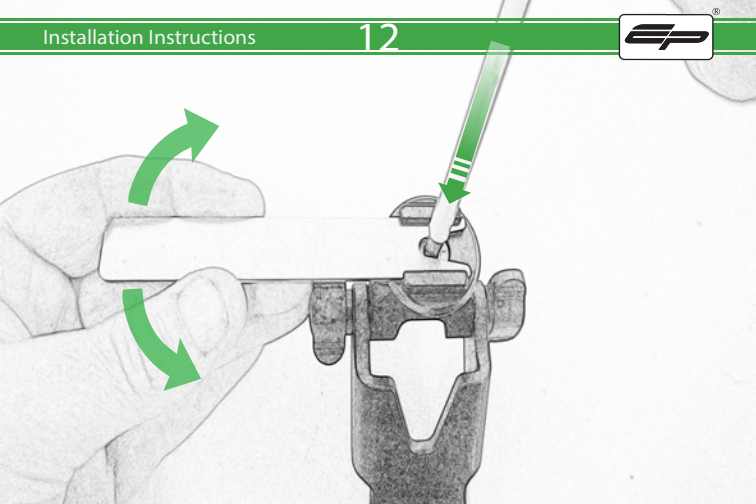


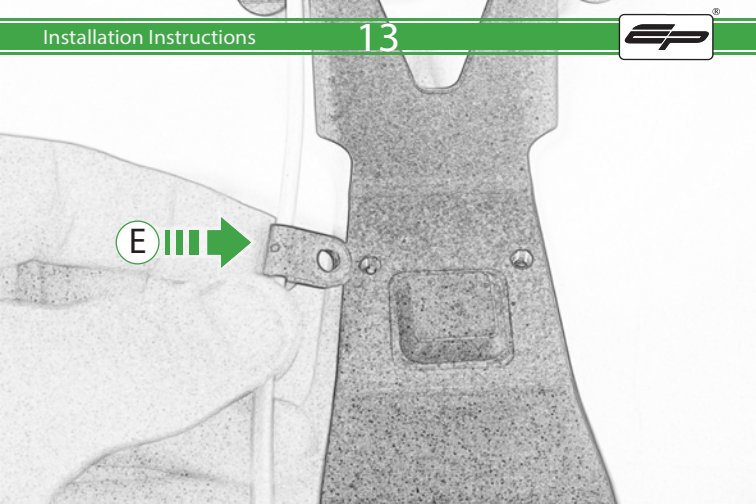

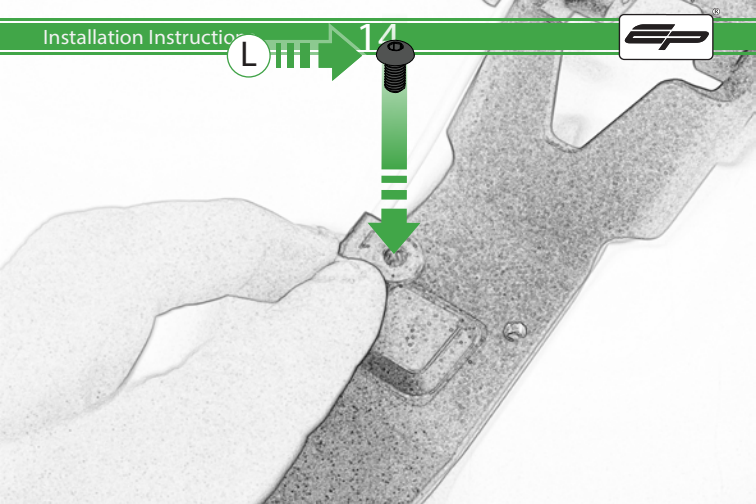



P

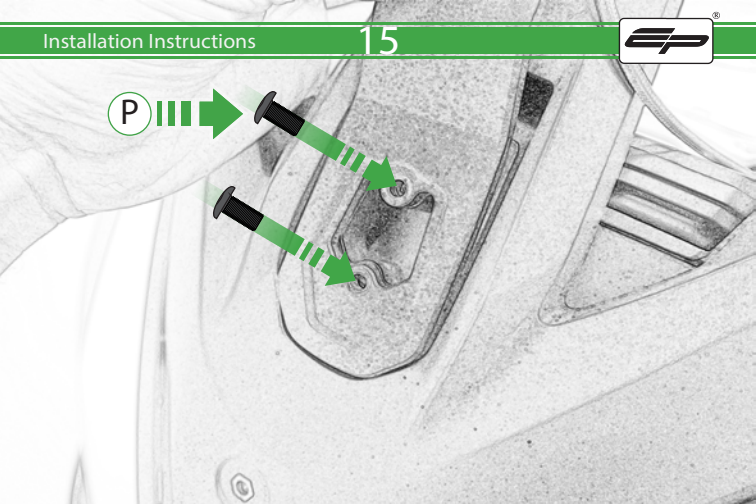





 **ESSENTIAL CHECKS** 

It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com