

EVOTECH®
P E R F O R M A N C E


www.evotech-performance.com


Triumph Tiger 900 Tom Tom Sat Nav Mount Installation Instructions




Kit Contents PRN014567-014925


- | | |
|--|---|
| (A) 1 x Main Plate | (L) 2 x M4 x 5mm Black Button Head Bolts |
| (B) 1 x Pivot Plate | (M) 4 x M5 x 12mm Black Button Head Bolts |
| (C) 1 x Sub Mounting Bracket | |
| (D) 2 x M5 x 8mm Black Button Head Bolts | |
| (E) 2 x Lobe Screw | |
| (F) 2 x Locking Washer | |
| (G) 2 x P-clips (No.1) | Sub Kit |
| (H) 2 x P-clips (No.2) | (N) 2 x M5 x 35mm Caphead Bolt |
| (I) 2 x P-clips (No.3) | |
| (J) 2 x P-clips (No.4) | |
| (K) 2 x M5 Black Washer | |

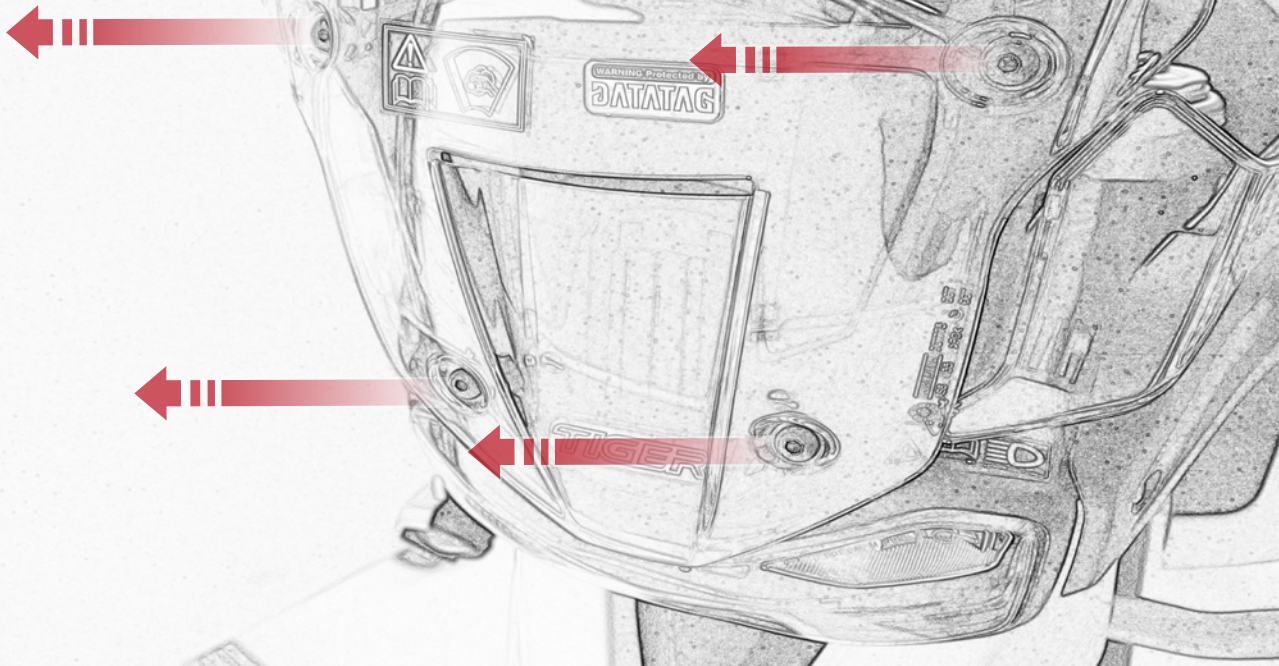


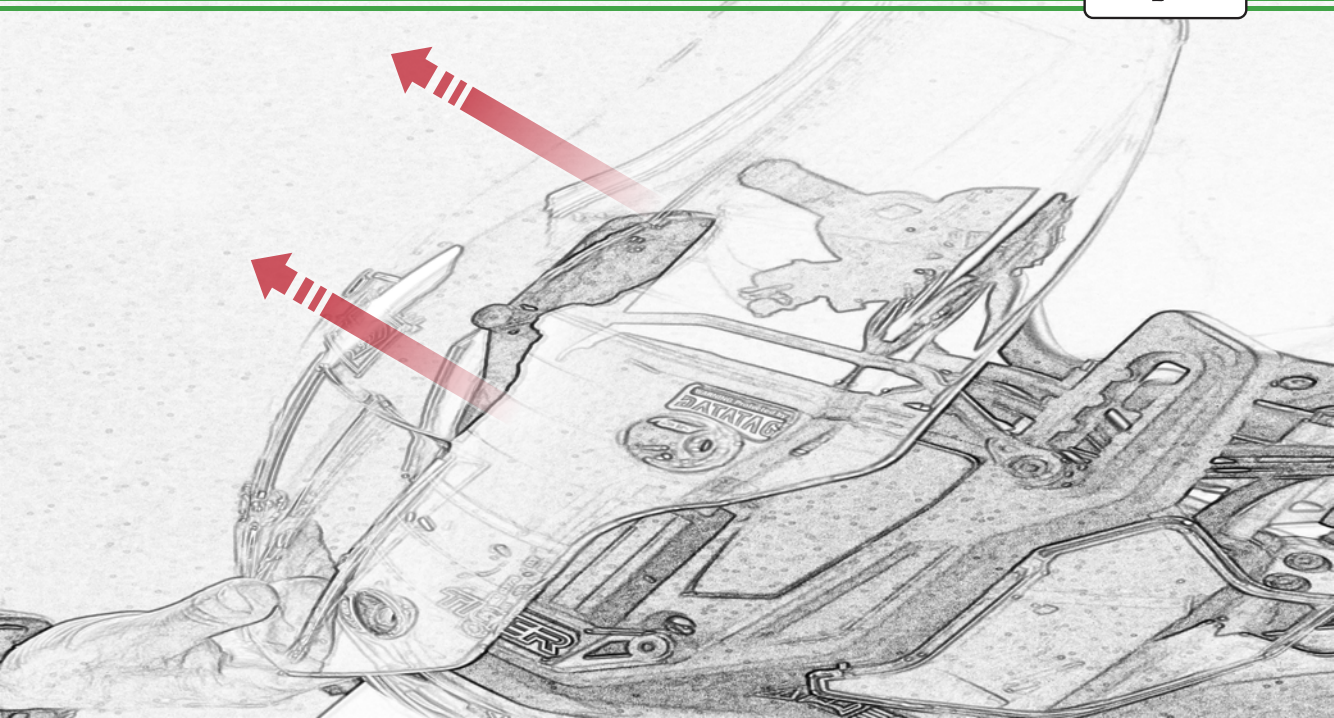


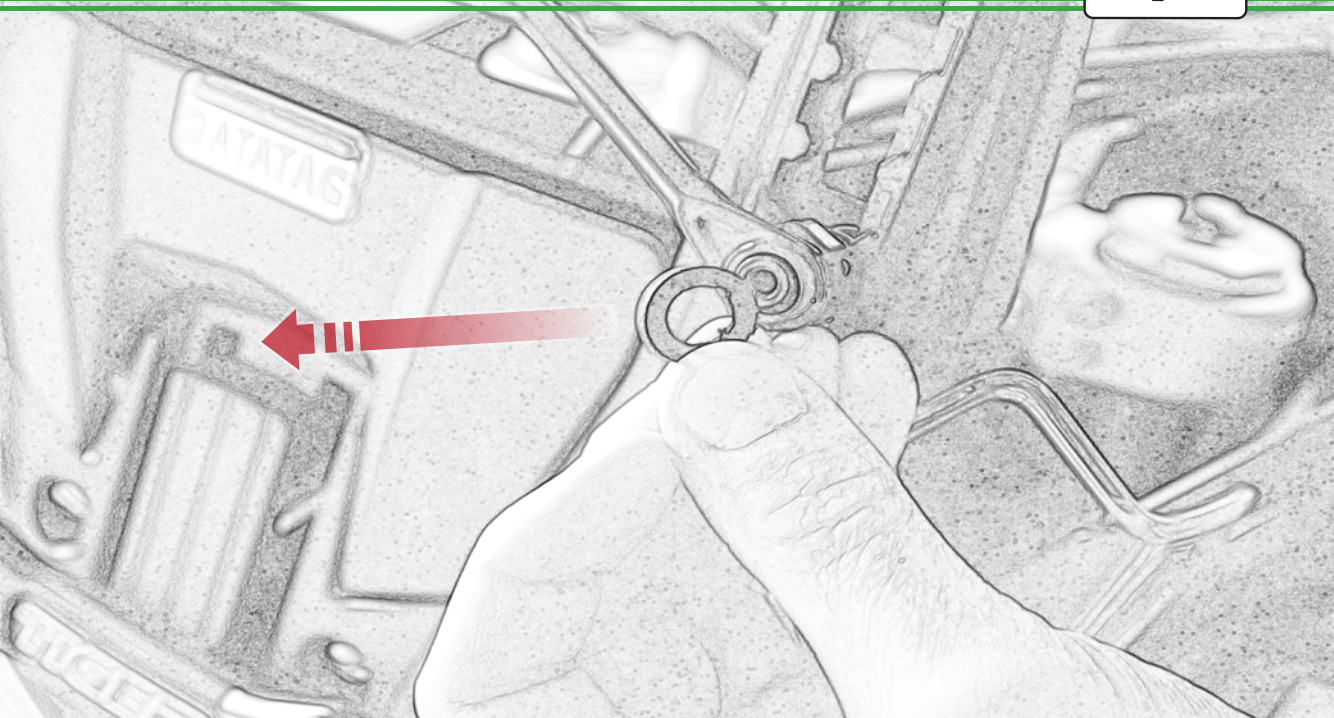




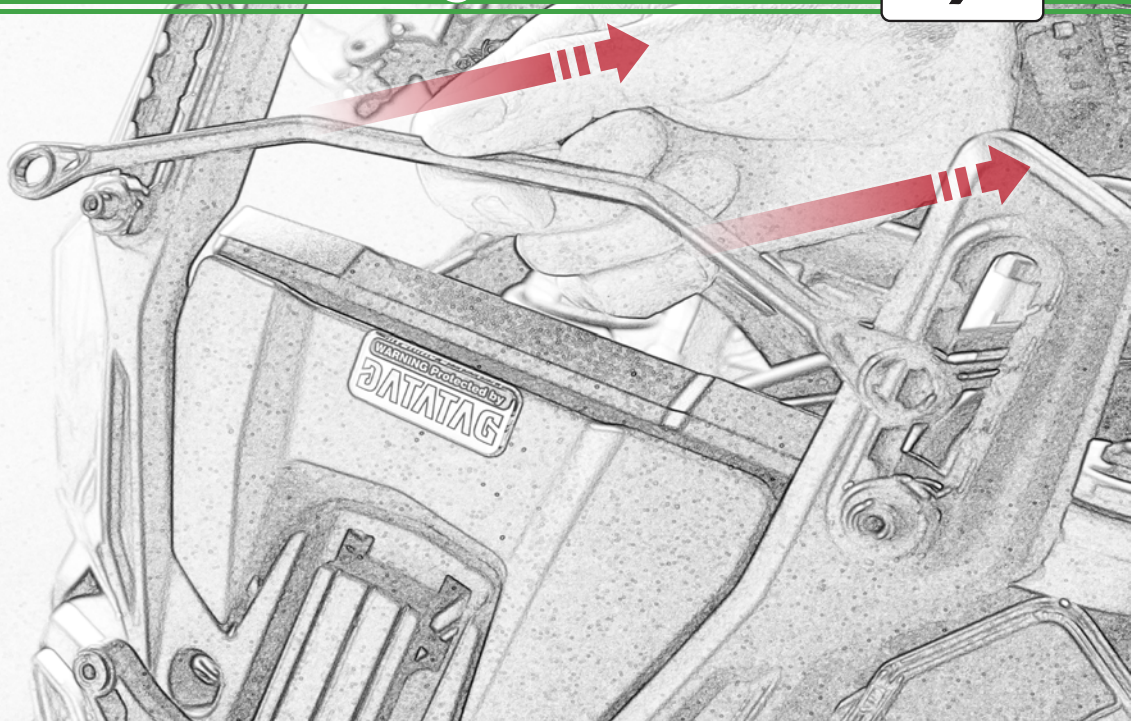


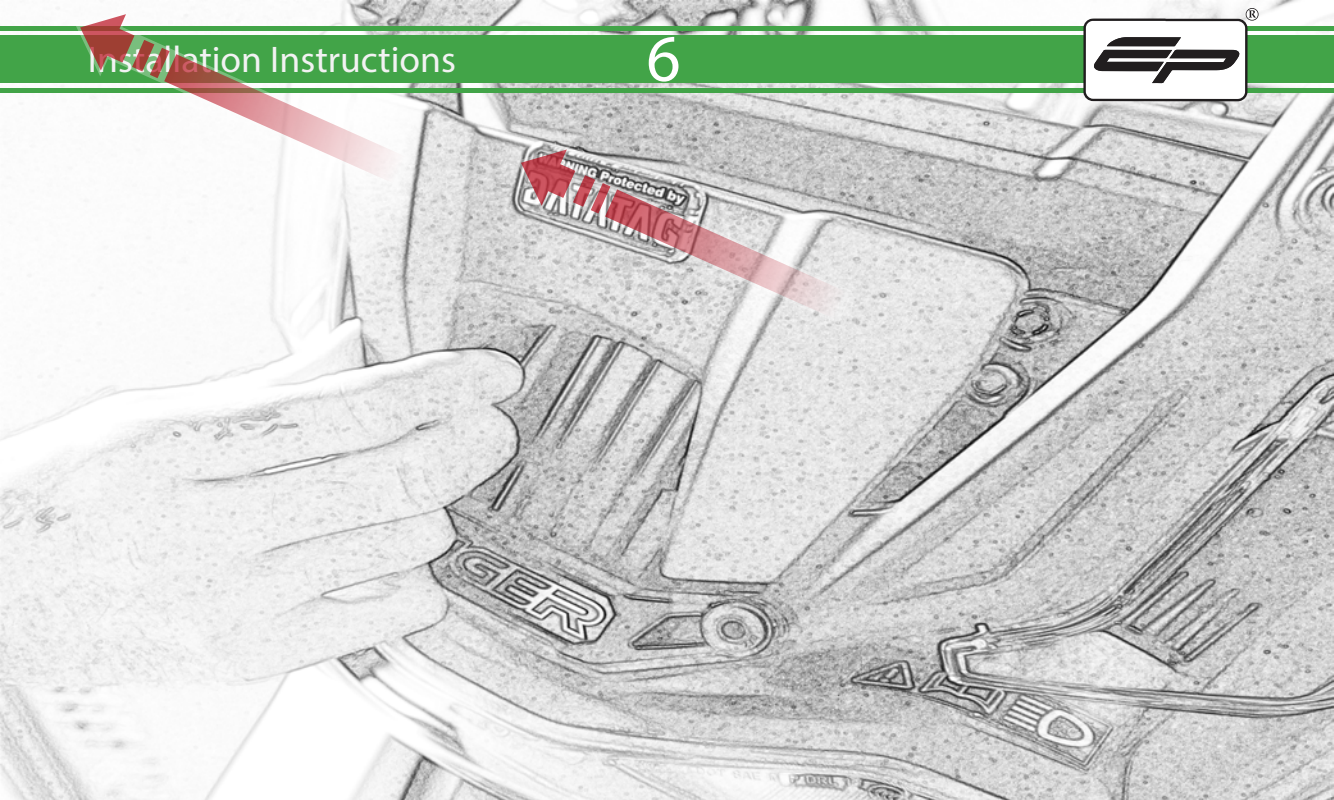


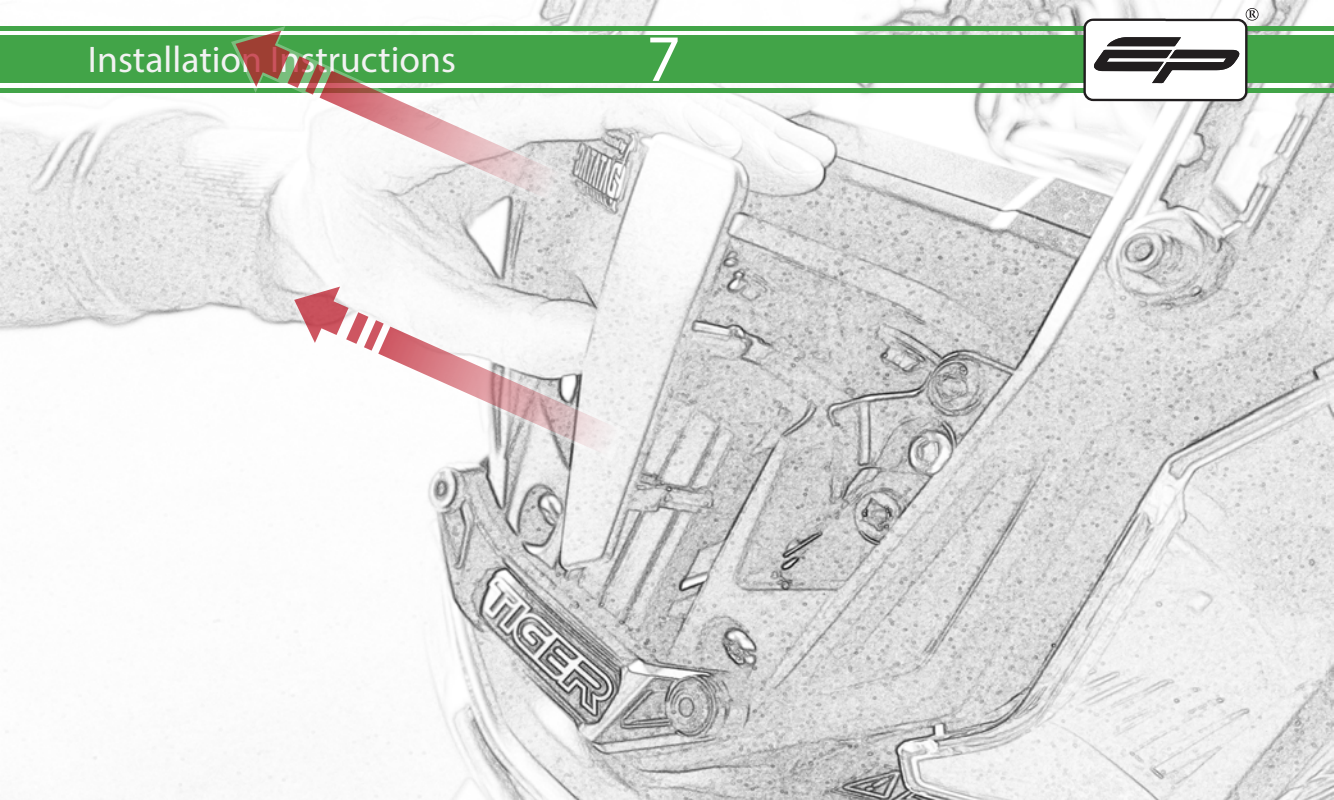


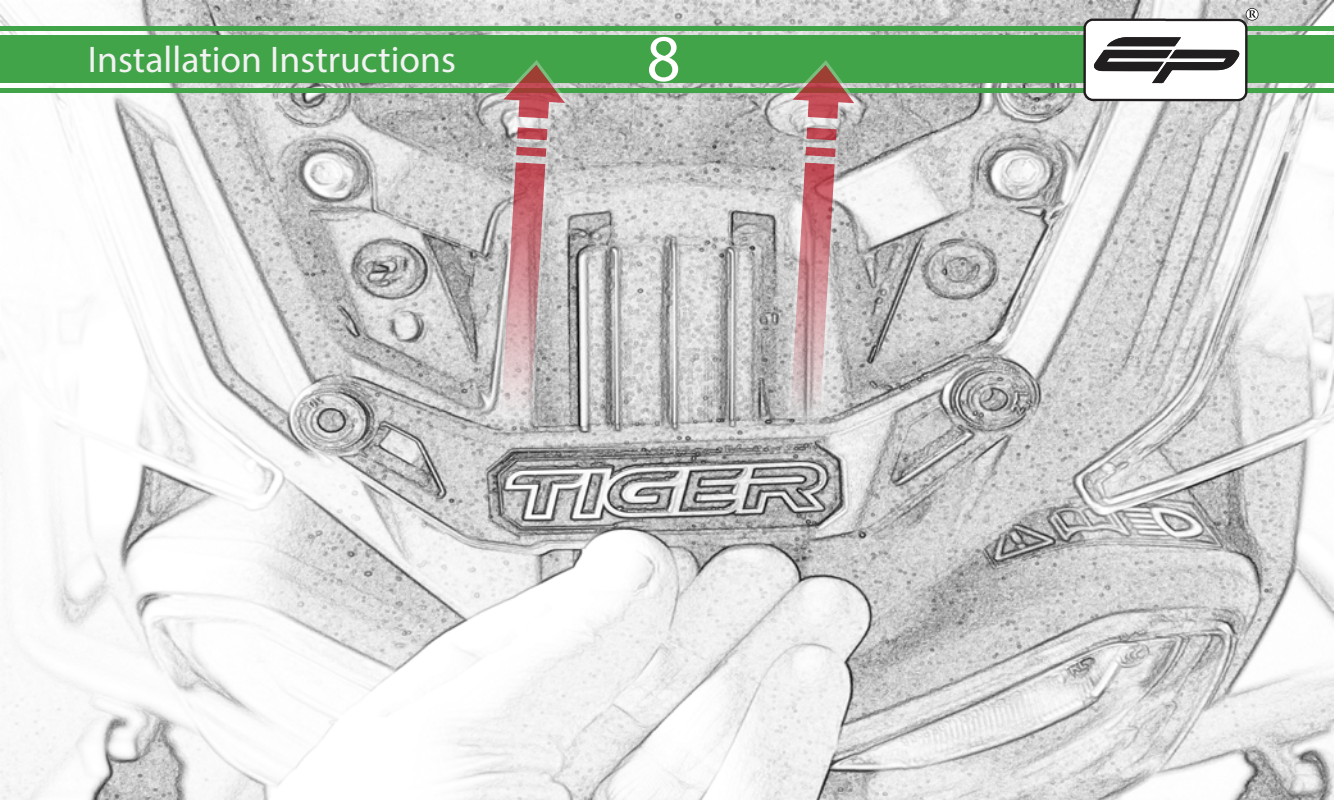





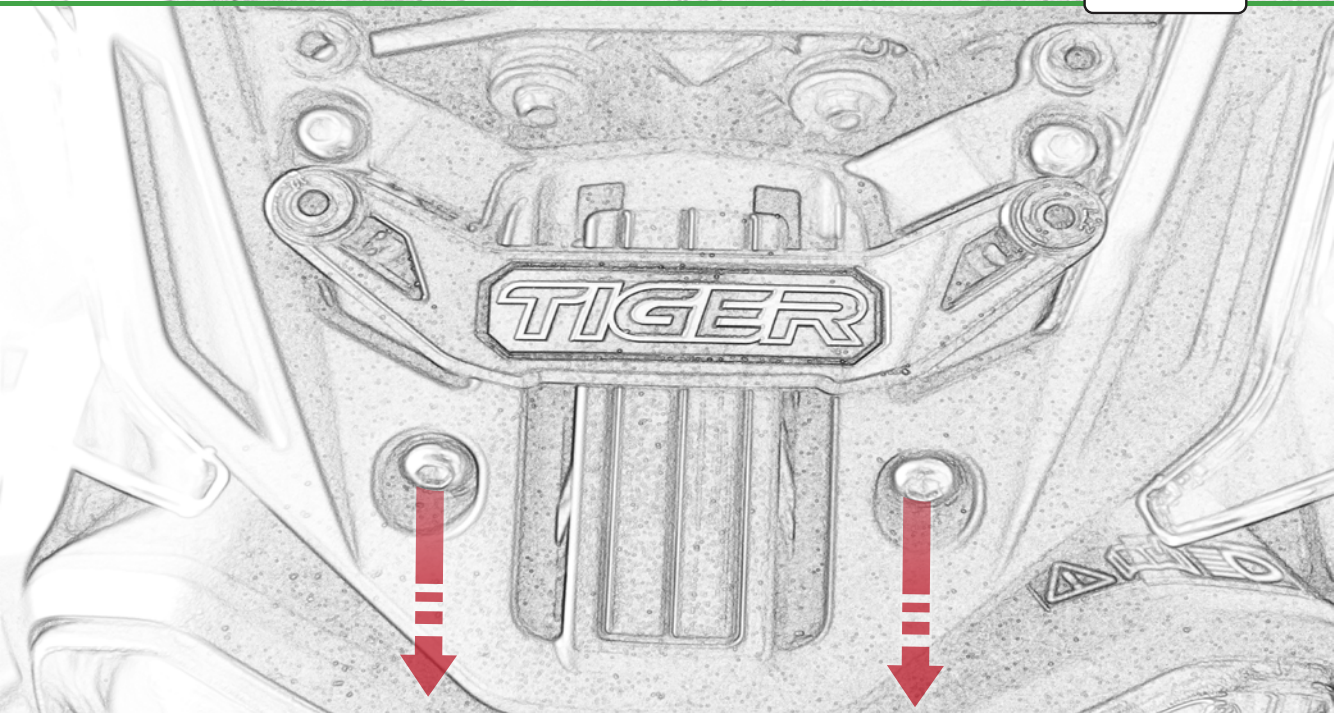


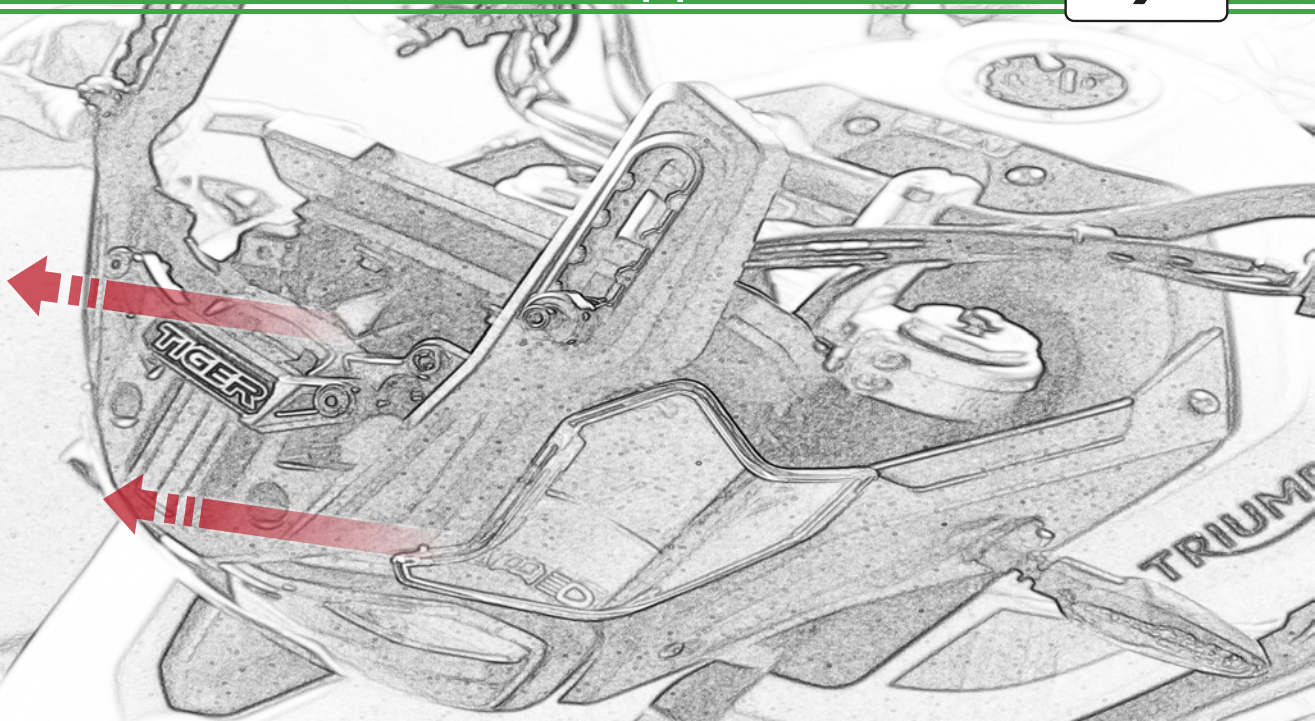


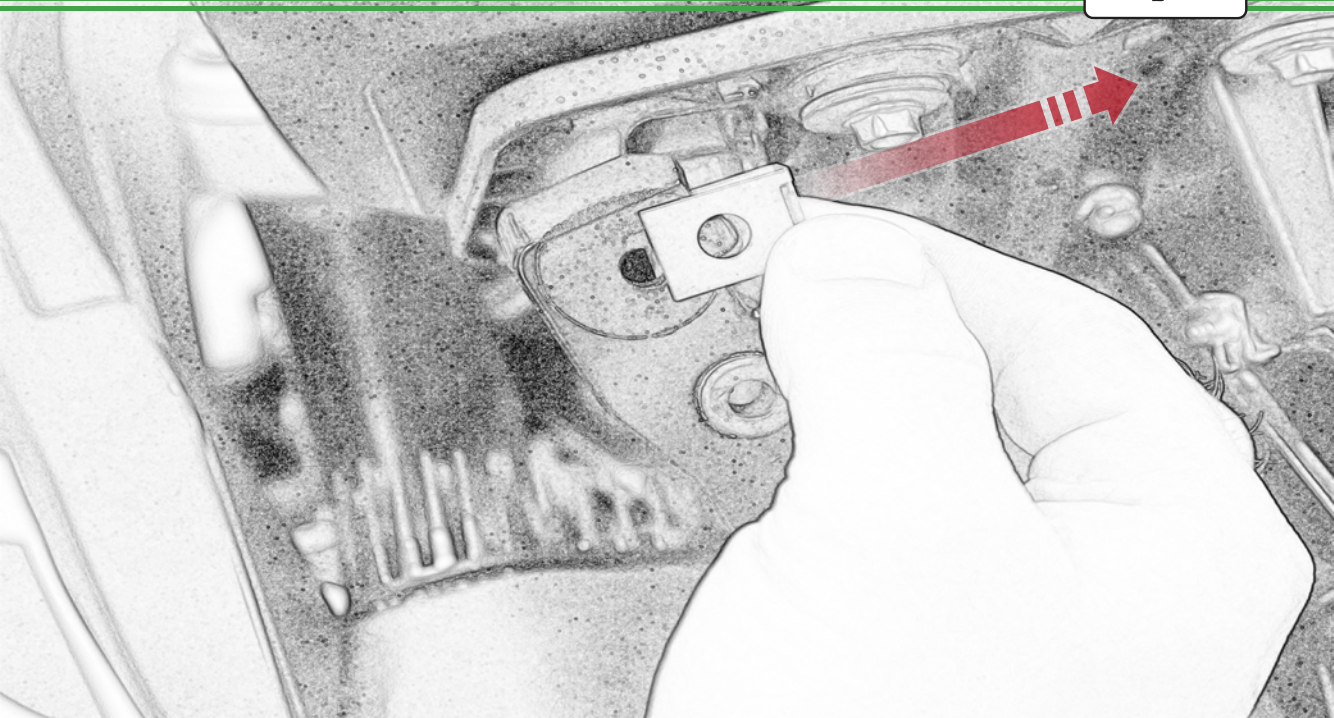

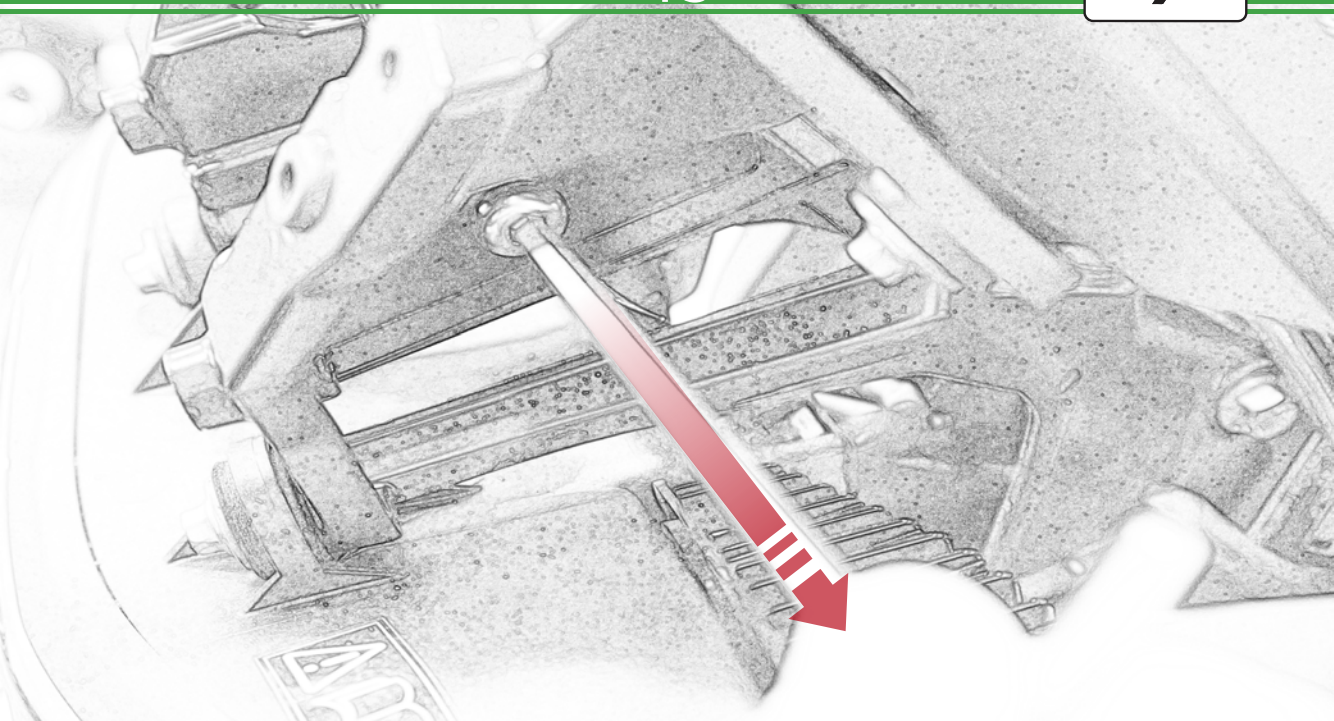

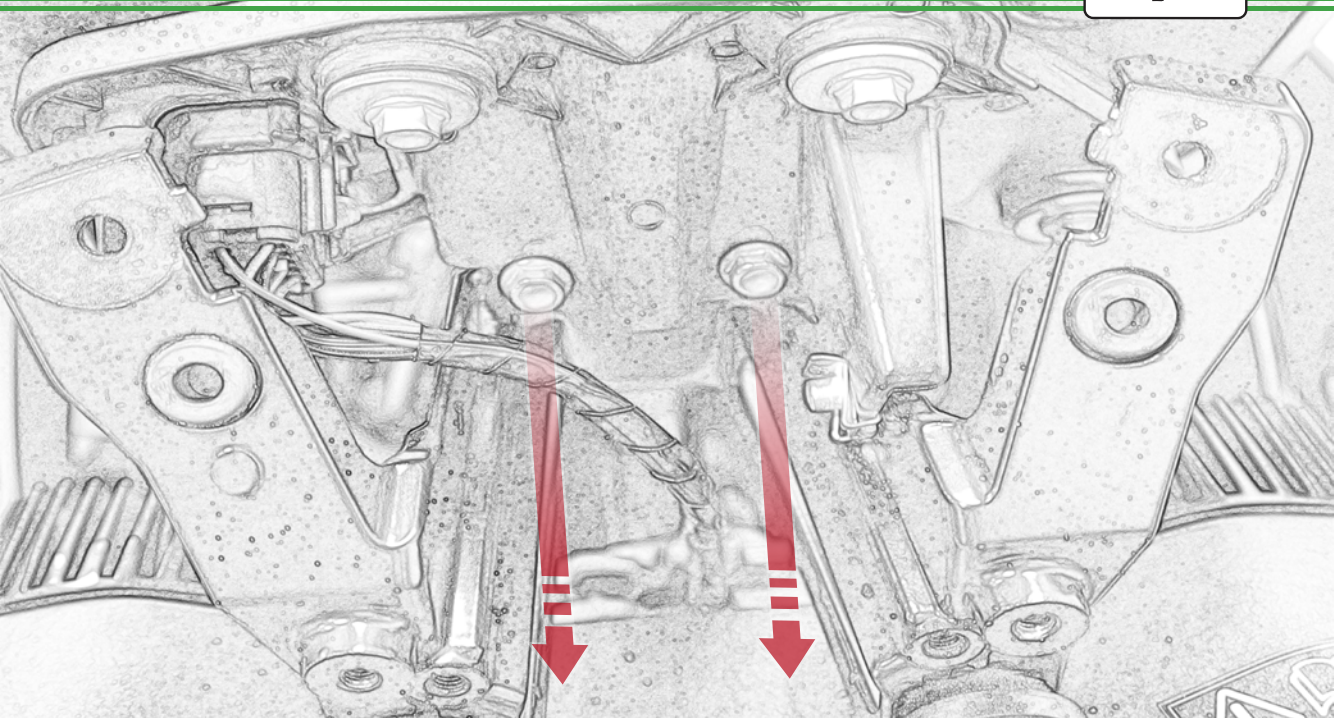


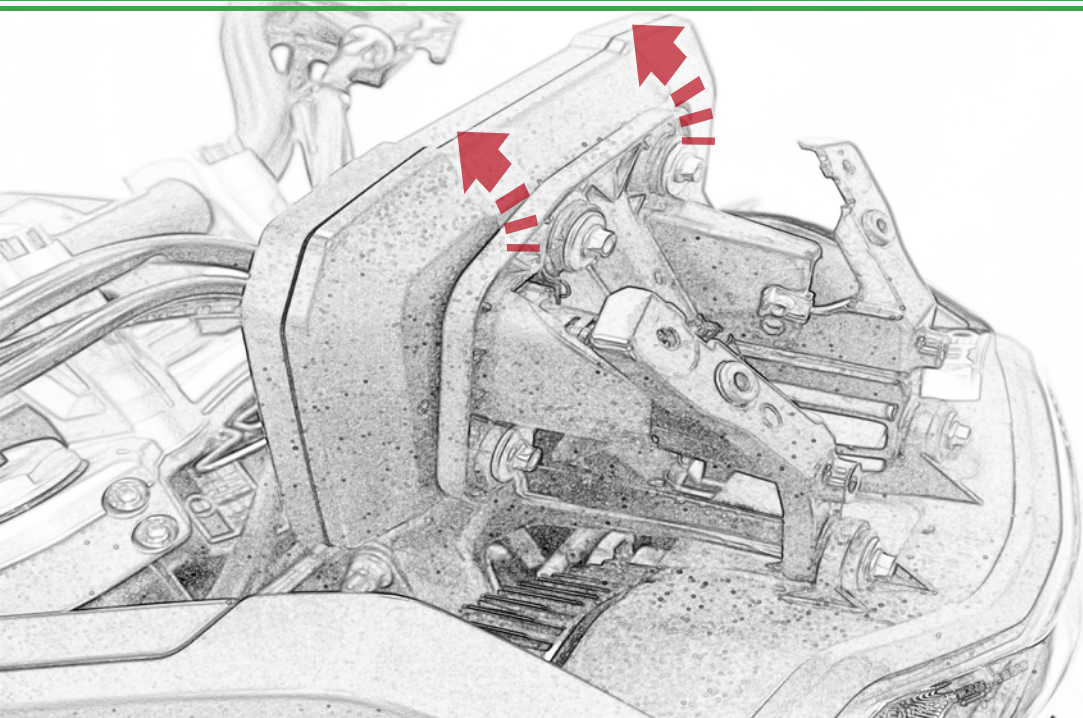


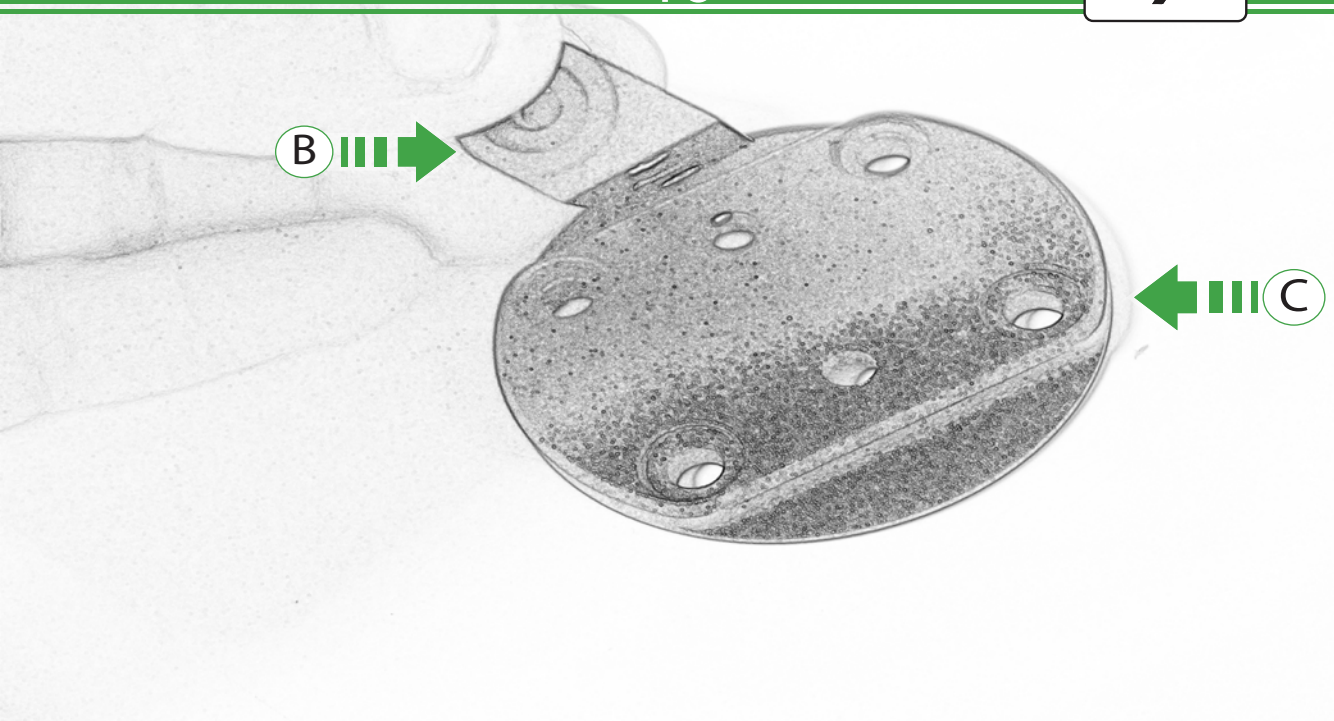



B


C

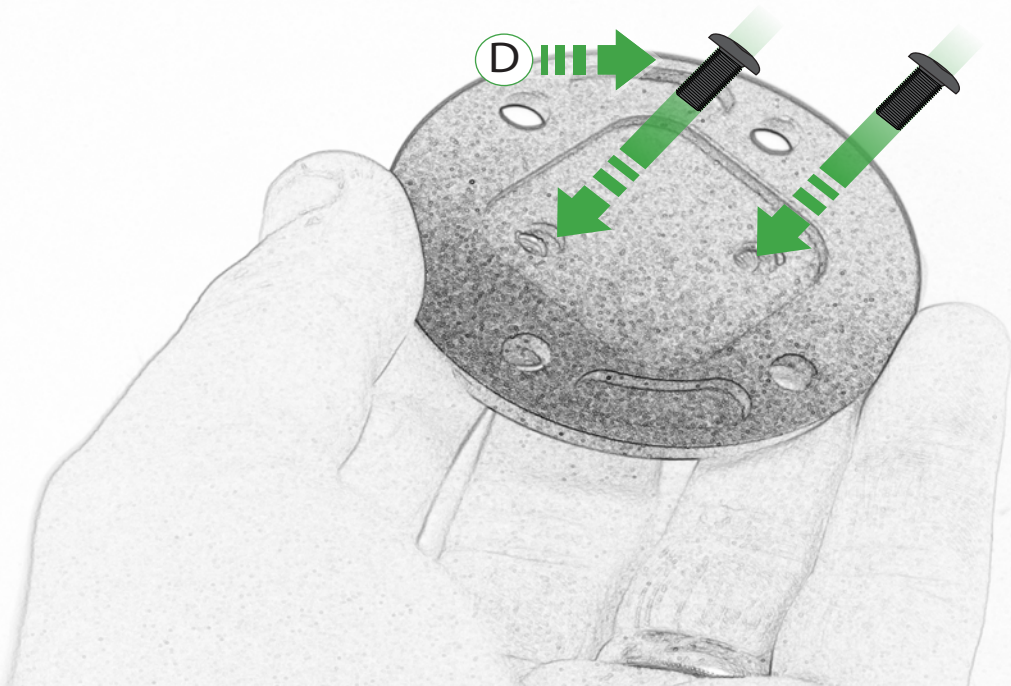


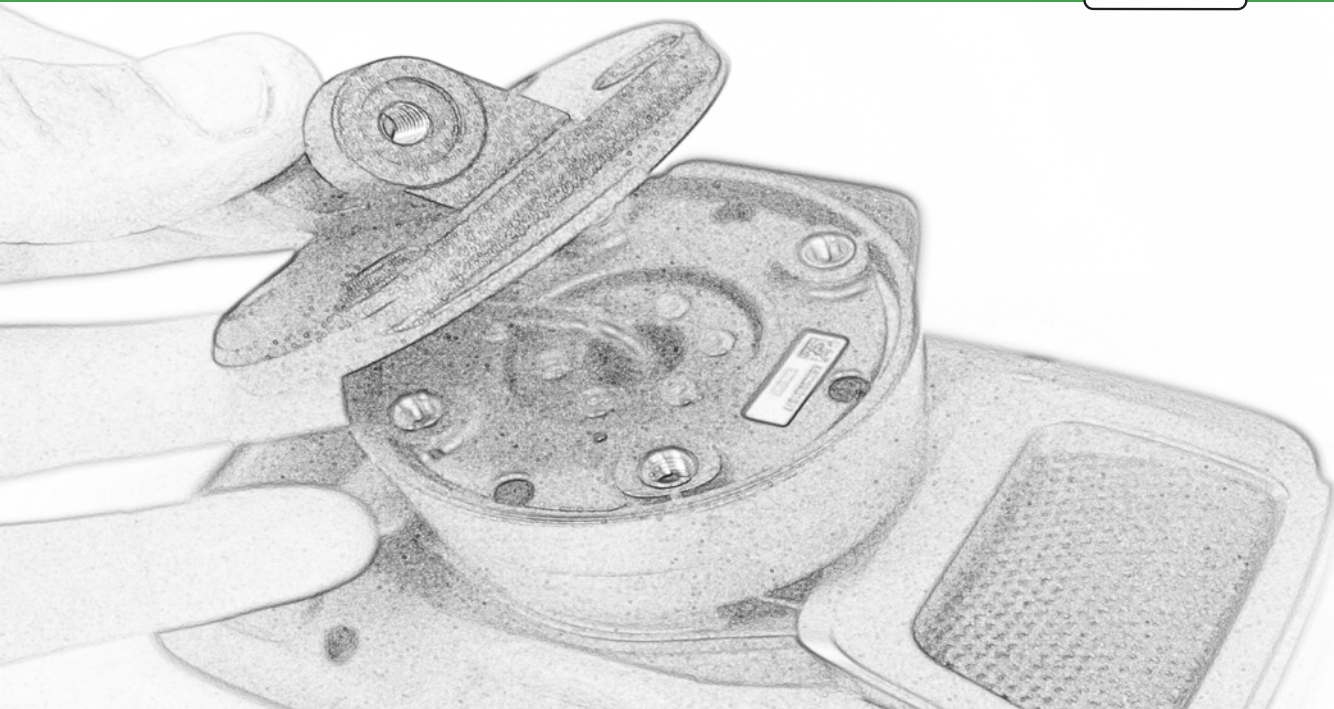


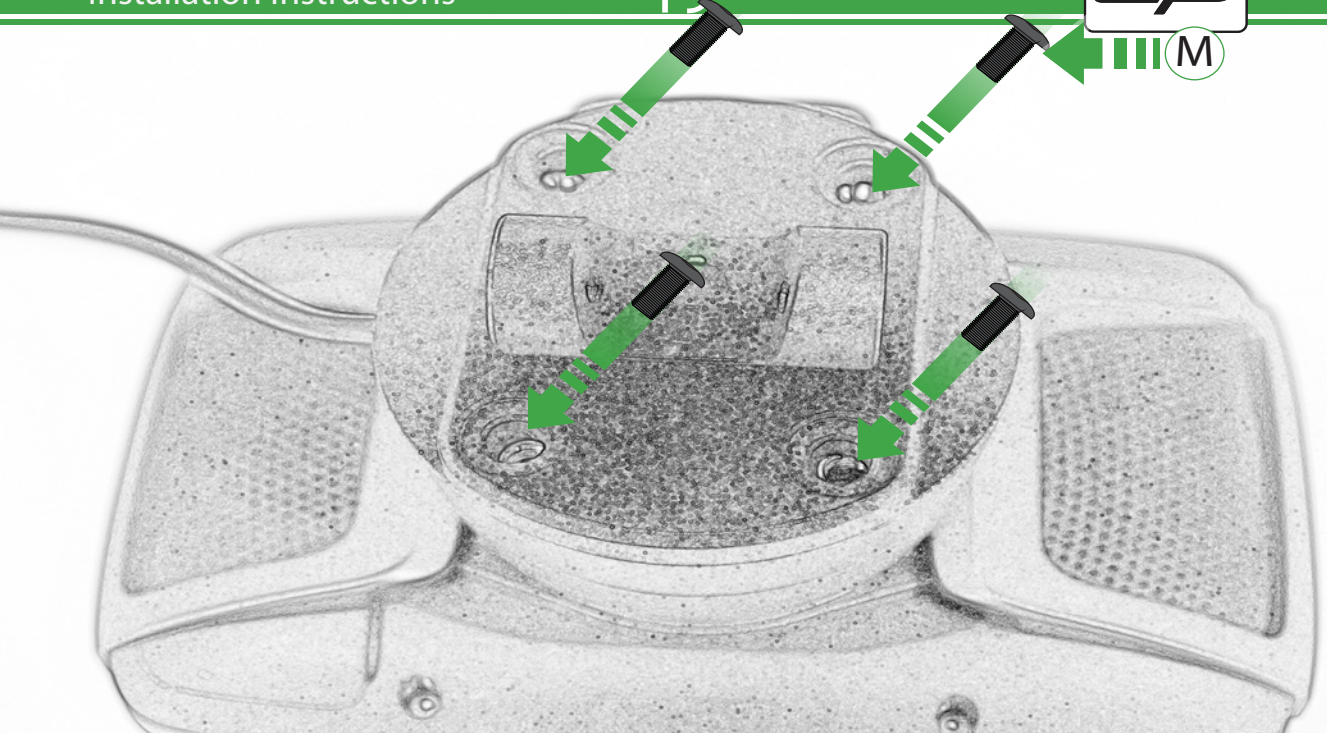

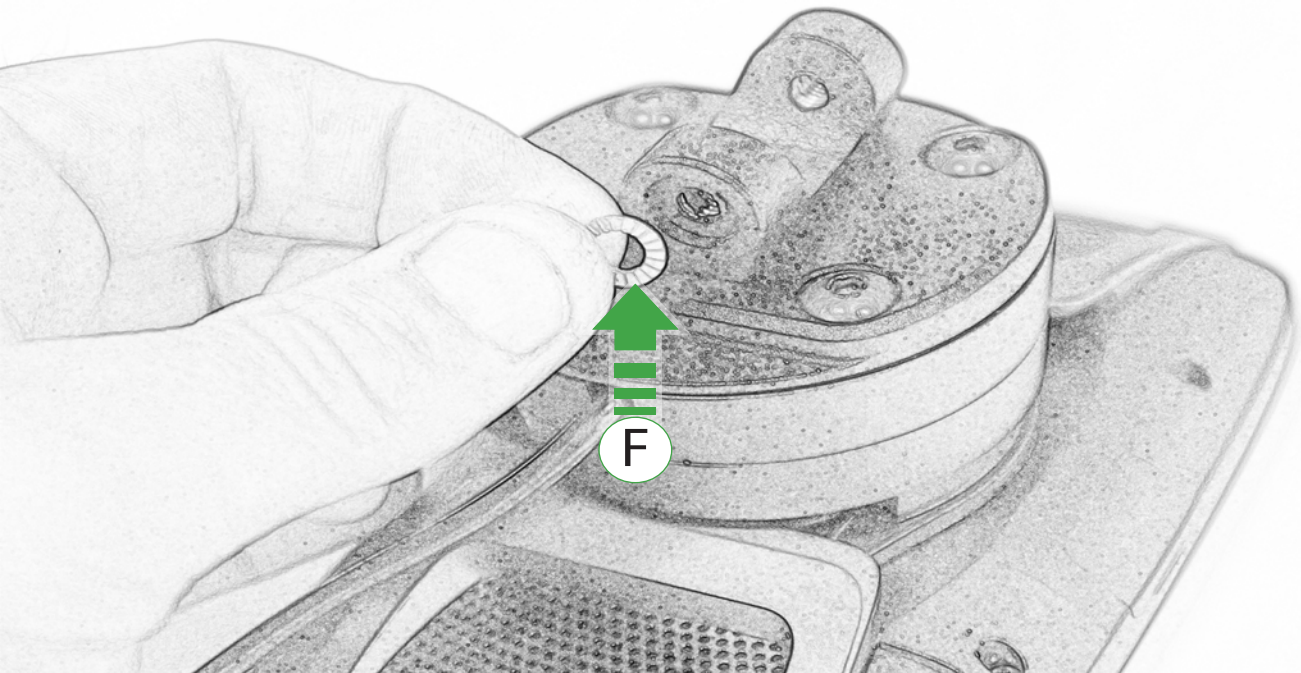

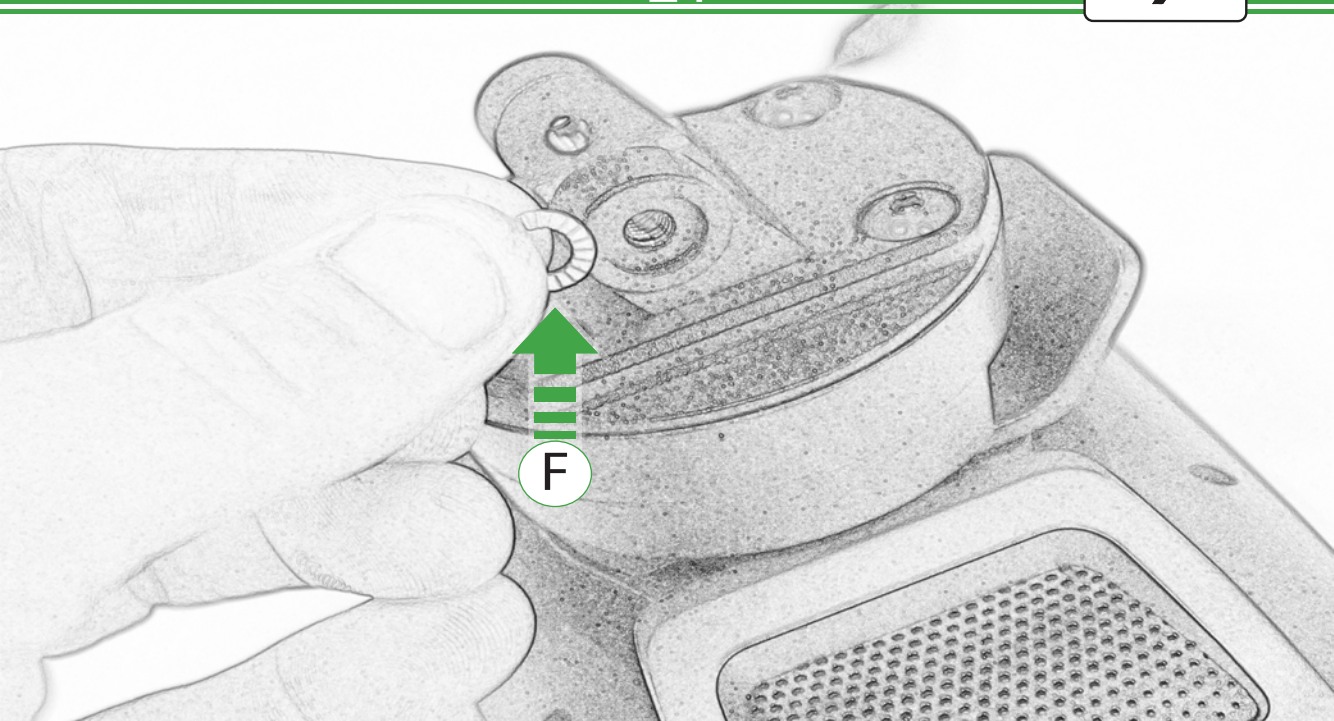

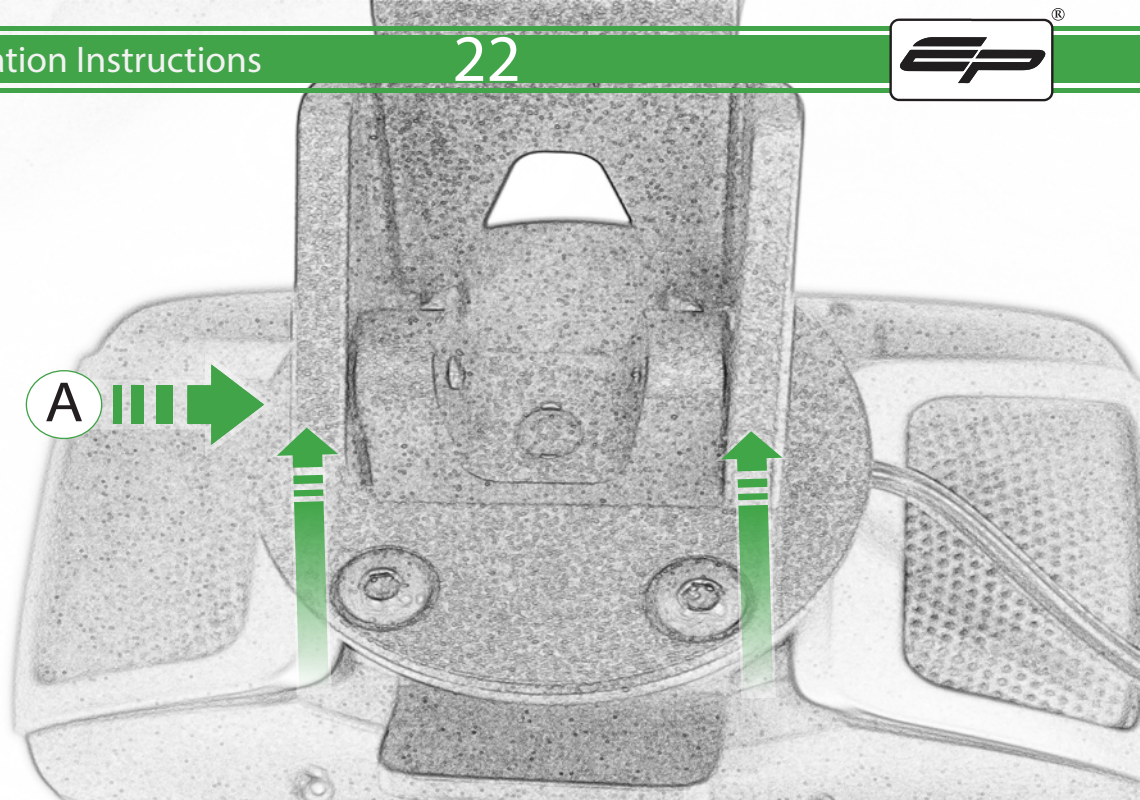


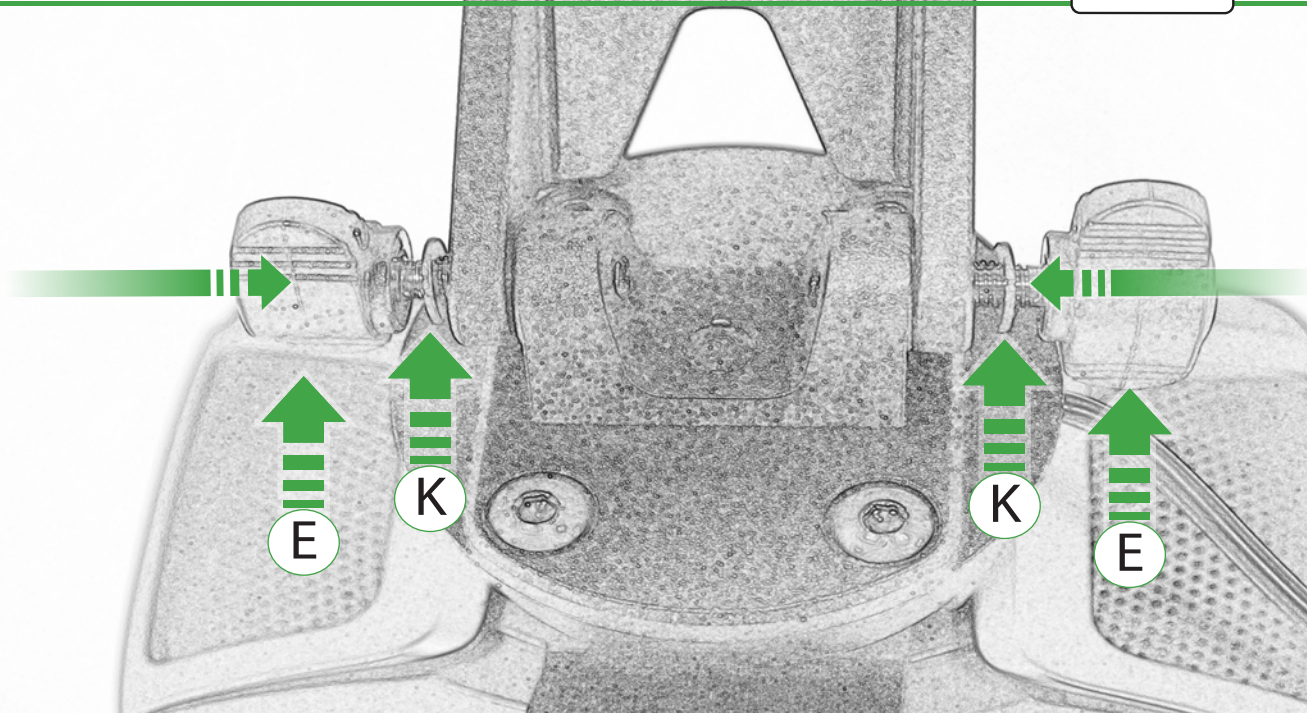






G




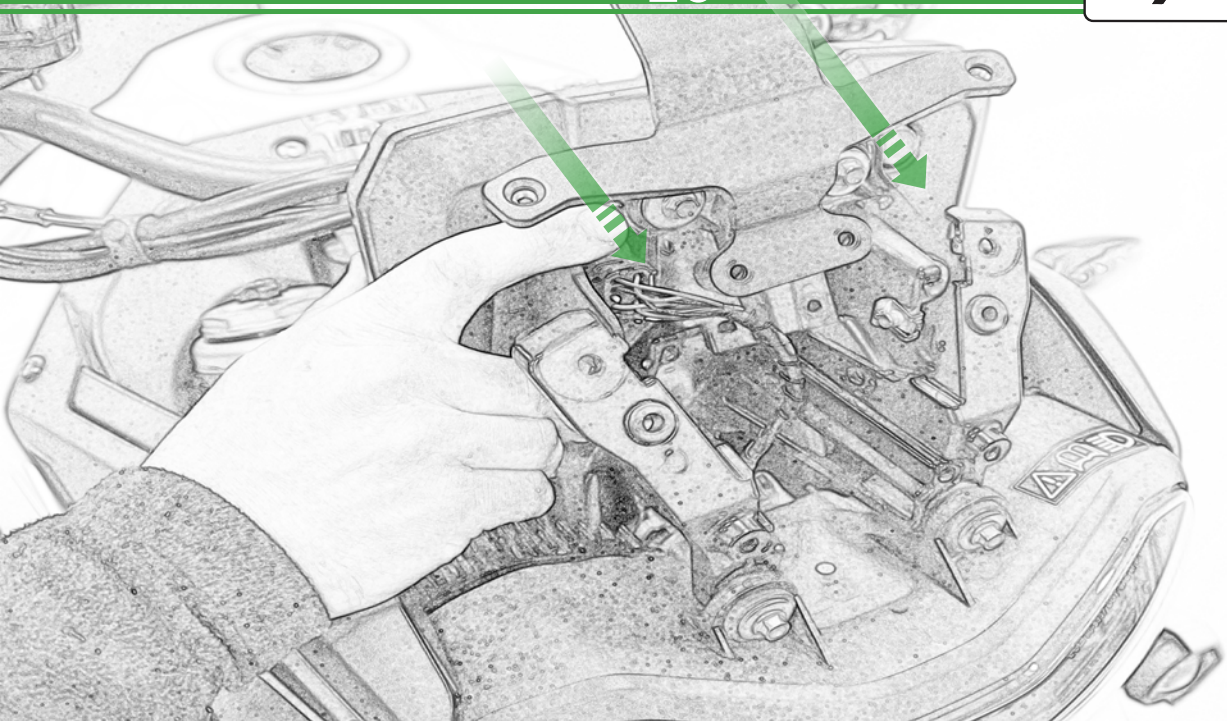


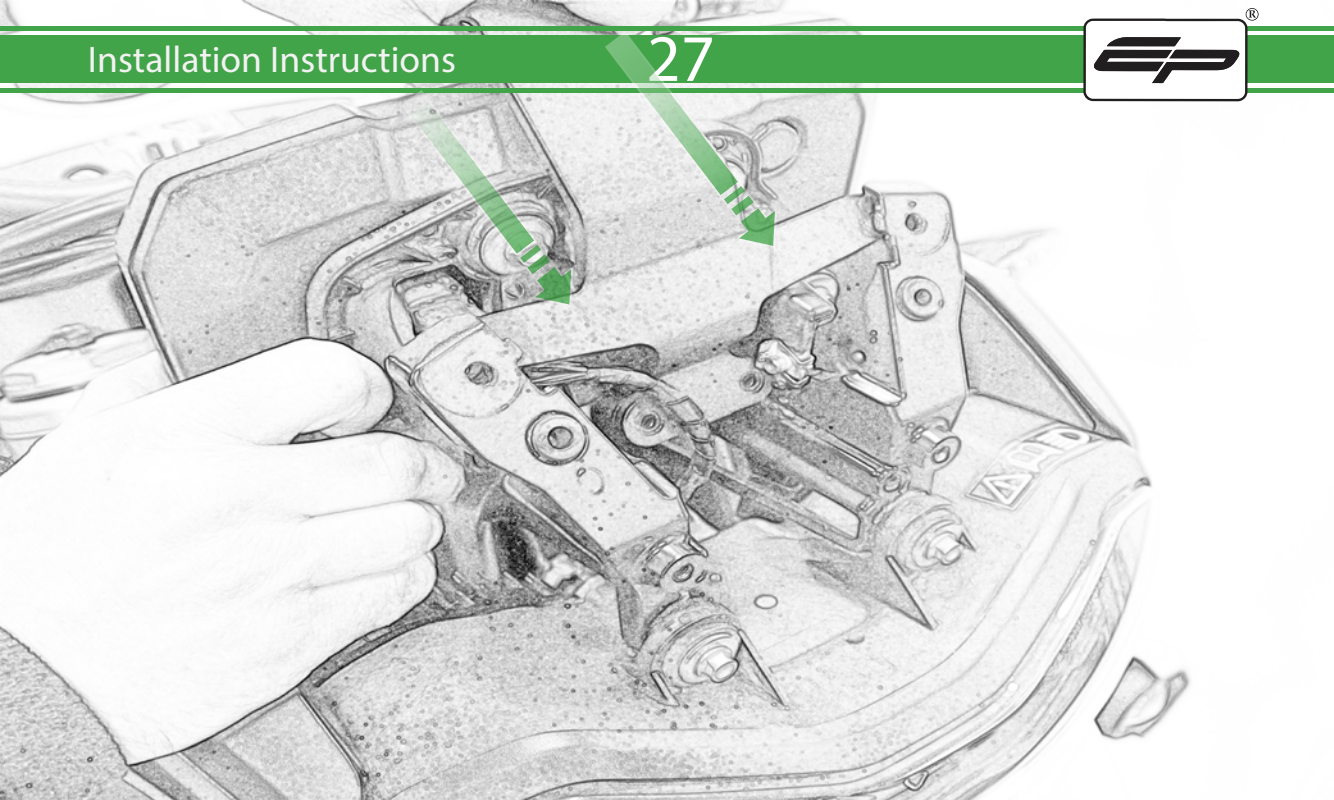


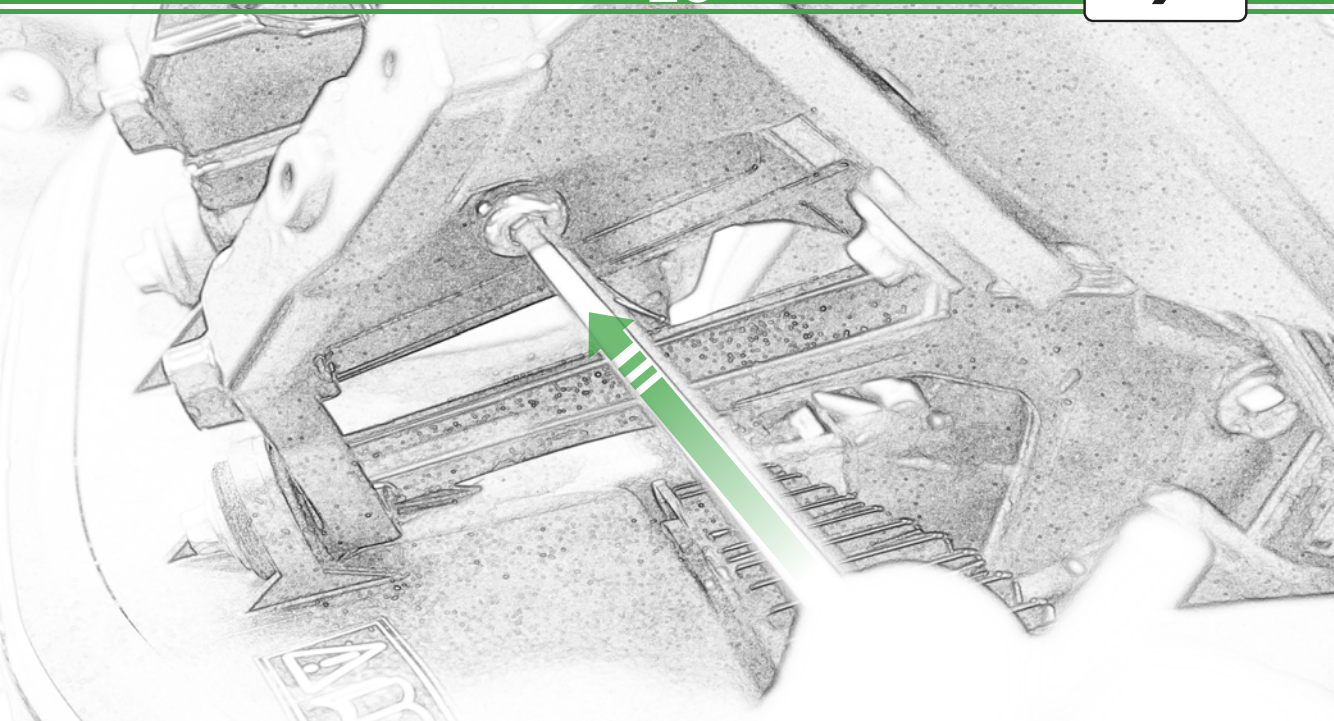


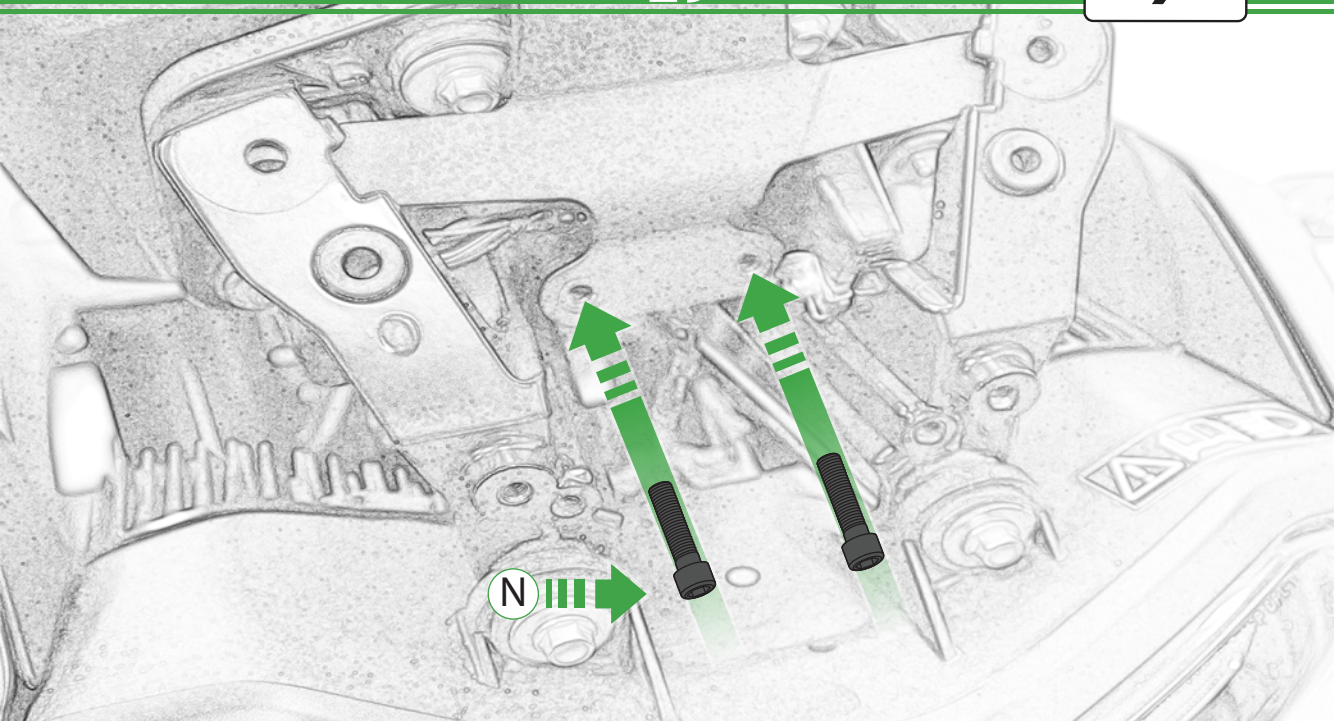


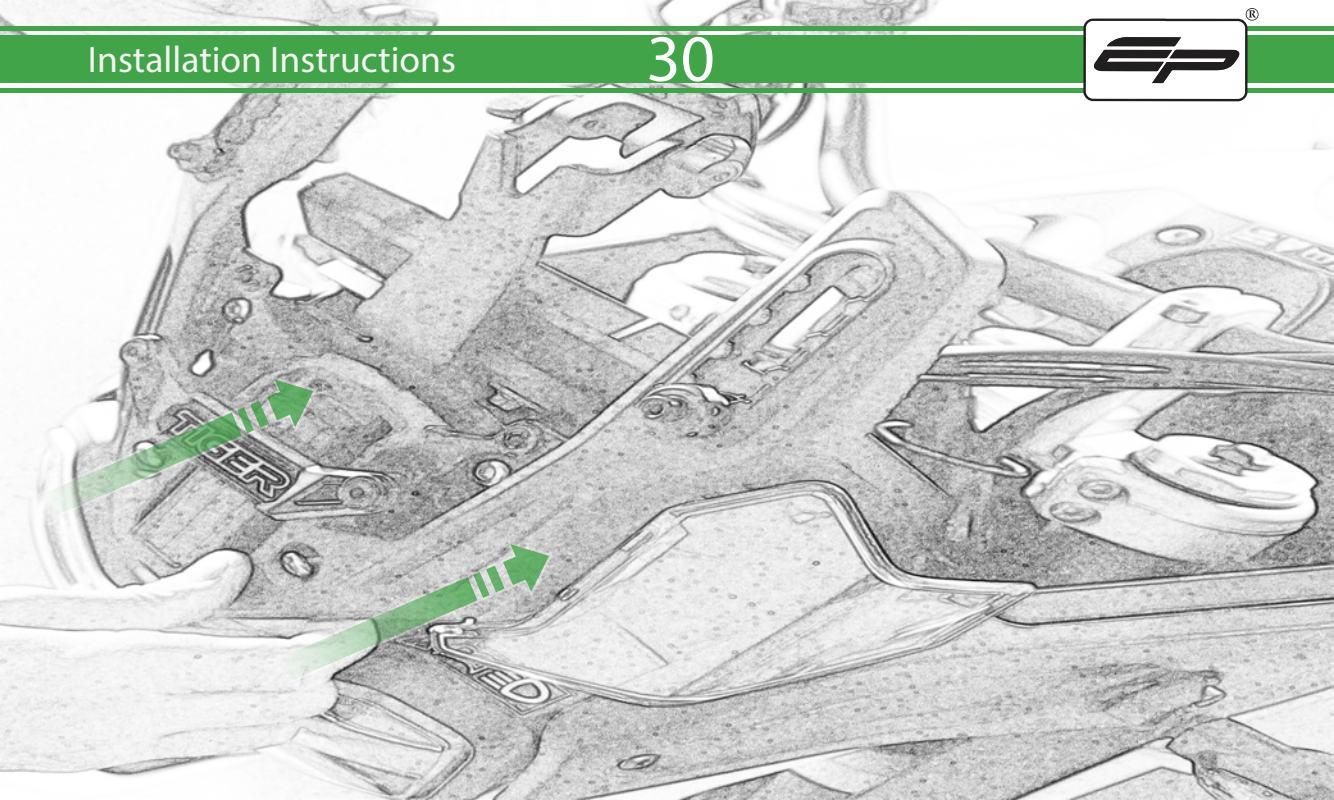

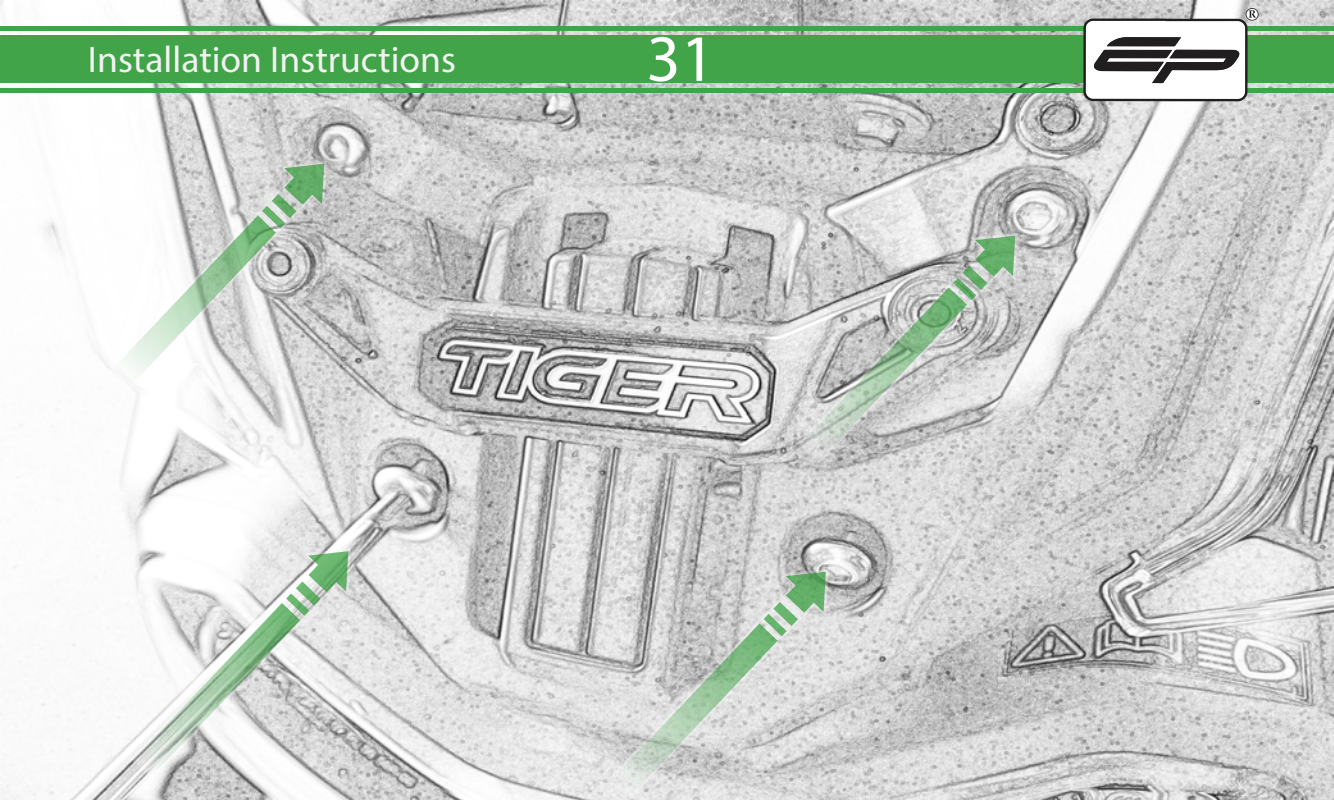

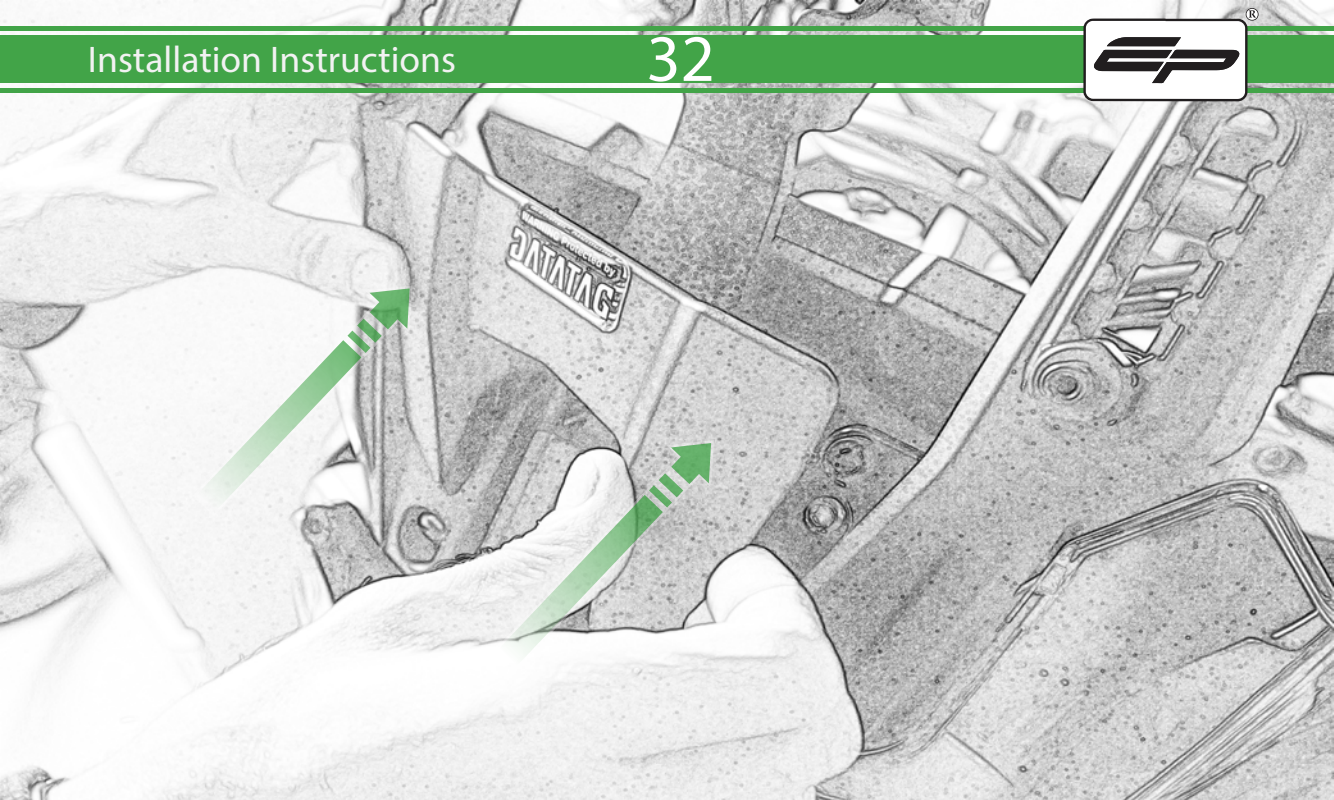

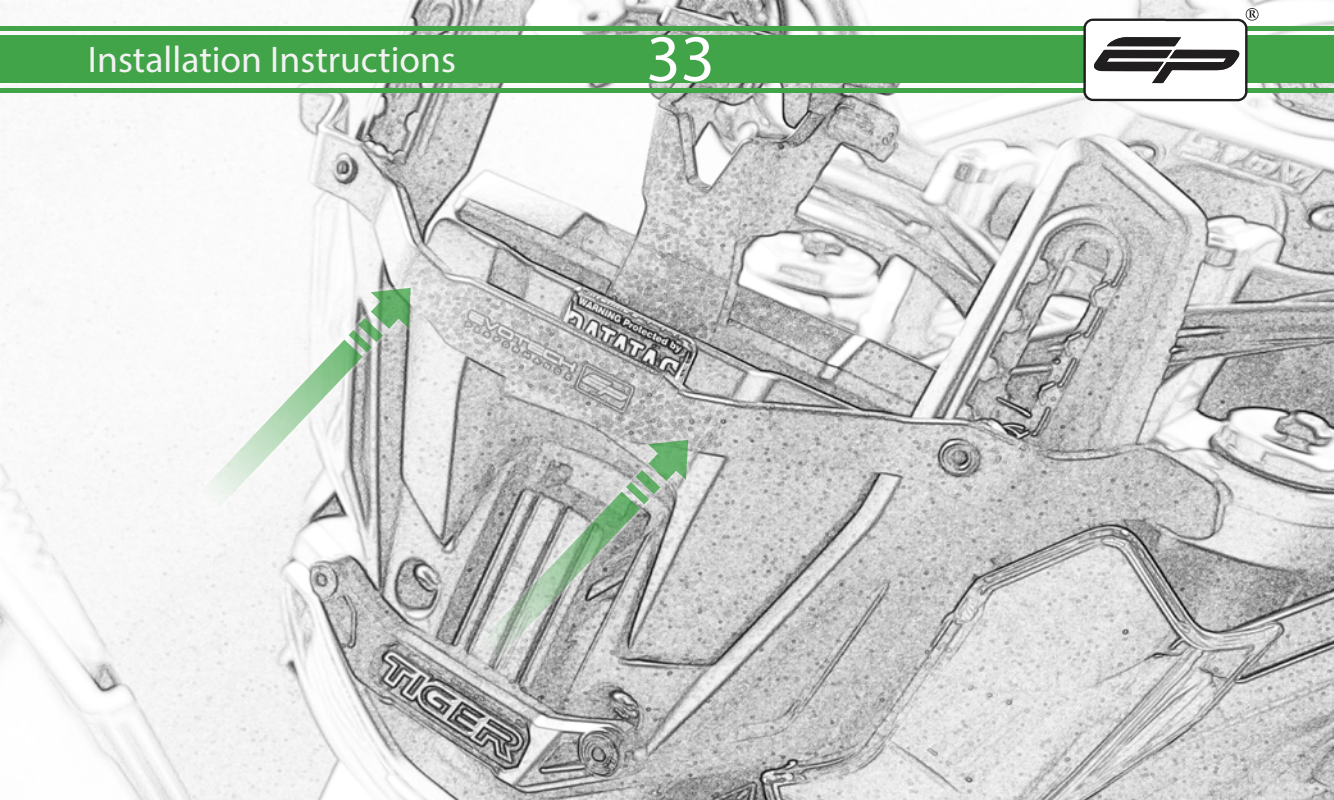

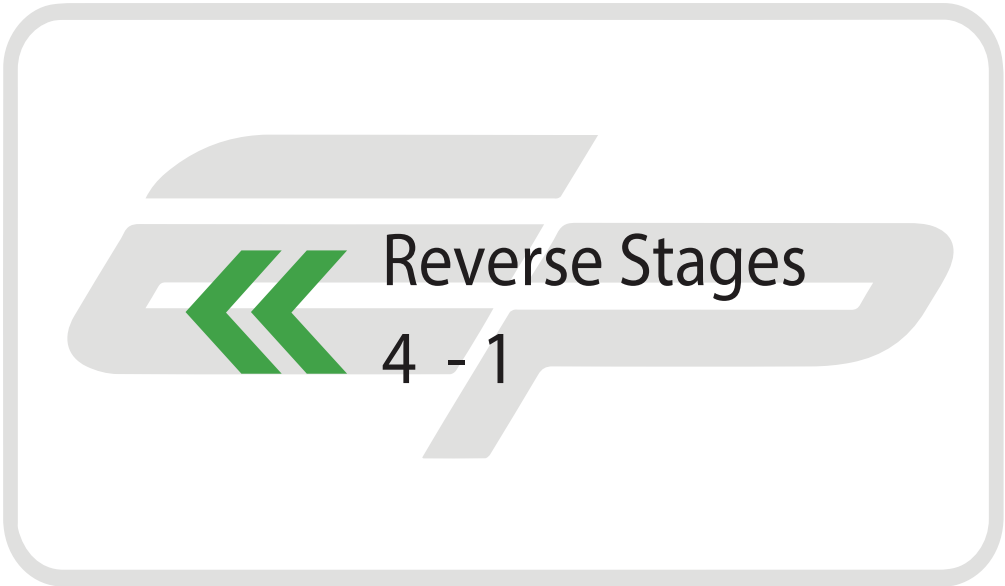



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com