

www.evotech-performance.com
Triumph Street Triple
Tom Tom Sat Nav Mount

## Installation Instructions



## Kit Contents PRN014567-015080

A 1 x Main Plate

(L) 2 x M4 x 5mm Black Button Head Bolts

B 1 x Pivot Plate

M 4 x M5 x 12mm Black Button Head Bolts

- © 1 x Sub Mounting Bracket
- D 2 x M5 x 8mm Black Button Head Bolts
- (E) 2 x Lobe Screw

Sub Kit

© 2 x Locking Washer


N 2 x M8 x 45mm Bolt


© 2 x P-clips (No.1)

② 2 x Spacer

- H 2 x P-clips (No.2)
- ① 2 x P-clips (No.3)
- ① 2 x P-clips (No.4)
- K 2 x M5 Black Washer




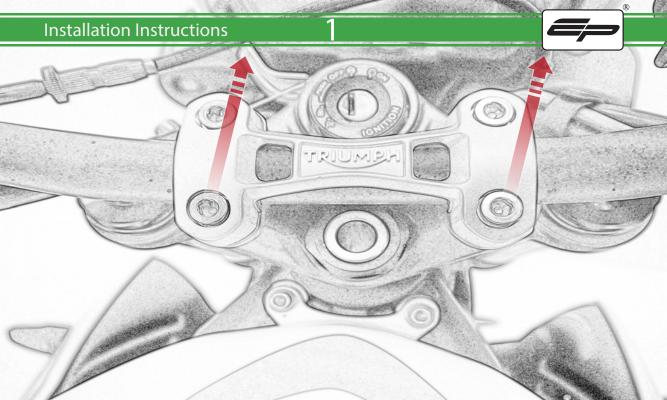

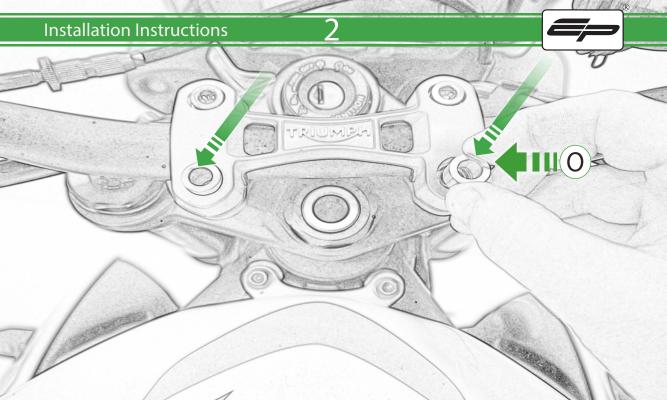







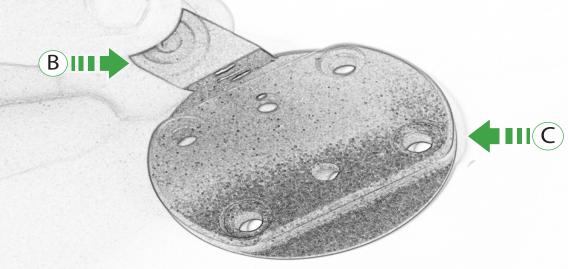






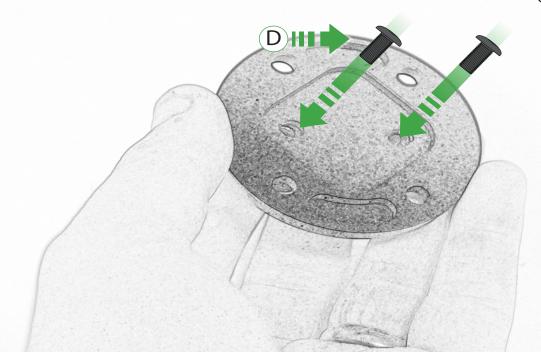


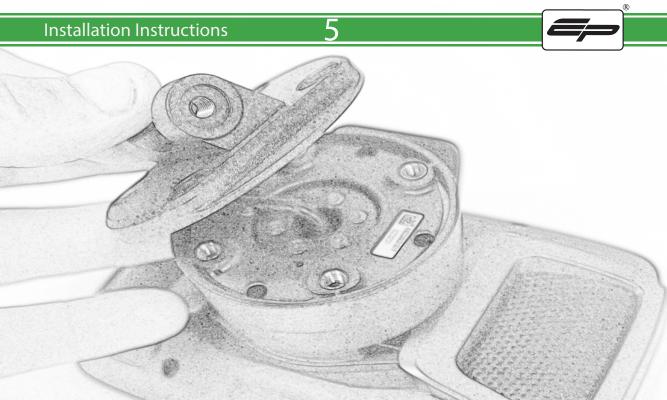


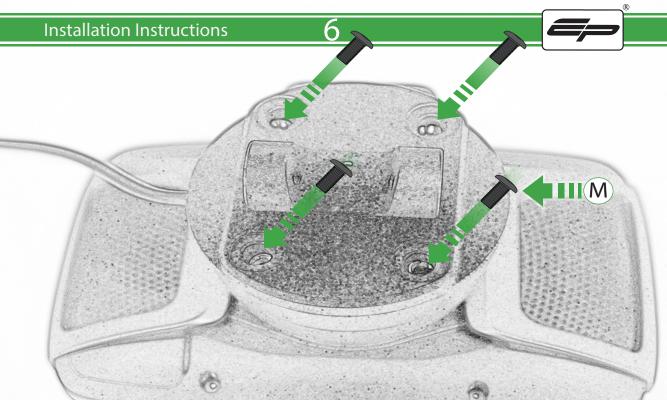








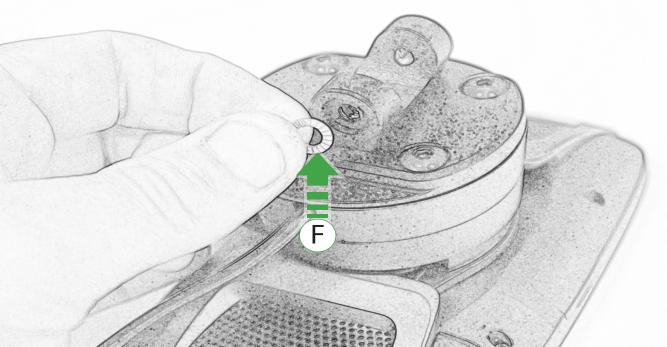


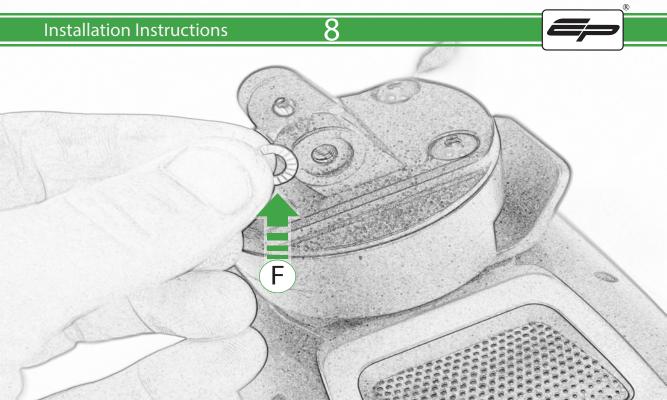


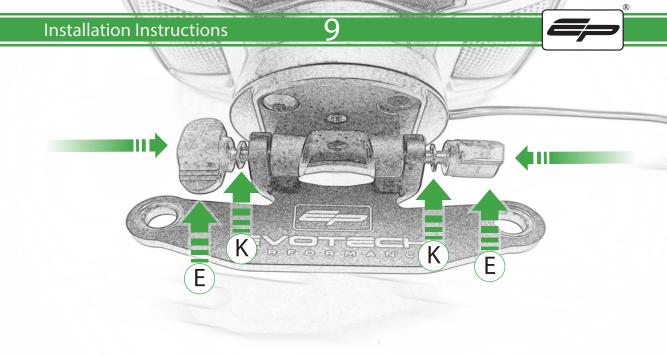

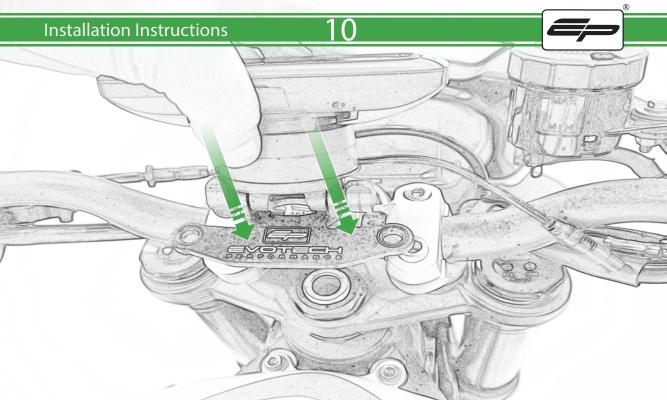

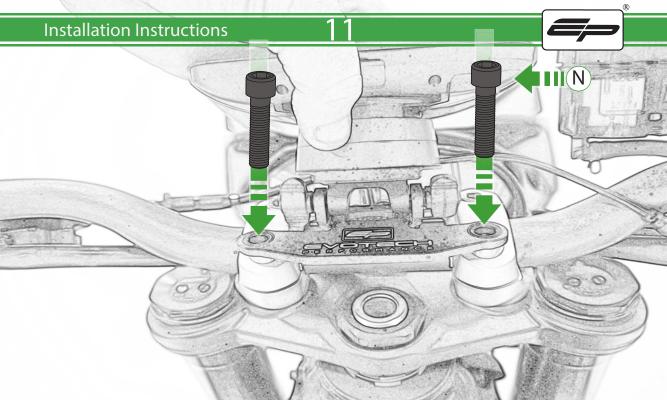

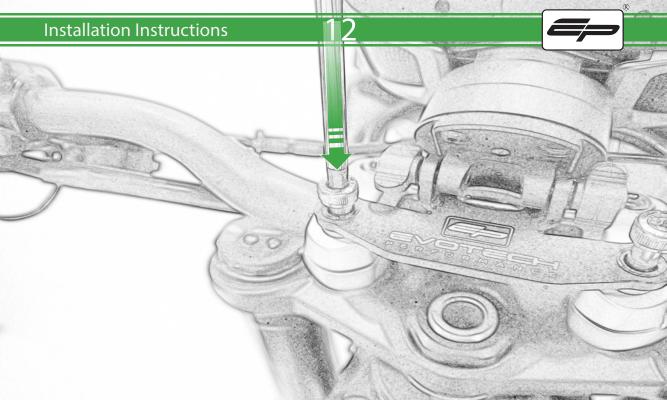

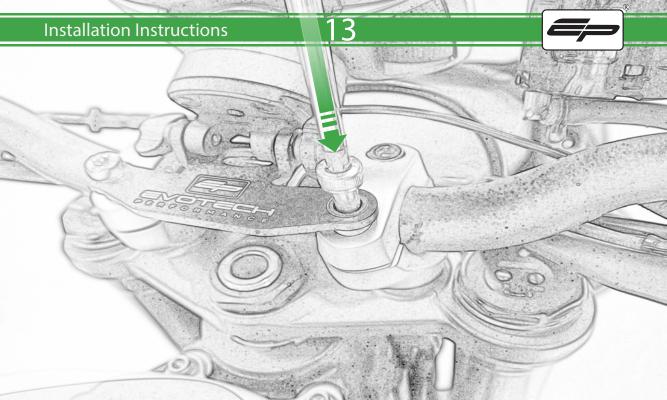





It is recommended that periodic inspections are made to ensure that all bolts are tightend to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced





www.evotech-performance.com