



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com


Generic Bar Clamp


Tom Tom Sat Nav Mount Instruction




Kit Contents

- (A) 1 x Pivot Plate
- (B) 1 x Left Hand Arm
- (C) 1 x Right Hand Arm
- (D) 1 x Tom Tom Plate
- (E) 2 x Lobe Screw
- (F) 2 x M5 x 8mm Black Button Head Bolt
- (G) 2 x Spacer
- (H) 2 x M5 x 12 Caphead Bolt
- (I) 2 x M8 Caphead Bolt
- (J) 4 x M5 x 12mm Black Button Head Bolts

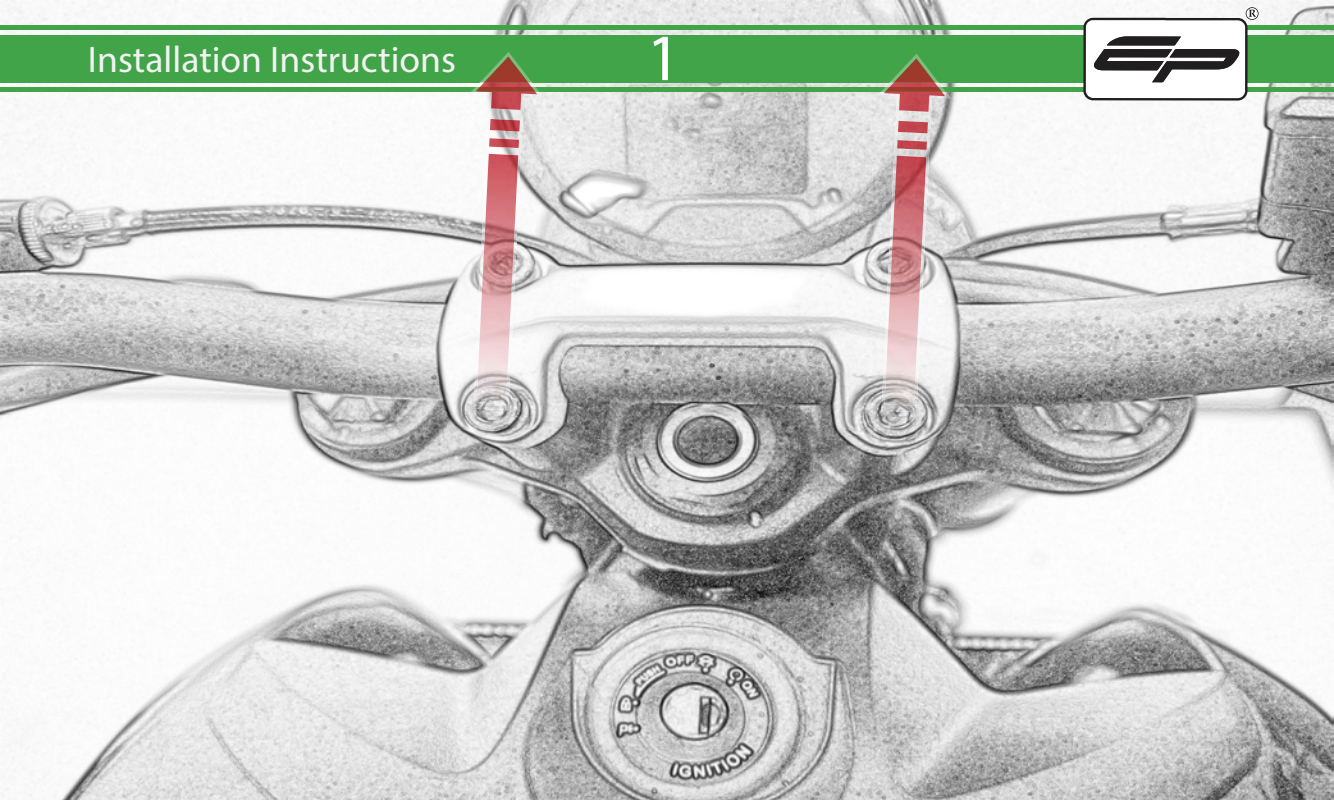


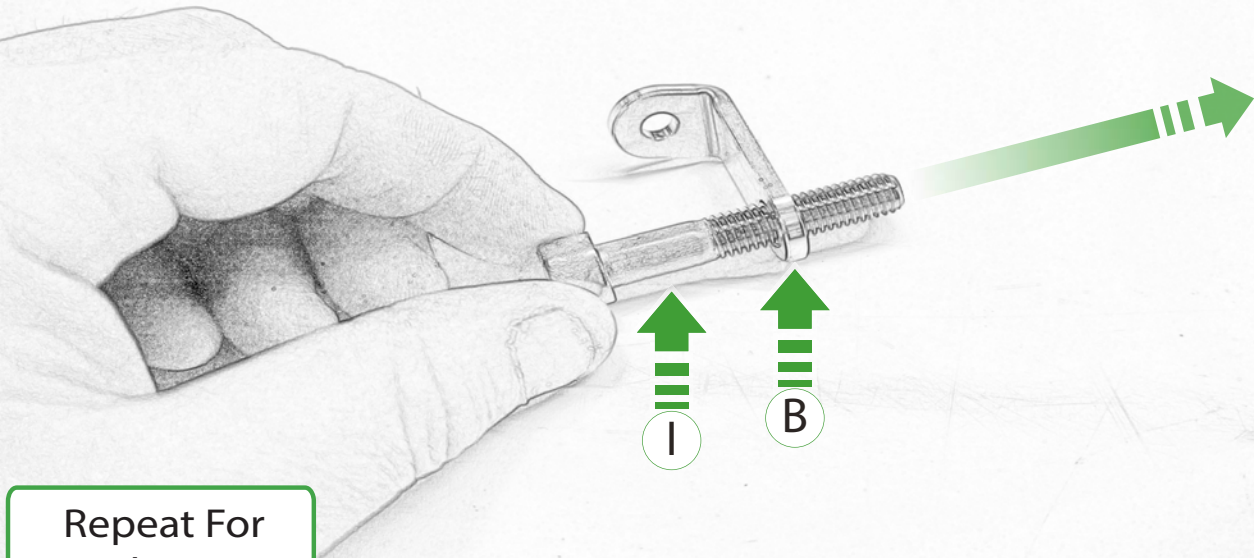



Repeat For Both Arms

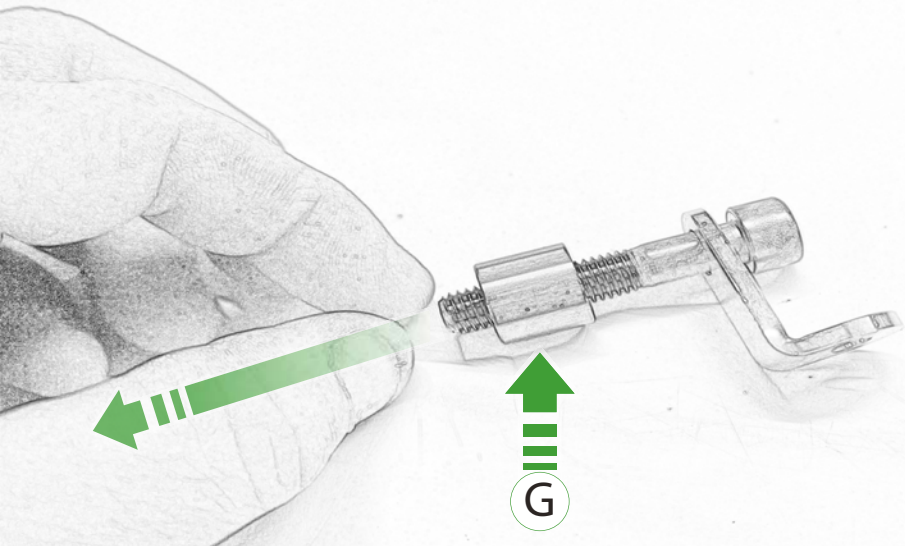


Repeat For
Both Arms

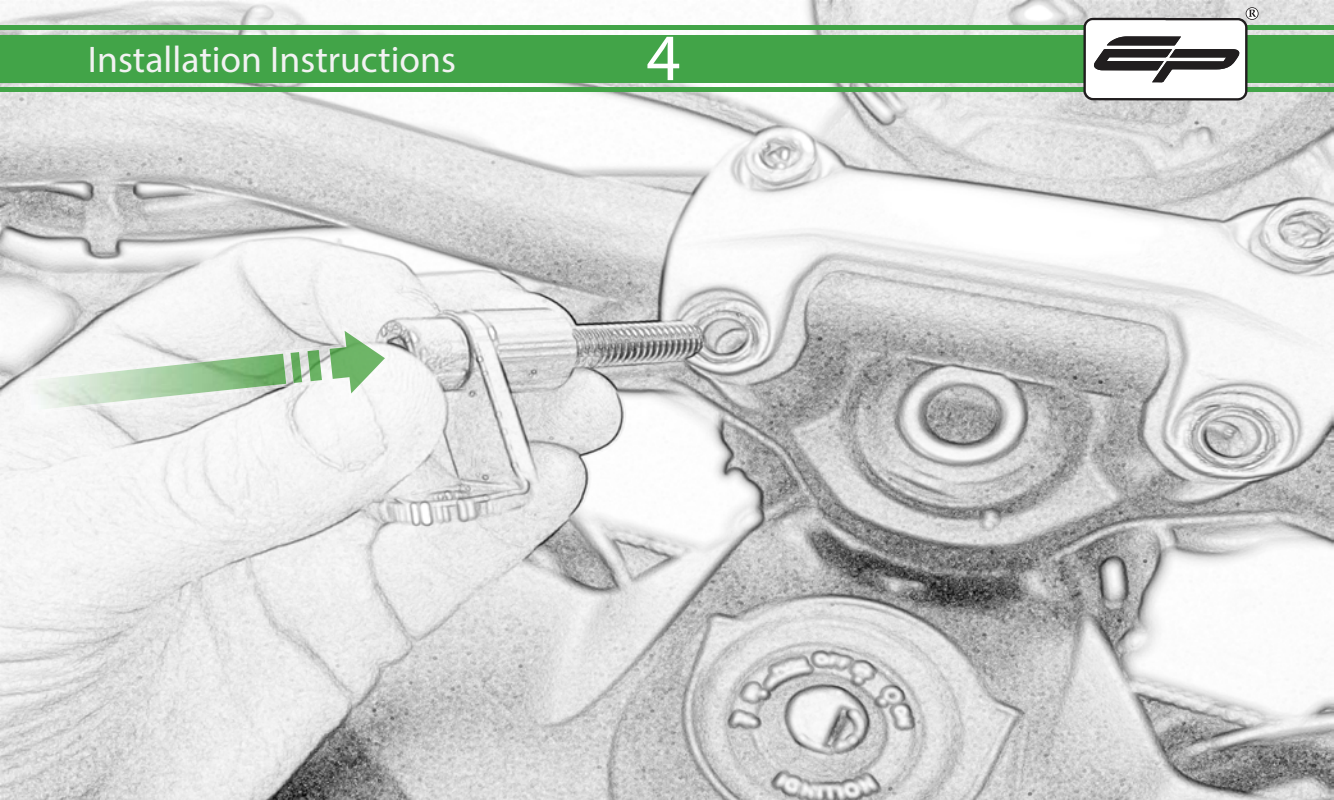

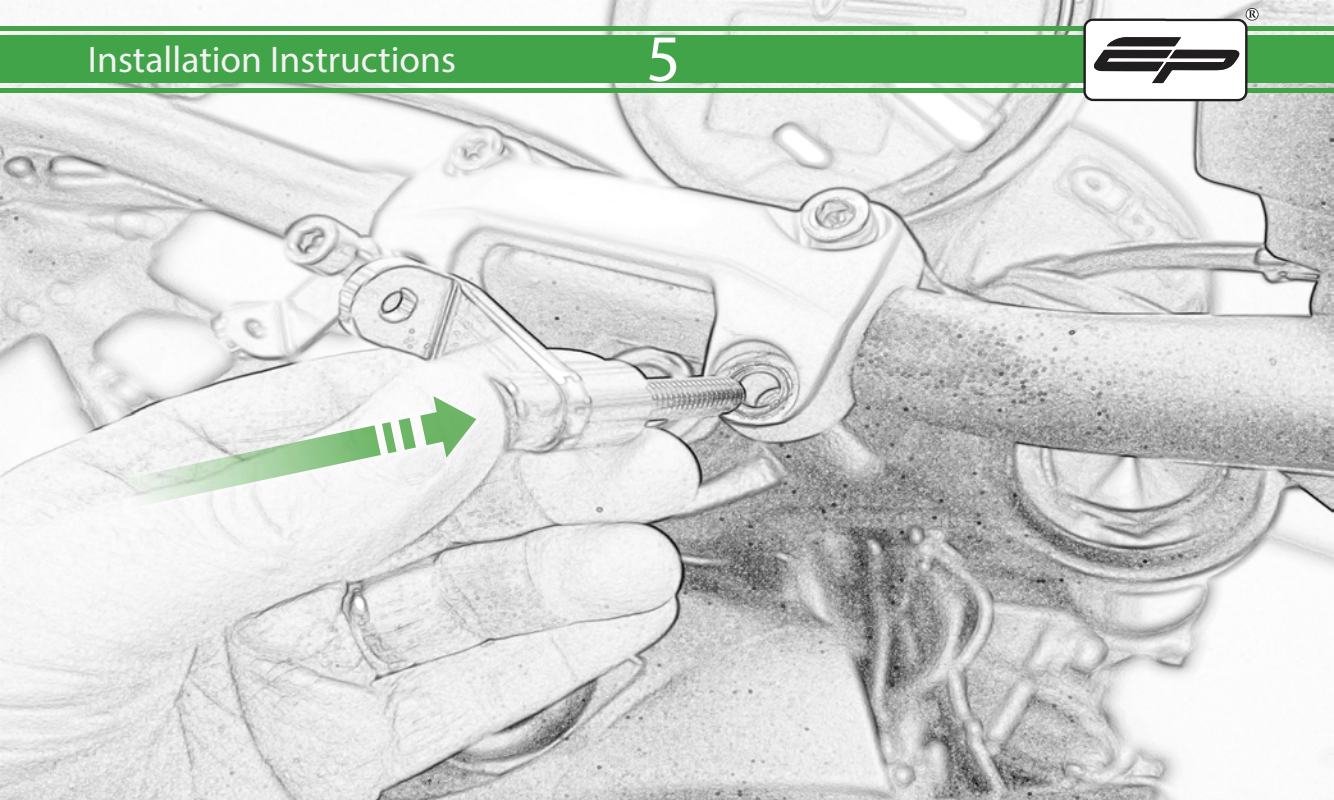

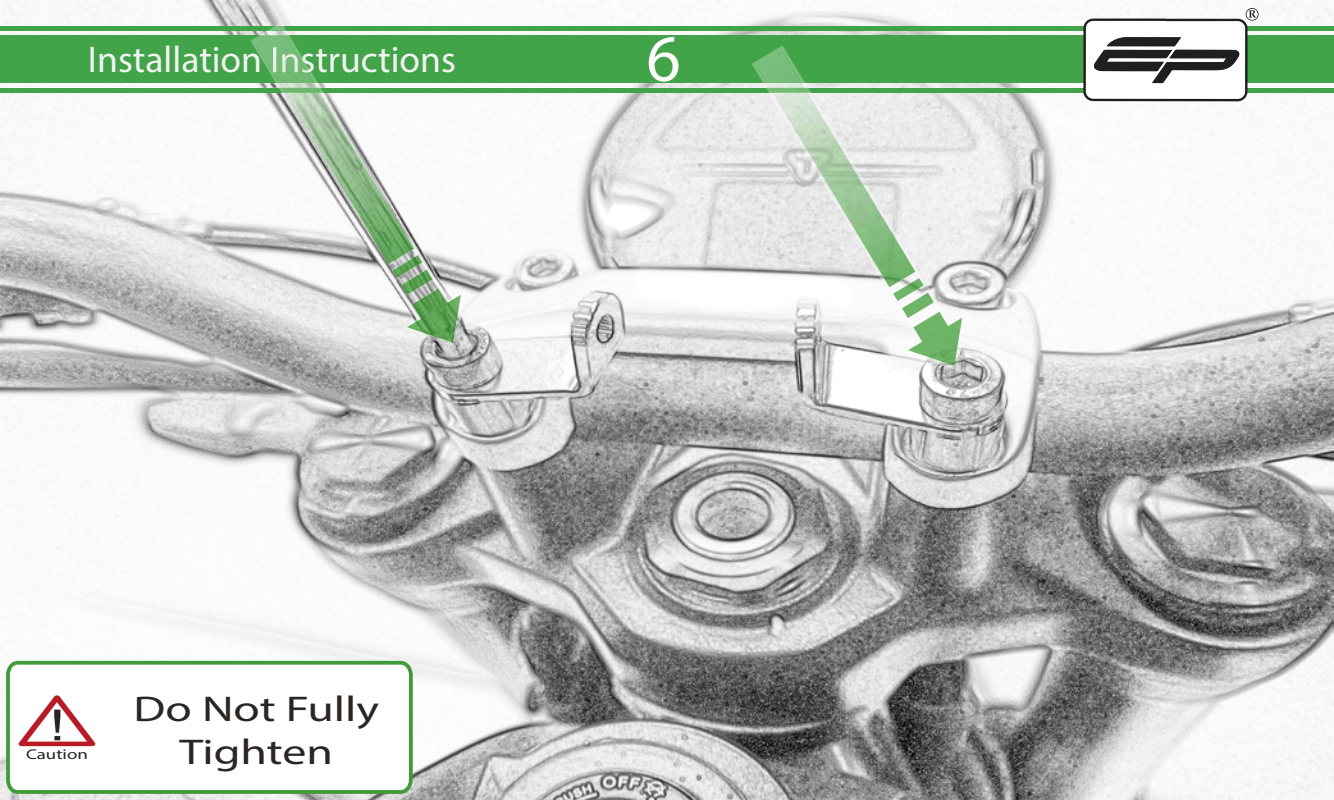



Do Not Fully Tighten

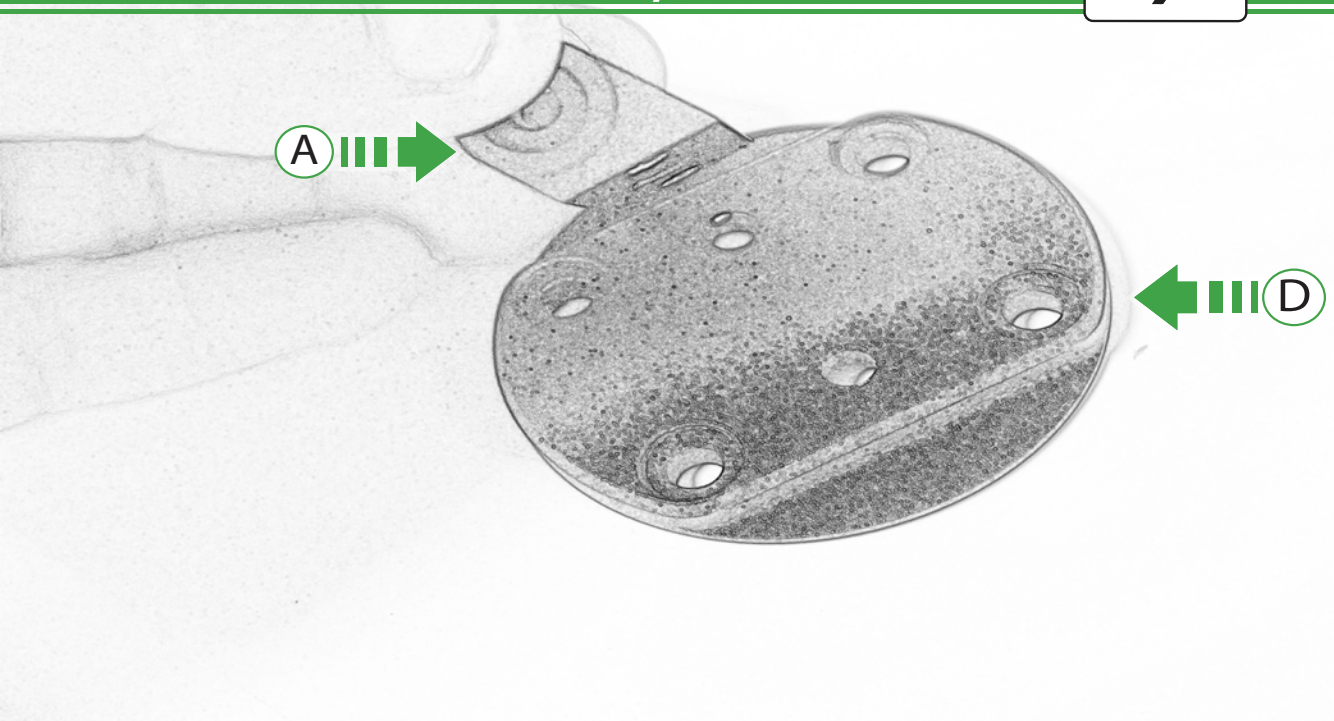



A


D

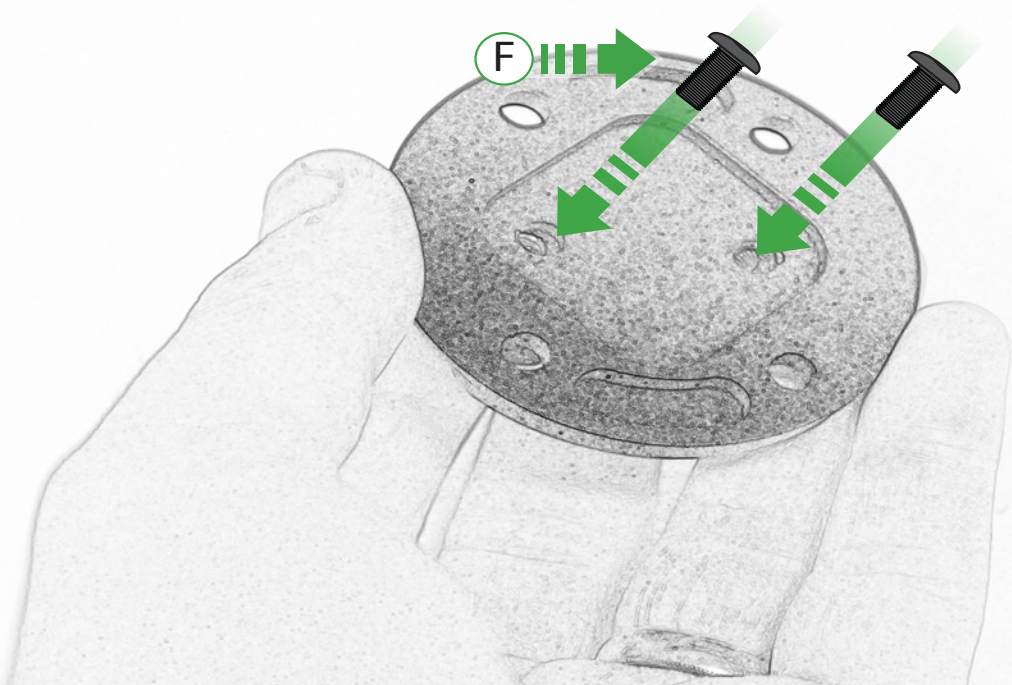

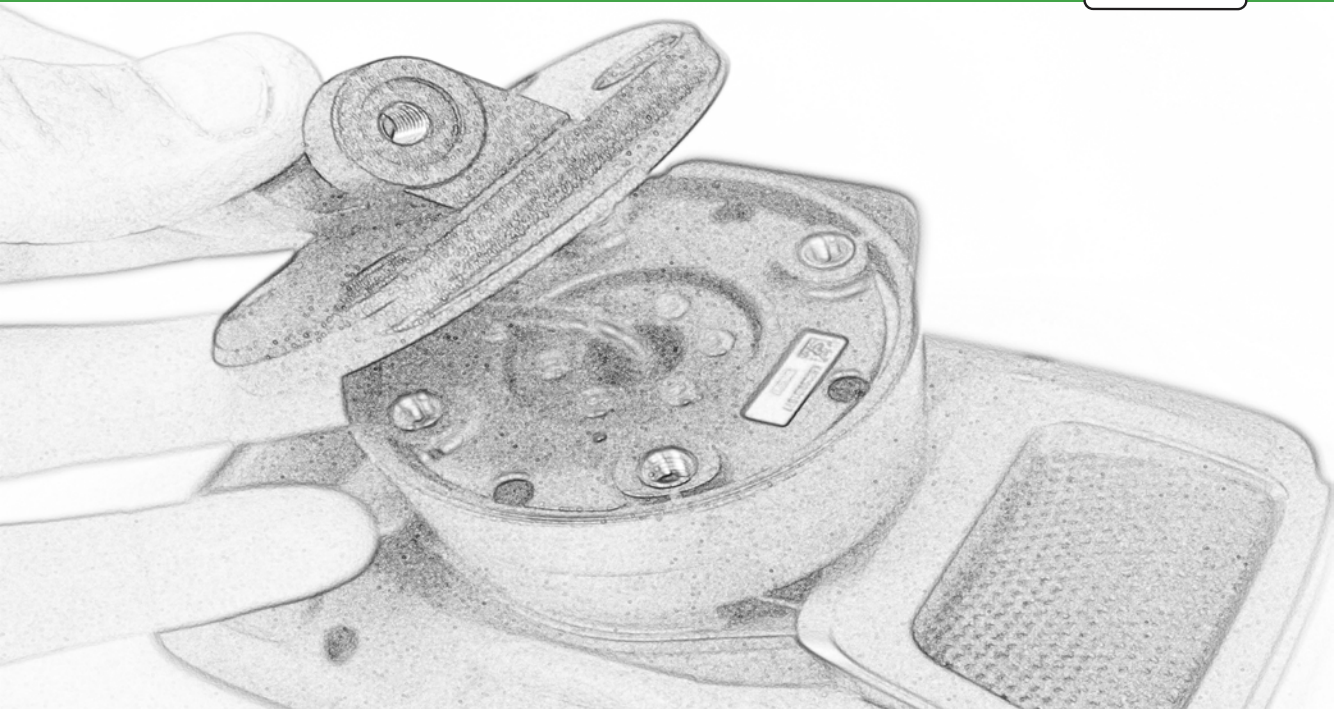


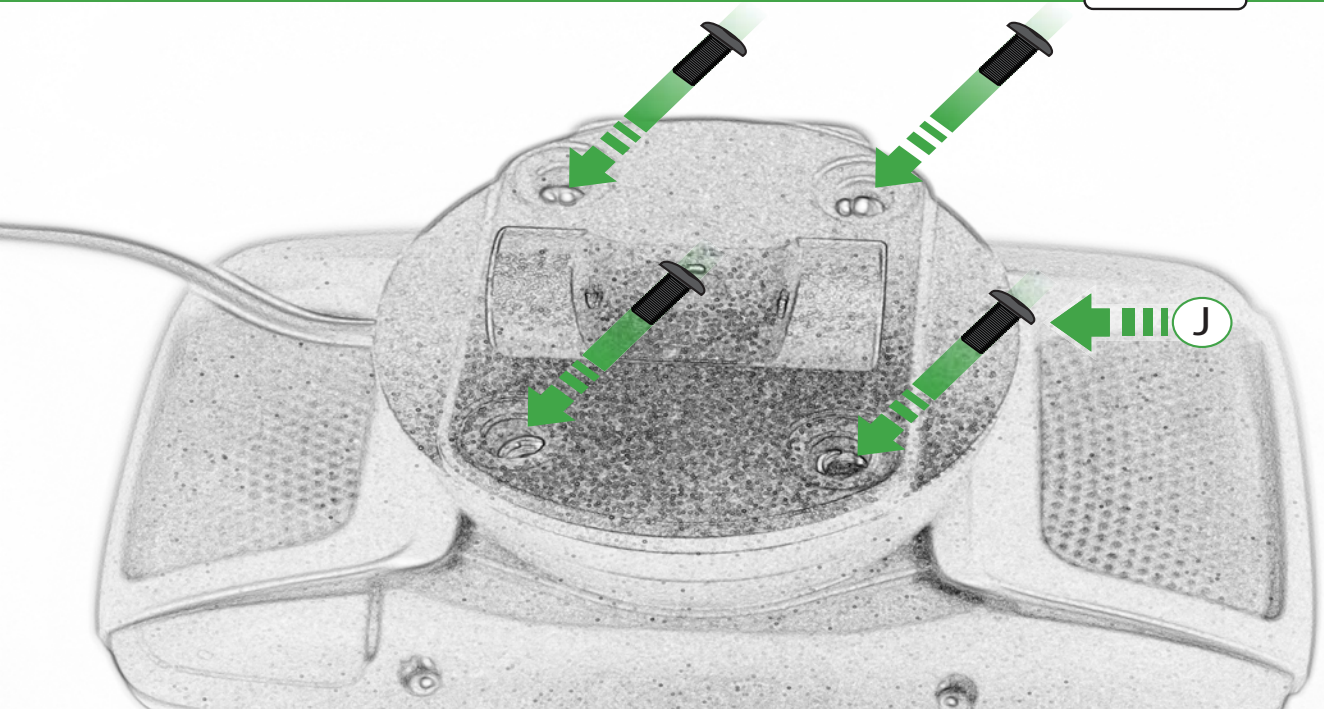


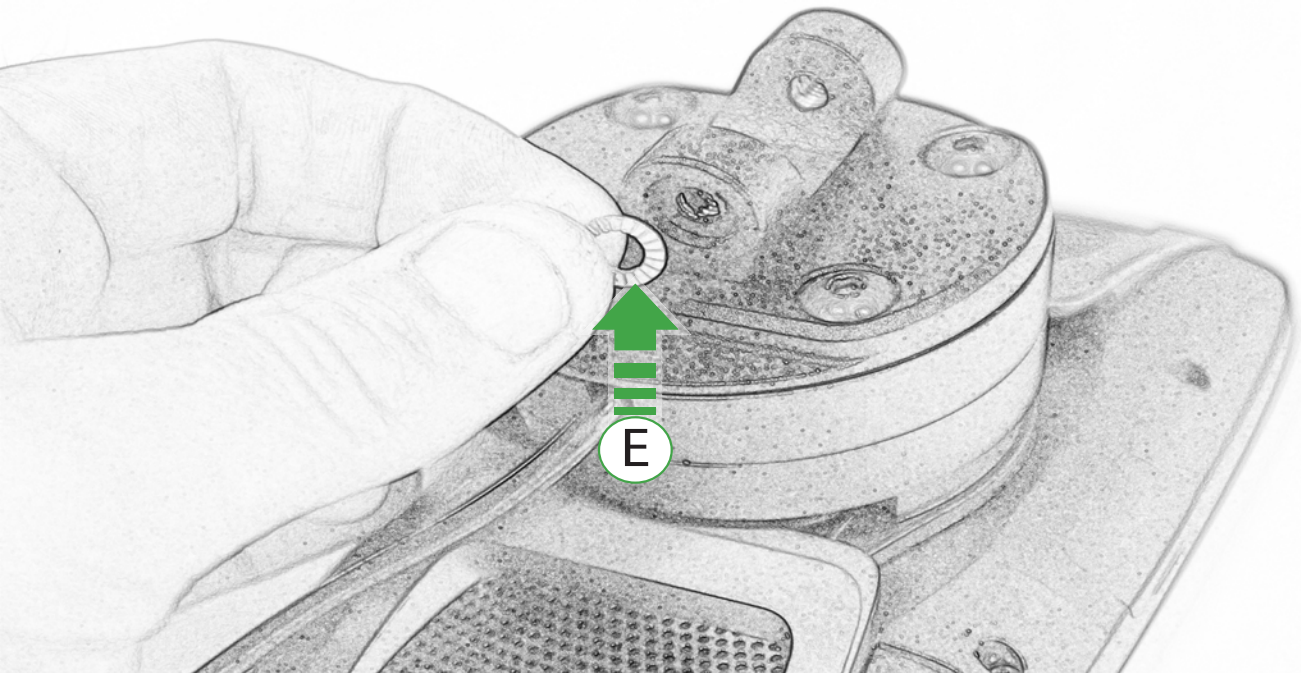


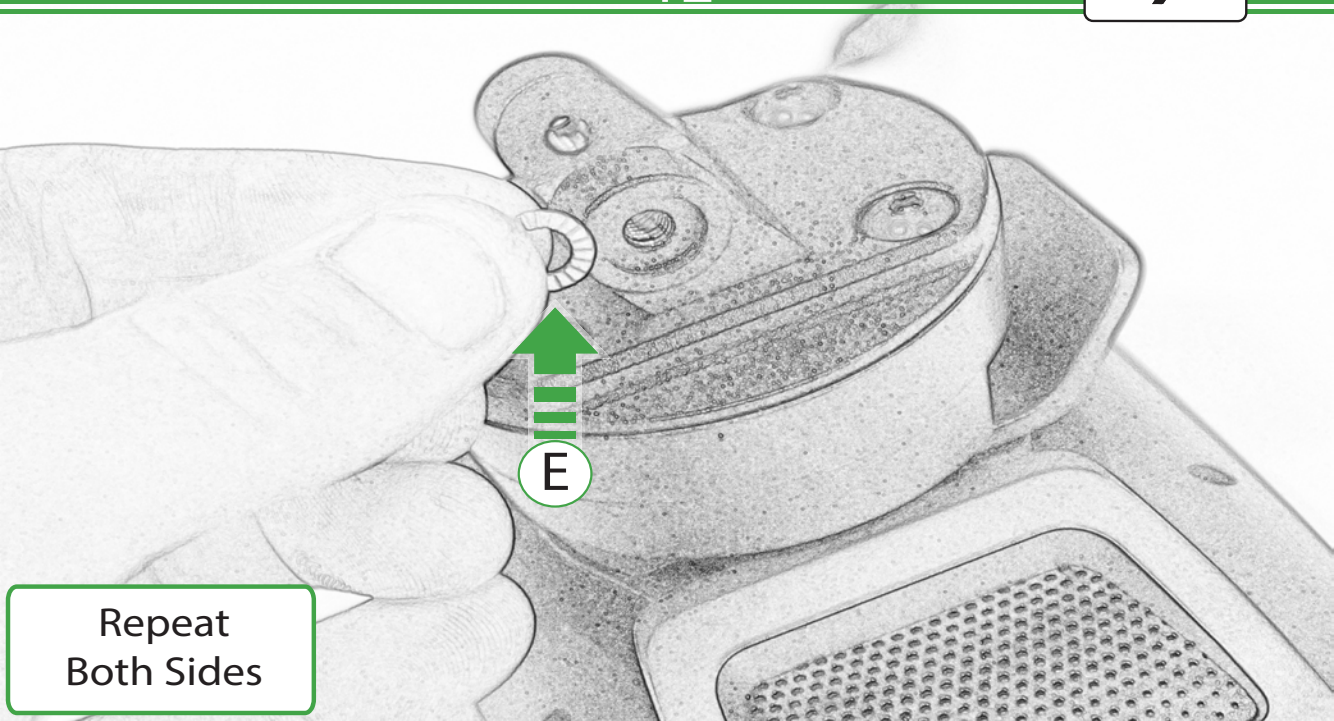

Repeat
Both Sides

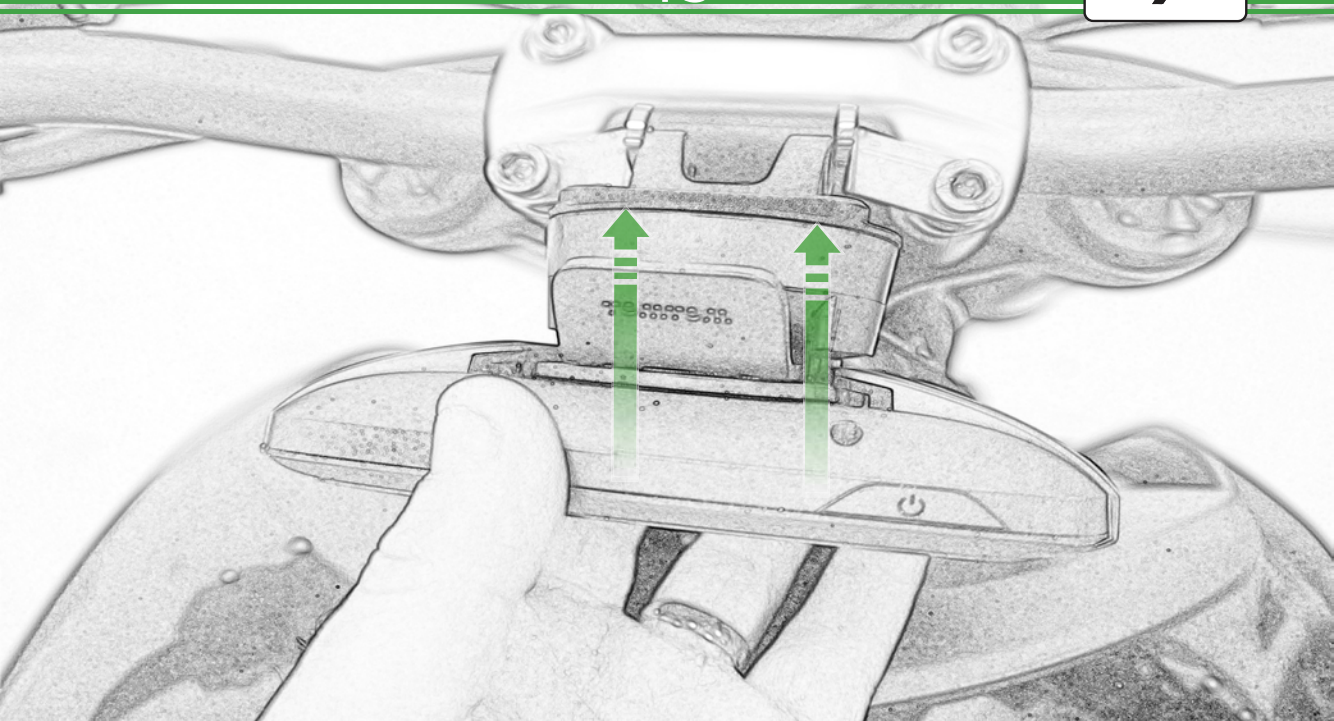

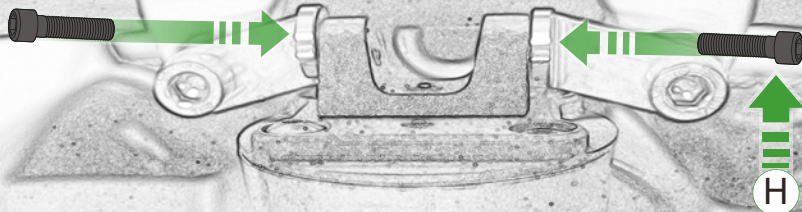

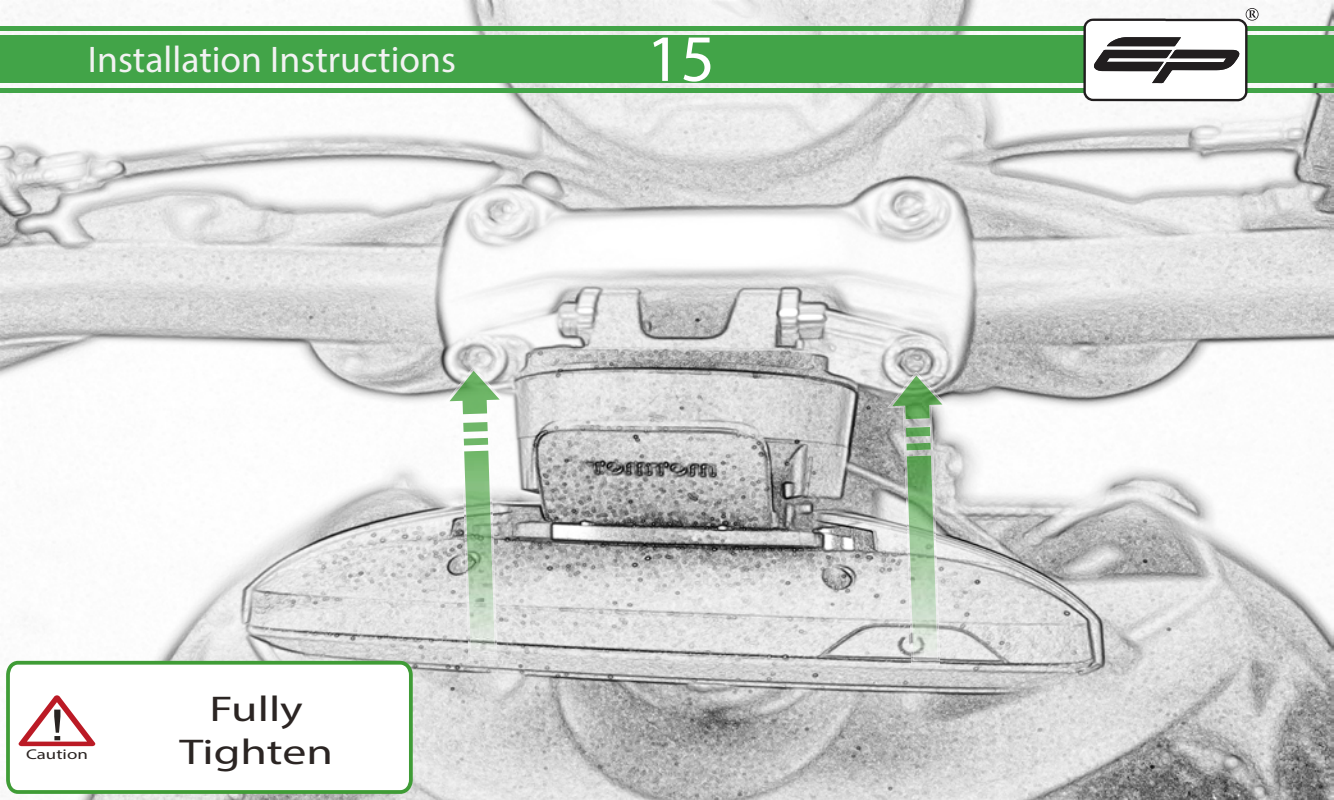

Caution

Fully
Tighten



ESSENTIAL CHECKS

It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com