

**EVOTECH**®  
P E R F O R M A N C E

[www.evotech-performance.com](http://www.evotech-performance.com)

# Ducati Supersport Tom Tom Sat Nav Mount Installation Instructions





## Kit Contents PRN014567-015660


- (A) 1 x Pivot Plate
- (B) 1 x Main Bracket
- (C) 1 x Tom Tom Plate
- (D) 2 x Nord Lock Washers
- (E) 2 x M5 x 12 Caphead Bolt
- (F) 2 x M5 x 8mm Black Button Head Bolt
- (G) 4 x M5 x 12mm Black Button Head Bolts


## Sub Kit


- (AA) 2 x M10 x 45 Caphead
- (BB) 2 x Spacers

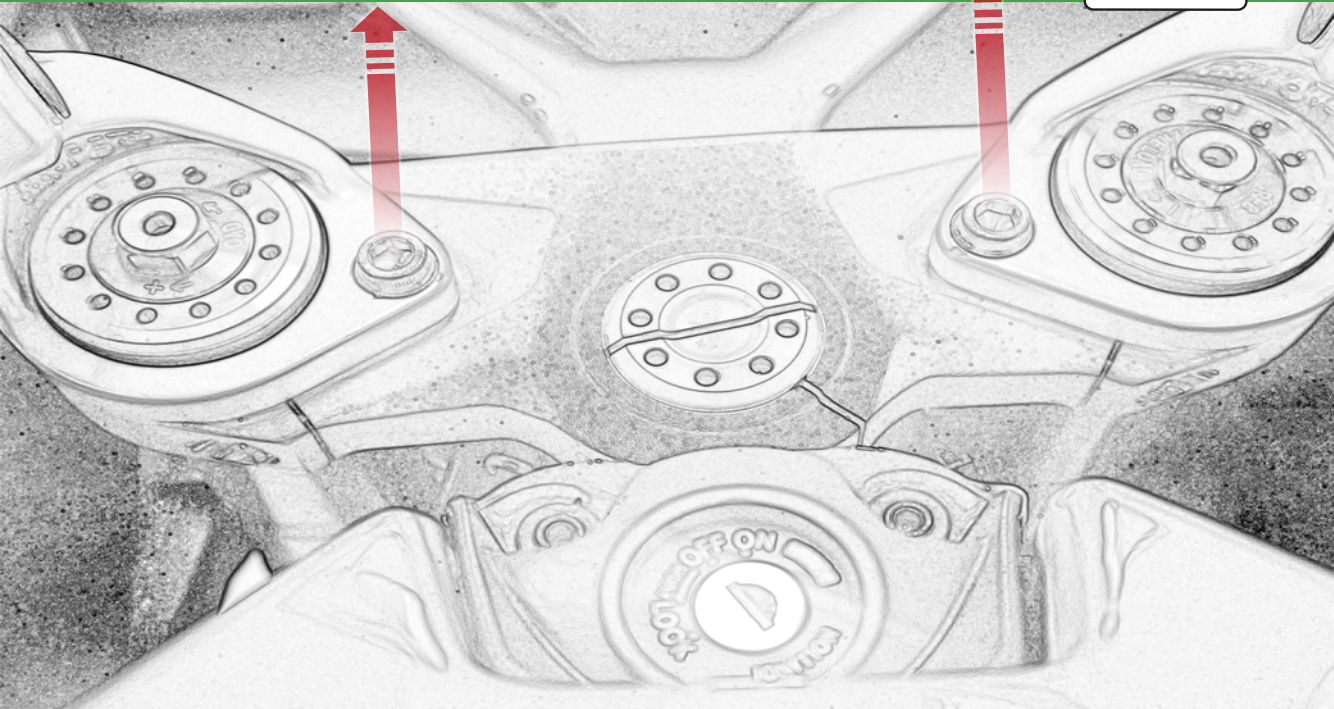

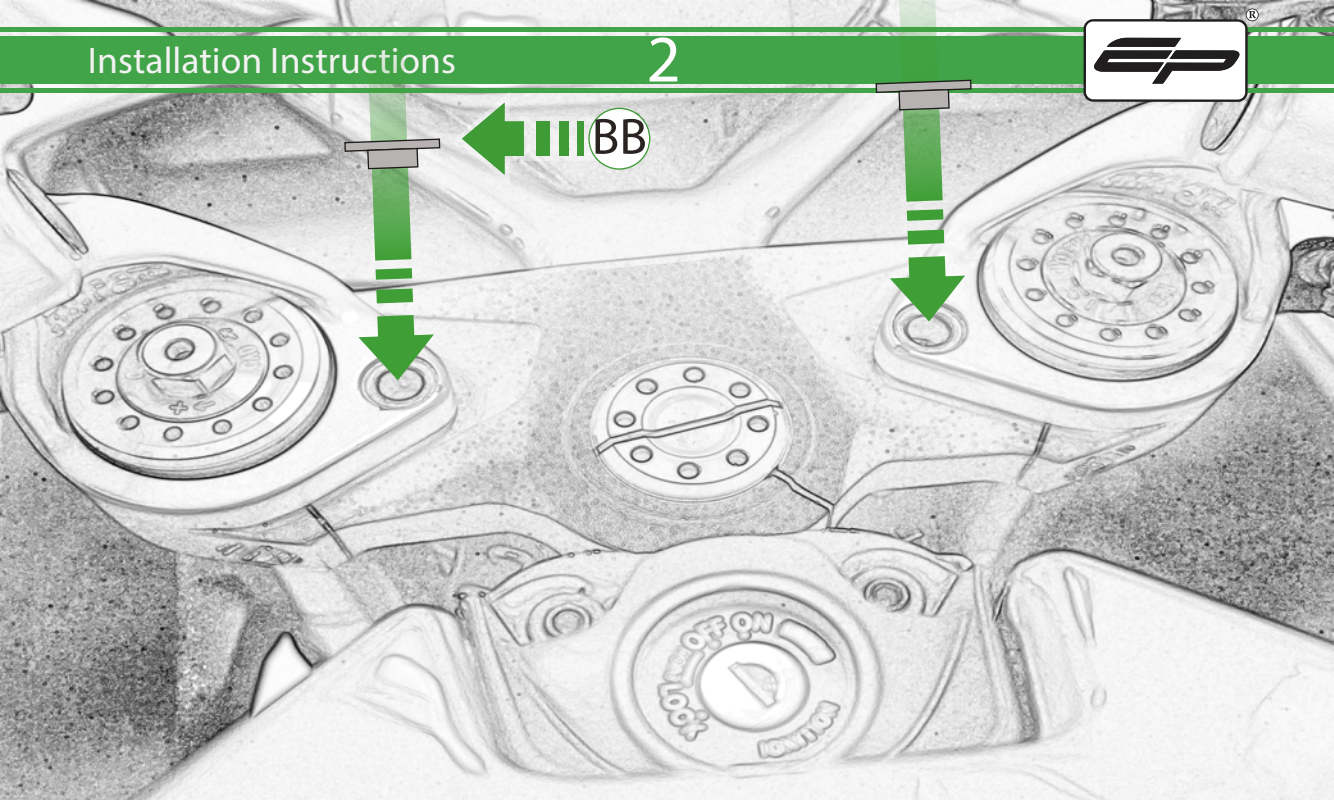


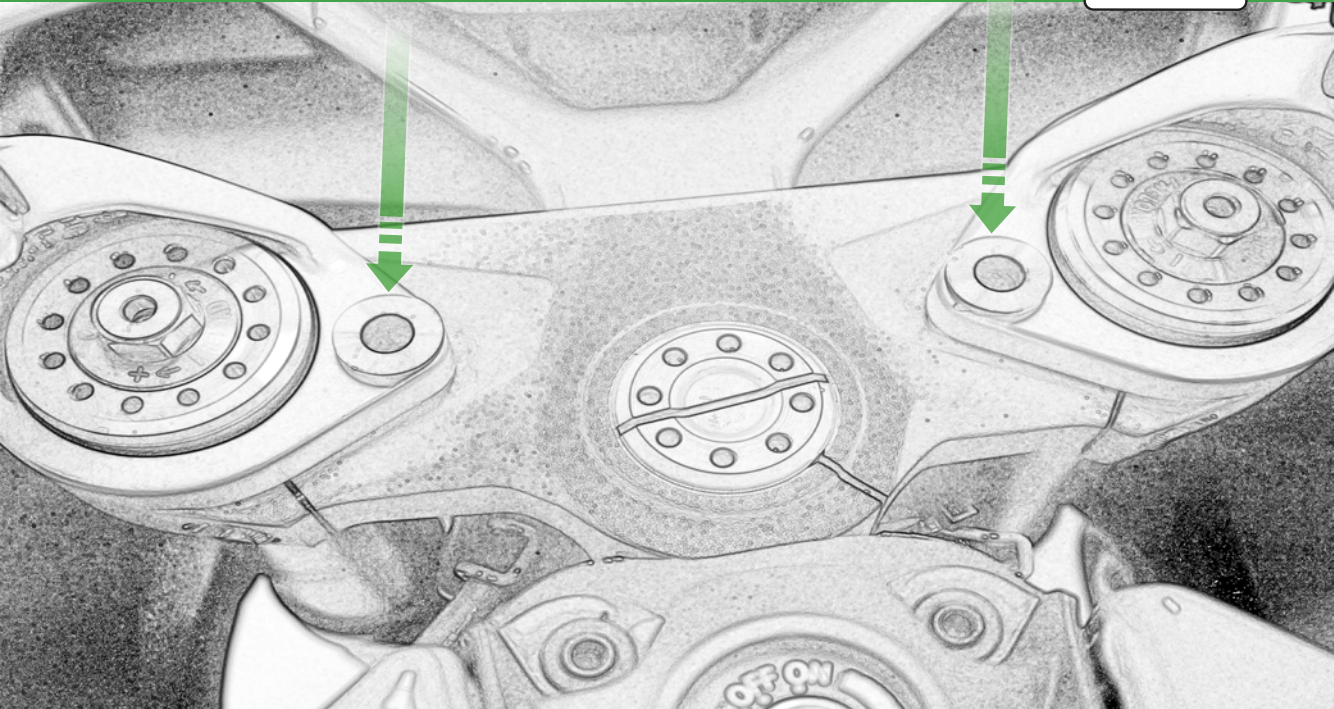

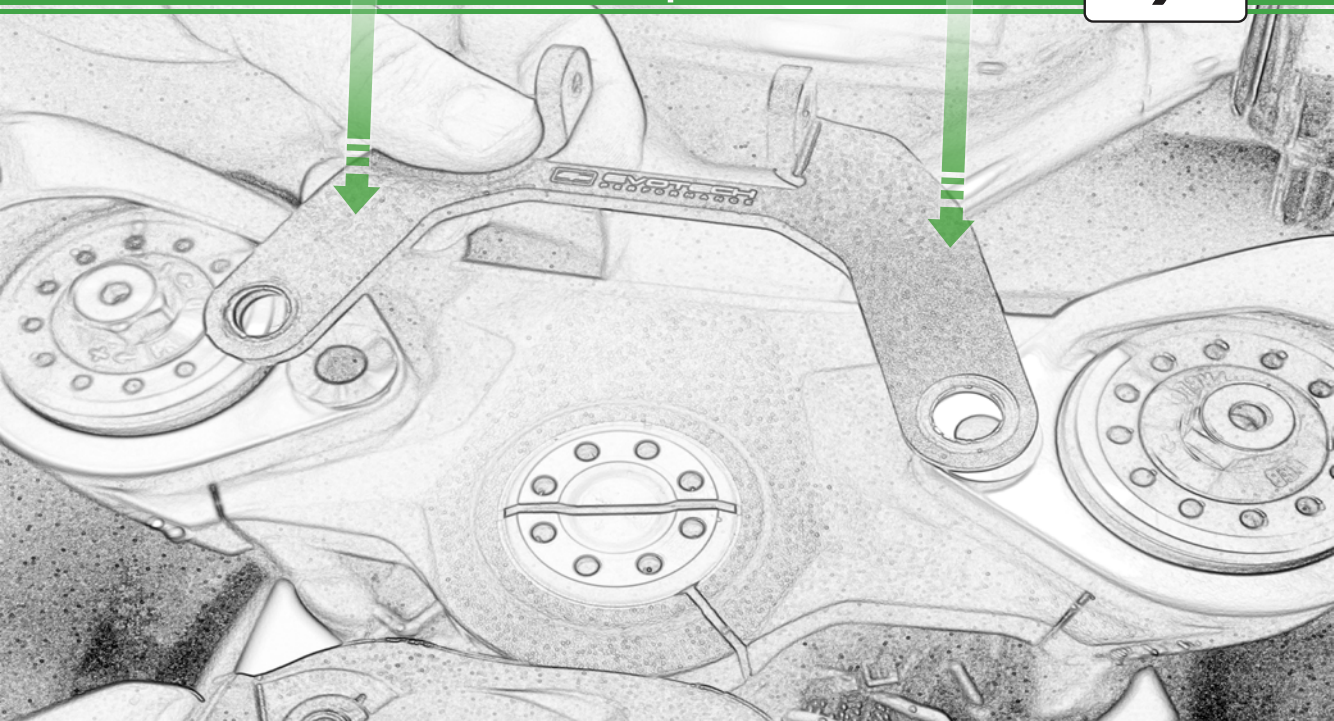


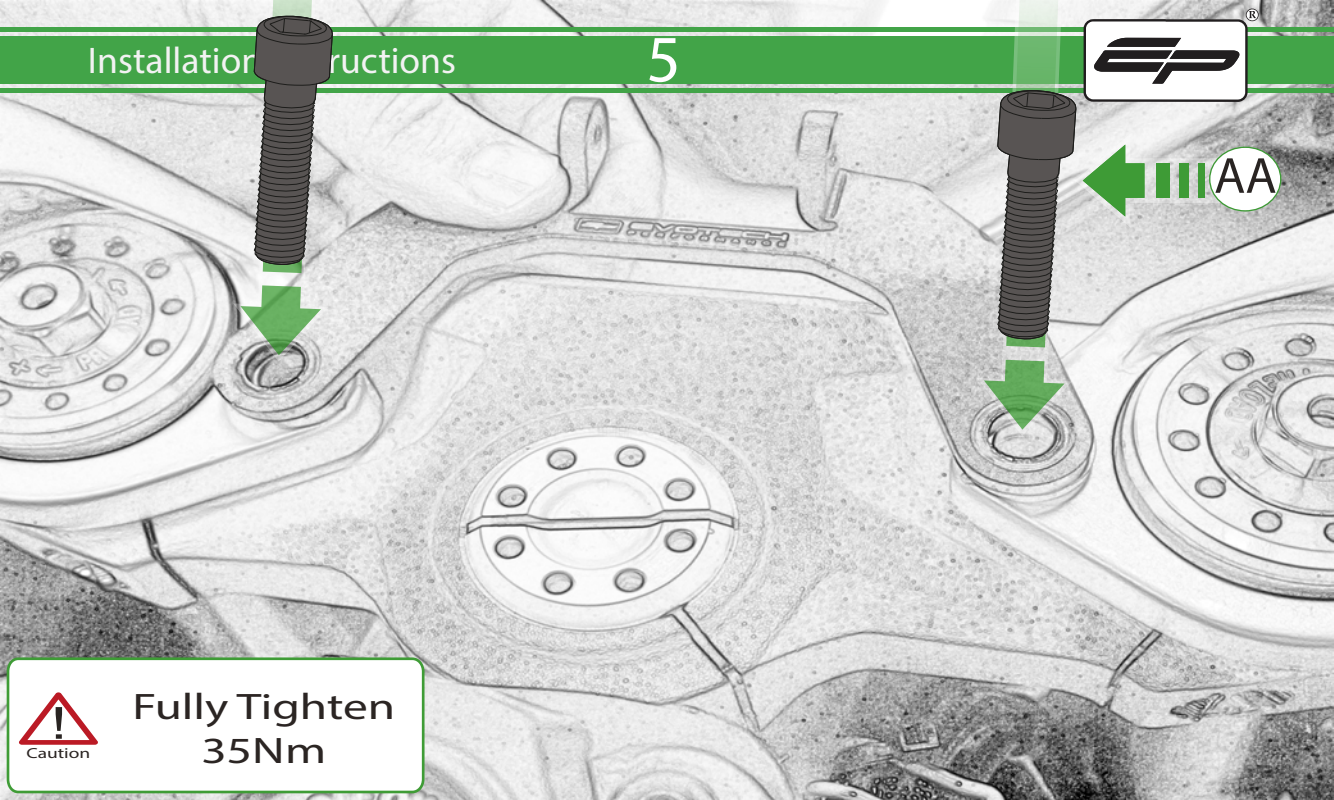



Fully Tighten  
35Nm

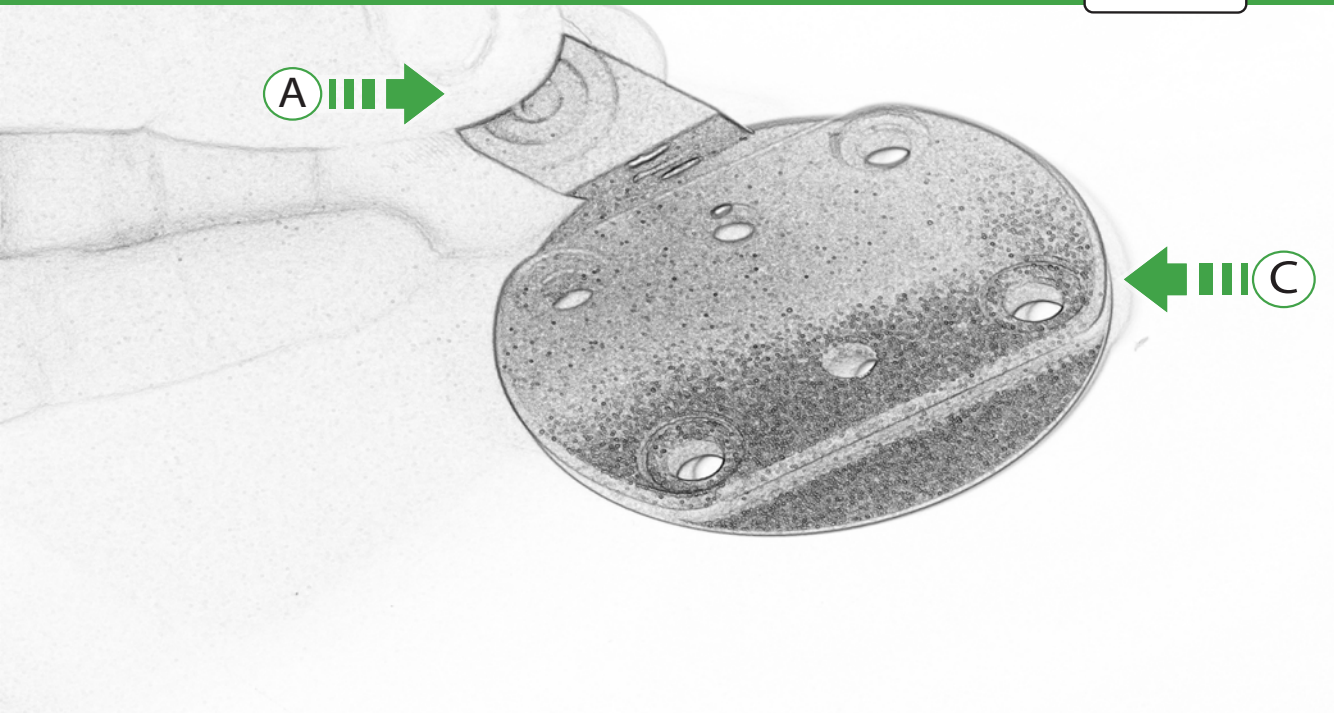




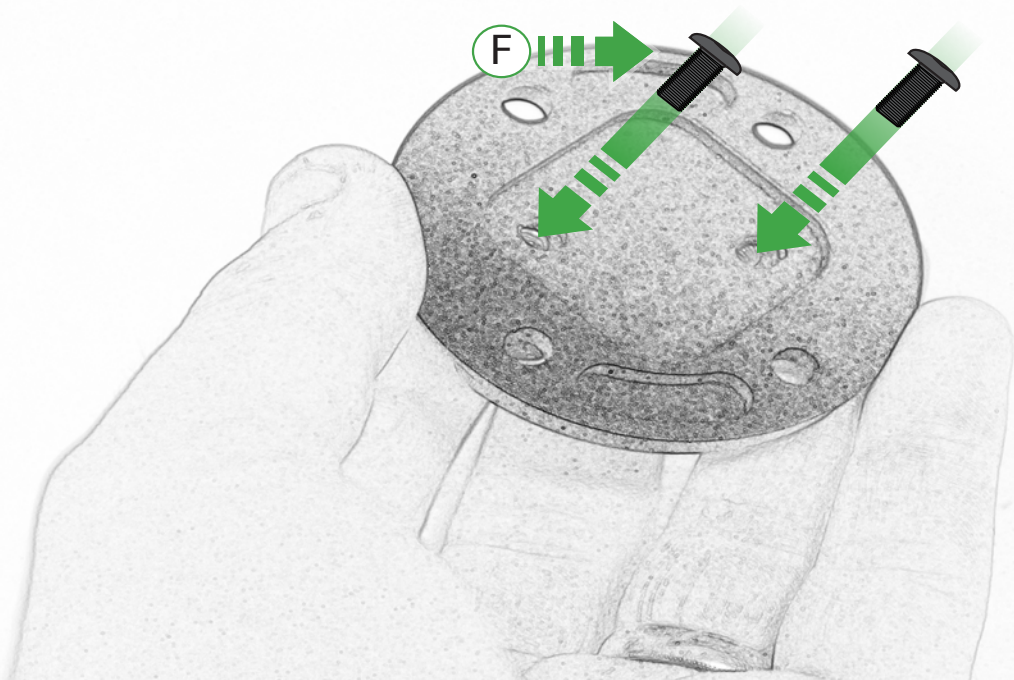

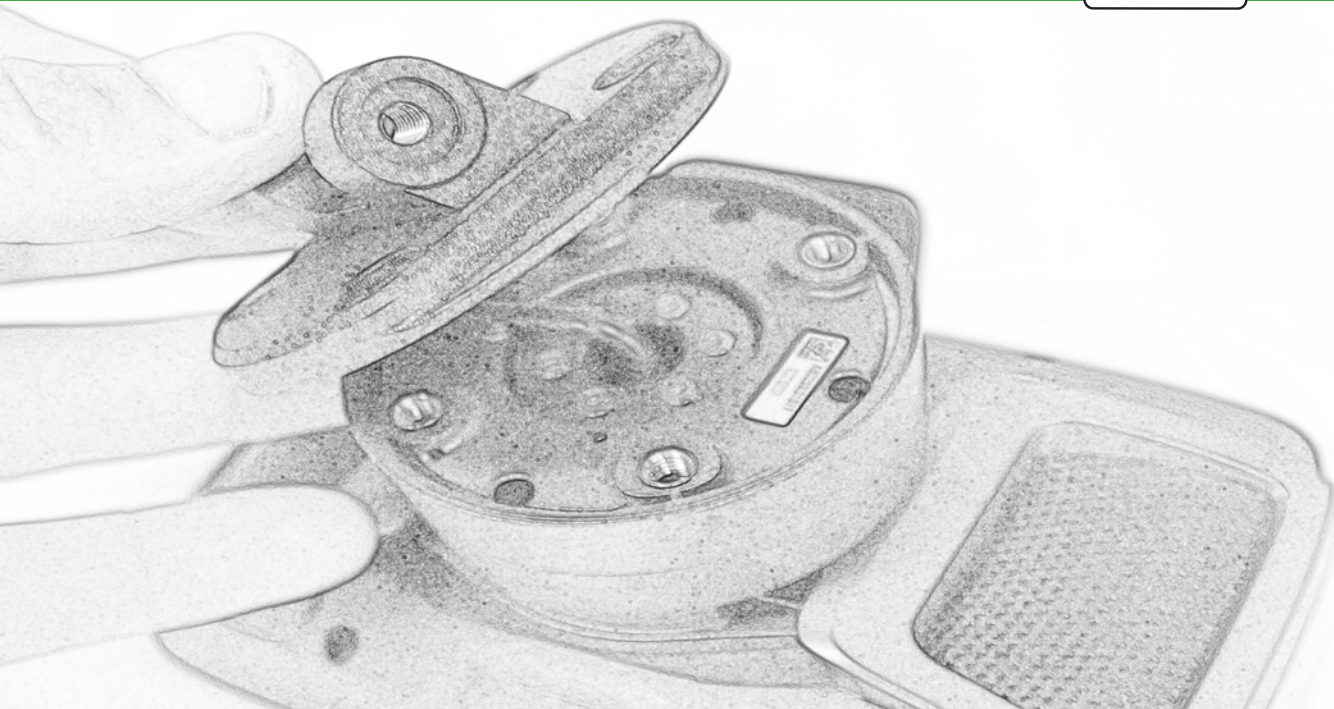

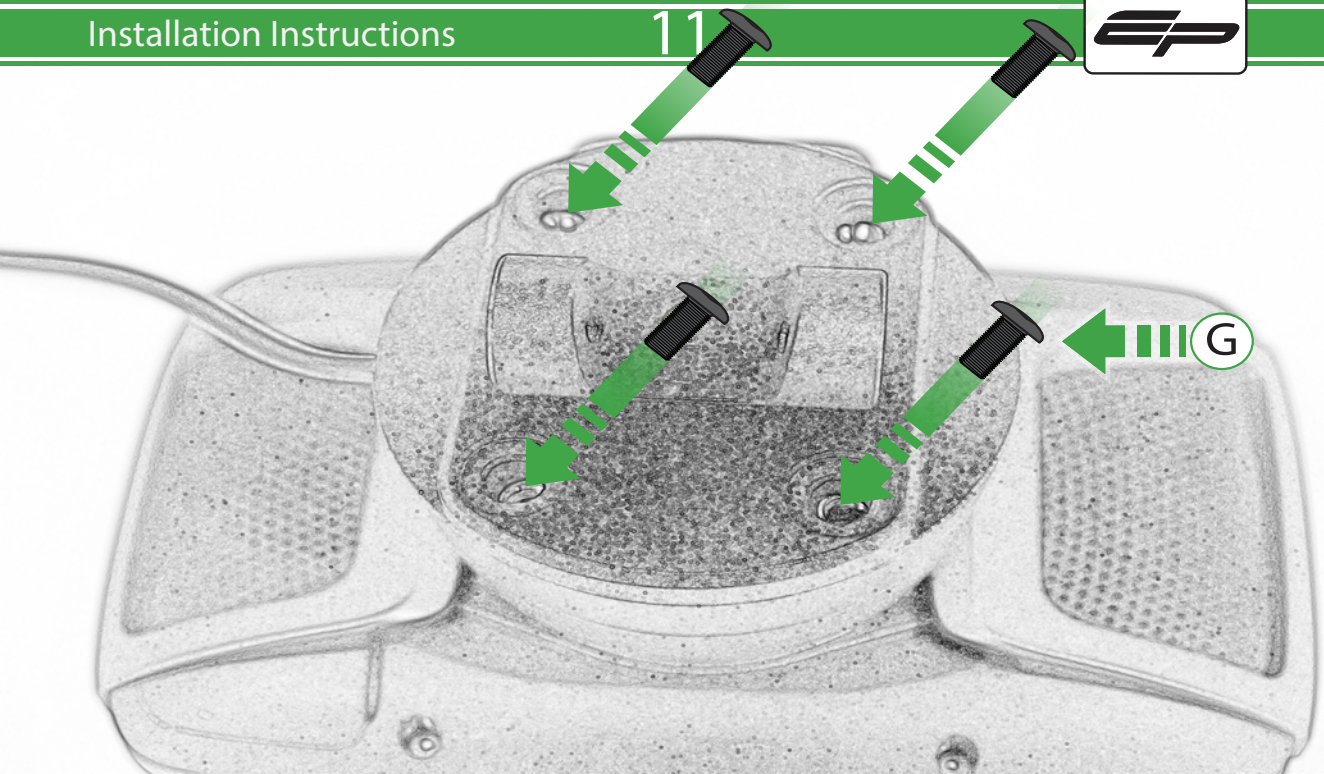


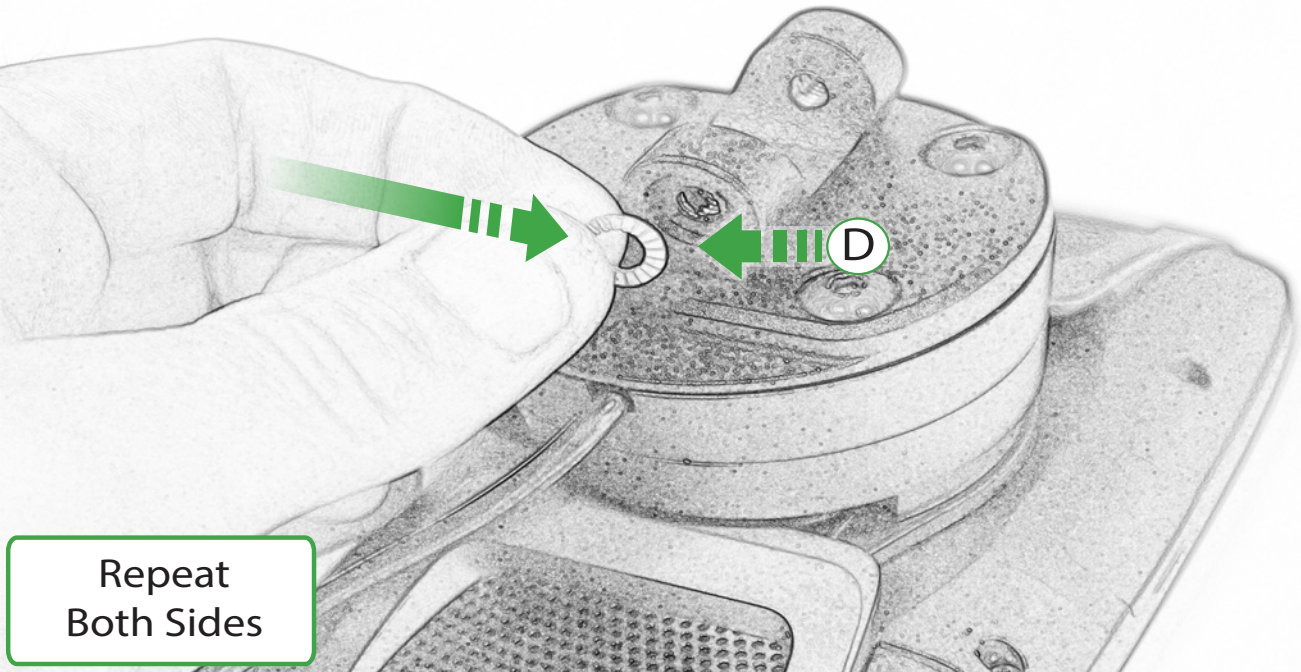

Repeat  
Both Sides



Repeat  
Both Sides

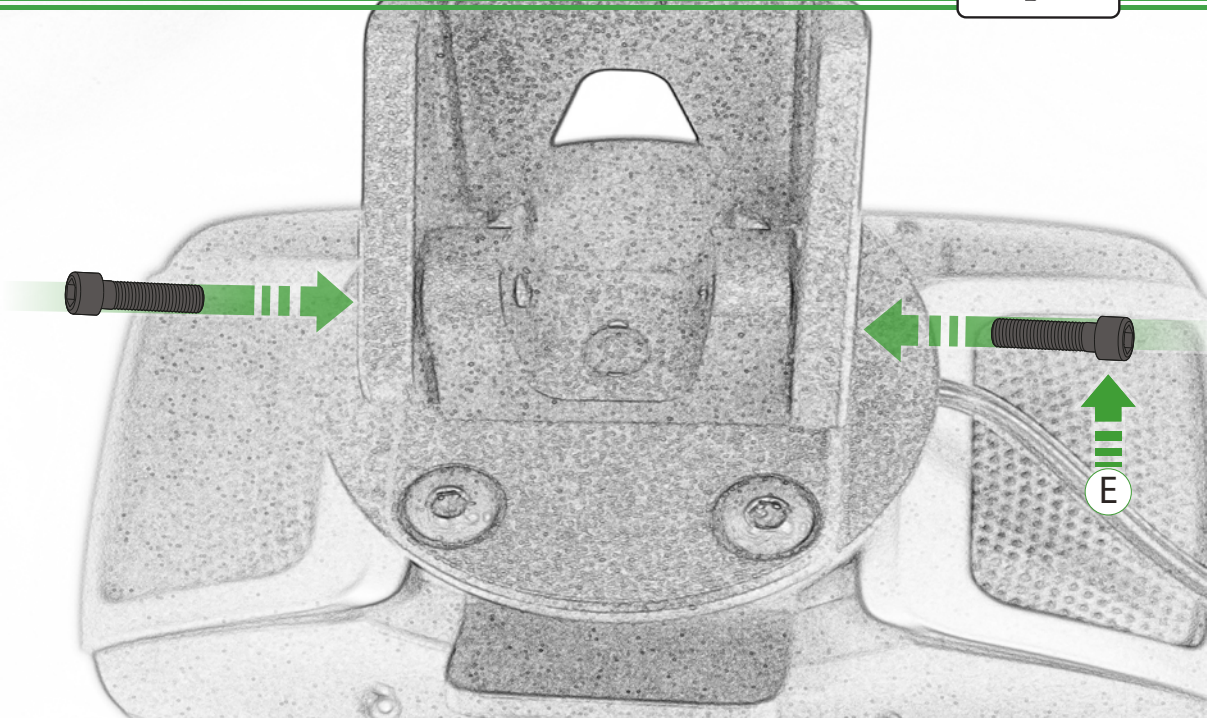



## ESSENTIAL CHECKS



It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



**EVOTECH**®  
P E R F O R M A N C E

[www.evotech-performance.com](http://www.evotech-performance.com)