


Thank you for purchasing a National Cycle product. Read these instructions carefully and thoroughly before beginning work. Dealers, if installing this windshield for a customer, please give them this manual upon completion. It contains information needed to properly maintain and use this product.

Description:	VStream® Replacement Windscreen	Model:	2018-20 KTM® 1290 Super Adventure S
Part Number:	N20810/N20811	Installation Time:	15 min. Difficulty Level: Easy

PACKAGE CONTENTS

ITEM	PART NO.	DESCRIPTION	QTY.
A		VStream Windscreen	1
BAG#1390			
B	34-350753-000	Standoff, Black	4
C	51-516217-000	Cap Screw, M5X16, Buttonhead, Flanged	4
D	34-342922-000	Shoulder Washer, Delrin, Black	4
E	44-447635-000	Flat Washer, Adhesive Poron, Black	4

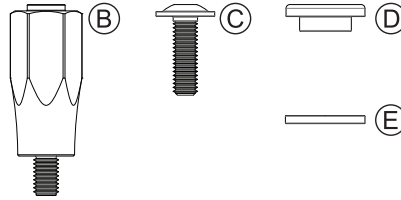

TOOLS REQUIRED

T-15 Torx Wrench
3mm Hex Wrench
13mm Wrench



ATTENTION: Special notes and cautionary measures which can prevent damage to the accessory or vehicle.



NOTE: Tips for facilitation of operation, control and adjustment, as well as maintenance work.

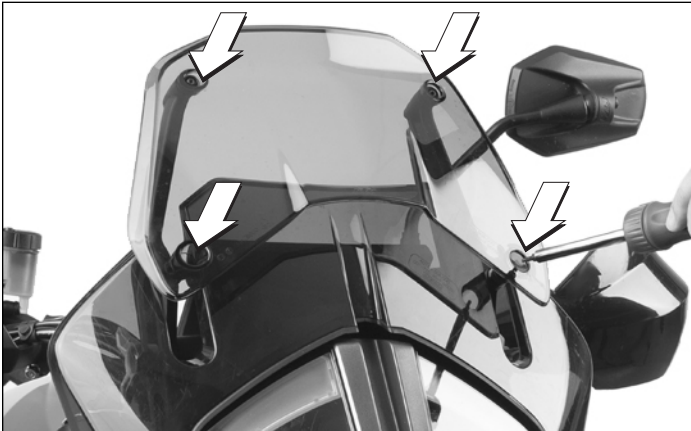


Figure 1

PREPARATION

Place motorcycle securely on its sidestand.

OEM WINDSCREEN REMOVAL

Figure 1

With a T-15 Torx Wrench, loosen and remove all four screws holding the OEM Windscreen to the mounting bracket.



OEM screws will not be reused.



Figure 2

Figure 2

With the OEM Windscreen removed, you are now ready to begin installation.

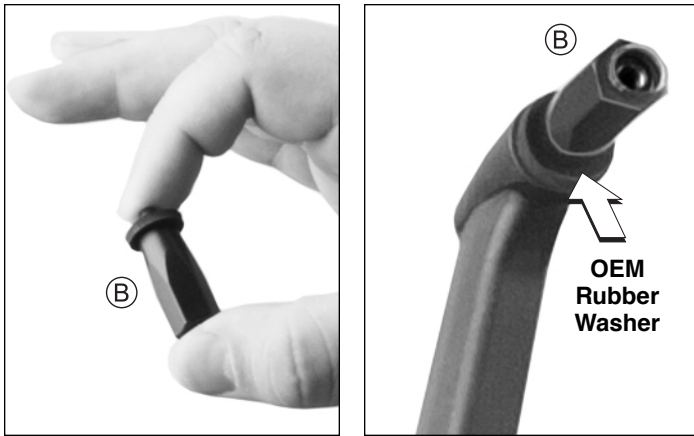


Figure 3

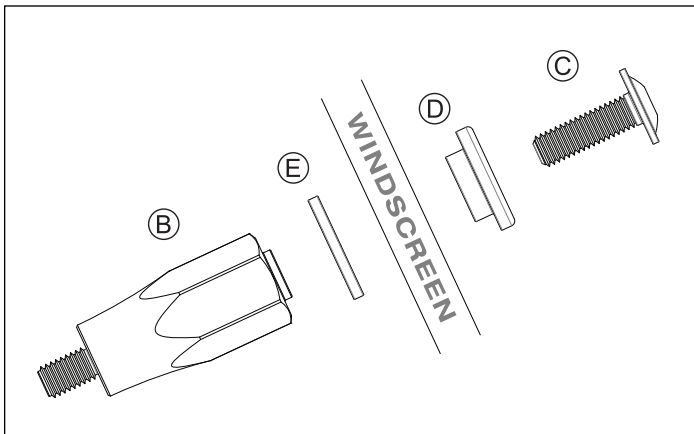


Figure 4

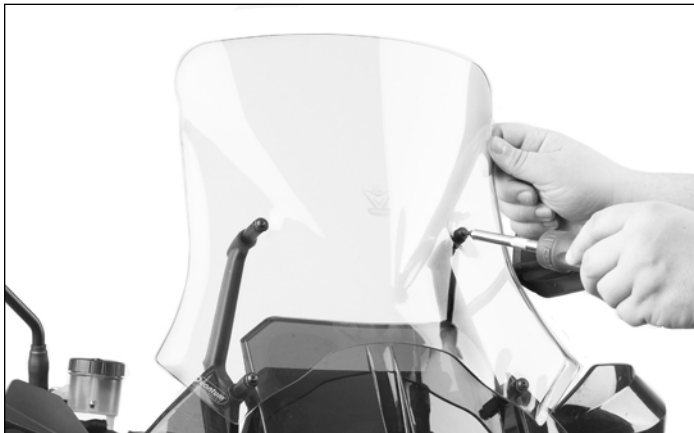


Figure 5

WINDSCREEN INSTALLATION

Figure 3

The Kit included with your VStream Windscreen includes four Standoffs (B). These will be threaded into the bike's windscreen mounting bracket.



IMPORTANT: Your bike uses two OEM Rubber Washers at the *top two mount points* on the bracket. These must stay in place between the mounting bracket and the top two Standoffs (B).

The bottom two Standoffs just screw into place. Securely tighten all four Standoffs with a 13mm Wrench.

Figure 4

Peel the paper backing from each Poron Washer (E) and adhere them onto each Standoff (B). Hold the Windscreen in place on the Standoffs.

Insert a Delrin Shoulder Washer (D) and Buttonhead Cap Screw (C) into each mount point on the Windscreen as shown in illustration at left.

Figure 5

Using a 3mm Hex Wrench, securely tighten all four Buttonhead Cap Screws.

Double-check your installation for fit and tightness before riding.

Ride safe and enjoy your new VStream Windscreen!



CLEANING AND MAINTENANCE

To clean the screen, wash with a clean soft cloth and plenty of warm water and, if necessary, a non-abrasive soap such as dishwashing liquid. Flannel or soft chamois make good cleaning cloths. Paint, glue residue or grease removal: Moisten cotton wad with naphtha or turpentine followed by a wash as above.

National Cycle Shield Wash™ (N1401-01) makes a good daily cleaner and comes with a handy travel-size bottle. Shield Wash is safe for all windshields and helmet visors

Do not clean polycarbonate in hot sun or high temperatures. Do not clean the screen with household glass cleaners. Do not allow brake fluid, alcohol, or strong solvents to contact the screen.

RAIN REPELLENT

Do not use rain protective products made for glass. We recommend National Cycle's RainZip® (N1410-01) to keep your windscreen clear in rainy weather.



Register Your Windshield Online at www.nationalcycle.com

National Cycle 3-Year Limited Warranty

National Cycle hereby warrants to the original registered owner of a National Cycle polycarbonate windshield for a period of three years from the date of purchase against breakage. This limited warranty is expressly limited to the replacement of the polycarbonate windscreen. This limited warranty does not include scratches, coating failure, cosmetic wear and tear, replacement of hardware, or any consequential damages or expenses including labor cost of installation, removal and/or replacement, inconvenience, inbound freight expenses or damage to any other component of the motorcycle or any other accessories. Certain chemicals, generally known as acidic hydrocarbons, are known to cause polycarbonate damage and will not be covered under this limited warranty. Please refer to the cleaning instructions supplied with all National Cycle windshields.

Visit www.nationalcycle.com for further details, or call 708-343-0400 or e-mail info@nationalcycle.com.

WARNING

Never ride your motorcycle with loose accessory mounting hardware. Check the hardware for tightness regularly.

Today's motorcycles are built with enough frame rigidity to withstand the moderate loads imposed on them by the foreseeable addition of an accessory(ies). If an accessory(ies) adversely affects your motorcycle's stability, immediately remove the accessory(ies). Do not ride a motorcycle that exhibits unsafe handling traits.

Have experienced service personnel correct any problem before riding with the accessory(ies) installed. For further questions concerning handling problems associated with an accessory(ies), contact your dealer, motorcycle manufacturer, or accessory manufacturer.

Sunlight reflected off the inside curvature of the windscreen can, at certain times of day, cause extreme heat buildup on the motorcycle's instruments and possibly even melt them. Exercise care in parking to avoid this. Park your motorcycle facing the sun or place an opaque object over this area.